



## Overview of programs

Programmes and fabrics	Maximum load size	Use softener?
<b>Cottons</b> 	9 kg/5 kg*	Yes
Hard-wearing items made from cotton, linen or blended fabrics. When used for a light load (^ max. 5 kg) with the <b>Speed</b>  setting, this programme is suitable as a quick programme for lightly soiled laundry.		
<b>Cottons Eco</b> 	9 kg	Yes
Hard-wearing items made from cotton, linen or blended fabrics. For energy-saving reasons, the actual washing temperature may differ from the washing temperature that has been set. The washing performance meets legal requirements.		
<b>Easy-Care</b> 	3.5 kg	Yes
Items made from synthetic or blended fabrics.		
<b>Delicate/Silk</b> 	2 kg	Yes
Delicate, washable items made from silk, viscose or synthetic fabrics.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ Particularly delicate items should be washed in a mesh washing bag.</li> <li>■ Use a detergent that is suitable for machine-washing delicate fabrics or silk.</li> </ul>		
<b>Wool</b> 	2 kg	Yes
Hand- and machine-washable items made from wool or containing wool. Particularly gentle washing programme with longer pauses in the programme to prevent laundry from shrinking.		
<b>Note:</b> Use a detergent that is suitable for machine-washing wool.		
<b>Mixed Fabrics</b> 	3 kg	Yes
Items made from cotton, linen, or synthetic or blended fabrics.		
<b>Dark Wash</b> 	6 kg	Yes
Dark-coloured and colour-intense items made from cotton or easy-care fabric, e.g. jeans.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ Turn laundry inside-out before washing.</li> <li>■ We recommend using liquid detergent.</li> </ul>		

<b>Rinse / Spin / Drain</b> 	—	Yes when using the <b>Rinse</b> programme
Combined programme: Rinses and then spins the laundry, and then pumps out the water.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ The <b>Rinse</b>  programme, after which the laundry is spun and the water is pumped out, has been preactivated.</li> <li>■ If you only want to rinse the laundry and pump out the water, set the spin speed to <b>0</b>.</li> <li>■ If you only want to spin the laundry and pump out the water, deactivate the <b>(Rinse+)</b>  setting.</li> <li>■ If you only want to pump out the water, deactivate the <b>(Rinse+)</b>  setting and set the spin speed to <b>0</b>.</li> </ul>		
<b>Drum Clean</b> 	0 kg	No
Programme for cleaning and caring for the drum, e.g.:		
<ul style="list-style-type: none"> <li>■ Before using the appliance for the first time</li> <li>■ If you regularly wash at temperatures of 40 °C or lower, or</li> <li>■ If you have been away for an extended period and odours have built up.</li> </ul>		
The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ Run the programme without laundry.</li> <li>■ Use standard washing powder or a detergent that contains a bleaching agent. Halve the amount of detergent to reduce foaming.</li> <li>■ Do not use liquid detergent or detergent that is intended for woollens or delicates.</li> </ul>		
<b>Rapid 15'/30'</b> 	2/3.5 kg	Yes
SuperQuick programmes lasting approx. 15/30 minutes for items made from cotton or synthetic or blended fabrics.		
Suitable for lightly soiled laundry.		
<b>Note:</b> If you want to use the <b>Rapid 15'</b>  programme, activate the <b>Speed</b>  setting.		
<b>Duvet</b> 	2/2.5 kg	No
Pillows or duvets stuffed with synthetic fibres.		Clean the compartment for manual dosing in the detergent drawer before washing.
Also suitable for items stuffed with down.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ To reduce excessive foaming, remove the air from laundry items by rolling them up before you wash them.</li> <li>■ Wash large items separately.</li> <li>■ Use a detergent that is suitable for machine-washing delicate fabrics and use sparingly.</li> </ul>		

**Curtains**

3.5 kg

Yes

3.5 kg heavy curtains or 25-30 m<sup>2</sup> lightweight drapes.  
Prewash is set by default.

**Notes**

- Remove curtain hooks or secure the curtains in a mesh washing bag.
- To reduce excessive foaming, use a detergent suitable for curtains to wash light, airy drapes.
- Divide the detergent between the compartments for the pre-wash and the main wash.
- If you do not require a pre-wash cycle, deactivate this setting.

**Hygiene**

7 kg

Yes

Hard-wearing items made from cotton, linen or blended fabrics.  
Suitable for allergy sufferers and for strict hygiene requirements.  
Once the selected temperature has been reached, it remains constant throughout the washing process.

**Auto. Intensive**

6 kg

Yes

Hard-wearing items made from cotton or synthetic or blended fabrics.

Programme for more intensive laundry treatment at temperatures of up to 60 °C. The degree of soiling and the type of fabric are automatically detected and the washing sequence and intelligent dosing are adjusted accordingly.

## Possible program settings

Programme	Max. temperature	Max. speed	1 i-Dos	2 i-Dos	(Rinse+)	(Prewash)	(Soaking)	(Rinse hold)	(Less iron)	Speed
Cottons	90	1400	●	●	●	●	●	●	●	●
Cottons Eco	90	1400	●	●	●	●	●	●	●	-
Easy-Care	60	1200	●	●	●	●	●	●	●	●
Delicate/Silk	40	800	●	●	●	●	●	●	●	-
Wool	40	800	-	●	-	-	-	●	-	-
Mixed Fabrics	60	1400	●	●	●	●	●	●	●	●
Dark Wash	40	1200	●	●	●	●	●	●	●	●
Rinse / Spin / Drain	-	1400	-	●	●	-	-	●	●	-
Drum Clean	-	1200	-	-	-	-	-	-	-	-
Rapid 15'/30'	40	1200	●	●	●	-	-	●	-	●
Duvet	60	1200	-	-	●	-	-	●	-	-

Programme	Max. temperature	Max. speed	1 i-Dos ↗	2 i-Dos ↘	(Rinse+)	(Prewash) ↘	(Soaking) ↗	(Rinse hold) □	(Less iron) ☰	Speed = ⚡
Curtains ☰	40	800	●	●	●	●	●	●	-	●
Hygiene ☰	60	1400	●	●	●	●	●	●	●	●
Auto. Intensive ☰	60	1400	●	●	-	-	-	-	-	-

- Can be activated/deactivated
- Cannot be activated/deactivated



## Consumption values

(approximate values)

Programme	Load in kg	Energy consump- tion* in kWh	Water consumption*		Programme dura- tion* in hours
			in l	in l	
Cottons 20 °C	9	0,36	90	90	3 1/4
Cottons 40 °C	9	1,20	90	90	3 3/4
Cottons 60 °C	9	1,30	90	90	3
Cottons Eco + ☰ **	9	1,19	62	62	4 3/4
Cottons 90 °C	9	2,35	100	100	3
Easy-Care 40 °C	3.5	0.78	61	61	2
Mixed Fabrics 40 °C	3	0.64	44	44	1 1/4
Delicate/Silk 30 °C	2	0.21	34	34	3/4
Wool 30 °C	2	0.24	42	42	3/4

Values determined in accordance with SANS1695

\* The observed values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type, amount and soiling of laundry, the detergent used, fluctuations in the mains voltage and which additional functions are selected.

\*\* Programme setting with maximum spin speed for testing and energy labelling in accordance with SANS941 with cold water (15 °C) and for deactivated automatic dosing (i-Dos).

**WM14T69XZA****9001475962 (9909)**