




Brief and handy:
everything your
dishwasher needs...

Before using for the
first time, read the
operating instructions!

1

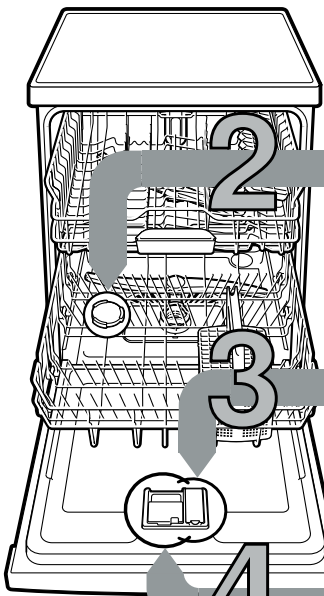

Add special salt

Add rinse aid

Add detergent

5

Switch on the appliance

6

Select programme

Start the programme Off we go...

8

Switch off the appliance Everything OK...

Adjusting the water softening system *

Ask your water
supply company
what the water
hardness is and
enter this...



* Only before the
first wash or if
the water hardness
has changed


Water- hardness- value °E	Hardness range	mmol/l	Setting value
0-8	Soft	0-1.1	H:00
9-10	Soft	1.2-1.4	H:01
11-12	Medium	1.5-1.8	H:02
13-15	Medium	1.9-2.1	H:03
16-20	Medium	2.2-2.9	H:04
21-26	Hard	3.0-3.7	H:05
27-38	Hard	3.8-5.4	H:06
39-62	Hard	5.5-8.9	H:07

Quickly done...


How to adjust

- Switch on the ON/OFF switch
- Press **Setup 3 sec.** button for 3 seconds.
The display shows H:xx and **Set**
- Adjust the setting using the buttons + and -,
until the appropriate water hardness level is set.
- To store the settings,
press the **•** button for 3 seconds.

Dissolves limescale (not necessary when set to 0!) ...

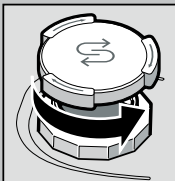


Open
the lid.

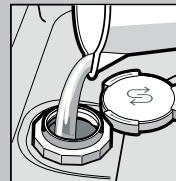


Only fill the salt
dispenser with
water before the
first wash.

For optimal washing results

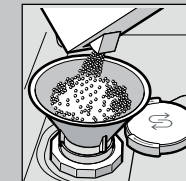


Add
special salt
(never use
detergent!).

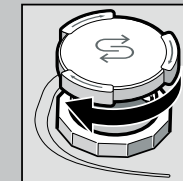

Close the lid.
Rinse immediately.


Gets it sparkling clean ...

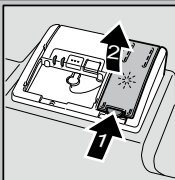


Press marking 1,
lift lid 2.



For optimum drying results

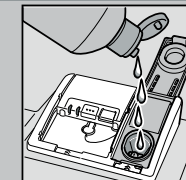


Add
rinse aid.

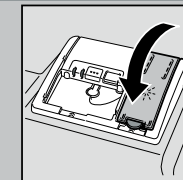

Close lid.
CLICK!



A lot of dirt, a lot of detergent ...

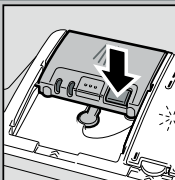


If required,
open the cover
(press button).



Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

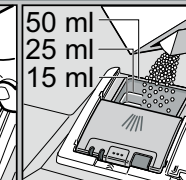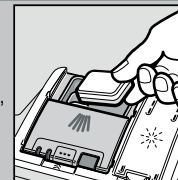

Pour detergent
into the dry
detergent
dispenser only.

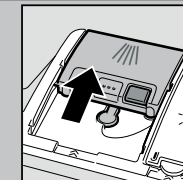

Slide cover
shut, press.
PLOP!

Quick, economical or intensive ...

Overview of programmes

This overview describes all the possible programmes. You can see which programmes your appliance offers from its control panel. The values given in the programme details are laboratory measurements compliant with European standard EN 60436. The consumption figures depend on the selected programme and additional functions. The programme duration will be different if the machine is short of rinse additive or the function is turned off.

* half normal load

** Suitable programme for running at night:
it takes longer, but is extremely quiet.

	Intensive 70°	Auto 45°/65°	Eco 50°	Silence ** 50°	Speed 65°	Speed 60°	Speed 45°	brilliant Shine	Favourite	Machine Care
Duration in hrs : mins.	2:25 - 2:30	1:40 - 2:40	3:55	4:00	1:00	1:29	0:35 *	1:55 - 2:00	0:15	2:10 - 2:15
Energy consumption in kWh	1,150 - 1,250	0,680 - 1,300	0,736	0,800	1,280	1,050	0,710	0,800 - 0,850	0,050	1,130 - 1,350
Water consumption in litres	10,5 - 13,5	7 - 15,5	9,5	10,5	10,2	11,5	10,5	14 - 16,6	4	13 - 15,2

You will find descriptions of possible additional functions in your instruction manual.

Maintenance and care


Filters
... check,
if required,
clean.




Rotate
filter cylinder,
remove filter
system ...




rinse
under
running
water ...

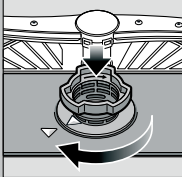

insert ...


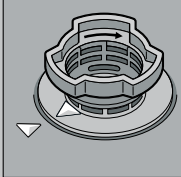


Screw on
filter system
NOTE
MARK!

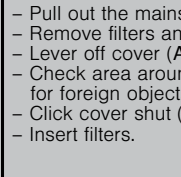


Cleaning waste water pump


- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.

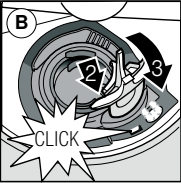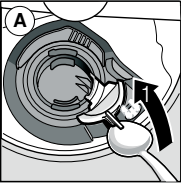


Spray arms
... Remove
blockages/
deposits.

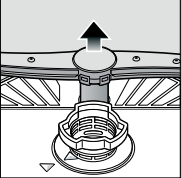


pull lower arm
upwards ...

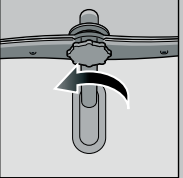


unscrew
upper arm ...

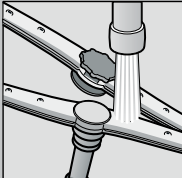


clean spray nozzles
under running water
(if required
use toothpicks) ...

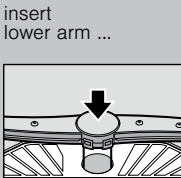

insert
lower arm ...

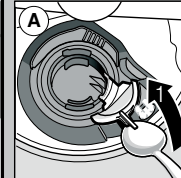

screw on upper
arm tightly

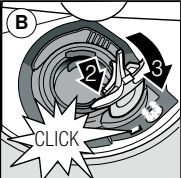

Rectify small faults yourself ...

... because self-help is worth it!

For more information see the instruction manual

Fault	Possible causes	Solution
Display E:32 -00 and  are lit	Supply fitting jammed or furred up	▶ Open supply fitting. ▶ 1. Unscrew water connection. ▶ 2. Clean filter in the water supply. ▶ 3. Flow rate must be min. 10 l/min when water supply is open. ▶ If the flow rate is less, replace the supply fitting. ▶ Install supply hose without kinks.
	Water supply not connected	▶ Connect water supply. (Drinking water connection in the instruction manual).
Display E:92 -40	Filters are soiled or blocked	▶ Clean the filters (see above).
Display E:61 -03 and  are lit	Waste water hose is blocked or kinked	▶ Reposition the waste water hose without kinks.
	Cover of waste water pump not attached	▶ Attach cover (see above).
Display E:61 -02 and  are lit	Waste water pump blocked	▶ Clean waste water pump (see above).
Other error display E:xx -xx is lit	Appliance technically defective	▶ Call customer service (state the error displayed). ▶ Unplug the appliance. Turn off the tap.
Residual water in the appliance	Programme has not yet ended	▶ Close the appliance and switch it on or terminate the programme (see Terminating the programme).
Rust on cutlery	Cutlery not rust-resistant	▶ Use dishwasher-safe cutlery.
	Hard knife blades are more susceptible	
	Extraneous rust	▶ Never wash rusting parts in the appliance.

Fault	Possible causes	Solution
Tableware is not clean	Items of tableware lying against or on top of each other	▶ Separate tableware, prevent points of contact.
Sand or gritty residue on the tableware	Not enough detergent	▶ Follow the manufacturer's instructions (detergent).
	Unsuitable programme selected	▶ Select a more intensive programme.
	Spray arm nozzles blocked	▶ Clean spray arms (see above).
	Filters are soiled, not securely positioned	▶ Clean the filters (see above).
	Spray arms blocked	▶ Arrange tableware so that spray arms can rotate freely.
Marks and streaks	Rinse aid dosage too high / too low	▶ In the case of streaks: reduce detergent dosage. ▶ With water or limescale marks: increase dosage.
Tableware is not dry	Rinse aid	▶ Increase dosage. ▶ Change product.
	The combined detergent used has poor drying performance.	▶ Use rinse aid.
	Appliance setting	▶ Activate intensive drying (depending on model)
Milky deposits on the tableware (removable)	Water softening function is wrongly configured;	▶ Configure water softening system correctly.
	Insufficient special salt	▶ Add special salt.
Milky deposits, glasses clouded / opaque (cannot be removed)	Glasses not dishwasher-proof.	▶ Use dishwasher-safe glasses. ▶ Use gentle detergents for glass.
Plastic / tableware items discoloured	Not enough detergent	▶ Follow the manufacturer's instructions (detergent).
	Discolouration by food colourings (tomato sauce)	▶ Discolouration will not damage the appliance; It will fade after further wash cycles.

Cancel the programme ...

During the programme, press the  button for approx. 4 sec. (reset).



All displays light up, then "0:01" appears in the display "0:00" appears after the programme has finished

Load the appliance correctly ...

Insert dishwasher-proof tableware (roughly remove large remnants of jam, dairy products and meals without leaving residue from ash, wax, lubricating grease, paint, adhesive labels) as described in the instruction manual and check that the spray arms can rotate freely