

Washing machine

WM14NKG1

en User manual and installation instructions



Register your product on My Siemens and discover exclusive services and offers. siemens-home.bsh-group.com/welcome

The future moving in.

Siemens Home Appliances

Table of contents

 Safety 1.1 General information 1.2 Intended use 1.3 Restriction on user group 1.4 Safe installation 1.5 Safe use 1.6 Safe cleaning and mainten- ance 	4 4 5 7
2 Preventing material damage 1	0
3 Environmental protection and saving energy13.1 Disposing of packaging13.2 Save energy and conserve resources13.3 Energy saving mode1	1 1
 4.1 Unpacking the appliance	2 2 3 4
5.1 Appliance15.2 Detergent drawer15.3 Control panel1	8
6 Display 1	9
7 Buttons 2	
8 Programmes 2	
9 Accessories 2	5

10 Before using for the	~-
first time	25
cycle	25
11 Laundry	26
11.1 Preparing the laundry	
11.2 Sorting laundry	26
11.3 Degrees of soiling	27
11.4 Care symbols on the care labels	27
12 Detergents and care	
products	
12.1 Detergent recommendation 12.2 Detergent dosage	
U U	
13 Basic operation	
13.1 Switching on the appliance13.2 Setting a programme	
13.3 Adjusting the programme	20
settings	29
13.4 Loading laundry	29
13.5 Using a measuring aid for liquid detergent	20
13.6 Use the measuring aid for	30
liquid detergent	30
13.7 Adding detergent and care	
product	
13.8 Starting the programme13.9 Changing the activated	31
"Ready in" time	31
13.10 Adding laundry	
13.11 Cancelling the pro-	
gramme	31
13.12 Resuming the programme when the programme	
status is Rinse Hold	32
13.13 Unloading the laundry	
13.14 Switching off the appli-	~ ~
ance	32

14 Childproof lock	32
14.1 Activating the childproof lock	32
14.2 Deactivating the childproof lock	-
15 Basic settings	33
15.1 Overview of the basic set- tings	33
15.2 Changing the basic set- tings	34
 16 Cleaning and servicing 16.1 Tips on appliance care 16.2 Cleaning the drum 16.3 Cleaning the detergent drawer 16.4 Descaling 16.5 Cleaning the drain pump 16.6 Cleaning the water outlet hose at the siphon 16.7 Cleaning the water inlet filter 	34 34 35 36 38
17 Troubleshooting 17.1 Emergency release	
 18 Transportation, storage and disposal 18.1 Removing the appliance 18.2 Inserting the transit bolts 18.3 Using the appliance again 18.4 Disposing of old appliance 	48 48 48
 19 Customer Service 19.1 Product number (E-Nr.) and production number (FD) 19.2 AQUA-STOP guarantee 	49
20 Consumption values	51
21 Technical specifications	52

1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- For washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- With tap water and commercially available detergents and care products suitable for washing machines.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Children must not play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

Take note of the safety instructions when installing the appliance.

▲ WARNING – Risk of electric shock!

Improper installation is dangerous.

- Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ► When using a residual current circuit breaker, only use a type with the mtext{mark}.
- Never equip the appliance with an external switching device, e.g. a timer or remote control.
- When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- When installing the appliance, check that the power cable is not trapped or damaged.
- If the insulation of the power cord is damaged, this is dangerous.
- Never let the power cord come into contact with hot appliance parts or heat sources.
- Never let the power cord come into contact with sharp points or edges.
- ► Never kink, crush or modify the power cord.

▲ WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ► Do not use extension cables or multiple socket strips.
- ► If the power cord is too short, contact Customer Service.
- Only use adapters approved by the manufacturer.

▲ WARNING – Risk of injury!

The high weight of the appliance may result in injury when lifted.

► Do not lift the appliance on your own.

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.

- Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
- Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- Do not install a washer-dryer stack on a platform; the appliances may tip over.

▲ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ► Do not let children play with packaging material.

▲ CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ► Align the appliance using the appliance feet and a spirit level.

If hoses and power cords have been laid incorrectly, this causes a tripping hazard.

Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

► Do not move the appliance by holding onto protruding parts.

▲ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

► Do not touch the sharp edges on the appliance.

Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

▲ WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ► Never operate a damaged appliance.
- Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
- ► Call customer services. → Page 49

An ingress of moisture can cause an electric shock.

- ► Only use the appliance in enclosed spaces.
- ► Never expose the appliance to intense heat or humidity.
- Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

▲ WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

▲ WARNING – Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ► Do not let children play with small parts.

▲ WARNING – Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- ► If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

▲ WARNING – Risk of explosion!

Laundry that has been pretreated with cleaning agents that contain solvents may cause an explosion in the appliance.

Rinse pretreated laundry thoroughly with water before washing.

▲ CAUTION – Risk of injury!

The covering plate may break if you stand on or climb onto the appliance.

► Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ► Do not sit on or lean against the appliance door.
- ► Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

Wait for the drum to come to a complete stop before reaching inside.

▲ CAUTION – Risk of burns!

When washing at high temperatures, the glass in the appliance door becomes hot.

- ► Do not touch the appliance door when it is hot.
- ► Keep children away from the appliance door when it is hot.

▲ CAUTION – Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

► Do not touch the hot detergent solution.

▲ CAUTION – Risk of chemical burns!

If the detergent drawer is opened, detergent and care products may spray out from the appliance. Contact with eyes or skin may cause irritation.

- Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- ► If accidentally swallowed, seek medical advice.
- ► Keep detergents and care products out of the reach of children.

1.6 Safe cleaning and maintenance

Take note of the safety instructions when cleaning and performing maintenance work on the appliance.

▲ WARNING – Risk of electric shock!

Incorrect repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

▲ WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

Only use the manufacturer's original spare parts and original accessories.

▲ WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

► Do not use cleaning agents that contain solvents.

2 Preventing material damage

Follow these instructions to avoid material damage and damage to the appliance.

ATTENTION!

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

► Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

 Observe the maximum load capacity for each programme and do not exceed it.

 \rightarrow "Programmes", Page 22 The appliance is secured for transportation using transit bolts. Transit bolts which have not been removed may result in material damage and damage to the appliance.

- Before starting up the appliance, remove the transit bolts completely and keep them in a safe place.
- Before transport, fit the transit bolts fully in order to prevent damage in transit.

Material damage may be caused if the water inlet hose is connected incorrectly.

- Tighten the screw connections on the water inlet until they are handtight.
- Ideally, connect the water inlet hose directly to the water tap, without any additional connecting elements such as adapters, extensions, valves or similar.

- Make sure that the valve housing for the water inlet hose does not come into contact with its surroundings and is not subjected to any external forces.
- Ensure that the inner diameter of the water tap is at least 17 mm.
- Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

If the water pressure is too high or too low, the appliance may not be able to operate properly.

- Ensure that the water pressure in the water supply system is at least 100 kPa (1 bar) and max. 1000 kPa (10 bar).
- If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.
- Do not connect the appliance to the mixer tap of an unpressurised hot-water boiler.

Modified or damaged water hoses may result in material damage and damage to the appliance.

- Never kink, crush, modify or cut through water hoses.
- Only use the water hoses supplied with the appliance or genuine spare hoses.
- Never re-use water hoses that have been used before.

Operating the appliance using water that is dirty or too hot may lead to material damage and damage to the appliance.

 Only operate the appliance with cold mains water.

Unsuitable cleaning products may damage the surfaces of the appliance.

 Do not use harsh or abrasive detergents.

- Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

3.2 Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

Choose programmes with low temperatures and longer wash times and use maximum load capacity \rightarrow Page 22.

 Energy consumption and water consumption is most efficient.

Add \rightarrow Page 28 detergent based on the laundry's degree of soiling.

For light to normal soiling, a smaller amount of detergent is sufficient. Observe the dosage recommendation from the detergent manufacturer.

Reduce the washing temperature for lightly and normally soiled laundry.

 At low temperatures, the appliance consumes less energy. For light to normal soiling, lower temperatures than indicated on the care label are also sufficient.

Set the maximum spin speed if you want to dry the laundry in a tumble dryer afterwards.

 The drier the laundry, the shorter the programme duration when drying which, in turn, reduces energy consumption. A higher spin speed reduces the residual moisture in the laundry and increases the volume of the spin noise.

Wash the laundry without prewash.

 Washing with prewash increases the programme duration and increases energy and water consumption.

The appliance has a continuous automatic load adjustment function.

 Depending on the type of fabric and load capacity, the continuous automatic load adjustment function optimally adjusts the water consumption and programme duration.

The appliance comes with an Aqua-Sensor.

 During the rinse cycle, the Aqua-Sensor checks the degree of turbidity of the rinsing water, and adjusts the duration and number of rinse cycles accordingly.

3.3 Energy saving mode

If you do not use the appliance for an extended period, it automatically switches to energy-saving mode. All displays go out and **Start/Nachlegen** flashes.

Energy-saving mode ends when you use the appliance again, e.g. if you open or close the door.

4 Installation and connection

4.1 Unpacking the appliance

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

ATTENTION!

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
- 1. Remove any packaging and protective covers completely from the appliance.

→ "Disposing of packaging", Page 11.

- 2. Check the appliance for visible damage.
- Open the appliance door.
 → "Basic operation", Page 29
- 4. Remove any accessories from the drum.
- 5. Close the appliance door.

4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

ATTENTION!

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- Do not operate the appliance with incomplete or defective accessories.
- Replace the accessories in question before operating the appliance.
 - → "Accessories", Page 25

Note: The appliance has been tested at the factory to check it is in working order. As a result, water stains may remain in the appliance. These marks will disappear after the first wash cycle.

The delivery consists of the following:

- Washing machine
- Accompanying documents
- Transit bolts

 → "Removing the transit bolts", Page 13
- Cover caps
- Elbow for securing the water outlet hose

4.3 Requirements for the installation location

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

🗥 WARNING **Risk of electric shock!**

The appliance contains live parts. Touching live parts is dangerous.

Do not operate the appliance without a cover cap.

Risk of injury!

 
When using the appliance on a base, the appliance may tip over.

Always secure the feet of the appliance to a base using the manufacturer's fixing brackets \rightarrow Page 25 before using the appliance for the first time.

ATTENTION!

The appliance may contain residual water. If you tilt the appliance beyond 40°, this residual water may leak out. Tilt the appliance carefully.

Installation loca- Requirements tion



Secure the appliance with fixing brackets \rightarrow Page 25.

Wooden ioist floor

Place the appliance on a waterresistant wooden board (minimum thickness of 30 mm) which is screwed tightly to the floor.

 
Installation loca- Requirements tion

Kitchen unit



Only install the appliance underneath a continuous worktop that is securely connected to adjacent cabinets. Required niche width: 60 cm.

Against a wall



Do not trap the hoses between the wall and the appliance.

ATTENTION!

Residual water may freeze. Freezing residual water may damage the appliance and frozen hoses may burst.

Do not install the appliance outdoors or in areas where there is a risk of frost.


4.4 Removing the transit bolts

The appliance is secured for transportation using transit bolts on the rear of the appliance.


Notes

- Observe the information on safety \rightarrow Page 4 and preventing material damage \rightarrow Page 10.
- Keep the transit bolt screws and the sleeves in a safe place for future transport \rightarrow Page 48.


- en Installation and connection
- **1.** Pull the hoses out of the holders.

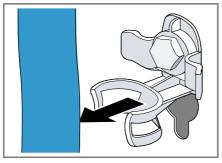


2. Unscrew ① and remove ② all 4 screws for the transit bolts with a WAF 13 wrench.

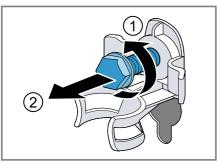


3. Pull the power cable out of the holder.

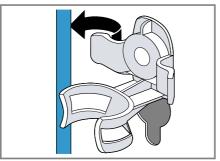


4. Remove the 4 sleeves.

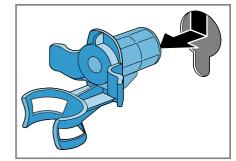

5. Put on the 4 cover caps.

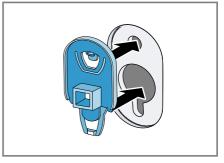

6. Press down on the 4 cover caps.

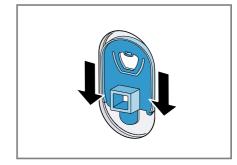

4.5 Connecting the appliance


Connecting the water inlet hose

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

MARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

- Do not immerse the electrical AquaStop valve in water.
- Connect the water inlet hose to a tap (26.4 mm = 3/4").

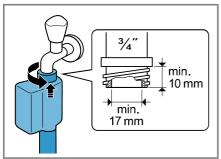

2. Open the water tap carefully and check that the connection points are tight.

Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.


Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

ATTENTION!

When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.

 Secure the water outlet hose against unintentional loosening.

Note: Observe the draining heights. The maximum draining height is 100 cm.

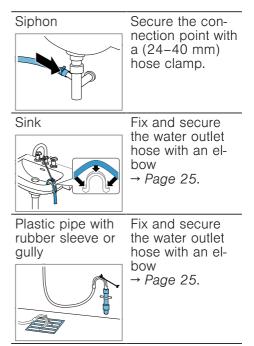


4.6 Aligning the appliance


In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

 Loosen the lock nuts using a WAF 17 wrench by turning it in a clockwise direction.

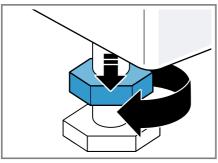


2. To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

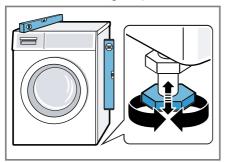

All appliance feet must stand firmly on the ground.

3. Screw the lock nuts tightly against the housing using a WAF 17 wrench.

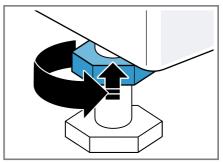

In doing so, hold the foot tight and do not adjust its height.

4.7 Connecting the appliance to the electricity supply

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

 Insert the mains plug of the appliance's power cable in a socket nearby.


The connection details of the appliance can be found under Technical data \rightarrow Page 52.

2. Check the mains plug is inserted properly.

5 Familiarising yourself with your appliance

5.1 Appliance


You can find an overview of the parts of your appliance here.

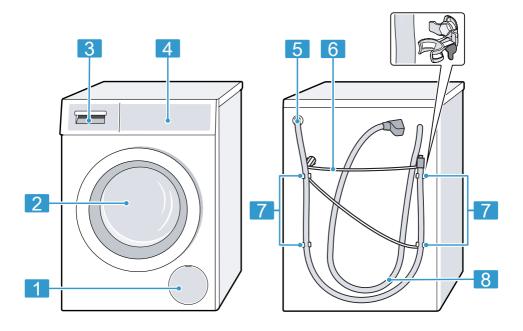

On certain models, specific details such as the colour and shape may differ from those pictured.


1	Maintenance flap for the drain pump → <i>Page 36</i>
2	Door
3	Detergent drawer → Page 18
4	Control panel \rightarrow Page 18
5	Water outlet hose \rightarrow Page 15
6	Power cord \rightarrow Page 16
7	Transit bolts → Page 13

8 Water inlet hose \rightarrow Page 14

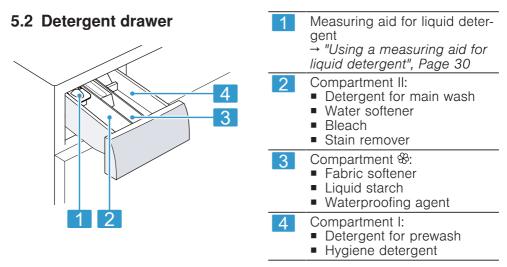

5.3 Control panel


You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

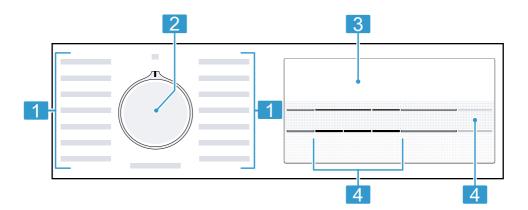

1	Programmes → Page 22
2	Programme selector → Page 29
3	Display → Page 19
4	Buttons → Page 21

6 Display

The display shows the current settings, options or relevant information.

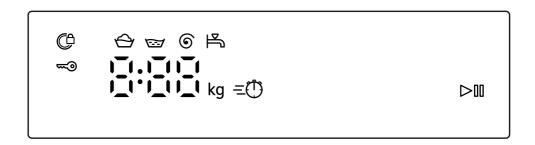

Display	Designation	More information
0:40 1	Programme dura- tion/programme time remaining	Approximate expected programme dura- tion or programme time remaining.
10 ¹	"Ready in" time	→ "Buttons", Page 21
8 kg 1	Recommended load	The maximum load capacity for the selec- ted programme in kg.
- 0 1400	Spin speed	Set spin speed in rpm. → "Buttons", Page 21 – 0 –: No spin cycle, draining only
1400	Spin speed	Set spin speed in rpm. → "Buttons", Page 21 – 0 –= No final spin, only draining – –-: Rinse Hold, no draining
	Start/Pause	 Start, cancel or pause Lights up: The programme is running and can be cancelled or paused. Flashes: The programme can be star- ted or continued.
Θ	Wash	Programme status
	Rinse	Programme status
¹ Example		

Display	Designation	More information
6	Spin	Programme status
	Pause	Programme status
	Rinse Hold	Programme status
End	End of pro- gramme	Programme status
	Childproof lock	 lights up: The childproof lock is activated. flashes: The childproof lock is activated and the appliance has been operated. → "Deactivating the childproof lock", Page 32
=0	varioSpeed	Short wash activated. → "Buttons", Page 21
:	Voltage control system	Flashes: The automatic voltage control system detects impermissible voltage drops. This will pause the programme. Note: The programme will continue when the voltage is permissible again.
•	Voltage control system	Flashes: The programme has been paused because of impermissible voltage drops. The voltage is permissible again and the programme will continue. Note: The programme duration is exten- ded.
¢	Door	 Lights up: The door is locked and cannot be opened. Flashes: The door is not closed properly. Off: The door is unlocked and can be opened.
占	Тар	No water pressure.The water pressure is too low.
E:35 / -10 ¹	Error	Error code, error display, signal.
¹ Example		

7 Buttons

The selection of programme settings depends on the programme that is set. You can see the selection options for each programme in the overview for \rightarrow "Programmes", Page 22.

Button	Selection	More information
Start/Nachlegen (Start/Pause)	StartCancelPause	Start, cancel or pause the pro- gramme.
vario Speed	ActivateDeactivate	Activate or deactivate a short washing programme. Note: Energy consumption increases. The washing result is not affected by this.
Fertig in (ReadyIn)	Up to 24 hours	Set the programme end. The programme duration is already in- cluded in the set number of hours. Once the programme has started, the programme duration is displayed.
Schleudern (Spin Speed)	– 0 – - 1400 rpm	Adjust the spin speed or deactivate the spin cycle. If -0 – is selected, the water is not drained and the spin cycle is deactiv- ated. The laundry stays wet inside the drum.
Schleudern (Spin Speed)	1400	Adjust the spin speed or activate – –– (Rinse Hold). If – –– is selected, the water is not drained at the end of the washing cycle and the spin cycle is deactiv- ated. The laundry remains in the rins- ing water.
∞3 Sek. (3 sec.)	ActivateDeactivate	→ "Childproof lock", Page 32

22

Below is an overview of the programmes. You can find information on the load and on the adjustable programme options.

Tip: The laundry's care labels provide you with additional information about programme selection. → "Care symbols on the care labels", Page 27

		-				
Programme:	Description	Ma		Programme settings	ne settin	gs
		x. load (kg)	Max. temperat- ure (°C)	Max. spin speed (rpm) ¹	vario Speed	Schleudern ⓒ - — (Rinse Hold)
Baumwolle (Cotton)	Wash hard-wearing items made from cot- ton, linen or blended fabrics. Also suitable as a short programme for nor- mally soiled laundry when you activate vario Speed. If vario Speed is activated, the maximum load capacity is reduced to 5 kg.	ω	90	1400	•	•
Baumwolle intensiv (Cottons Intensive)	Wash hard-wearing items made from cot- ton, linen or blended fabrics. Energy-saving programme. Note: To save energy, the actual washing temperature may deviate from the set washing temperature. The washing perform- ance meets legal requirements.	ω	60	1400	-	•
¹ Programme setting						

Programme:	Description	Ма		Programme settings	ne settin	gs
		x. load (kg)	Max. temperat- ure (°C)	Max. spin speed (rpm) ¹	vario Speed	Schleudern ⓒ - — (Rinse Hold)
Eco 40-60	Wash items made from cotton, linen or blended fabrics. Note: Textiles which can be washed from 40 °C var up to 60 °C var as per the care symbol can be washed together. The washing performance corresponds to the best possible washing performance class according to the legal requirements. For this programme, the washing temperat- ure is automatically adjusted depending on the load size, in order to achieve the best possible energy efficiency with the best possible washing temperature.	ω	-	1400	_	•
Baumwolle + Vor- wäsche 40° (Cotton + Prewash 40°)	Wash hard-wearing items made from cot- ton, linen or blended fabrics. Programme with prewash for heavily soiled laundry. Divide the detergent between the detergent drawer for the prewash and the main wash. → "Detergent drawer", Page 18	ω	40	1400	•	•
Pflegeleicht (Easy Care)	Wash items made from synthetic or blen- ded fabrics.	4	40	1200	•	•
¹ Programme setting						

Programme:	Description	Ма		Programme settings	ne settin	gs
		x. load (kg)	Max. temperat- ure (°C)	Max. spin speed (rpm) ¹	vario Speed	Schleudern ⓒ - — (Rinse Hold)
Schnell/Mix (Mixed Load)	Wash items made from cotton, linen, or synthetic or blended fabrics. Suitable for lightly soiled laundry.	4	40	1400	•	•
Fein/Seide (Delicates/ Silk)	Wash delicate, washable items made from silk, viscose and synthetics. Use a detergent that is suitable for delic- ates or silk. Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag.	5	30	800	-	•
Wolle& (Wool)	Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrinking, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool.	5	30	800	_	•
Spülen (Rinse)	Rinses and then spins the laundry, and then drains the water.	I	-	1400	_	•
Schleudern/ Abpumpen (Spin/ Drain)	Spins and drains the water. If you only want to drain the water, activate - 0 The laundry is not spun.	I	_	1400	-	_
¹ Programme setting						

9 Accessories

Use original accessories. These have been made especially for your appliance.

	Use	Order number
Water inlet hose exten- sion	Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m).	WZ10131
Fixing brackets	Improves the stability of the appliance.	WX975600
Elbow	Secure the water outlet hose in place.	00655300
Liquid detergent insert	Measure liquid deter- gent.	00605740

10 Before using for the first time

Prepare the appliance for use.


10.1 Starting an empty washing cycle

Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.


Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

- 1. Turn the programme selector to **Baumwolle 90 °C**.
- 2. Close the door.
- 3. Pull out the detergent drawer.

4. Pour approx. 1 litre of tap water into compartment II.

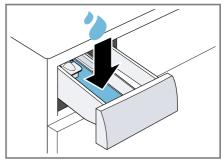

5. Pour standard washing powder into compartment II.

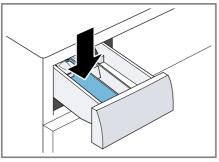

To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

- 6. Push in the detergent drawer.
- 7. Press **Start/Nachlegen** (Start/ Pause) to start the programme.
- The display shows the remaining programme duration.
- After the programme has ended, the display shows: End.
- 8. Start the first wash cycle or set the programme selector to Aus to switch off the appliance.
 → "Page apportion" Page 20
 - → "Basic operation", Page 29

11 Laundry

Note: More detailed instructions for use can be found on www.siemenshome.bsh-group.com or by scanning the QR code on the title page of this user manual.

11.1 Preparing the laundry

Note: Please read the information in the sections on Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 10*.

ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

- Remove all items from any pockets in your laundry before using the appliance.
- To protect your appliance and the laundry, prepare the laundry beforehand.
 - Empty any pockets
 - Brush sand out of all collars and pockets
 - Close bed covers and cushion covers
 - Close all zips, Velcro fasteners, hooks and eyes
 - Tie cloth belts, apron strings, etc. together or use a laundry bag.
 - Tie together longer drawstrings, and tie cords with solid endpieces in hoods or trousers
 - Remove curtain hooks and lead strips or use a mesh laundry bag
 - Use a mesh laundry bag for small items of laundry, such as children's socks
 - Some stubborn or dried-in stains can be removed by washing several times
 - Wash large and small items of laundry together
 - Do not rub fresh stains but dab them with soapy water
 - Separate items of laundry and shake them out, or observe the programme description

11.2 Sorting laundry

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

- To improve washing results and prevent discolouration, sort the laundry according to the following criteria before washing.
 - Type of fabric and fibre Wash laundry of the same type of fabric and fibre together.
- Care symbols on the care labels
 → Page 27
- Description of the programmes
 → Page 22
- Whites
- Colours Wash new coloured items separately the first time you wash them.

Degree of soiling	Soiling	Examples
Light	 No dirt or stains are vis- ible Laundry has absorbed odours 	Light summer clothing or sports clothing that has been worn for a just a few hours
Normal	Dirt or light stains are vis- ible	 T-shirts, shirts or blouses are sweat-soaked or have been worn a few times Towels or bedding that has been used for up to one week
Heavy	Dirt or stains are clearly visible	Tea towels, baby items or work clothing

11.3 Degrees of soiling

11.4 Care symbols on the care labels

Washing care symbols

Symbol	Washing process	Recommended pro- gramme
<u> 735</u> 7 <u>780</u> 7 <u>730</u> 7 <u>730</u> 7	Normal	Cotton
<u> 499</u> 3 <u>439</u> 3 <u>439</u> 3	Gentle	Easy-Care
(³⁰⁰) (³⁰⁰)	Particularly gentle	Delicates/Silk for washing by hand
The second secon	Hand wash	Wool
₩	Not suitable for machine-washing	_

12 Detergents and care products

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

The manufacturer's instructions for use and dosage can be found on the packaging.

Notes

 Only use liquid detergents that are self-flowing

12.1 Detergent recommendation

- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products that have expired or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances (e.g. bleach)
- Use dyes sparingly as salt may damage stainless steel
- Do not use bleaching agents in the appliance

Detergent	Fabrics	Pro- gramme	Temperature
Standard detergent with optical brighten- ers	Heat-resistant white fabrics made from cotton or linen	Cotton	From cold up to 90 °C
Detergent for colours without bleach or op- tical brighteners	Coloured fabrics made from linen or cotton	Cotton	From cold up to 60 °C
Detergent for col- ours/delicates without optical brighteners	Coloured fabrics made from easy-care fabrics or synthetic materials	Easy-Care	From cold up to 60 °C
Detergent for delic- ates	Delicate fine textiles, silk or viscose	Delicates/ Silk	From cold up to 40 °C
Detergent for wool- lens	Wool	Wool	From cold up to 40 °C

Tip: Visit www.cleanright.eu to find further information on detergents, care products and cleaning agents for domestic use.

12.2 Detergent dosage

The detergent dosage depends on:

- The amount of laundry
- Degree of soiling
- Water hardness

You can find out how hard your water is from your local water company or measure it yourself using a water hardness tester.

Water hardness

Hardness range	Total hardness in mmol/	German degrees in °dH
soft (I)	0–1.5	0-8.4
medium (II)	1.5– 2.5	8.4-14
hard (III)	over 2.5	over 14

Example of a manufacturer's instructions for detergent

These example values refer to a standard load of 4–5 kg.

Soiling	Light	Normal	Heavy
Water hardness: Soft/medium	40 ml	55 ml	80 ml
Water hardness: Hard/very hard	55 ml	80 ml	105 ml

The dosages can be found on the manufacturer's packaging.

• Adjust the dosage to the actual load.

13 Basic operation

13.1 Switching on the appliance

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

Requirement: The appliance has been correctly installed and connected.

 \rightarrow "Installation and connection", Page 12

Turn the programme selector to a programme.

13.2 Setting a programme

 Turn the programme selector and set the required programme.
 → "Programmes", Page 22 If necessary, adjust the programme settings → Page 29.

13.3 Adjusting the programme settings

Requirement: A programme has been set.

- → "Setting a programme", Page 29
- Adjust the programme settings.
 → "Buttons", Page 21

Note: The programme settings are not saved permanently for the programme.

13.4 Loading laundry

Notes

- Observe the information on safety
 → Page 4 and preventing material
 damage → Page 10.
- To prevent creasing, take note of the maximum load for the
 → "Programmes", Page 22.

Requirement: The laundry is prepared.

→ "Laundry", Page 26

1. Open the door.

Make sure that the drum is empty.


- 2. Place the laundry in the drum.
- 3. Close the door.

Ensure that there is no laundry trapped in the door.


13.5 Using a measuring aid for liquid detergent

If you order the measuring aid as an accessory, you must use the measuring aid.

- 1. Pull out the detergent drawer.
- 2. Press down on the insert and remove the detergent drawer.

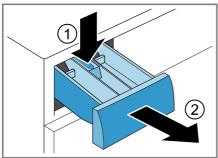

3. Insert the measuring aid.

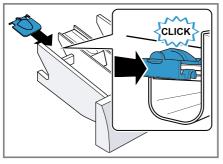


4. Insert the detergent drawer.


13.6 Use the measuring aid for liquid detergent

To add liquid detergent, you can use a measuring aid in the detergent drawer.

- 1. Pull out the detergent drawer.
- 2. Slide the measuring aid forwards.

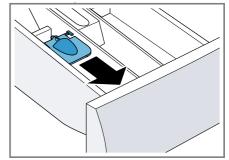

3. Fold the measuring aid down and click it into place.

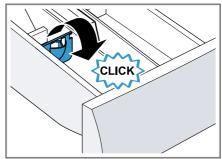

4. Push in the detergent drawer.

13.7 Adding detergent and care product

Notes

- Observe the information on safety
 → Page 4 and preventing material
 damage → Page 10.
- Do not use the measuring aid for liquid detergent for gel detergents, washing powder, or if Prewash or "Ready in" time are activated.

- Observe the information about detergents and care products
 → Page 28.
- 1. Pull out the detergent drawer.
- 2. Pour in detergent. → "Detergent drawer", Page 18
- 3. If required, add the care product.
- 4. Push in the detergent drawer.

13.8 Starting the programme

Note: If you want to change the time until the programme ends, set the "Ready in" time first.

- Press Start/Nachlegen.
- The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- The display shows either the programme duration or the "Ready in" time.
- After the programme has ended, the display shows: End.

13.9 Changing the activated "Ready in" time

If you have set and activated a "Ready in" time for a delayed programme start, you can change the "Ready in" time again before the programme starts.

Requirements

- The programme is set.
 → "Setting a programme", Page 29
- The "Ready in" time is set and activated.
 - → "Buttons", Page 21
- 1. Press Start/Nachlegen.

The activated "Ready in" time is paused.

- Press Fertig in repeatedly until the display indicates the desired "Ready in" time.
- 3. Press Start/Nachlegen.

The changed "Ready in" time is activated.

13.10 Adding laundry

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

1. Press Start/Nachlegen.

The appliance pauses.

Note: If **C** appears, it is not possible to add laundry. When **C** goes out, it is possible to add laundry.

- 2. Open the appliance door.
- 3. Add or remove laundry.
- 4. Close the appliance door.
- 5. Press Start/Nachlegen.

13.11 Cancelling the programme

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

- 1. Press Start/Nachlegen.
- 2. Open the appliance door.

The appliance door remains locked for safety reasons if the temperature and water levels are high.

- If the temperature is high, start the **Spülen** programme.
- If the water level is high, start the Schleudern programme or select a suitable programme for draining.

→ "Programmes", Page 22

3. Remove the laundry \rightarrow *Page 32*.

13.12 Resuming the programme when the programme status is Rinse Hold

1. Start the **Schleudern** programme or select a suitable programme for draining.

→ "Programmes", Page 22

2. Press Start/Nachlegen.


13.13 Unloading the laundry

Note: Observe the information on safety \rightarrow *Page 4* and preventing material damage \rightarrow *Page 10*.

- 1. Open the appliance door.
- 2. Remove the laundry.

13.14 Switching off the appliance

1. Turn the programme selector to **Aus** .

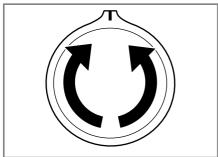

2 Wipe the rubber gasket dry and remove any foreign objects.



3. Leave the appliance door and detergent drawer open so that residual water can evaporate.

14 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

14.1 Activating the childproof lock

- ► Press and hold the two ∞3 Sek. buttons for approx. 3 seconds.
- ✓ The display shows ----.
- ✓ The controls are locked.
- The childproof lock remains active even after the appliance has been switched off.

14.2 Deactivating the childproof lock


Requirement: To deactivate the childproof lock, the appliance must be switched on.

- Press and hold the two -33 Sek. buttons for approx. 3 seconds.
- ✓ ⊸ goes out in the display.

15 Basic settings

You can configure the appliance to meet your needs.


15.1 Overview of the basic settings

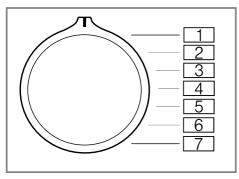

Basic setting	Programme position	Value	Description
End signal	2	0 (off) 1 (quiet) 2 (me- dium) 3 (loud) 4 (very loud)	Set the volume of the signal at the end of the programme.
Button signal	3	0 (off) 1 (quiet) 2 (me- dium) 3 (loud) 4 (very loud)	The volume of the audible signal emitted when the buttons are pressed.

15.2 Changing the basic settings

1. Set the programme selector to position 1.

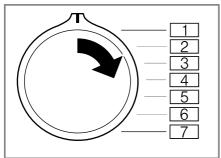

- 2. Press **Start/Nachlegen** and, at the same time, turn the programme selector to position 2.
- The display shows the current value.
- Set the programme selector to the required position.
 → "Overview of the basic settings", Page 33
- 4. To change the value, press Fertig in.
- **5.** To save the changes, switch off the appliance.

16 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

16.1 Tips on appliance care

Wipe down the	This ensures the
housing and the	parts of the appli-
control panel	ance will remain
with nothing but	clean and hy-
water and a	gienic.
damp cloth.	

Remove all de- tergent residue, spray residue or other residues immediately.	Fresh deposits are easier to re- move without leaving any residue.
Keep the appli- ance door and detergent drawer open after use.	This allows the residual water to dry, reducing odours in the ap- pliance.

16.2 Cleaning the drum

CAUTION Risk of injury!


Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury.

- Regularly run a programme for cleaning the drum or wash at temperatures of at least 60 °C.
- Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.
- Run the Baumwolle 90°C programme without laundry and using all-purpose washing powder.


16.3 Cleaning the detergent drawer

1. Pull out the detergent drawer.


2. Press down on the insert and remove the detergent drawer.

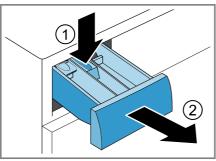


3. Pull out the insert upwards.

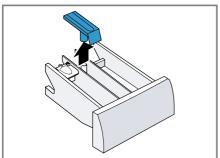

4. Clean the detergent drawer and insert with water and a brush, and then dry them.

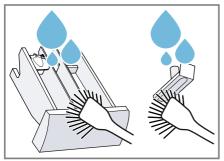

5. Fit the insert and click it into place.

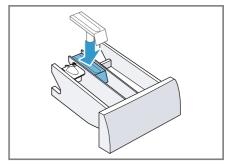

6. Clean the opening for the detergent drawer.



7. Push in the detergent drawer.

16.4 Descaling

ATTENTION!

The use of unsuitable descaling agents, e.g. for coffee machines, may damage the appliance.

 For this appliance, only use descaling agents that are available from the manufacturer's website or our after-sales service.


16.5 Cleaning the drain pump

Clean the drain pump in the event of faults, e.g. blockages or rattling noises.


Emptying the drain pump

Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 10* sections to ensure that you use the appliance safely.


- 1. Turn off the water tap.
- 2. Switch off the appliance.
- **3.** Disconnect the appliance's mains plug from the power supply.
- 4. Open the maintenance flap.

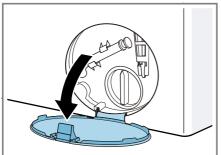


5. Remove the maintenance flap.

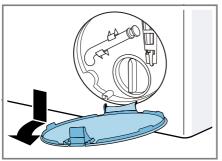

6. Slide a sufficiently large receptacle under the opening.

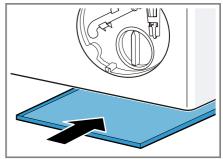


7. Take the drain hose out of the holder.

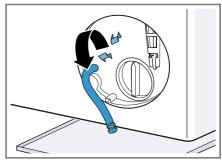


- 8. CAUTION Risk of scalding! When you wash at high temperatures, the detergent solution gets hot.
- Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

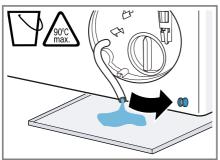

9. Firmly press on the sealing cap.

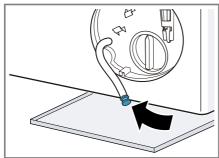

10.Insert the drain hose into the holder.

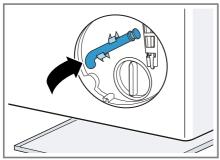


Cleaning the drain pump


Note: Please read the information in the Safety \rightarrow *Page 4* and Preventing material damage \rightarrow *Page 10* sections to ensure that you use the appliance safely.

Requirement: The drain pump is empty. \rightarrow *Page 36*

1. Since water may remain in the drain pump, remove the pump cap carefully.

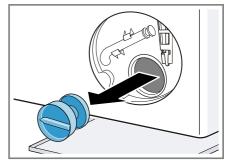


2 Clean the interior, the thread on the pump cap and the pump housing.

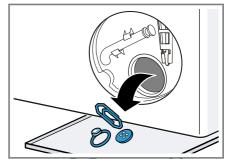


3. Make sure that the impeller in the drain pump can be rotated.

4. Insert the pump cap and screw it on as far as it will go.

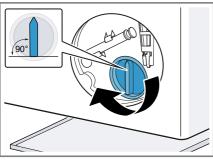

The handle on the pump cap must be in a vertical position.

5. Insert the maintenance flap and lock it into place.

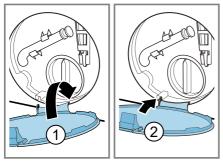

6. Close the maintenance flap.


Before the next wash

To prevent unused detergent from flowing straight into the outlet in the next wash, run the **Abpumpen** programme after you have emptied the drain pump.

- 1. Turn on the tap.
- 2. Insert the mains plug.
- 3. Switch on the appliance.
- 4. Pour 1 litre of water into compartment II.
- 5. Start the Abpumpen programme.


16.6 Cleaning the water outlet hose at the siphon

- 1. Switch off the appliance.
- 2. Disconnect the appliance's mains plug from the power supply.
- **3.** Loosen the hose clamp and carefully remove the water outlet hose.

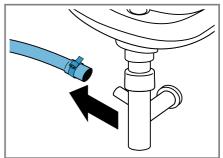


Residual water may leak out.

4. Clean the water outlet hose and siphon connecting piece.

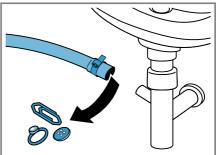

5. Reattach the water outlet hose and secure the connection point using the hose clamp.

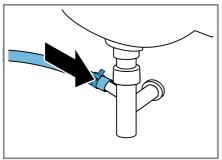

16.7 Cleaning the water inlet filter

Emptying the water inlet hose

In order to clean the filter, first empty the water inlet hose.


- 1. Turn off the tap.
- 2. Set a programme, except for **Spülen**, **Schleudern** or a draining programme.
- **3.** Start the programme and leave it to run for approx. 40 seconds.
- 4. Switch off the appliance.
- 5. Disconnect the appliance's mains plug from the power supply.

Cleaning the filter on the tap


Note: Please read the information in the sections on Safety \rightarrow Page 4 and Preventing material damage \rightarrow Page 10.

Requirement: The water inlet hose is empty.


1. Remove the water inlet hose from the tap.

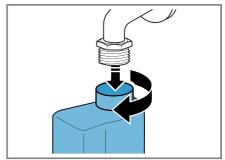

2. Clean the filter with a small brush.

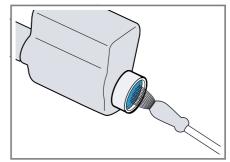

3. Connect the water inlet hose and check for leaks.

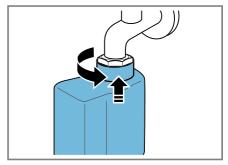

17 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

Risk of electric shock!

Incorrect repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting
The display goes out and Start/Nachlegen flashes.	Energy-saving mode is activePress any button.The symbol lights up again.
"E:36 / -10"	Drain pipe or water outlet hose is blocked.Clean the drain pipe and the water outlet hose.
	 Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped.
	Drain pump is blocked. ► → "Cleaning the drain pump", Page 36
	 The water outlet hose is connected too high. Install the water outlet hose at a maximum height of 1 metre.
	 Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load.
	 Unapproved extension installed on the water drain hose. Remove any unapproved extensions from the water hose. Connecting the appliance
"E:36 / -25 / -26"	Drain pump is blocked. ► → "Cleaning the drain pump", Page 36

Fault	Cause and troubleshooting
۴	The water pressure is low. No remedial action possible.
	The filter in the water inflow is blocked. ► Clean the water inflow filter → Page 39.
	The tap is turned off. • Turn on the tap.
	 The water inlet hose is kinked or jammed. Ensure that the water inlet hose is not kinked or jammed.
"E:35 / -10"	 There is water in the base trough. Turn off the water tap. Call the after-sales service. → "Customer Service", Page 49
	 The appliance is leaking. Turn off the water tap. Call the after-sales service. → "Customer Service", Page 49
: flashes.	The automatic voltage control system detects an un- authorised voltage under-usage.No remedial action possible.
	Note: If the power supply is stable, the programme continues to run as normal.
	Voltage under-usage may cause extension of a pro- gramme. No remedial action possible.
flashes.	Voltage under-usage may cause extension of a pro- gramme. No remedial action possible.
C lights up.	 The temperature is too high. Wait until the temperature has dropped. → "Cancelling the programme", Page 31
	Water level is too high.Start the Abpumpen programme.
	 Laundry is caught in the door. 1. Open the door again. 2. Remove any trapped laundry. 3. Close the door. 4. Press Start/Nachlegen to start the programme.

Fault	Cause and troubleshooting
© flashes.	Door is not closed. 1. Close the door. 2. Press Start/Nachlegen to start the programme.
All other error codes.	Malfunction Call the after-sales service. → "Customer Service", Page 49
The appliance is not working.	The mains plug of the power cord is not plugged in.Connect the appliance to the power supply.
	The circuit breaker is faulty. ► Check the circuit breaker in the fuse box.
	 There has been a power cut. Check whether the lighting in your kitchen or other appliances are working.
The programme does not start.	You have not pressed Start/Nachlegen . ► Press Start/Nachlegen .
	Door is not closed.1. Close the door.2. Press Start/Nachlegen to start the programme.
	Childproof lock is activated. ► → "Deactivating the childproof lock", Page 32
	 Fertig in is activated. ▶ Check whether Fertig in is activated. → "Buttons", Page 21
	Laundry is caught in the door.1. Open the door again.2. Remove any trapped laundry.3. Close the door.
	4. Press Start/Nachlegen to start the programme.
The door cannot be opened.	 is activated. Continue the programme by selecting Schleudern or Abpumpen and pressing Start/Nachlegen. → "Resuming the programme when the programme status is Rinse Hold", Page 32
	 The temperature is too high. ▶ Wait until the temperature has dropped. ▶ → "Cancelling the programme", Page 31
	 Water level is too high. Start the Abpumpen programme.
	Power failure.

Fault	Cause and troubleshooting	
The door cannot be opened.	 Open the door using the emergency release. → "Emergency release", Page 48 	
The water is not drain- ing.	Drain pipe or water outlet hose is blocked.Clean the drain pipe and the water outlet hose.	
	 Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped. 	
	Drain pump is blocked. ► → "Cleaning the drain pump", Page 36	
	 is activated. Continue the programme by selecting Schleudern or Abpumpen and pressing Start/Nachlegen. → "Resuming the programme when the programme status is Rinse Hold", Page 32 	
	 The water outlet hose is connected too high. Install the water outlet hose at a maximum height of 1 metre. 	
	 Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load. 	
	 Unapproved extension installed on the water drain hose. Remove any unapproved extensions from the water hose. Connecting the appliance 	
Water is not flowing in. Detergent is not being dispensed.	You have not pressed Start/Nachlegen . ▶ Press Start/Nachlegen .	
	The filter in the water inflow is blocked. ► Clean the water inflow filter → Page 39.	
	The tap is turned off. ► Turn on the tap.	
	The water inlet hose is kinked or jammed.Ensure that the water inlet hose is not kinked or jammed.	

Fault	Cause and troubleshooting
The spin cycle runs several times.	 The unbalanced load detection system eliminates an imbalance by repeatedly redistributing the laundry. Not a fault – no action required.
	Note: When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
The programme dura- tion changes during the wash cycle.	The programme operation is optimised electronically.This may change the programme duration.Not a fault – no action required.
	The unbalanced load detection system eliminates an imbalance by repeatedly redistributing the laundry.Not a fault – no action required.
	Note: When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
	Foam detection system switches on a rinse cycle if foam build-up is too high.Not a fault – no action required.
No water is visible in the drum.	 Water is below the visible area. Not a fault – no action required. Do not add any extra water to the appliance while it is operating.
Drum jerks after the programme starts.	This is caused by an internal motor test. ► Not a fault – no action required.
Residual water is present in the compartment &.	Insert in compartment [®] is blocked. ► → "Cleaning the detergent drawer", Page 34
Vibrations and move- ment of the appliance	Appliance is not correctly aligned.Aligning the appliance
whilst spinning.	The appliance feet are not fixed.Secure the appliance feet. Aligning the appliance
	Transit bolts have not been removed.Removing the transit bolts
Drum does not turn, water does not flow in.	Load detection is active.Not a fault – no action required.
	Note: The load detection can take up to two minutes.

Fault	Cause and troubleshooting
Heavy foam build-up	 Detergent dosage is too high. Immediate measure: Mix one tablespoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down). Reduce the amount of detergent for the next washing cycle with the same load.
High spin speed not reached.	A low spin speed is selected.The next time you run a wash cycle, set a higher spin speed.
	Unbalance load detection system is using a reduced spin speed to eliminate an unbalance.▶ Redistribute the laundry in the drum.
	Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
	 Start the Schleudern programme.
The spin programme does not start.	Drain pipe or water outlet hose is blocked.Clean the drain pipe and the water outlet hose.
	 Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped.
	 The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Redistribute the laundry in the drum.
	Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
	 Start the Schleudern programme.
Rushing, hissing noise.	Water is flushed under pressure into the detergent drawer.Not a fault – normal operating noise.
Loud noises during the spin cycle.	Appliance is not correctly aligned.▶ Aligning the appliance
	The appliance feet are not fixed.▶ Secure the appliance feet. Aligning the appliance
	Transit bolts have not been removed.▶ Removing the transit bolts

en Troubleshooting

Fault	Cause and troubleshooting	
Banging noises, rat- tling in the drain pump.	Foreign bodies have got into the drain pump. → "Cleaning the drain pump", Page 36	
	The drain pump is active, the detergent solution is pumped out. ► Not a fault – normal operating noise.	
Creasing.	The spin speed is too high.The next time you run a wash cycle, set a lower spin speed.	
	 The load is too large. The next time you run a wash cycle, reduce the amount of laundry being loaded. 	
	The wrong programme is selected for the type of fab- ric.	
	 Select the programmes that are suitable for the type of fabric. → "Programmes", Page 22 	
Detergent or fabric softener drips off the seal and collects on the door or in the seal fold.	 Too much detergent/fabric softener in the detergent drawer. When dosing liquid detergent and fabric softener, observe the marking in the detergent drawer and do not dose above this. 	
The spin result is not satisfactory. The laun- dry is too wet/too damp.	 A low spin speed is selected. The next time you run a wash cycle, set a higher spin speed. Start the Schleudern programme. 	
-	Drain pipe or water outlet hose is blocked.Clean the drain pipe and the water outlet hose.	
	 Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped. 	
	The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distrib- uted.	
	Redistribute the laundry in the drum.	
	Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.	

Fault	Cause and troubleshooting		
The spin result is not satisfactory. The laun- dry is too wet/too	 Unbalance load detection system is using a reduced spin speed to eliminate an unbalance. Redistribute the laundry in the drum. 		
damp.	Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.		
	 Start the Schleudern programme. 		
Detergent residue on the damp washing.	Detergents may contain water-insoluble substances that deposit on the laundry.Start the Spülen programme.		
Detergent residue on the dry laundry.	Detergents may contain water-insoluble substances that deposit on the laundry.Brush out the laundry after washing and drying.		
Water is leaking out at the water inlet hose.	 Water inlet hose is not correctly/securely connected. 1. Connect the water supply hose correctly. Connecting the water inlet hose 2. Tighten the screw connection. 		
Water is leaking out at the water outlet hose.	The water outlet hose is damaged.Replace the damaged water outlet hose.		
	 Water outlet hose is not connected correctly. Connect the water outlet hose correctly. Water outlet connection types 		
Odours have formed in the appliance.	 Humidity and detergent residue may promote the formation of bacteria. → "Cleaning the drum", Page 34 If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate. 		


17.1 Emergency release

Releasing the door

Requirement: The drain pump is empty. \rightarrow *Page 36*

- 1. **ATTENTION!** Escaping water may cause material damage.
- Do not open the door if you can see water through the glass.

Pull the emergency release downwards with a tool and release.

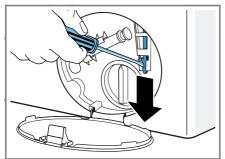

- ✓ The door lock is released.
- 2. Insert the maintenance flap and lock it into place.
- 3. Close the maintenance flap.

18 Transportation, storage and disposal

You can find out here how to prepare your appliance for transportation and storage. You will also find out how to dispose of old appliances.

18.1 Removing the appliance

Note: More detailed instructions for use can be found on www.siemenshome.bsh-group.com or by scanning the QR code on the title page of this user manual.


1. Turn off the water tap.

- Empty the water inlet hose → Page 39.
- 3. Switch off the appliance.
- 4. Unplug the appliance's mains plug.
- Drain the water.
 → "Cleaning the drain pump",
 - Page 36
- 6. Detach the hoses.

18.2 Inserting the transit bolts

Secure the appliance for transportation using transit bolts in order to prevent damage.

1. Use a screwdriver to remove the 4 cover caps.

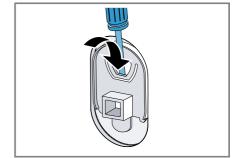

Keep the cover caps.

2 Install the 4 transit bolts. Refer to the description Removing the transit bolts for this and proceed in reverse order.

18.3 Using the appliance again

For further information, see
 → "Installation and connection",
 Page 12 and
 → "Before using for the first time",
 Page 25.

18.4 Disposing of old appliance

Valuable raw materials can be reused by recycling.

WARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.
- 1. Unplug the appliance from the mains.
- 2. Cut through the power cord.
- Dispose of the appliance in an environmentally friendly manner.
 Information about current disposal methods are available from your specialist dealer or local authority.

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

19 Customer Service

If you have any queries on use, are unable to rectify faults on the appliance yourself or if your appliance needs to be repaired, contact Customer Service.

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

19.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

19.2 AQUA-STOP guarantee

In addition to warranty claims against the seller under the purchase agreement and in addition to our manufacturer's warranty, we offer compensation under the following conditions.

- If our Aqua-Stop system is defective and causes water damage, we will make good the damage for private users. To ensure protection from water damage, the appliance must be connected to the power supply.
- The liability guarantee is valid for the service life of the appliance.
- A claim can only be made under the guarantee if the appliance has been correctly installed and connected with Aqua-Stop according to our instructions; this also includes correctly fitting the Aqua-Stop extension (genuine accessory). Our guarantee does not cover defective supply lines or fittings up to the Aqua-Stop connection on the tap.
- If your appliance is fitted with Aqua-Stop, you can in principle leave your appliance unattended during operation and the tap turned on afterwards. The tap only needs to be turned off if you are away from home for a long period, e.g. on holiday for several weeks.

20 Consumption values

The following information is provided in accordance with the EU Ecodesign Regulation. The values given for programs other than the **Eco 40-60** are indicative only and were determined in accordance with the applicable standard EN60456.

Programme	Load (kg)	Pro- gramm e dura- tion (h:min) ¹	Energy con- sump- tion (kWh/ cycle) ¹	Water con- sump- tion (I/ cycle) ¹	Max- imum temper- ature (°C) 5 mins ¹	Spin speed (rpm) ¹	Resid- ual mois- ture (%) ¹
Eco 40-60 ²	8,0	3:29	1,060	58,0	44	1400	50,00
Eco 40-60 ²	4,0	2:44	0,600	43,0	37	1400	50,00
Eco 40-60 ²	2,0	2:11	0,170	27,0	23	1400	56,00
Baum- wolle 20 °C	8,0	3:14	0,320	88,0	23	1400	52,00
Baum- wolle 40 °C	8,0	3:14	1,210	88,0	45	1400	52,00
Baum- wolle 60 °C	8,0	3:28	1,350	88,0	53	1400	52,00
Baumwolle + Vorwäsche 40° 40 °C	8,0	3:44	1,250	98,0	45	1400	52,00
Pflegel- eicht 40 °C	4,0	2:28	0,780	61,0	44	1200	27,00
Schnell/ Mix 40 °C	4,0	0:59	0,620	44,0	41	1400	53,00
Wolle֎ 30 °C	2,0	0:40	0,200	40,0	22	800	25,00

¹ Due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions, the actual values may deviate from the stated values.

² Test programme in accordance with the EU Ecodesign Directive and the EU Energy Labelling Regulation with cold water (15 °C).

21 Technical specifications

Appliance height	84,8 cm
Appliance width	59,8 cm
Appliance depth	63,2 cm
Weight	71,4 kg1
Maximum load	8,0 kg
Mains voltage	220-240 V, 50 Hz
Minimum in- stallation protec- tion	10 A
Nominal power	2300 W
Power consump- tion	 Off mode: 0,10 W Left-on mode: 0,50 W
Water pressure	 Minimum: 100 kPa (1 bar) Maximum: 1000 kPa (10 bar)
Length of the wa- ter inlet hose	150 cm
Length of the wa- ter outlet hose	150 cm
Length of the power cable	160 cm
¹ Depending on the cifications	ne appliance spe-
You can find more your model online eprel.ec.europa.eu dress is linked to t EPREL product dat	at https:// / ¹ . This web ad- he official EU

then follow the instructions on

searching for models. The model

identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the EU energy label.

¹ Only applies to countries in the European Economic Area

BSH Hausgeräte GmbH Carl-Wery-Straße 34 81739 München GERMANY www.siemens-home.bsh-group.com

Valid within Great Britain: Imported to Great Britain by BSH Home Appliances Ltd. Grand Union House Old Wolverton Road Wolverton, Milton Keynes MK12 5PT United Kingdom

Manufactured by BSH Hausgeräte GmbH under the trademark licence of Siemens AG

