



Brief and handy:  
everything your  
dishwasher needs...  
  
Before using for the  
first time, read the  
operating instructions!

1

Adjusting the water softening system \*


Ask your water supply company what the water hardness is and enter this...  
  
\* Only before the first wash or if the water hardness has changed

| Water-hardness-value °E | Hardness range | mmol/l  | Setting value |
|-------------------------|----------------|---------|---------------|
| 0-8                     | Soft           | 0-1.1   | H:00          |
| 9-10                    | Soft           | 1.2-1.4 | H:01          |
| 11-12                   | Medium         | 1.5-1.8 | H:02          |
| 13-15                   | Medium         | 1.9-2.1 | H:03          |
| 16-20                   | Medium         | 2.2-2.9 | H:04          |
| 21-26                   | Hard           | 3.0-3.7 | H:05          |
| 27-38                   | Hard           | 3.8-5.4 | H:06          |
| 39-62                   | Hard           | 5.5-8.9 | H:07          |

Quickly done...

How to adjust


- Switch on the ON/OFF switch
  - Press **setup 3 sec.** button for 3 seconds.
- The display shows **Hxx** and **Set**
- Press the Start button until the correct water hardness level is set.
  - To store the settings, press the < button for 3 seconds.

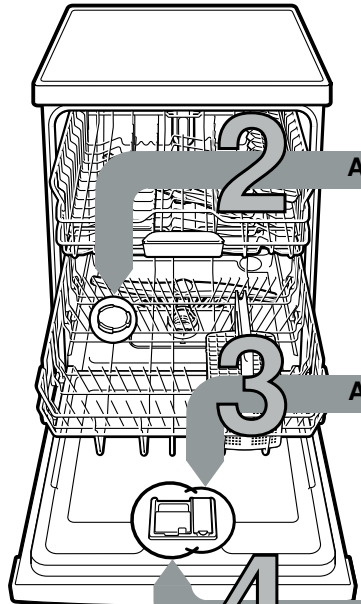


Add special salt

Dissolves limescale (not necessary when set to 0!) ...


For optimal washing results

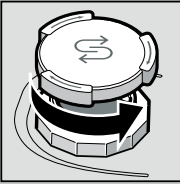


Open the lid.

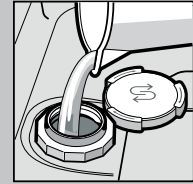

Only fill the salt dispenser with water before the first wash.

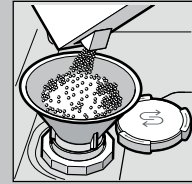

Add special salt (never use detergent!).

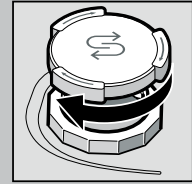


Close the lid. Rinse immediately.


Add rinse aid

Gets it sparkling clean ...


For optimum drying results

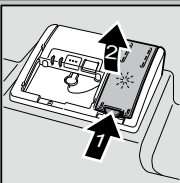

Press marking 1, lift lid 2.

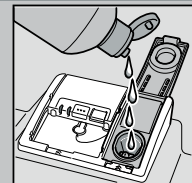


Add rinse aid.

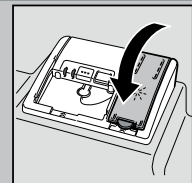

Close lid. CLICK!



Add detergent

A lot of dirt, a lot of detergent ...

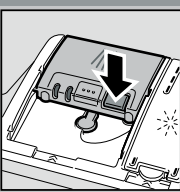


If required, open the cover (press button).

Attention: Combination products are not suitable for all programmes, follow manufacturer's instructions.

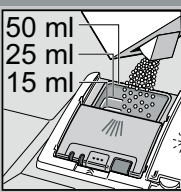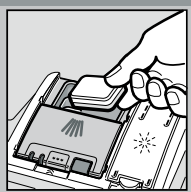

Pour detergent into the dry detergent dispenser only.

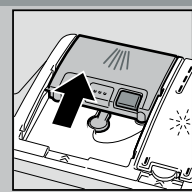

Slide cover shut, press. PLOP!

5

Switch on the appliance

6

Select programme

Quick, economical or intensive ...

Overview of programmes


This overview describes all the possible programmes. You can see which programmes your appliance offers from its control panel. The values given in the programme details are laboratory measurements compliant with European standard EN 60436. The consumption figures depend on the selected programme and additional functions. The programme duration will be different if the machine is short of rinse additive or the function is turned off.

\* half normal load

\*\* Suitable programme for running at night: it takes longer, but is extremely quiet.

|                             | Intensive 70° | Auto 45°/65° | Eco 50° | Silence ** 50° | Speed 65° | Speed 60° | Speed 45° | Glass 40°   | Favourite | Machine Care |
|-----------------------------|---------------|--------------|---------|----------------|-----------|-----------|-----------|-------------|-----------|--------------|
|                             |               |              |         |                |           |           |           |             |           |              |
| Duration in hrs : mins.     | 2:05-2:15     | 1:40-2:45    | 3:45    | 4:00           | 1:00      | 1:29      | 0:29 *    | 1:40-1:45   | 0:15      | 2:10-2:15    |
| Energy consumption in kWh   | 1,350-1,400   | 0,850-1,450  | 0,937   | 1,100          | 1,200     | 1,250     | 0,750     | 0,750-0,800 | 0,050     | 1,130-1,350  |
| Water consumption in litres | 10,5-13,5     | 7-15,5       | 9,5     | 10,5           | 10        | 11,5      | 10        | 11,5-14     | 4         | 13-15,2      |

You will find descriptions of possible additional functions in your instruction manual.

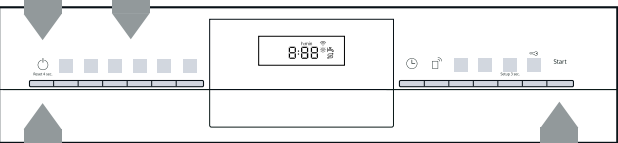

Start the programme Off we go...

8

Switch off the appliance Everything OK...

Maintenance and care


Filters  
... check,  
if required,  
clean.




Rotate  
filter cylinder,  
remove filter  
system ...




rinse  
under  
running  
water ...

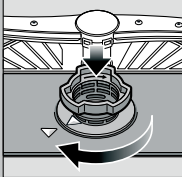

insert ...


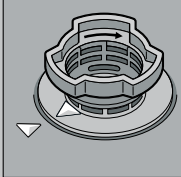


Screw on  
filter system  
NOTE  
MARK!

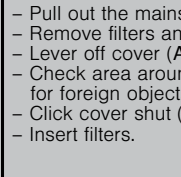


Cleaning waste water pump


- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.

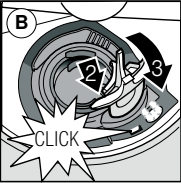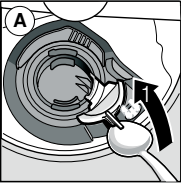


Spray arms  
... Remove  
blockages/  
deposits.

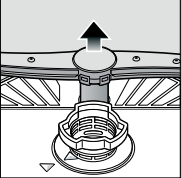


pull lower arm  
upwards ...

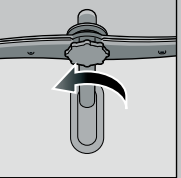


unscrew  
upper arm ...

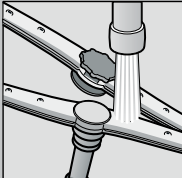


clean spray nozzles  
under running water  
(if required  
use toothpicks) ...

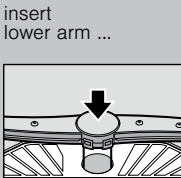

insert  
lower arm ...

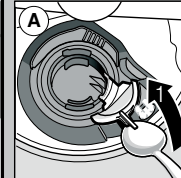


screw on upper  
arm tightly

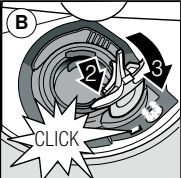


Rectify small faults yourself ...

... because self-help is worth it!

 For more information see the instruction manual

| Fault                                                                                                              | Possible causes                                                                                                                                          | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display E32 -00<br>and  are lit   | Supply fitting jammed<br>or furred up<br><br>Water supply not connected | <ul style="list-style-type: none"><li>▶ Open supply fitting.</li><li>▶ 1. Unscrew water connection.</li><li>▶ 2. Clean filter in the water supply.</li><li>▶ 3. Flow rate must be min. 10 l/min when water supply is open.</li><li>▶ If the flow rate is less, replace the supply fitting.</li><li>▶ Install supply hose without kinks.</li><li>▶ Connect water supply.</li><li>▶ (Drinking water connection in the instruction manual).</li></ul> |
| Display E92 -40                                                                                                    | Filters are soiled or blocked                                                                                                                            | <ul style="list-style-type: none"><li>▶ Clean the filters (see above).</li></ul>                                                                                                                                                                                                                                                                                                                                                                   |
| Display E61 -03<br>and  are lit   | Waste water hose is blocked<br>or kinked<br>Cover of waste water pump<br>not attached                                                                    | <ul style="list-style-type: none"><li>▶ Reposition the waste water hose without kinks.</li><li>▶ Attach cover (see above).</li></ul>                                                                                                                                                                                                                                                                                                               |
| Display E61 -02<br>and  are lit | Waste water pump blocked                                                                                                                                 | <ul style="list-style-type: none"><li>▶ Clean waste water pump (see above).</li></ul>                                                                                                                                                                                                                                                                                                                                                              |
| Other error display<br>Exx -xx is lit                                                                              | Appliance technically defective                                                                                                                          | <ul style="list-style-type: none"><li>▶ Call customer service (state the error displayed).</li><li>▶ Unplug the appliance.</li><li>▶ Turn off the tap.</li></ul>                                                                                                                                                                                                                                                                                   |
| Residual water in the<br>appliance                                                                                 | Programme has not yet ended                                                                                                                              | <ul style="list-style-type: none"><li>▶ Close the appliance and switch it on or terminate the programme (see Terminating the programme).</li></ul>                                                                                                                                                                                                                                                                                                 |
| Rust on cutlery                                                                                                    | Cutlery not rust-resistant<br>Hard knife blades are more susceptible<br>Extraneous rust                                                                  | <ul style="list-style-type: none"><li>▶ Use dishwasher-safe cutlery.</li><li>▶ Never wash rusting parts in the appliance.</li></ul>                                                                                                                                                                                                                                                                                                                |
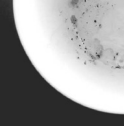
| Fault                                                                                                                                                           | Possible causes                                                                                                                                                                                                        | Solution                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tableware is not clean<br><br>Sand or gritty<br>residue on the tableware<br> | Items of tableware lying against<br>or on top of each other<br>Not enough detergent<br>Unsuitable programme selected<br>Spray arm nozzles blocked<br>Filters are soiled, not securely positioned<br>Spray arms blocked | <ul style="list-style-type: none"><li>▶ Separate tableware, prevent points of contact.</li><li>▶ Follow the manufacturer's instructions (detergent).</li><li>▶ Select a more intensive programme.</li><li>▶ Clean spray arms (see above).</li><li>▶ Clean the filters (see above).</li><li>▶ Arrange tableware so that spray arms can rotate freely.</li></ul> |
| Marks and streaks                                                                                                                                               | Rinse aid dosage too high /<br>too low                                                                                                                                                                                 | <ul style="list-style-type: none"><li>▶ In the case of streaks: reduce detergent dosage.</li><li>▶ With water or limescale marks: increase dosage.</li></ul>                                                                                                                                                                                                   |
| Tableware is not dry                                                                                                                                            | Rinse aid<br><br>The combined detergent used<br>has poor drying performance.<br>Appliance setting                                                                                                                      | <ul style="list-style-type: none"><li>▶ Increase dosage.</li><li>▶ Change product.</li><li>▶ Use rinse aid.</li></ul>                                                                                                                                                                                                                                          |
| Milky deposits on<br>the tableware<br>(removable)                                                                                                               | Water softening function is<br>wrongly configured;<br>Insufficient special salt                                                                                                                                        | <ul style="list-style-type: none"><li>▶ Activate intensive drying (depending on model)</li><li>▶ Configure water softening system correctly.</li></ul>                                                                                                                                                                                                         |
| Milky deposits, glasses<br>clouded / opaque<br>(cannot be removed)                                                                                              | Glasses not dishwasher-proof.                                                                                                                                                                                          | <ul style="list-style-type: none"><li>▶ Add special salt.</li><li>▶ Use dishwasher-safe glasses.</li><li>▶ Use gentle detergents for glass.</li></ul>                                                                                                                                                                                                          |
| Plastic / tableware items<br>discoloured                                                                                                                        | Not enough detergent<br><br>Discolouration by<br>food colourings (tomato sauce)                                                                                                                                        | <ul style="list-style-type: none"><li>▶ Follow the manufacturer's instructions (detergent).</li><li>▶ Discolouration will not damage the appliance; It will fade after further wash cycles.</li></ul>                                                                                                                                                          |

Cancel the programme ...

During the programme,  
press the  button for  
approx. 4 sec. (reset).

All displays light up,  
then "0:01" appears in the display  
"0:00" appears after the programme has finished

Load the appliance correctly ...

Insert dishwasher-proof tableware (roughly remove large remnants of jam,  
dairy products and meals without leaving residue from ash, wax,  
lubricating grease, paint, adhesive labels) as described in the instruction manual  
and check that the spray arms can rotate freely