




Brief and handy:
everything your
dishwasher needs...
**Before using for the
first time, read the
operating instructions!**

1

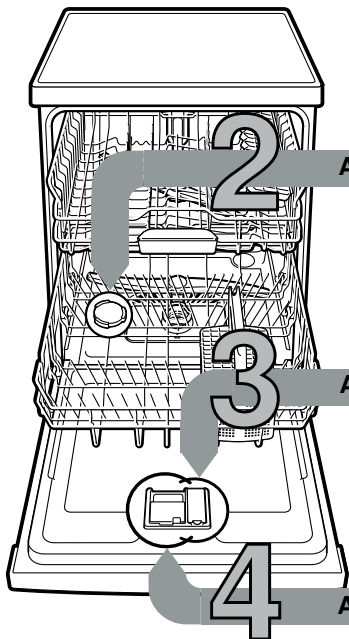

Add special salt

Add rinse aid

Add detergent

5

Switch on the appliance

6

Select programme

 
8

Switch off the appliance Everything OK...

Start the programme Off we go...

Adjusting the water softening system *

Ask your water supply
company what the water
hardness is and enter this...



* Only before the first
wash or if the water
hardness has changed


°E	Hardness range	mmol/l	Setting	A	B	C
0-8	Soft	0-1.1	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
9-20	Medium	1.2-2.9	1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
21-26	Hard	3.0-3.7	2	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
27-44	Hard	3.8-6.2	3	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>

Quickly done...


How to adjust

- Switch on the ON/OFF switch
 - Press "Setup 3 sec." button for 3 seconds.
- In the display, flashes.
- Press the Start button repeatedly until the
right water hardness has been set.
- 0, 1, 2 or 3 LEDs will light up accordingly.
- To save the settings,
press "Setup 3 sec." button for 3 seconds.

Dissolves limescale (not necessary when set to 0!) ...

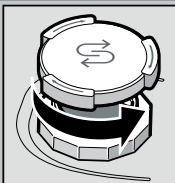


Open
the lid.

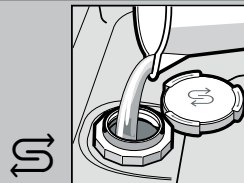


Only fill the salt
dispenser with
water before the
first wash.

For optimal washing results

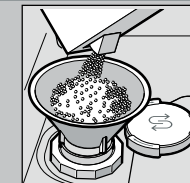


Add
special salt
(never use
detergent!).

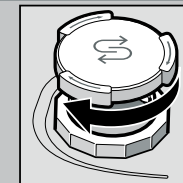

Close the lid.
Rinse immediately.


Gets it sparkling clean ...

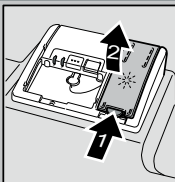


Press marking 1,
lift lid 2.



For optimum drying results

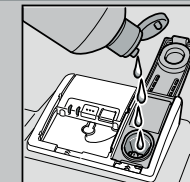


Add
rinse aid.

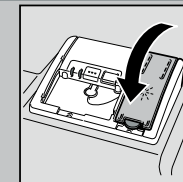

Close lid.
CLICK!



A lot of dirt, a lot of detergent ...

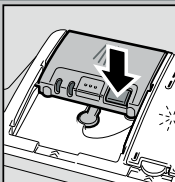


If required,
open the cover
(press button).



Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

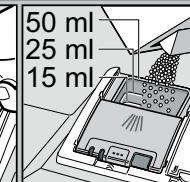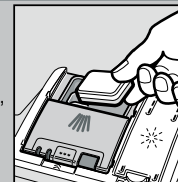

Pour detergent
into the dry
detergent
dispenser only.

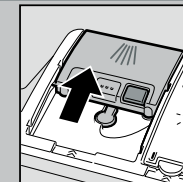

Slide cover
shut, press.
PLOP!

Quick, economical or intensive ...

Overview of programmes

This overview describes all the possible programmes. You can see which programmes your appliance offers from its control panel. The values given in the programme details are laboratory measurements compliant with European standard EN 60436. The consumption figures depend on the selected programme and additional functions. The programme duration will be different if the machine is short of rinse additive or the function is turned off.

* half normal load


** Suitable programme for running at night:
it takes longer, but is extremely quiet.

	Intensive 70°	Auto 45°/65°	Eco 50°	Silence ** 50°	Speed 65°	Mix	Speed 45°	Glass 40°	Favourite	Machine Care
Duration in hrs : mins.	2:10 - 2:15	1:45 - 2:45	4:30	4:00	1:00	2:10	0:29 *	1:35	0:15	2:10 - 2:15
Energy consumption in kWh	1,300 - 1,350	0,850 - 1,350	0,923	1,100	1,100	1,150	0,650	0,750 - 0,800	0,050	1,130 - 1,450
Water consumption in litres	11 - 13,5	9,5 - 15,5	10,5	10,5	10	13	10	13,5	4	13 - 15,2

You will find descriptions of possible additional functions in your instruction manual.

Maintenance and care


Filters
... check,
if required,
clean.

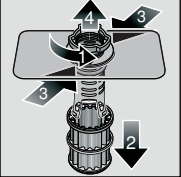


Rotate
filter cylinder,
remove filter
system ...



rinse
under
running
water ...

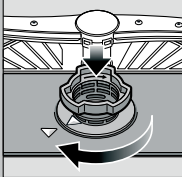

insert ...


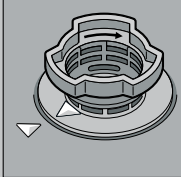


Screw on
filter system
NOTE
MARK!




Cleaning waste water pump


- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.

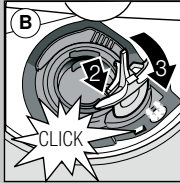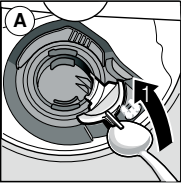


Spray arms
... Remove
blockages/
deposits.

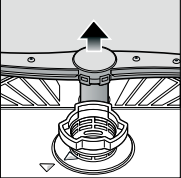


pull lower arm
upwards ...

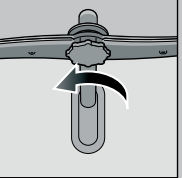


unscrew
upper arm ...

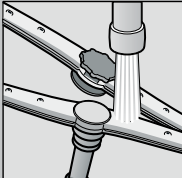


clean spray nozzles
under running water
(if required
use toothpicks) ...

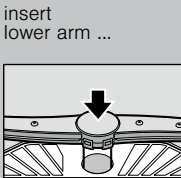

insert
lower arm ...

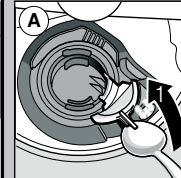


screw on upper
arm tightly

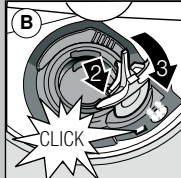

Rectify small faults yourself ...


... because self-help is worth it!

 For more information see the instruction manual

Fault	Possible causes	Solution
Display for water supply lights up	Supply fitting jammed or furred up 	<ul style="list-style-type: none">▶ Open supply fitting.▶ 1. Unscrew water connection.▶ 2. Clean filter in the water supply.▶ 3. Flow rate must be min. 10 l/min when water supply is open. If the flow rate is less, replace the supply fitting.▶ Install supply hose without kinks.
	Waste water hose is blocked or kinked	<ul style="list-style-type: none">▶ Reposition the waste water hose without kinks.
	Cover of waste water pump not attached	<ul style="list-style-type: none">▶ Attach cover (see above).
	Waste water pump blocked	<ul style="list-style-type: none">▶ Clean waste water pump (see above).
Display for water supply flashes	Appliance technically defective	<ul style="list-style-type: none">▶ Call customer service (state the error displayed).▶ Unplug the appliance. Turn off the tap.
Residual water in the appliance	Programme has not yet ended	<ul style="list-style-type: none">▶ Switch on the appliance and close or terminate the programme (see Terminating the programme).
Rust on cutlery	Cutlery not rust-resistant Hard knife blades are more susceptible Extraneous rust	<ul style="list-style-type: none">▶ Use dishwasher-safe cutlery.▶ Never wash rusting parts in the appliance.

Fault	Possible causes	Solution
Tableware is not clean	Items of tableware lying against or on top of each other	<ul style="list-style-type: none">▶ Separate tableware, prevent points of contact.
Sand or gritty residue on the tableware	Not enough detergent Unsuitable programme selected Spray arm nozzles blocked Filters are soiled, not securely positioned Spray arms blocked	<ul style="list-style-type: none">▶ Follow the manufacturer's instructions (detergent).▶ Select a more intensive programme.▶ Clean spray arms (see above).▶ Clean the filters (see above).▶ Arrange tableware so that spray arms can rotate freely.
Marks and streaks	Rinse aid dosage too high / too low	<ul style="list-style-type: none">▶ In the case of streaks: reduce detergent dosage.▶ With water or limescale marks: increase dosage.
Tableware is not dry	Rinse aid The combined detergent used has poor drying performance. Appliance setting	<ul style="list-style-type: none">▶ Increase dosage. Change product.▶ Use rinse aid.▶ Activate intensive drying (depending on model)
Milky deposits on the tableware (removable)	Water softening function is wrongly configured; Insufficient special salt	<ul style="list-style-type: none">▶ Configure water softening system correctly.▶ Add special salt.
Milky deposits, glasses clouded / opaque (cannot be removed)	Glasses not dishwasher-proof.	<ul style="list-style-type: none">▶ Use dishwasher-safe glasses.▶ Use gentle detergents for glass.
Plastic / tableware items discoloured	Not enough detergent Discolouration by food colourings (tomato sauce)	<ul style="list-style-type: none">▶ Follow the manufacturer's instructions (detergent).▶ Discolouration will not damage the appliance; It will fade after further wash cycles.

 Cancel the programme ...

During the programme,
press the  button for
approx. 4 sec. (reset).

All indicators light up,
Programme termination takes approx. 1 minute,
then the most recently selected programme flashes.

Load the appliance correctly ...

Insert dishwasher-proof tableware (roughly remove large remnants of jam, dairy products and meals without leaving residue from ash, wax, lubricating grease, paint, adhesive labels) as described in the instruction manual and check that the spray arms can rotate freely