


Brief and handy:
everything your dishwasher needs ...

 Before using for the first time,
read the Installation instructions
and Operating instructions!

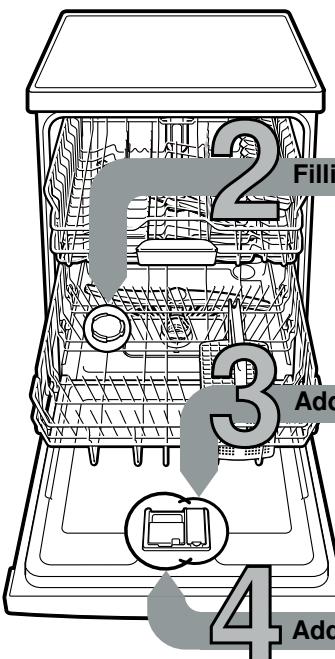

1

Adjusting the water softening system *

Ask your water supply company what the water hardness is and enter ...



* only before the first wash
or if the water hardness has been changed

| ° Clarke | Hardness range | mmol/l | Setting | A | B | C |
|----------|----------------|---------|---------|----------------------------------|----------------------------------|----------------------------------|
| 0-8 | soft | 0-1,1 | 0 | <input type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| 9-20 | medium | 1,2-2,9 | 1 | <input checked="" type="radio"/> | <input type="radio"/> | <input type="radio"/> |
| 21-26 | hard | 3,0-3,7 | 2 | <input checked="" type="radio"/> | <input checked="" type="radio"/> | <input type="radio"/> |
| 27-44 | hard | 3,8-6,2 | 3 | <input checked="" type="radio"/> | <input checked="" type="radio"/> | <input checked="" type="radio"/> |


Quickly sorted ...

How to adjust


- Switch on ON/OFF switch.
 - Hold down button > and press START button until  and  flash.
 - Release the buttons.
 - The  Salt refill indicator  Dry indicator flash.
The A indicator lights up (= level 1).
- Change the setting as follows:
- Press the < button until the required setting has been selected.
 - Press START button.
The  and  displays go out. The selected setting is saved.
 - Close the door.

2 Filling the salt dispenser

Dissolves limescale (not necessary when set to 0!) ...

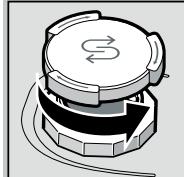


Open the lid.

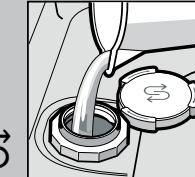


Only fill the salt
dispenser with
water before
the first wash.

For optimal washing results

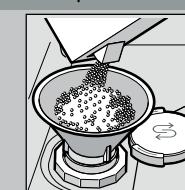


Add special salt
(never use
detergent!).

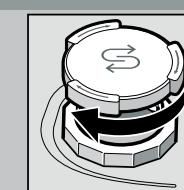

Close the lid.
Rinse immediately.

3 Adding rinse aid


Gets it sparkling clean ...

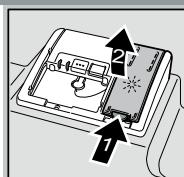


Press marking 1,
lift lid 2.



For optimum drying results

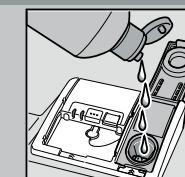


Add
rinse aid.

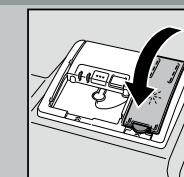

Close lid.
CLICK!

4 Adding detergent



A lot of dirt, a lot of detergent ...

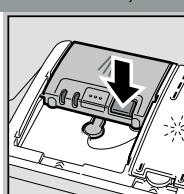


If required,
open the cover
(press button).



Attention:
Combination
products
are not suitable
for all programmes,
follow
manufacturer's
instructions.

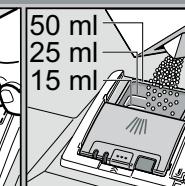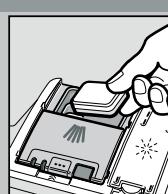

Pour detergent
into the dry
detergent
dispenser only.

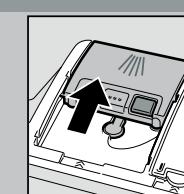


Slide cover
shut, press.
PLOP!

5

Switching on the appliance

6

 Select programme



Quick, economical or intensive ...

Overview of programmes

 
The max. possible number of programmes is illustrated in this overview.
The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 60436. Deviations are possible in practice.
* half normal load

The programme duration will be different if the machine is short of rinse additive or the function is turned off.

Intensive
70°


Mix
65°


Eco
50°


65°
1h


Quick
45°


Prerinse


| | | | |
|-----------------------------|---------------|--------|-------|
| Duration: hs : mins | 3:30 - 1:00 | 0:29 * | 0:15 |
| Energy consumption in kWh | 1,500 - 1,020 | 0,800 | 0,050 |
| Water consumption in litres | 15 - 10,5 | 10 | 4 |

7

Start programme Here we go ...

9

Switch off the appliance Everything o.k. ...

Additional options **

 **Express Wash/
Speed Perfect
(VarioSpeed)**
... is obtained by increased
energy consumption at a
constant cleaning
performance.

 **Half load**
... for a few items,
saves water, energy
and time.

 **Intensive zone**
... perfect for
a mixed load.
Washing pressure
and washing temperature
are increased slightly.

 **Hygiene**
... the temperature
is increased during
the final rinse process.
This increases
the hygiene status.


 **Extra drying**
... improves the drying
result by increased
temperature
in the final rinse.
(Please take care
with delicate dishes.)

** depending on model



Maintenance and care


Filters
... check,
if required,
clean.

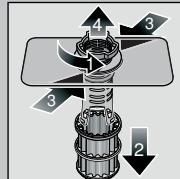


Rotate
filter cylinder,
remove filter
system ...



rinse
under
running
water ...

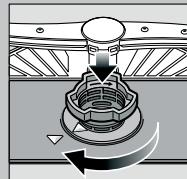


insert ...

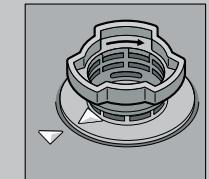


Screw on
filter system
NOTE
MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... Remove
blockages/
deposits.

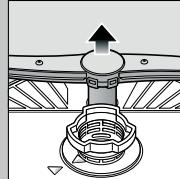


pull lower arm
upwards ...

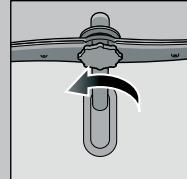


unscrew
upper arm ...

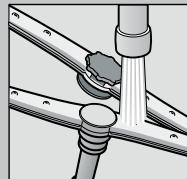


clean spray nozzles
under running water
(if required
use toothpicks) ...

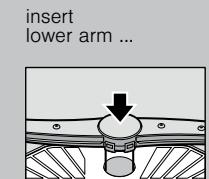

insert
lower arm ...

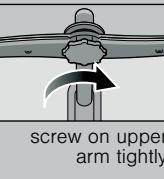

screw on upper
arm tightly

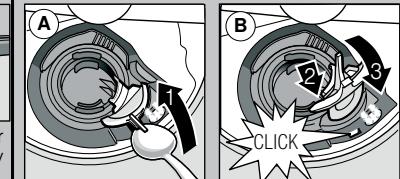

For more information see the instruction manual

Rectify small faults yourself ...

... because self-help is worth it!

 
Fault

Possible causes

Solution

Display "■" is lit

Supply fitting jammed
or furred up



- ▶ Open supply fitting.
- ▶ 1. Unscrew water connection.
2. Clean filter in the water supply.
3. Flow rate must be min. 10 l/min when water supply is open.
If the flow rate is less, replace the supply fitting.
- ▶ Install supply hose without kinks.

Waste water hose is blocked
or kinked

- ▶ Reposition the waste water hose without kinks.

Cover of waste water pump
not attached

- ▶ Attach cover (see above).

Waste water pump blocked

- ▶ Clean waste water pump (see above).

Display "■" flashes

Appliance technically defective

- ▶ Call customer service (state the error displayed).

- ▶ Unplug the appliance.
Turn off the tap.

- ▶ Switch on the appliance and close or terminate the programme (see Terminating the programme).

Residual water in the
appliance

Programme has not yet ended

- ▶ Use dishwasher-safe cutlery.
- ▶ Never wash rusting parts in the appliance.

Rust on cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust


Fault

Possible causes

Solution

Tableware is not clean

Sand or gritty
residue on the tableware

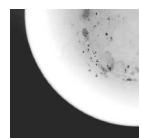

Items of tableware lying against
or on top of each other

Not enough detergent
Unsuitable programme selected

Spray arm nozzles blocked
Filters are soiled, not securely positioned
Spray arms blocked

- ▶ Separate tableware, prevent points of contact.

- ▶ Follow the manufacturer's instructions (detergent).

- ▶ Select a more intensive programme.

- ▶ Clean spray arms (see above).

- ▶ Clean the filters (see above).

- ▶ Arrange tableware so that spray arms can rotate freely.

Marks and streaks

Rinse aid dosage too high /
too low

- ▶ In the case of streaks: reduce detergent dosage.
- ▶ With water or limescale marks: increase dosage.

Tableware is not dry

Rinse aid

- ▶ Increase dosage.
Change product.

- ▶ Use rinse aid.

Milky deposits on
the tableware
(removable)

The combined detergent used
has poor drying performance.
Appliance setting

- ▶ Activate intensive drying (depending on model)

Milky deposits, glasses
clouded / opaque
(cannot be removed)

Water softening function is
wrongly configured;
Insufficient special salt

- ▶ Configure water softening system correctly.

Milky deposits, glasses
clouded / opaque
(cannot be removed)

Glasses not dishwasher-proof.

- ▶ Add special salt.

- ▶ Use dishwasher-safe glasses.

- ▶ Use gentle detergents for glass.

Plastic / tableware items
discoloured

Not enough detergent
Discolouration by
food colourings (tomato sauce)

- ▶ Follow the manufacturer's instructions (detergent).

- ▶ Discolouration will not damage the appliance;
It will fade after further wash cycles.

Terminating the programme ...

While the programme is running, press the START button for approx. 3 sec. (Reset) until all displays go out.



The remaining programme sequence for draining the residual water takes approx. 1 minute.

Loading the dishwasher correctly ...

Dishwasher-proof utensils not soiled with ash, wax, lubricating grease, ink or adhesive labels; remove large remnants of jam, milk products and food according to the operating instructions and check that the spray arms can rotate freely.