


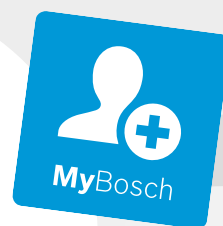

**Register** your  
new device on  
MyBosch now and  
get free benefits:  
**[bosch-home.com/  
welcome](https://bosch-home.com/welcome)**



# Oven

**CMG7361.1B**

**[en]** User manual and installation instructions



You can find additional information and explanations online.  
Scan the QR code on the title page.



# Table of contents

## INFORMATION FOR USE

|    |                                                  |    |
|----|--------------------------------------------------|----|
| 1  | Safety .....                                     | 2  |
| 2  | Preventing material damage .....                 | 5  |
| 3  | Environmental protection and saving energy ..... | 6  |
| 4  | Familiarising yourself with your appliance ..... | 7  |
| 5  | Operating modes .....                            | 9  |
| 6  | Accessories .....                                | 11 |
| 7  | Before using for the first time .....            | 12 |
| 8  | Basic operation .....                            | 12 |
| 9  | Rapid heating .....                              | 14 |
| 10 | Time-setting options .....                       | 14 |
| 11 | Microwave .....                                  | 15 |
| 12 | Ventilation function "Crisp Finish" .....        | 17 |
| 13 | Dishes .....                                     | 18 |
| 14 | Favourites .....                                 | 19 |
| 15 | Childproof lock .....                            | 20 |

|      |                                                           |    |
|------|-----------------------------------------------------------|----|
| 16   | Basic settings .....                                      | 20 |
| 17   | Home Connect .....                                        | 21 |
| 18   | Cleaning and servicing .....                              | 23 |
| 19   | Cleaning aid .....                                        | 25 |
| 20   | Drying .....                                              | 25 |
| 21   | Appliance door .....                                      | 26 |
| 22   | Rails .....                                               | 27 |
| 23   | Troubleshooting .....                                     | 28 |
| 24   | Disposal .....                                            | 30 |
| 25   | Customer Service .....                                    | 30 |
| 26   | Information regarding Free and Open Source Software ..... | 30 |
| 27   | Declaration of Conformity .....                           | 31 |
| 28   | How it works .....                                        | 31 |
| 29   | INSTALLATION INSTRUCTIONS .....                           | 44 |
| 29.1 | General installation instructions .....                   | 44 |

## 1 Safety

Observe the following safety instructions.

### 1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

### 1.2 Intended use

This appliance is designed only to be built into kitchen units. Read the special installation instructions.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

Only use this appliance:

- To prepare meals and drinks.
- For household use and similar applications, such as: In kitchens for employees in shops,

offices and other commercial sectors; in agriculture; by customers in hotels and other residential facilities; in bed and breakfasts.

- Up to an altitude of 4000 m above sea level.

This appliance complies with the standards EN 55011 and CISPR 11. It is a group 2, class B product. Group 2 means that microwaves are produced for the purpose of heating food. Class B means that the appliance is suitable for private households.

### 1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

#### 1.4 Safe use

Always place accessories in the cooking compartment the right way round.

→ "Accessories", Page 11

##### **⚠ WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Opening the appliance door creates a draught. Greaseproof paper may come into contact with the heating element and catch fire.

- ▶ Never place greaseproof paper loosely over accessories when preheating the appliance and while cooking.
- ▶ Always cut greaseproof paper to size and use a plate or baking tin to hold it down.

##### **⚠ WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

Accessories and cookware get very hot.

- ▶ Always use oven gloves to remove accessories or cookware from the cooking compartment.

When the cooking compartment is hot, any alcoholic vapours inside may catch fire. The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).

- ▶ Open the appliance door carefully.

##### **⚠ WARNING – Risk of scalding!**

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

##### **⚠ WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

The appliance and its parts that can be touched may have sharp edges.

- ▶ Take care when handling and cleaning them.
- ▶ If possible, wear protective gloves.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges. Components inside the appliance door may have sharp edges.

- ▶ Wear protective gloves.

Alcoholic vapours may catch fire in the hot cooking compartment, and the appliance door may spring open and may fall off. The door panels may shatter and fragment.

→ "Preventing material damage", Page 5

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

##### **⚠ WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or

special appliance power cable, which is available from the manufacturer or its Customer Service.

- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer service. → *Page 30*

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children.

- ▶ Read the special installation instructions.

#### ⚠ **WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

## 1.5 Microwave

CAREFULLY READ THE IMPORTANT SAFETY INSTRUCTIONS AND KEEP THEM SAFE FOR FUTURE USE

#### ⚠ **WARNING – Risk of fire!**

Using the appliance for anything other than its intended purpose is dangerous and may cause damage. For example, heated slippers

and pillows filled with grain or cereal may catch fire, even several hours later.

- ▶ Never dry food or clothing with the appliance.
- ▶ Never heat up slippers, pillows filled with grain or cereal, sponges, damp cleaning cloths or similar with the appliance.
- ▶ The appliance must only be used to prepare food and drink.

Food and its packaging and containers may catch fire.

- ▶ Never heat food in heat-retaining packaging.
- ▶ Do not leave food unattended while it is heating in containers made of plastic, paper or other combustible materials.
- ▶ Never set the microwave power too high or the cooking time too long. Follow the instructions provided in this user manual.
- ▶ Never use the microwave to dry food.
- ▶ Never defrost or heat food with a low water content, such as bread, at too high a microwave power or for too long.

Cooking oil may catch fire.

- ▶ Never use the microwave to heat cooking oil on its own.

#### ⚠ **WARNING – Risk of explosion!**

Liquids and other food may easily explode when in containers that have been tightly sealed.

- ▶ Never heat liquids or other food in containers that have been tightly sealed.

#### ⚠ **WARNING – Risk of burns!**

Foods with peel or skin may burst or explode during heating, or even afterwards.

- ▶ Never cook eggs in their shell or heat hard-boiled eggs in their shell.
- ▶ Never cook shellfish or crustaceans.
- ▶ Always prick the yolk of eggs before microwaving.
- ▶ The skin of foods that have a peel or skin, such as apples, tomatoes, potatoes and sausages, may burst. Before heating, prick the peel or skin.

Heat is not distributed evenly through baby food.

- ▶ Never heat baby food in closed containers.
- ▶ Always remove the lid or teat.
- ▶ Stir or shake well after heating.
- ▶ Check the temperature before giving the food or drink to a child.

Heated food gives off heat. The cookware may become hot.

- ▶ Always use oven gloves to remove cookware or accessories from the cooking compartment.

Airtight packaging may burst when food is heated.

- ▶ Always follow the instructions on the packaging.
- ▶ Always use oven gloves to remove the dishes from the cooking compartment.

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.


At the highest settings in microwave only mode, the drying function will automatically switch on an additional heating element to heat the cooking compartment.

- ▶ Never touch the inside surfaces of the cooking compartment or the heating elements while they are hot.
- ▶ Keep children at a safe distance.

#### ⚠ **WARNING – Risk of scalding!**

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches the boiling temperature without the usual steam bubbles rising to the surface. Exercise caution even when only gently shaking the container. The hot liquid may suddenly boil over and splatter.

- ▶ Always place a spoon in the container when heating liquids. This prevents delayed boiling.

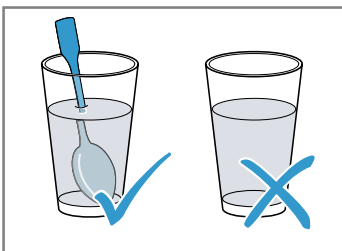

#### ⚠ **WARNING – Risk of injury!**

Unsuitable cookware may crack. Porcelain or ceramic cookware can have small perforations in the handles and lid. These perforations conceal a cavity below. If moisture penetrates this cavity, it could cause the cookware to crack.

- ▶ Only use microwave-safe cookware.

Cookware and containers made from metal or cookware with metal edging may lead to sparks being formed during simple microwave operation. The appliance is damaged.

- ▶ Never use metal containers during microwave-only operation.
- ▶ Only use microwave-safe cookware or use the microwave in combination with a type of heating.

#### ⚠ **WARNING – Risk of electric shock!**

The appliance uses a high voltage.

- ▶ Never remove the casing.

#### ⚠ **WARNING – Risk of serious harm to health!**

Inadequate cleaning may destroy the surface of the appliance, reduce its service life, and lead to dangerous situations, such as escaping microwave energy.

- ▶ Clean the appliance on a regular basis, and remove any food residue immediately.
- ▶ Always keep the cooking compartment, door seal, door and hinge clean.

→ "Cleaning and servicing", Page 23

Never operate the appliance if the cooking compartment door or the door seal is damaged. Microwave energy may escape.

- ▶ Never use the appliance if the cooking compartment door, the door seal or the plastic door frame is damaged.
- ▶ Any repair work must only be carried out by customer service.

Microwave energy will escape from appliances that do not have any casing.

- ▶ Never remove the casing.
- ▶ For any maintenance or repair work, contact the customer service.

## 2 Preventing material damage

### 2.1 General

#### **ATTENTION**

Alcoholic vapours may catch fire in the hot cooking compartment and cause permanent damage to the appliance. The appliance door may spring open due to an explosion and it may fall off. The door panels may shat-

ter and fragment. Due to the resulting negative pressure, the cooking compartment may become considerably deformed inwards.

- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

Objects on the cooking compartment floor at over 50 °C will cause heat to build up. The baking and roasting times will no longer be correct and the enamel will be damaged.

- ▶ Do not place any accessories, greaseproof paper or foil of any kind on the cooking compartment floor.
- ▶ Only place cookware on the cooking compartment floor if a temperature under 50 °C has been set.

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- ▶ Never pour water into the cooking compartment when it is still hot.
- ▶ Never place cookware containing water on the cooking compartment floor.

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ Allow the cooking compartment to dry after use.
- ▶ Do not keep moist food in the cooking compartment for a long time with the door closed.
- ▶ Do not store food in the cooking compartment.
- ▶ Take care not to trap anything in the appliance door.

Fruit juice dripping from the baking tray leaves stains that cannot be removed.

- ▶ When baking very juicy fruit flans, do not pack too much on the baking tray.
  - ▶ If possible, use the deeper universal pan.
- Using oven cleaner in a hot cooking compartment damages the enamel.

- ▶ Never use oven cleaner in the cooking compartment when it is still warm.
- ▶ Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

If the seal is very dirty, the appliance door will no longer close properly during operation. This may damage the front of adjacent kitchen units.

- ▶ Keep the seal clean at all times.
- ▶ Never operate the appliance if the seal is damaged or missing.

Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.

- ▶ Do not place cookware or accessories on the appliance door.

With certain models, accessories may scratch the door pane when closing the appliance door.

- ▶ Always push accessories fully into the cooking compartment.

If aluminium foil comes into contact with the door pane, it could cause permanent discolouration.

- ▶ Do not allow aluminium foil in the cooking compartment to come into contact with the door pane.

## 2.2 Microwave

Follow these instructions when using the microwave.

### ATTENTION

Metal touching the wall of the cooking compartment will cause sparks, which may damage the appliance or the inner door pane.

- ▶ Metal (e.g. a spoon in a glass) must be kept at least 2 cm from the cooking compartment walls and the inside of the door.

Using accessories directly on top of one another causes sparks.


- ▶ Do not combine the wire rack with the universal pan.
- ▶ Always place accessories on different levels.

The universal pan and baking tray are not suitable for use with microwave-only mode. Using either of these may create sparks, which will damage the cooking compartment.

- ▶ Place accessories on the wire rack supplied.
- Placing aluminium containers in the appliance may cause sparks, which will damage the appliance.
- ▶ Do not use aluminium containers in the appliance.

Operating the appliance without food in the cooking compartment may lead to overloading.

- ▶ Do not switch on the microwave unless there is food inside. The only exception to this rule is when performing a short cookware test.

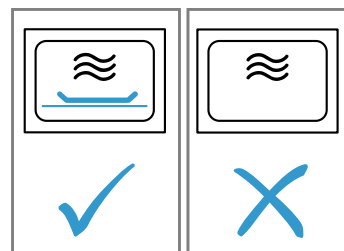

If you prepare microwave popcorn at a microwave power level that is too high, the door pane may crack due to overloading.

- ▶ Never set a microwave power level that is too high.
- ▶ Use a maximum microwave output of 600 watts.
- ▶ Always place the popcorn bag on a glass plate.

## 3 Environmental protection and saving energy

### 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

### 3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Only preheat the appliance if the recipe or the recommended settings tell you to do so.

→ "How it works", Page 31

- ✓ Not preheating the appliance can reduce the energy used by up to 20%.

Use dark-coloured, black-coated or enamelled baking tins.

- ✓ These types of baking tin absorb the heat particularly well.

Open the appliance door as little as possible during operation.

- ✓ This maintains the temperature in the cooking compartment and eliminates the need for the appliance to reheat.

When baking multiple dishes, do so in succession or in parallel.

- ✓ The cooking compartment is heated after baking the first dish. This reduces the baking time for the subsequent cakes.

For longer cooking times, you can switch the appliance off 10 minutes before the cooking time ends.

- ✓ There is sufficient residual heat to finish cooking the dish.

Remove any accessories that are not being used from the cooking compartment.

- ✓ Accessories that are not being used do not need to be heated.

Allow frozen food to defrost before cooking.

- ✓ This saves the energy that would otherwise be required to defrost it.

Switch off the display in the basic settings.

→ *"Basic settings", Page 20*

- ✓ Energy is saved when the display is switched off.

Heat two glasses or cups of liquid at the same time.

- ✓ Heating several dishes at the same time requires less energy than heating dishes one after the other.

**Note:** In accordance with the EU Ecodesign Directive 2023/826, this appliance is in a different state when switched off. This is referred to below as low power mode.

Even when the main function is not active, the appliance needs energy for:

- Detecting operation of the touch keys
- Monitoring door opening
- Editing the time (without display)


By definition, therefore, there is neither an "off" nor a "standby" mode, which is why the term low power mode is used. EN IEC 60350-1:2023 must be used to measure low power mode.

## 4 Familiarising yourself with your appliance

### 4.1 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

On certain models, specific details such as colour and shape may differ from those pictured.

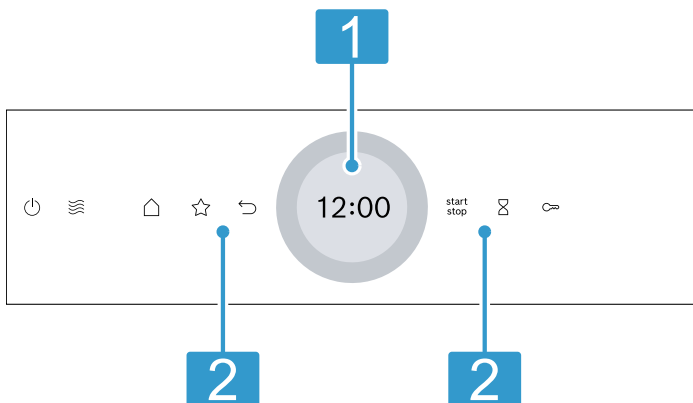

#### Display with setting ring

You can use the digital setting ring to set the appliance via the display.

**1**

You will see the current setting values, options or relevant information.

→ *"Display", Page 8*

#### Buttons

**2**

You can use the buttons to directly set various functions.

→ *"Buttons", Page 7*

### 4.2 Buttons

You can use the buttons to directly select various functions.

| Button | Function                                                                         |
|--------|----------------------------------------------------------------------------------|
|        | Switch the appliance on or off.<br>→ <i>"Basic operation", Page 12</i>           |
|        | Select the microwave operating mode directly.<br>→ <i>"Microwave", Page 15</i>   |
|        | Open the "Operating modes" menu.<br>→ <i>"Operating modes", Page 9</i>           |
|        | Select the favourites operating mode directly.<br>→ <i>"Favourites", Page 19</i> |
|        | Go back one setting.                                                             |
|        | Start or pause operation.<br>→ <i>"Basic operation", Page 12</i>                 |
|        | Select the timer.<br>→ <i>"Setting the timer", Page 15</i>                       |

| Button                                                                           | Function                                                                                              |
|----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  | Press and hold for approx. 4 seconds to activate the childproof lock.<br>→ "Childproof lock", Page 20 |

## 4.3 Display

The display is divided into different areas.

### Digital setting ring

You can use the digital setting ring on the display to change the setting values.  
When you reach the minimum or maximum value available, this value remains on the display. If required, use the setting ring to turn the value back again.

### Finely tuned setting values

To fine-tune the setting values, e.g. to set a time to the precise minute, press and hold the corresponding area in the setting ring for around 1 - 2 seconds. The finely tuned setting values are shown in dots.

### Status indicator

Status information is shown at the top of the display.

| Symbol                                                                             | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Timer is activated.<br>→ "Setting the timer", Page 15                                                                                                                                                                                                                                                                                                                                                                                                                    |
|   | Childproof lock is activated.<br>→ "Childproof lock", Page 20                                                                                                                                                                                                                                                                                                                                                                                                            |
|  | Wi-Fi signal strength for Home Connect.<br>The more lines of the symbol are filled, the better the signal.<br>If the symbol is struck through  , there is no Wi-Fi signal.<br>If there is an "x" at the symbol  , there is no connection to the Home Connect server.<br>→ "Home Connect ", Page 21 |
|  | Remote start with Home Connect is activated.<br>→ "Home Connect ", Page 21                                                                                                                                                                                                                                                                                                                                                                                               |
|  | Remote diagnostics with Home Connect for maintenance is activated.<br>→ "Home Connect ", Page 21                                                                                                                                                                                                                                                                                                                                                                         |

### Settings area

The settings area is in the centre of the display.  
You can see current options and settings that have already been made in the settings area.  
The menu and other setting options are arranged horizontally. Selection lists for functions are vertically arranged. Swipe over the display to scroll in the settings area. To select a function, press the function on the display.

→ "Setting the operating mode", Page 12

### Possible symbols in the settings area

| Symbol                                                                             | Meaning                                                       |
|------------------------------------------------------------------------------------|---------------------------------------------------------------|
|  | Confirm the setting value.                                    |
|  | Reset the setting value.                                      |
|  | Change the setting value while the appliance is in operation. |

**Note:** A blue marking "new" or a blue dot on a function indicates that a new function, a new favourite or an update was downloaded to your appliance using the Home Connect app.

## 4.4 Cooking compartment

Various functions in the cooking compartment provide support when operating your appliance.

### Shelf supports


The shelf supports in the cooking compartment enable you to place accessories at different heights.

→ "Accessories", Page 11

Your appliance has 3 shelf positions. The shelf positions are numbered from bottom to top.

You can remove the shelf supports, e.g. for cleaning.

→ "Rails", Page 27

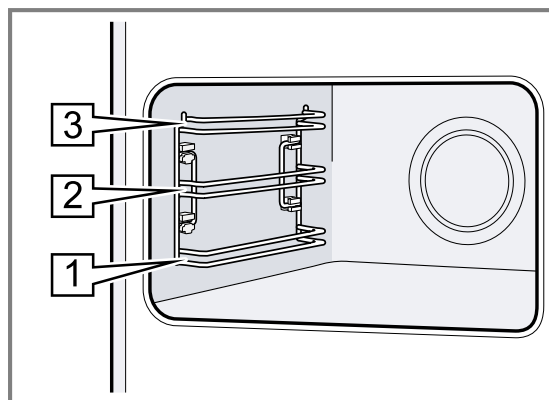

### Self-cleaning surfaces

The back panel in the cooking compartment is self-cleaning. The self-cleaning surfaces are coated with a porous, matt ceramic layer and have a rough surface. When the appliance is in operation, the self-cleaning surfaces absorb splashes from roasting or grilling and break them down.

If the self-cleaning surfaces no longer clean themselves adequately during operation, heat up the cooking compartment specifically to the right temperature.

→ "Regenerating self-cleaning surfaces in the cooking compartment", Page 24

### Lighting

One or more oven lights illuminate the cooking compartment.

When you open the appliance door, the light in the cooking compartment switches on. If the appliance door remains open for longer than around 18 minutes, the light switches off again.

For most operating modes, the lighting is switched on during operation. The lighting switches off again when the operation ends.

### Cooling fan

The cooling fan switches on and off depending on the appliance's temperature. The hot air escapes above the door.

### ATTENTION

Covering the ventilation slots will cause the appliance to overheat.

► Do not cover the ventilation slots.

To cool down the appliance and remove residual moisture from the cooking compartment, the cooling fan runs for a certain time after operation.

**Note:** You can change the run-on time in the basic settings. If you frequently prepare very moist food or keep it warm in the cooking compartment, set a longer run-on time.

→ "Basic settings", Page 20

## 5 Operating modes

This is where you can find an overview of your appliance's operating modes and main functions. Press  to open the menu.

| Operating mode   | Use                                                                                                                                            |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Types of heating | Select finely tuned types of heating for the optimal preparation of your food.<br>→ "Types of heating", Page 9<br>→ "Basic operation", Page 12 |
| Microwave        | Cook, heat or defrost more quickly with the microwave.<br>→ "Microwave", Page 15                                                               |
| Favourites       | Use your own saved settings.<br>→ "Favourites", Page 19                                                                                        |
| Dishes           | Use programmed, recommended settings for various types of food.<br>→ "Dishes", Page 18                                                         |

### Appliance door

If you open the appliance door during operation, the operation stops. If you close the appliance door, operation resumes automatically.

In microwave mode, if you close the appliance door, you must continue the operation.

| Operating mode | Use                                                                                                           |
|----------------|---------------------------------------------------------------------------------------------------------------|
| Cleaning       | Select the cleaning function for the cooking compartment.<br>→ "Cleaning aid", Page 25<br>→ "Drying", Page 25 |
| Basic settings | Adjust the basic settings.<br>→ "Basic settings", Page 20                                                     |

### Home Connect

With Home Connect, you can connect and remotely control the oven with a mobile device, and use the full functionality of the appliance.

Depending on the appliance type, additional or more comprehensive functions are available for your appliance with the Home Connect app. You can find more information about this in the app.

→ "Home Connect", Page 21

### 5.1 Types of heating

To ensure that you always find the right type of heating to cook your food, we explain the differences and applications below.

The symbols for each type of heating help you to remember them.

When you select a type of heating, the appliance suggests a suitable temperature or setting. You can use these values or change them within the specified range.

For temperature settings above 275 °C and grill setting 3, the appliance reduces the temperature to approx. 275 °C or grill setting 1 after approx. 40 minutes.

| Symbol                                                                             | Type of heating    | Temperature range | What it's used for and how it works                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------|--------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | 4D hot air         | 30 - 275 °C       | Bake or roast on one or more levels. The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment.                                                                                                                                                                                                                                                                                                                                                                                 |
|  | Top/bottom heating | 30 - 300 °C       | Traditionally bake or roast on one level. This type of heating is especially good for cakes with moist toppings. The heat is emitted evenly from above and below.                                                                                                                                                                                                                                                                                                                                                                              |
|  | Hot air gentle     | 125 - 250 °C      | Cook selected dishes gently on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment. The food is cooked in phases using residual heat. Always keep the appliance door closed when cooking. If you open the appliance door even briefly, the appliance will continue to heat without utilising any residual heat. This type of heating is used to determine the energy consumption in air recirculation mode and the energy efficiency class. |
|  | Air Fry            | 30 - 300 °C       | Cook until crispy, on one level with little fat. Especially suitable for food that is usually fried in oil, e.g. chips.                                                                                                                                                                                                                                                                                                                                                                                                                        |

| Symbol | Type of heating           | Temperature range                                    | What it's used for and how it works                                                                                                                                                                                                                                                                                                                                                              |
|--------|---------------------------|------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        |                           |                                                      | The fan circulates heat from the grill element around the food at high speed. The exhaust air is extracted more intensively from of the cooking compartment.                                                                                                                                                                                                                                     |
|        | Top/bottom heating gentle | 150 - 250 °C                                         | Gently cook selected dishes.<br>Heat is emitted from above and below.<br>The food is cooked in phases using residual heat. Always keep the appliance door closed when cooking. If you open the appliance door even briefly, the appliance will continue to heat without utilising any residual heat.<br>This type of heating is used to measure the energy consumption in the conventional mode. |
|        | Circulated air grilling   | 30 - 300 °C                                          | Roast poultry, whole fish or larger pieces of meat.<br>The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food.                                                                                                                                                                                                                              |
|        | Full-surface grill        | Grill settings:<br>1 = low<br>2 = medium<br>3 = high | Grill flat items such as steak and sausages, or make toast. Gratin-ate food.<br>The entire area below the grill element becomes hot.                                                                                                                                                                                                                                                             |
|        | Centre-area grill         | Grill settings:<br>1 = low<br>2 = medium<br>3 = high | Grill small quantities such as steak and sausages, or make toast. Gratin-ate small quantities of food.<br>The central area below the grill element becomes hot.                                                                                                                                                                                                                                  |
|        | Pizza setting             | 30 - 275 °C                                          | Cook pizza or food that requires a lot of heat from below.<br>The bottom heating element and the ring-shaped heating element in the back wall heat the cooking compartment.                                                                                                                                                                                                                      |
|        | Low-temperature cooking   | 70 - 120 °C                                          | Slowly and gently cook seared, tender pieces of meat in un-covered cookware.<br>The heat is emitted evenly from above and below at a low temper-ature.                                                                                                                                                                                                                                           |
|        | Defrost                   | 30 - 60 °C                                           | Gently defrost frozen food.                                                                                                                                                                                                                                                                                                                                                                      |
|        | Bottom heating            | 30 - 250 °C                                          | Final baking or cooking food in a bain marie.<br>The heat is emitted from below.                                                                                                                                                                                                                                                                                                                 |
|        | Keeping warm              | 50 - 100 °C                                          | Keep cooked food warm.                                                                                                                                                                                                                                                                                                                                                                           |
|        | Plate warming             | 30 - 90 °C                                           | Preheat cookware.                                                                                                                                                                                                                                                                                                                                                                                |

## 5.2 Temperature

With most types of heating , you can read the current temperature in the cooking compartment from approx. 30 °C and the set temperature side-by-side on the display during heating, e.g. 120|210 °C.

When you are preheating the appliance, the optimal time to place the food in the cooking compartment is as soon as the displayed temperature in the cooking compartment and the set temperature are the same.

**Note:** Due to thermal inertia, the temperature that is displayed may differ slightly from the actual temperature inside the cooking compartment.

### Residual heat indicator

When the appliance is switched off, a red line around the control ring indicates the residual heat in the cooking compartment. The further the temperature drops, the darker the ring. The ring goes out completely at approx. 60 °C.

## 5.3 Microwave output settings

This is where you can find an overview of the different microwave output settings and recommendations on when to use them.

| Microwave output in watts | Maximum cooking time in hours | Use                                         |
|---------------------------|-------------------------------|---------------------------------------------|
| 90 W                      | 1:30                          | Defrost delicate foods.                     |
| 180 W                     | 1:30                          | Defrost food and continue cooking.          |
| 360 W                     | 1:30                          | Cook fish and meat. Heat up delicate foods. |
| 600 W                     | 1:30                          | Heat and cook food.                         |
| 900 W "Boost"             | 00:30                         | Heat liquids.                               |

**Notes**

- To protect the appliance, the maximum microwave output "Boost" is gradually reduced to 600 watts during the first few minutes. Maximum output is made available again after a cooling period.



- The microwave output settings do not correspond with the real power consumption of the appliance.

## 6 Accessories

Use original accessories. These have been made especially for your appliance.

**Note:** Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.
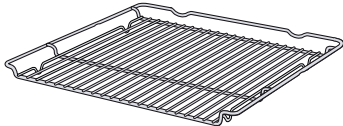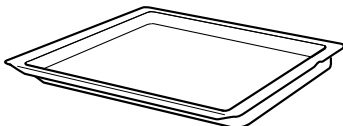
| Accessories   |                                                                                   | Use                                                                                                                                                                                                                                      |
|---------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wire rack     |  | <ul style="list-style-type: none"> <li>■ Cake tins</li> <li>■ Ovenproof dishes</li> <li>■ Cookware</li> <li>■ Meat, e.g. roasting joints or steak</li> <li>■ Frozen meals</li> </ul>                                                     |
| Universal pan |  | <ul style="list-style-type: none"> <li>■ Moist cakes</li> <li>■ Baked items</li> <li>■ Bread</li> <li>■ Large roasts</li> <li>■ Frozen meals</li> <li>■ Catch dripping liquids, e.g. fat when grilling food on the wire rack.</li> </ul> |

### 6.1 Information on accessories

Some accessories are only suitable for certain types of heating.

#### Microwave accessories

The wire rack that is supplied is only suitable for operation solely using the microwave.

Baking trays, e.g. the universal pan or the baking tray, may create sparks and are not suitable.

Observe the information about the microwave.

→ "Cookware and accessories with microwave", Page 15

### 6.2 Locking function

The locking function prevents the accessories from tilting when they are pulled out.

You can pull out the accessories approximately halfway without them tipping. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly.


### 6.3 Sliding accessories into the cooking compartment

Always slide the accessory into the cooking compartment the right way round. This is the only way to ensure that accessories can be pulled out approximately halfway without tipping.

1. Turn the accessories so that the notch  is at the rear and is facing downwards.
2. Insert the accessory between the two guide rods for a shelf position.


Wire rack

Insert the wire rack with the open side facing the appliance door and the curved lip — facing downwards.

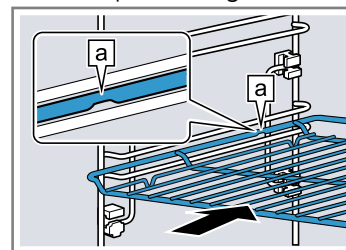

Tray  
E.g. universal pan or baking tray

Slide the tray in with the sloping edge  towards the appliance door.

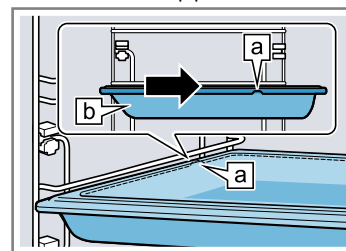

3. Push the accessory all the way in, making sure that it does not touch the appliance door.

**Note:** Take any accessories that you will not be using out of the cooking compartment while the appliance is in operation.

### 6.4 Other accessories

You can purchase other accessories from our customer service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online:

[www.bosch-home.com](http://www.bosch-home.com)

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our customer service.

## 7 Before using for the first time

Configure the settings for initial start-up. Clean the appliance and accessories.

### 7.1 Performing initial start-up

After connecting the appliance to the power supply, you must configure the settings for its initial start-up. It may take a few minutes for the settings to appear on the display.

1. Press  to switch the appliance on.
  - ✓ The first setting appears.
2. To change the setting as required, press a value in the list or change the value using the setting ring.
 

Possible settings:

  - Language
  - Home Connect
    - "Home Connect ", Page 21
  - Time
    - "Setting the time", Page 21
3. Press  and switch to the next setting.
4. Work through the settings and make changes as required.
  - ✓ After the last setting, a message appears on the display confirming that the initial start-up is complete.
5. To check the appliance before heating for the first time, open and close the appliance door once.

### 7.2 Cleaning the appliance before using it for the first time

Before using the appliance to cook food for the first time, you must clean the cooking compartment and accessories.

1. Remove the product information and the accessories from the cooking compartment. Remove any leftover packaging, such as polystyrene pellets, and any adhesive tape that is in or on the appliance.
2. Wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.
3. Press  to switch the appliance on.
4. Apply the following settings:

|                 |                                                                                                |
|-----------------|------------------------------------------------------------------------------------------------|
| Type of heating | 4D hot air  |
| Temperature     | Maximum                                                                                        |
| Cooking time    | 1 hour                                                                                         |

→ "Basic operation", Page 12

5. Start the operation.
  - ▶ Ventilate the kitchen while the appliance is heating.
  - ✓ When the time has elapsed, a signal sounds. A message appears on the display confirming that the operation has finished.
6. Press  to switch the appliance off.
7. Once the appliance has cooled down, clean the smooth surfaces in the cooking compartment with a detergent solution and a dish cloth.
8. Clean the accessories thoroughly using a detergent solution and a dish cloth or soft brush.

## 8 Basic operation

### 8.1 Switching on the appliance

- ▶ Press  to switch the appliance on.
- ✓ The display shows the menu.

### 8.2 Switching off the appliance

Switch your appliance off when you are not using it. The appliance will switch itself off automatically if it is not used for a certain period of time.

- ▶ Press  to switch the appliance off.
- ✓ The appliance switches off. Any functions currently in progress are cancelled.
- ✓ The time or residual heat indicator appears on the display.

### 8.3 Starting the operation

You must start each operation.

### ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.
- ▶ Press  to start the operation.
- ✓ The settings appear on the display.

### 8.4 Interrupting the operation

You can interrupt the operation and then continue again.

1. To interrupt the operation, press .
2. Press  again to resume the operation.

### 8.5 Setting the operating mode

After you have switched on the appliance, the menu appears on the display.

1. To scroll through the various selection options, swipe to the left or right on the display.
  - ▶ Swipe right or left to scroll through the menu and other setting options.
  - ▶ Swipe down or up to scroll through selection lists.
2. To select a function, press the function on the display.
- ✓ Depending on the function, possible setting values or other tiles are available for selection.
3. To go back to a setting if necessary, press ↵.
4. To change the setting values, use the digital setting ring:
  - ▶ Swipe over the setting ring clockwise or anticlockwise, as required.
  - ▶ Or press a specific position on the setting ring.
  - ▶ Or, as soon as the setting ring is pressed, press the symbol that appears  and enter the value directly via the number field.
5. Use ✓ to confirm the setting.
6. Press  to start the operation.
7. If the operation is ended:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

**Note:** You can save your settings as "Favourites" ☆ and use these again.

→ "Favourites", Page 19

## 8.6 Setting the type of heating and the temperature

1. Press "Types of heating" in the menu.
2. Press the type of heating that you want to use.
3. Press the temperature in °C or, depending on the type of heating, the setting.
4. Use the setting ring to set the temperature.
5. Press ✓ on the display to confirm the set temperature.
  - If required, you can implement additional settings:
    - → "Rapid heating", Page 14
    - → "Time-setting options", Page 14
    - → "Microwave", Page 15
    - → "Ventilation function Crisp Finish", Page 17
6. Press  to start the operation.
  - ✓ The appliance starts heating.
  - ✓ The setting values and how long the appliance has already been in operation are shown on the display.
7. If the operation is ended:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

**Note:** The most suitable type of heating for your food can be found in the description of the type of heating.

→ "Types of heating", Page 9

## Changing the type of heating

When you change the type of heating, the other settings are also reset.

1. Press .
2. Press ↵.
3. Press the type of heating that you want to use.
4. Reset the operation and use  to start.

## Changing the temperature

Once the operation has started, you can change the temperature at any time.

1. Press ^ on the display.
2. Press the temperature.
3. Change the temperature with the setting ring.
4. To confirm the change, press ✓ on the display.
- ✓ The change is applied.

## 8.7 Displaying information

In most cases, you can call up information about the function that you have just started. The appliance automatically displays certain information, e.g. to ask you to do/confirm something or to issue a warning.

1. Press  "Info".
  - ✓ Information is displayed for a few seconds.
2. To scroll through lots of content in the message, swipe over the display.
3. If necessary, use ↵ to exit the message.

## 8.8 Keeping warm over an extended period

You can use your appliance to keep meals warm for up to 24 hours without changing the behaviour of the appliance. Use the time functions and change the basic settings.

**Note:** If you open the appliance door during operation, the appliance stops heating. When you close the appliance door, the appliance continues to heat again. To ensure that the behaviour of the appliance is not changed during operation, only open the appliance door once the set time has elapsed.

1. Change the basic settings.
  - "Basic settings", Page 20
    - ▶ Change the "Lighting" basic setting to "Always off".
    - ▶ Change the "Standby screen" basic setting to "On".
    - ▶ Change the "Signal tone" basic setting to "Very short duration".
  - ✓ This will ensure that the light in the cooking compartment is always off while the appliance is in operation and when you open the appliance door. The clock display does not change. The duration of the signal tone is reduced at the end of the operation.
2. Set the required operating mode.
  - "Setting the operating mode", Page 12
  - "Setting the type of heating and the temperature", Page 13
3. Set the required cooking time depending on the operating mode.
  - "Setting the cooking time", Page 14
  - "Time-setting options", Page 14
4. Use "End time" to set the time at which the operation should end.
  - "Setting the end time", Page 14
  - "Time-setting options", Page 14
5. Place the food in the cooking compartment before the appliance starts to heat.
6. Press  to start the operation.
  - ✓ The display shows the time remaining until the operation starts. The appliance is in standby mode.
  - ✓ Once the start time has been reached, the appliance starts heating and the cooking time starts counting down.

7. When the operation has ended, remove the food from the cooking compartment. The appliance automatically switches off completely after approximately 15 to 20 minutes.

**Note:** If required, change the different basic settings again.

# 9 Rapid heating

To save time, rapid heating  can shorten the preheating time for set temperatures over 100 °C. Rapid heating is possible for the following types of heating:

- 4D hot air 
- Top/bottom heating 

## 9.1 Setting rapid heating

To ensure an even cooking result, do not place the food in the cooking compartment until rapid heating has come to an end.

**Note:** Do not set a cooking time until rapid heating has come to an end.

1. Set a suitable type of heating and a temperature of at least 100 °C.  
Rapid heating automatically switches on at temperatures of 200 °C and above.
2. Press "Rapid heating".  
✓ The  symbol lights up red.
3. Press  to start the operation.  
✓ Rapid heating starts.  
✓ Once rapid heating has ended, a signal sounds. The  symbol changes back to white.
4. Place the food in the cooking compartment.

### Cancelling rapid heating

1. Press  on the display.
2. Press "Rapid heating".  
✓ The  symbol changes back to white.

# 10 Time-setting options

For an operation, you can set the cooking time and the time at which the operation should be finished. The timer runs independently of the operation.

| Time-setting option                                                                              | Use                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cooking time  | If you set a cooking time, the appliance stops heating automatically once this time has elapsed.                                                                                     |
| End time      | Along with the cooking time, you can set the time at which you want the operation to end. The appliance starts up automatically so that the operation finishes at the required time. |
| Timer         | You can set the timer to run independently of the appliance during operation. It does not affect the appliance.                                                                      |

## 10.1 Setting the cooking time

You can set the cooking time for the operation up to 24 hours.

**Requirement:** An operating mode and temperature or level have been set.

1. Press  "Cooking time".
2. To set the cooking time, press the relevant time value, e.g. hour display "h" or minute display "m".  
✓ The selected value is marked in blue.
3. Use the setting ring to set the cooking time.  
If required, use  to reset the setting value.
4. To confirm the set cooking time, press  on the display.

5. Press  to start the operation.  
✓ The appliance starts to heat and the time counts down.  
✓ When the time has elapsed, a signal sounds. A message appears on the display confirming that the operation has finished.
6. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

### Changing the cooking time

You can change the cooking time at any time.

1. Press  to pause the operation.
2. Press the cooking time .
3. Use the setting ring to change the cooking time.
4. To confirm the change, press  on the display.
5. Press  to start the operation.

### Cancelling the cooking time

You can cancel the cooking time at any time.

1. Press  to pause the operation.
2. Press the cooking time .
3. Reset the cooking time using .  
**Note:** For operating modes that always require a cooking time, the appliance resets the cooking time to the preset value.
4. To confirm the change, press  on the display.
5. Press  to start the operation.

## 10.2 Setting the end time

You can delay the time at which the cooking time for the operation is due to end by up to 24 hours.

**Notes**

- To achieve good cooking results, do not delay the time once the operation has already started.
- Food will spoil if you leave it in the cooking compartment for too long.

**Requirements**

- An operating mode and temperature or level have been set.
  - A cooking time is set.
1. Press "End time".
  2. To set the time, press the hour display or the minute display.
    - ✓ The selected value is marked in blue.
  3. Use the setting ring to delay the time. If required, use to reset the setting value.
  4. To confirm the set time, press on the display.
  5. Press to start the operation.
    - ✓ The display shows the time remaining until the operation starts. The appliance is in standby mode.
    - ✓ Once the start time has been reached, the appliance starts heating and the cooking time starts counting down.
    - ✓ When the time has elapsed, a signal tone sounds. A notification appears on the display confirming that the operation has finished.
  6. Once the cooking time has elapsed:
    - ▶ If required, you can select other settings and restart the operation.
    - ▶ When the food is ready, use to switch the appliance off.

**Changing the end time**

To achieve good cooking results, only change the set time before the operation starts and before the cooking time starts counting down.

1. Press to pause the operation.
2. Press the end time .
3. Use the setting ring to change the end time.
4. To confirm the change, press on the display.
5. Press to start the operation.

**Cancelling the end time**

You can delete the set end time at any time.

1. Press to pause the operation.
  2. Press the end time .
  3. Use to reset the end time.
- Note:** For operating modes that always require a cooking time, the appliance resets the time at which the cooking time ends to the next possible time.

4. To confirm the change, press on the display.
5. Press to start the operation.

**10.3 Setting the timer**

The timer runs independently during the operation. You can set the timer for up to 24 hours. The timer has its own signal so that you can tell whether it is the timer or a cooking time that has elapsed.

**Requirement:** If the appliance is switched off, press the display first. The button lights up.

1. Press .
2. To set the timer, press the relevant time value on the display, e.g. minute display "m" or second display "s".
  - ✓ The selected value is marked in blue.
3. Set the timer using the setting ring.
  - ▶ To fine-tune the setting values, e.g. to set a time to the precise second, press and hold the corresponding area in the setting ring for around 1 - 2 seconds. The finely timed setting values are shown in dots.
  - ▶ If required, use to reset the setting value.
4. To start the timer, press on the display.
  - ✓ The timer counts down.
  - ✓ The timer remains visible on the display if the appliance is switched off.
  - ✓ When the appliance is switched on, the display shows the settings for the current operation. The timer is displayed in the status display.
  - ✓ Once the timer has elapsed, a signal sounds. A notification appears on the display confirming that the timer has finished.

**Changing the timer**

You can change the timer at any time.

1. If the timer is running in the background, use to select the timer beforehand.
2. Press .
3. Change the timer using the setting ring.
4. Press to confirm.

**Cancelling the timer**

You can cancel the timer at any time.

1. If the timer is running in the background, use to select the timer beforehand.
2. Press .
3. Reset the timer using . Reset the timer using .

# 11 Microwave

You can use the microwave to cook, heat up, bake or defrost food very quickly.

## 11.1 Cookware and accessories with microwave

To heat food evenly and avoid damaging your appliance, it is important to only use the right cookware and accessories. Follow the cookware manufacturer's instructions.

Unless otherwise specified, place the cookware and accessory on level 1.

**Microwave-safe cookware**

Cookware made from heat-resistant, microwave-safe material:

- Glass
- Glass ceramic
- Porcelain
- Temperature-resistant plastic
- Fully glazed ceramic without cracks

- Serving dishes  
Only use cookware with decorative gold or silver trim if the manufacturer guarantees its suitability for microwave use.
- Supplied wire rack  
In microwave-only operation, sheets and trays, e.g. the universal pan or the baking tray, may create sparks and are not suitable.

These materials allow microwaves to pass through and are not damaged.

#### Cookware that is not microwave-safe

**Note:** Observe the specifications for preventing material damage.

→ "Microwave", Page 6

- Metal cookware and bakeware

Microwaves cannot pass through metal. The food is barely heated or not heated at all. Metal may create sparks in microwave-only operation.

#### Cookware when adding microwave to an operating mode

If you switch on the microwave for another operating mode, metal is also an option, in addition to microwave-safe cookware and accessories:

- Metal cookware and bakeware  
Metal must be kept at least 2 cm from the cooking compartment walls and the inside of the door.  
Always place metal cookware or bakeware in the centre of the supplied wire rack.
- Accessories supplied:  
Wire rack  
Universal pan  
Baking tray


#### Testing cookware for microwave suitability

If you are unsure whether your cookware is suitable for use in the microwave, carry out a cookware test.

#### ATTENTION

Operating the appliance without food in the cooking compartment may lead to overloading.

- ▶ Do not switch on the microwave unless there is food inside. The only exception to this rule is when performing a short cookware test.

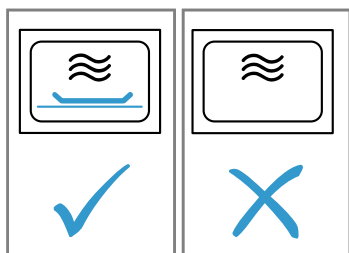

#### ⚠ WARNING – Risk of burns!

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

1. Place the empty cookware in the cooking compartment.
2. Set the appliance to run for 30 seconds to 1 minute at maximum power.
3. Start the operation.

4. Check the cookware several times:
  - ▶ If the cookware remains cold or warm to the touch, it is suitable for microwave use.
  - ▶ If the cookware becomes hot or sparks are created, stop the cookware test. The cookware is not microwave-safe.

## 11.2 Setting options with the microwave

The microwave can be used on its own, or in combination with a different operating mode.

### Microwave-only operation

The electromagnetic waves of the microwave alone generate energy and this is converted into heat in food, for example.

To prevent condensation, when the microwave output is 600 watts and "Boost", the appliance automatically switches on a heating element. The cooking compartment and the accessories become hot. The cooking result is not affected by this.

You can switch off this automatic drying function in the basic settings.

→ "Basic settings", Page 20

#### ⚠ WARNING – Risk of burns!

At the highest settings in microwave only mode, the drying function will automatically switch on an additional heating element to heat the cooking compartment.

- ▶ Never touch the inside surfaces of the cooking compartment or the heating elements while they are hot.
- ▶ Keep children at a safe distance.

### Added microwave

Adding the microwave to an operating mode reduces the cooking time.

You can combine the microwave with the following functions:

- Types of heating → Page 13
  - 4D hot air
  - Top/bottom heating
  - Circulated air grilling
  - Full-surface grill
  - Centre-area grill
- → "Dishes", Page 18
- → "Ventilation function Crisp Finish", Page 17

Possible microwave outputs combined with an operating mode include:

- 90 watts
- 180 watts
- 360 watts

## 11.3 Setting the microwave

### Note

Note the correct way to operate the microwave:

- → "Safety", Page 2
  - → "Preventing material damage", Page 5
  - → "Microwave output settings", Page 10
  - → "Cookware and accessories with microwave", Page 15
1. Press "Microwave" in the menu.
    - ▶ Or select the microwave directly using the button.
  2. Press the microwave output ("Boost").

3. Use the setting ring to set the microwave output.
4. To confirm the set microwave output, press ✓ on the display.
5. Press  "Cooking time".  
A cooking time must always be set to operate the microwave.
6. To change the preset cooking time, press the relevant time value, e.g. minute display "m" or second display "s".  
✓ The selected value is marked in blue.
7. Use the setting ring to set the cooking time.  
If required, use  to reset the setting value.
8. To confirm the set cooking time, press ✓ on the display.
9. Press  to start the operation.  
✓ The microwave starts and the cooking time counts down. The display shows the performance reduction for the maximum microwave output "Boost".  
→ "Microwave output settings", Page 10
- ✓ When the time has elapsed, a signal tone sounds. A notification appears on the display confirming that the operation has finished.
10. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.
11. If you have switched off the drying function for the microwave in the basic settings and condensation has formed in the cooking compartment, dry the cooking compartment.  
→ "Drying", Page 25

**Note:** If you open the appliance door during operation, the operation stops. If you close the appliance door, you must continue the operation. If you have changed the basic setting for this, make sure that the microwave does not resume operation without food inside.  
→ "Basic settings", Page 20

### Changing the microwave output

You can change the microwave output at any time.

1. Press ^ on the display.
2. Press the microwave output .
3. Use the setting ring to set the microwave output.
4. To confirm the change, press ✓ on the display.
- ✓ The change is applied.

### Changing the cooking time

You can change the cooking time at any time.

1. Press  to pause the operation.
2. Press the cooking time .
3. Use the setting ring to change the cooking time.
4. To confirm the change, press ✓ on the display.
5. Press  to start the operation.

## 11.4 Setting added microwave

### Note

Note the correct way to operate the microwave:

- → "Safety", Page 2
- → "Preventing material damage", Page 5
- → "Microwave output settings", Page 10
- → "Cookware and accessories with microwave", Page 15

**Requirement:** Observe the information about the respective operating mode.

→ "Setting options with the microwave", Page 16

1. Press the operating mode that you require in the menu.
2. Select the settings for the operating mode, e.g. type of heating and temperature.
3. Press .
4. Use the setting ring to set the microwave output.
5. To confirm the set microwave output, press ✓ on the display.
6. Press  "Cooking time" and set the cooking time.
7. Press  to start the operation.  
✓ The appliance starts to heat and the time counts down.
- ✓ When the time has elapsed, a signal sounds. A message appears on the display confirming that the operation has finished.
8. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use  to switch the appliance off.

### Changing added microwave

You can change or deactivate the added microwave at any time.

1. Press ^ on the display.
2. Press the microwave output .
3. Change or deactivate added microwave with the setting ring.
4. To confirm the change, press ✓ on the display.
- ✓ The change is applied.

## 12 Ventilation function "Crisp Finish"

The ventilation function "Crisp Finish"  extracts moisture from the cooking compartment so that your food will be more crispy.  
Hot steam that may escape when the appliance door is opened is reduced.

### 12.1 Suitable types of heating with the ventilation function

Only certain types of heating are suitable for the ventilation function.

You can use the ventilation function for the following types of heating:

- 4D hot air 
- Top/bottom heating 
- Circulated air grilling 
- Pizza setting 

### 12.2 Setting the ventilation function

You can activate the ventilation function at any time, even after the start of the operation.

1. Set a suitable type of heating and a temperature.  
If required, you can select other settings and combine with the ventilation function.
2. Press ➡ "Crisp Finish".
  - ✓ The ➡ symbol lights up red.
3. Press <sup>start</sup><sub>stop</sub> to start the operation.
  - ✓ The appliance starts heating.
  - ✓ The setting values are shown on the display.
4. When the food is ready, use ○ to switch the appliance off.

**Note:** Amplified fan noises can be heard while the appliance is in operation.

**Cancelling the ventilation function**

You can switch off the ventilation function at any time.

1. Press ^ on the display.
2. Press ➡ "Crisp Finish".
  - ✓ The ➡ symbol changes back to white.
  - ✓ The operation continues without the ventilation function.

13 Dishes

The "Dishes" operating mode helps you to use your appliance to prepare different meals by selecting the optimum settings automatically.

13.1 Cookware for dishes

The cooking result depends on the composition of the meat and the size of cookware.  
You should therefore use heat-resistant cookware that is suitable for temperatures up to 300 °C. Glass or glass ceramic cookware is best. The joint should cover approx. 2/3 of the cookware base.

Cookware made from the following material is not suitable:

- Bright, shiny aluminium
- Unglazed clay
- Plastic or plastic handles

**Note:** For some dishes, the appliance switches on the microwave. A notification appears in the display stating that you should use cookware that is suitable for microwave use.  
→ "Cookware and accessories with microwave", Page 15

13.2 Setting options for the dishes

To cook the dishes perfectly, the appliance uses different settings depending on the dish.  
The display shows you the settings that are used. You can adjust certain settings. Follow the instructions on the display.

**Note:** The cooking result depends on the quality and composition of the food. Use fresh and, ideally, chilled food. Use frozen food straight from the freezer.

**Tips and information about the settings**

If you set a dish, the display shows relevant information for this dish, e.g.:

- Suitable shelf position
- Suitable accessory or cookware
- Added liquid
- Time for turning or stirring  
When this time is reached, a signal sounds.

To call up the information, press ⓘ "Info". Some messages are displayed automatically.

**Programmes**

The optimum type of heating, temperature and cooking time are preset for programmes.

To achieve an optimal cooking result, you must also set the weight, thickness or the cooking level. You can set the weight only in the intended range.  
Unless otherwise indicated, set the total weight for your dish.

**Recommended settings**

For the recommended settings, the optimum type of heating is preset as a fixed value.  
You can adjust the preset temperature and the cooking time.

**Dishes with microwave**

For some dishes, you can select a cooking method with microwave ☸. The cooking time is reduced.  
Observe the information on operating with microwave.  
→ "Microwave", Page 15

13.3 Overview of the dishes

You can find out which individual dishes are available to you on the appliance when you call up the operating mode. The selection of dishes depends on the features of your appliance.  
The dishes are sorted by category and food.

**Note:** In the basic settings, you can regionally specialise the displayed dishes.  
→ "Basic settings", Page 20

| Category             | Food                                                                                                                                                                                                                    |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cakes                | Cakes in tins<br>Cakes on a baking tray<br>Small baked items<br>Biscuits                                                                                                                                                |
| Bread, bread rolls   | Bread<br>Bread rolls                                                                                                                                                                                                    |
| Pizza, savoury cakes | Pizza<br>Savoury cakes, quiche                                                                                                                                                                                          |
| Bakes, soufflés      | Bake, savoury, fresh, cooked ingredients<br>Potato gratin, raw ingredients, 4 cm deep<br>Fresh lasagne<br>Lasagne, chilled<br>Bake, sweet, fresh<br>Fruit crumble<br>Soufflés in individual moulds<br>Yorkshire pudding |
| Poultry              | Chicken<br>Duck, goose<br>Turkey                                                                                                                                                                                        |

| Category                | Food               |
|-------------------------|--------------------|
| Meat                    | Pork               |
|                         | Beef               |
|                         | Veal               |
|                         | Lamb               |
|                         | Game               |
|                         | Meat dishes        |
| Fish.                   | Fish, whole        |
|                         | Fish fillet        |
| Frozen products         | Pizza              |
|                         | Bakes              |
|                         | Potato products    |
|                         | Poultry, fish      |
|                         | Bread rolls        |
| Side dishes, vegetables | Potatoes           |
|                         | Rice               |
|                         | Cereals            |
|                         | Vegetables         |
| Defrosting food         | Cakes              |
|                         | Bread, bread rolls |
|                         | Meat, poultry      |
|                         | Fish               |

### 13.4 Setting a dish

1. Press "Dishes" in the menu.
2. Press the required category.
3. Press the required food.
4. Press the required dish.

**Tip:** For some dishes, you can select a preferred cooking method.

→ "Setting options for the dishes", Page 18

- ✓ The settings for the dish appear on the display.
- 5. Adjust the settings if required.  
You can adjust only certain settings depending on the dish.  
→ "Setting options for the dishes", Page 18
- 6. For information about the accessory and shelf position, for example, press ⓘ "Info".
- 7. Press  to start the operation.
- ✓ The appliance starts to heat and the time counts down.
- ✓ Once the dish is ready, a signal sounds. The appliance stops heating.
- 8. Once the cooking time has elapsed:
  - ▶ If required, you can select other settings and restart the operation.
  - ▶ When the food is ready, use ⓘ to switch the appliance off.

### 13.5 Automatic switch-off function

The automatic switch-off function  for the dishes allows you to bake and fry without any stress.

When the operation has finished, the appliance automatically stops heating.

To achieve an optimum cooking result, remove your dish from the cooking compartment once the operation has finished.

## 14 Favourites

In the "Favourites", you can save your settings and use these again.

**Note:** Depending on the appliance type/software status, you must first download this function to your appliance. You can find more information in the Home Connect app.

### 14.1 Saving favourites

You can save up to 30 different operating modes as your favourites.

- ▶ If you set an operating mode, at the end of the selection list, press ☆ "Save as favourites".  
To rename a favourite, you must use the Home Connect app. When your appliance is connected, follow the instructions in the app.

### 14.2 Selecting favourites

If you have saved favourites, you can use these to set the operation.

1. Press "Favourites" in the menu.
  - ▶ Or select the favourites directly using the ☆ button.
2. Press the required favourites.
3. If required, you can change the settings.
4. Press  to start the operation.
- ✓ The setting values are shown on the display.

#### Note

Observe the instructions for the various operating modes:

- → "Microwave", Page 15
- → "Ventilation function Crisp Finish", Page 17

### 14.3 Changing favourites

You can change, sort or delete your saved favourites at any time.

1. To sort or rename the favourites, you must use the Home Connect app. When your appliance is connected, follow the instructions in the app.
2. To change the setting values on the appliance, press "Favourites" in the menu.
  - ▶ Or select the favourites directly using the ☆ button.
3. Press the required favourites.
4. At the end of the selection list, press ✎ "Edit favourite"
5. Change the setting values.
6. Confirm the change.

#### Deleting favourites

1. To delete a favourite, press "Favourites" in the menu.
  - ▶ Or select the favourites directly using the ☆ button.
2. Press the required favourites.
3. At the end of the selection list, press 🗑 "Delete favourite"
4. Confirm the deletion.

## 15 Childproof lock

You can secure your appliance to prevent children from accidentally switching it on or changing the settings.

### 15.1 Activating the childproof lock

The childproof lock can be activated regardless of whether the appliance is on or off.

- ▶ Press and hold  for approx. 4 seconds to activate the childproof lock.
- ✓ A confirmation message appears on the display.
- ✓ The control panel is locked. The appliance can only be switched off using .
- ✓ When the appliance is switched on,  lights up. When the appliance is switched off,  does not light up.

### 15.2 Deactivating the childproof lock

You can deactivate the childproof lock at any time.

1. Press anywhere on the display.
  2. To deactivate the childproof lock:
    - ▶ Follow the instructions on the display so that the graphic on the ring fills up completely.
    - ▶ Alternatively, press and hold  for approximately 4 seconds.
- ✓ A confirmation message appears on the display.

## 16 Basic settings

You can configure the basic settings for your appliance to meet your needs.

### 16.1 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

You can find more information about the individual basic settings on the display using  "Info".

| Basic settings | Selection                                                                                                                                                                                                                               |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Language       | See selection on the appliance.                                                                                                                                                                                                         |
| Home Connect   | Connect the oven to a mobile device and remotely control it.<br>→ "Home Connect ", Page 21                                                                                                                                              |
| Clock          | Time in 24-hour format.                                                                                                                                                                                                                 |
| Display        | Selection                                                                                                                                                                                                                               |
| Brightness     | <ul style="list-style-type: none"> <li>▪ Levels 1, 2, 3, 4 and 5 <sup>1</sup></li> </ul>                                                                                                                                                |
| Standby screen | <ul style="list-style-type: none"> <li>▪ On for a limited time</li> <li>▪ On (this setting increases energy consumption)</li> <li>▪ Off <sup>1</sup></li> </ul>                                                                         |
| Clock          | <ul style="list-style-type: none"> <li>▪ Digital <sup>1</sup></li> <li>▪ Analogue</li> </ul>                                                                                                                                            |
| Alignment      | <ul style="list-style-type: none"> <li>▪ Align the display horizontally and vertically.</li> </ul>                                                                                                                                      |
| Tone           | Selection                                                                                                                                                                                                                               |
| Button tone    | <ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>                                                                                                                                                      |
| Signal tone    | <ul style="list-style-type: none"> <li>▪ Very short duration (once)</li> <li>▪ Short duration (approx. 5 seconds)</li> <li>▪ Medium duration (approx. 10 seconds) <sup>1</sup></li> <li>▪ Long duration (approx. 30 seconds)</li> </ul> |

| Appliance settings          | Selection                                                                                                                                                               |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fan run-on time             | <ul style="list-style-type: none"> <li>▪ Minimum</li> <li>▪ Recommended <sup>1</sup></li> <li>▪ Long</li> <li>▪ Very long</li> </ul>                                    |
| Lighting                    | <ul style="list-style-type: none"> <li>▪ When cooking and when the door is opened <sup>1</sup></li> <li>▪ Only when the door is opened</li> <li>▪ Always off</li> </ul> |
| Microwave output presetting | <ul style="list-style-type: none"> <li>▪ 90 W</li> <li>▪ 180 W</li> <li>▪ 360 W</li> <li>▪ 600 W</li> <li>▪ Boost <sup>1</sup></li> </ul>                               |
| Continue to microwave       | <ul style="list-style-type: none"> <li>▪ Off <sup>1</sup></li> <li>▪ On</li> </ul>                                                                                      |
| Dry microwave               | <ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>                                                                                      |

| Personalisation           | Selection                                                                                                                                                           |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Brand logo                | <ul style="list-style-type: none"> <li>▪ Display <sup>1</sup></li> <li>▪ Do not display</li> </ul>                                                                  |
| Operation after switch-on | <ul style="list-style-type: none"> <li>▪ Main menu <sup>1</sup></li> <li>▪ Types of heating</li> <li>▪ Microwave</li> <li>▪ Dishes</li> <li>▪ Favourites</li> </ul> |
| Elapsed cooking time      | <ul style="list-style-type: none"> <li>▪ Do not display</li> <li>▪ Display <sup>1</sup></li> </ul>                                                                  |
| Microwave baking tray     | <ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>                                                                                  |
| Regional dishes           | <ul style="list-style-type: none"> <li>▪ All <sup>1</sup></li> <li>▪ European dishes</li> <li>▪ British dishes</li> </ul>                                           |

<sup>1</sup> Factory setting (may vary according to model)

| Personalisation         | Selection                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------|
| Dishes                  | <ul style="list-style-type: none"> <li>All<sup>1</sup></li> <li>No pork</li> <li>Kosher only</li> </ul> |
| Childproof lock         | <ul style="list-style-type: none"> <li>Available<sup>1</sup></li> <li>Deactivated</li> </ul>            |
| Automatic rapid heating | <ul style="list-style-type: none"> <li>off</li> <li>On<sup>1</sup></li> </ul>                           |
| Factory settings        | Selection                                                                                               |
| Factory settings        | <ul style="list-style-type: none"> <li>Restore</li> </ul>                                               |
| Info                    | Indicator                                                                                               |
| Appliance information   | Display technical information about the appliance.                                                      |

## 16.2 Changing the basic settings

1. Press "Basic settings" in the menu.
2. Press the required basic settings area.
3. Press the required basic setting.

4. Press to select the required basic setting.
- ✓ The change is applied directly for most basic settings.
5. To change additional basic settings, use ⬅ to go back and select a different basic setting.
6. To exit the basic settings, use ➡ to go back to the main menu or switch off the appliance using ⏻.
- ✓ The changes are saved.

**Note:** Your changes to the basic settings will be retained even after a power failure.

## 16.3 Setting the time

1. Press "Basic settings" in the menu.
2. Press "Time".
3. To set the time, press the hour display or the minute display.
- ✓ The selected value is marked in blue.
4. Use the setting ring to set the time.
  - ▶ The minutes are counted in 5-minute increments. To set it to the precise minute, press and hold the corresponding area in the setting ring for around 1-2 seconds. The minutes are shown in dots. Use the setting ring to set the minutes.
5. To exit the basic settings, use ➡ to go back to the main menu or switch off the appliance using ⏻.
- ✓ The time is saved.

# 17 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: [www.home-connect.com](http://www.home-connect.com).

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

**Tip:** Please also follow the instructions in the Home Connect app.

### Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.  
→ "Safety", Page 2
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.
- In networked standby mode, the appliance requires a maximum of 2 W.

## 17.2 Home Connect settings

You can adjust the Home Connect settings and network settings in your appliance's basic settings.

## 17.1 Setting up Home Connect

### Requirements

- The appliance is connected to the power supply and is switched on.
  - You have a mobile device with a current version of the iOS or Android operating system, e.g. a smartphone.
  - The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.
  - The mobile device and the appliance are within range of your home network's Wi-Fi signal.
1. Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

<sup>1</sup> Factory setting (may vary according to model)

Which settings the display shows will depend on whether Home Connect has been set up and whether the appliance is connected to your home network.

| Basic setting          | Possible settings                                           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------|-------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Home Connect assistant | Start the assistant<br>Disconnect                           | You can connect your appliance to the Home Connect app via the Home Connect assistant.<br><b>Note:</b> If you are using the Home Connect assistant for the first time, only the "Start assistant" setting is available.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Wi-Fi                  | On<br>Off                                                   | You can use the Wi-Fi to switch off the network connection for your appliance. When you have connected successfully once, you can deactivate the Wi-Fi and not lose your detailed data. As soon as you activate Wi-Fi again, the appliance connects automatically.<br><b>Note:</b> In networked standby mode, the appliance requires a maximum of 2 W.                                                                                                                                                                                                                                                                                                   |
| Remote control status  | Monitoring<br>Manual remote start<br>Permanent remote start | During monitoring, you can only view the operating status of the appliance in the app.<br>If you convert from monitoring or permanent remote start to manual remote start, you must activate the remote start each time. You can open the appliance door within 15 minutes of having activated remote start. Remote start will not be deactivated by this. Once 15 minutes have elapsed, opening the appliance door will deactivate manual remote start.<br>For permanent remote start, you can start and operate the appliance remotely at any time. If you often operate the appliance remotely, it is helpful to set the remote start to "Permanent". |

### 17.3 Operating the appliance with the Home Connect app

You can use the Home Connect app to set and start the appliance remotely.

#### **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

#### **Requirements**

- The appliance is switched off.
  - The appliance is connected to the home network and to the Home Connect app.
  - In order to be able to set the appliance via the app, the manual or permanent remote start must be selected in the "Remote control status" basic setting.
1. To activate manual remote start, press .  
You only have to confirm on the oven if you are switching from monitoring or permanent remote start to manual remote start.  
With permanent remote start, you do not need to confirm on the oven.
  2. Configure a setting in the Home Connect app and send it to the appliance.

#### **Notes**

- When you start the oven using the controls on the appliance itself, the remote start function is activated automatically. You can use the Home Connect app to adjust the settings or start a new programme.

- You can open the appliance door within 15 minutes of having activated remote start. Remote start will not be deactivated by this. Once 15 minutes have elapsed, opening the appliance door will deactivate manual remote start.

### 17.4 Software update

Your appliance's software can be updated using the software update function, e.g. for the purposes of optimisation, troubleshooting or security updates. This may lead to minor changes of visualizations and operation in the display.

To do this, you must be a registered Home Connect user, have installed the app on your mobile device and be connected to the Home Connect server.

As soon as a software update is available, you will be informed via the Home Connect app and will be able to start the software update via the app. Once the update has been successfully downloaded, you can start installing it via the Home Connect app if you are in your home network (Wi-Fi). The Home Connect app informs you once installation is successful.

#### **Notes**

- The software update consists of two steps.
  - The first step is the download.
  - The second step is the installation on your appliance.
- You can continue to use your appliance as normal while updates are downloading. Depending on your personal settings in the app, software updates can also be set to download automatically.
- Installation takes a few minutes. You cannot use your appliance during installation.
- We recommend that you install security updates as soon as possible.

## 17.5 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

**Tip:** For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: [www.home-connect.com](http://www.home-connect.com).

## 17.6 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will

transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

**Note:** Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

# 18 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

## 18.1 Cleaning products

In order to avoid damaging the various oven surfaces on the appliance, do not use unsuitable cleaning products.

### **WARNING – Risk of electric shock!**

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

### **ATTENTION**

Unsuitable cleaning agents damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive cleaning products.
- ▶ Do not use cleaning products with a high alcohol content.

## Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance.

Follow the instructions on cleaning the appliance.

→ "Cleaning the appliance", Page 24

### Appliance front

| Surface                     | Suitable cleaning agents                                                                                                                           | Information                                                                                                                                                                                                            |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stainless steel             | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> <li>■ Special stainless steel cleaning products suitable for hot surfaces</li> </ul> | <p>To prevent corrosion, remove any patches of limescale, grease, starch or albumin (e.g. egg white) from stainless steel surfaces immediately.</p> <p>Apply a thin layer of the stainless steel cleaning product.</p> |
| Plastic or painted surfaces | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> </ul>                                                                                | <p>Do not use glass cleaner or a glass scraper.</p> <p>To avoid permanent stains, immediately remove any descaling agent that gets onto the surface.</p>                                                               |
| Glass                       | <ul style="list-style-type: none"> <li>■ Hot soapy water</li> </ul>                                                                                | <p>Do not use glass cleaner or a glass scraper.</p>                                                                                                                                                                    |

## Appliance door

| Range                               | Suitable cleaning agents                                                                                                                               | Information                                                                                                                                                                                 |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Door panels                         | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>Oven cleaner</li> <li>Steel wool</li> </ul>                                            | Do not use a glass scraper.<br><b>Tip:</b> Remove the door panels in order to clean them thoroughly.<br>→ <i>"Appliance door", Page 26</i>                                                  |
| Door cover                          | <ul style="list-style-type: none"> <li>Made of stainless steel:<br/>Stainless steel cleaner</li> <li>Made from plastic:<br/>Hot soapy water</li> </ul> | Do not use glass cleaner or a glass scraper.<br>Do not use stainless steel care products.<br><b>Tip:</b> Remove the door cover for thorough cleaning.<br>→ <i>"Appliance door", Page 26</i> |
| Stainless steel interior door frame | <ul style="list-style-type: none"> <li>Stainless steel cleaner</li> </ul>                                                                              | Discolouration can be removed using stainless steel cleaner.<br>Do not use stainless steel care products.                                                                                   |
| Door handle                         | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                                      | To avoid permanent stains, immediately remove any descaling agent that gets onto the surface.                                                                                               |
| Door seal                           | <ul style="list-style-type: none"> <li>Hot soapy water</li> </ul>                                                                                      | Do not remove or scrub.                                                                                                                                                                     |

## Cooking compartment

| Range                  | Suitable cleaning agents                                                                                                              | Information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enamel surfaces        | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>Vinegar solution</li> <li>Oven cleaner</li> <li>Steel wool</li> </ul> | Soak any heavily soiled areas and use a brush or steel wool.<br>Leave the appliance door open to dry the cooking compartment after cleaning it.<br><b>Notes</b> <ul style="list-style-type: none"> <li>Enamel burns at very high temperatures, causing minor discolouration. The functionality of your appliance is not affected by this.</li> <li>The edges of thin trays cannot be completely enamelled and may be rough. This does not impair the corrosion protection.</li> <li>Food residues leave a white coating on the enamel surfaces. The coating does not pose a health risk. The functionality of your appliance is not affected by this. You can remove residues with lemon juice.</li> </ul> |
| Self-cleaning surfaces | -                                                                                                                                     | Follow the instructions for self-cleaning surfaces.<br>→ <i>"Regenerating self-cleaning surfaces in the cooking compartment", Page 24</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Shelf supports         | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>Steel wool</li> </ul>                                                 | Soak any heavily soiled areas and use a brush or steel wool.<br><b>Note:</b> To clean thoroughly, detach the shelf supports.<br>→ <i>"Rails", Page 27</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Accessories            | <ul style="list-style-type: none"> <li>Hot soapy water</li> <li>Oven cleaner</li> <li>Steel wool</li> </ul>                           | Soak any heavily soiled areas and use a brush or steel wool.<br>Enamelled accessories are dishwasher-safe.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## 18.2 Cleaning the appliance

In order to avoid damaging the appliance, you must clean your appliance only as specified, and with suitable cleaning products.

### **WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

### **WARNING – Risk of fire!**

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

**Requirement:** Read the information on cleaning products.

→ *"Cleaning products", Page 23*

1. Clean the appliance using hot soapy water and a dish cloth.
  - ▶ For some surfaces, you can use alternative cleaning agents.  
→ *"Suitable cleaning agents", Page 23*
2. Dry with a soft cloth.

## Regenerating self-cleaning surfaces in the cooking compartment

The back panel in the cooking compartment is self-cleaning. The self-cleaning surfaces are coated with a porous, matt ceramic layer and have a rough surface. When the appliance is in operation, the self-cleaning surfaces absorb splashes from baking, roasting or grilling, and break them down. If the self-cleaning surfaces no longer clean themselves adequately during op-

eration, heat up the cooking compartment specifically to the right temperature.

### ATTENTION

If you do not clean the self-cleaning surfaces regularly, they may become damaged.

- ▶ If dark stains are visible on the self-cleaning surfaces, heat up the cooking compartment.
- ▶ Do not use oven cleaner or abrasive cleaning aids. If oven cleaner accidentally comes into contact with the self-cleaning surfaces, dab it off immediately using water and a sponge cloth. Do not rub.

1. Remove accessories and cookware from the cooking compartment.
2. Detach the shelf supports and remove them from the cooking compartment.  
→ "Rails", Page 27
3. Remove coarse dirt using soapy water and a soft cloth:
  - From the smooth enamel surfaces

- From the inside of the appliance door
  - From the glass cover on the oven lamp
- This prevents stains that cannot be removed.

4. Remove any objects from the cooking compartment. The cooking compartment must be empty.
5. Set the 4D hot air type of heating.
6. Set the maximum temperature.
7. Start the operation.
8. Switch off the appliance after 1 hour.
9. Once the appliance has cooled down, wipe the cooking compartment with a damp cloth.  
**Note:** Marks may appear on the self-cleaning surfaces. Residues of sugar and egg white in the food are not removed and stick to the surfaces. Red stains are residues from salty food – they are not rust. The stains are not hazardous to health. These marks do not impair the cleaning ability of the self-cleaning surfaces.
10. Attach the shelf supports.  
→ "Rails", Page 27

## 19 Cleaning aid

The cleaning aid  is a quick alternative for occasionally cleaning the cooking compartment. The cleaning aid softens dirt by evaporating the soapy water. It is then easier to remove the dirt.

### 19.1 Setting the cleaning aid

#### **WARNING – Risk of scalding!**

If there is water in the cooking compartment when it is hot, this may create hot steam.

- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

**Note:** The oven light does not come on while the cleaning aid is running.

**Requirement:** The cooking compartment must have cooled down completely.

1. Remove any accessories from the cooking compartment.
2. **ATTENTION** – Distilled water in the cooking compartment leads to corrosion.
  - ▶ Do not use distilled water.

Mix 0.4 litres water with a drop of washing-up liquid and pour into the centre of the cooking compartment floor.

3. Press "Cleaning" in the menu.
  4. Press  "Cleaning aid".  
The duration cannot be changed.
  5. Press .
- ✓ A notification stating that you should carry out the necessary preparatory work for the cleaning aid appears on the display.

6. Confirm the message.
  - ✓ The cleaning aid starts and the duration counts down.
  - ✓ Once the cleaning aid has ended, a signal tone sounds. A message appears on the display confirming that the operation has finished.
7. Press  to switch the appliance off.
8. .  
→ "Cleaning the cooking compartment after using the cleaning aid", Page 25

### 19.2 Cleaning the cooking compartment after using the cleaning aid

#### ATTENTION

The prolonged presence of moisture in the cooking compartment leads to corrosion.

- ▶ After using the cleaning assistance, wipe the cooking compartment and allow it to dry completely.

1. Allow the appliance to cool down.
2. Wipe out the remaining water in the cooking compartment using an absorbent sponge cloth.
3. Clean the smooth enamel surfaces in the cooking compartment with a dish cloth or a soft brush. Remove stubborn food remnants using a stainless steel scouring pad.
4. Remove limescale with a cloth soaked in vinegar, and wipe this away with clean water.
5. Dry the cooking compartment with a soft cloth.
6. To dry the cooking compartment completely, leave the appliance door open for approx. 1 hour or use the drying function.  
→ "Setting the drying process", Page 26

## 20 Drying

To prevent residual moisture, dry the cooking compartment following microwave-only operation and after using the cleaning aid.

## ATTENTION

If there is water on the cooking compartment floor when operating the appliance at temperatures above 120 °C, this will damage the enamel.

- ▶ Do not use the appliance if there is water on the cooking compartment floor.
- ▶ Wipe away any water on the cooking compartment floor before operation.

## 20.1 Drying the cooking compartment

You can leave the cooking compartment to dry or use the drying function.

1. Allow the appliance to cool down.
2. Remove any dirt from the cooking compartment.
3. Wipe away any water in the cooking compartment.
4. Dry the cooking compartment.
  - ▶ To dry the cooking compartment, leave the appliance door open for 1 hour.
  - ▶ To use the drying function, set "Drying function".  
→ "Setting the drying process", Page 26

## Setting the drying process

### Requirement:

→ "Drying the cooking compartment", Page 26

1. Press "Cleaning" in the menu.
2. Press  "Drying function".  
The duration cannot be changed.
3. Press .  
  - ✓ A notification stating that you should carry out the necessary preparatory work for the drying appears on the display.
4. Confirm the message.
  - ✓ The drying process starts and the duration counts down.
  - ✓ Once the drying has ended, a signal tone sounds. A message appears on the display confirming that the operation has finished.
5. Press  to switch the appliance off.
6. To dry the cooking compartment completely, leave the appliance door open for 1 to 2 minutes.


# 21 Appliance door

To clean the appliance door thoroughly, you can disassemble the appliance door.

## 21.1 Removing the door cover

The stainless steel inlay in the door cover may discolour. Remove the door cover in order to clean it and the stainless steel inlay, or to remove the door panes.

1. Open the appliance door slightly.
2. Press down on the left- and right-hand sides of the door cover ①.
3. Remove the door cover ② and carefully close the appliance door.

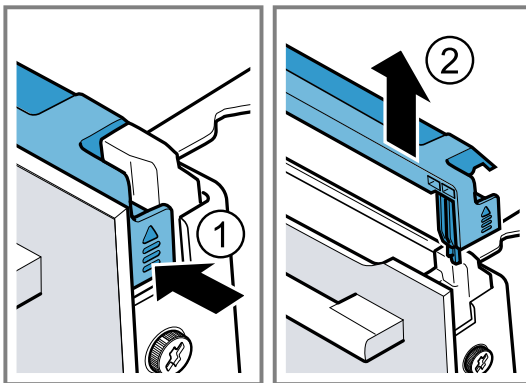

## 21.2 Removing the door panes

### ⚠ WARNING – Risk of injury!

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges.


Components inside the appliance door may have sharp edges.

- ▶ Wear protective gloves.

**Requirement:** The door cover has been removed.


→ "Removing the door cover", Page 26

1. Undo and remove the screws ① on the left and right of the appliance door.
2. Place a folded-up tea towel in the appliance door.
3. Close the appliance door.
4. Pull the front pane up and out ②.

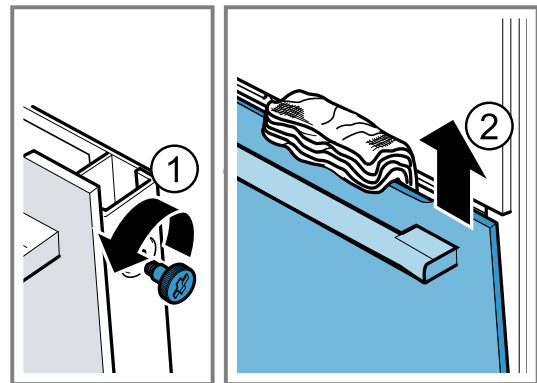

5. Place the front pane down on a flat surface with the door handle facing down.
6. ⚠ **WARNING – Risk of serious harm to health!**  
If the screws are undone, the safety of the appliance can no longer be guaranteed. Microwave energy may escape.
  - ▶ Never undo the screws.

Never unscrew the four black screws on the frame.

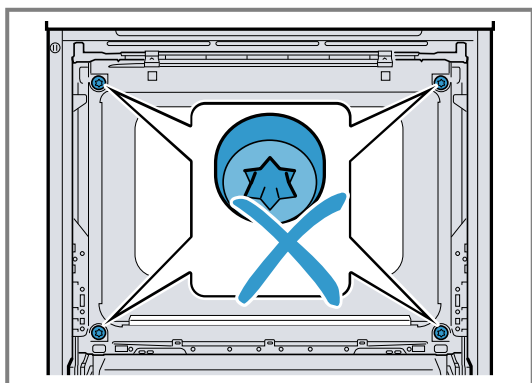

## 21.3 Fitting the door panes

### ⚠ WARNING – Risk of injury!


The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- Keep your hands away from the hinges.
- Components inside the appliance door may have sharp edges.


► Wear protective gloves.

1. Attach the front pane downwards into the left- and right-hand retainers **a** ①.

2. Push the front pane to the appliance until the left- and right-hand hook **a** is opposite the support **b** ②.

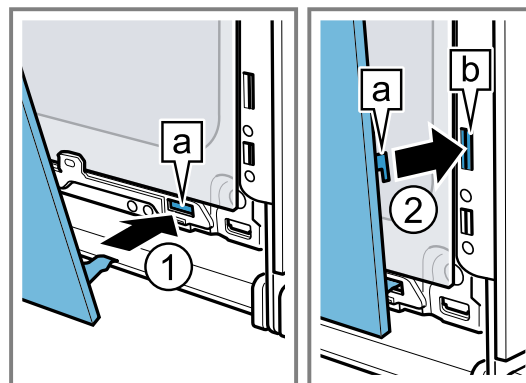

3. Push the front pane in at the bottom ① until you hear it click into place.
4. Open the appliance door slightly and remove the tea towel.
5. Screw both screws back in on the left and right of the appliance door.
6. Put the door cover in position and push down on it ② until you hear it click into place.

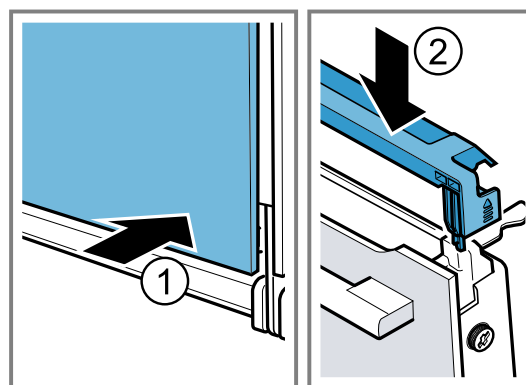

7. Close the appliance door.

**Note:** Do not use the cooking compartment again until the door panes have been correctly fitted.

## 22 Rails

To thoroughly clean the rails and the cooking compartment, or to replace the rails, you can remove the rails.

### 22.1 Detaching the rails


#### ⚠ WARNING – Risk of burns!

The shelf supports get very hot

- Never touch the shelf supports when hot.
- Always allow the appliance to cool down.
- Keep children at a safe distance.

1. Lift the rail forwards ① and detach it ②.

2. Swivel the entire rail outwards ③ and unhook it at the rear ④.

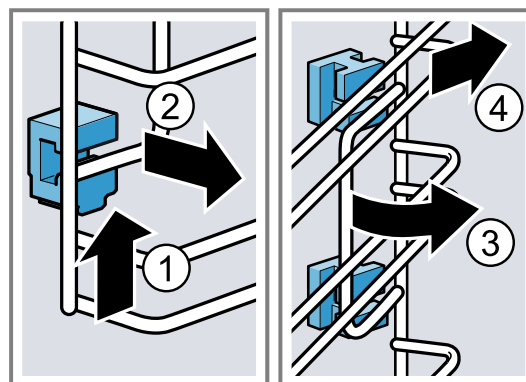


3. Clean the rail.


### 22.2 Fitting the retainers

The retainers may fall out when you detach the rails.


**Note:** The retainers at the front differ from those at the rear.

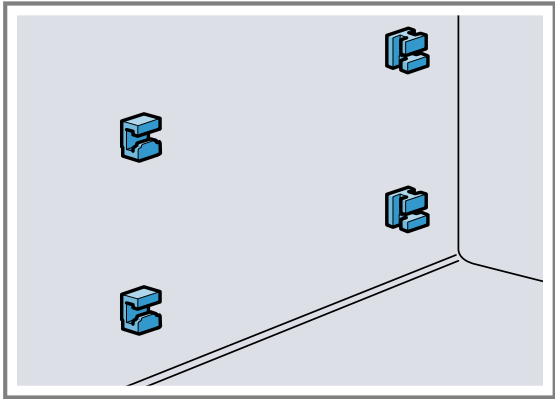

- 1. Hook the front retainers with the hook into the round hole at the top and set them at a slight angle ①.
- 2. Hook the front retainers in at the bottom and straighten them ②.

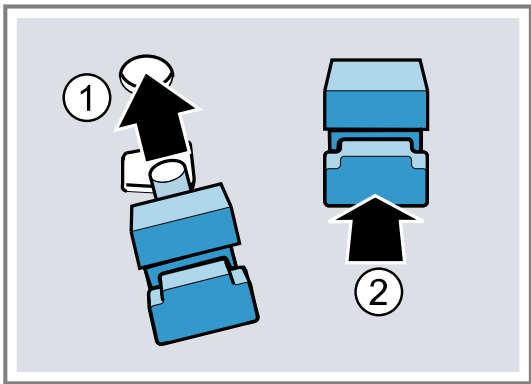


- 3. Hook the rear retainers with the hook into the top hole ① and push them into the bottom hole ②.

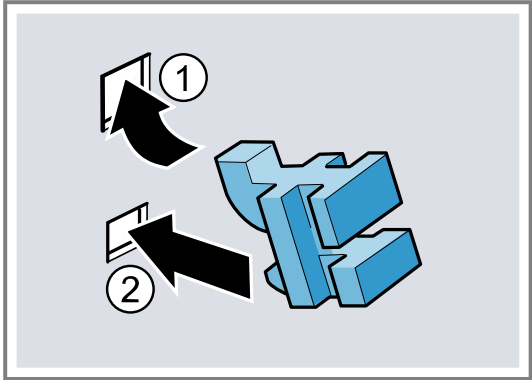

22.3 Attaching the rails

- 1. Set the rear rail at an angle, hooking it into the retainers at the top and bottom ①.
- 2. Pull the rail forwards ②.
- 3. Hook in the rail at the front ③ and press it down ④.

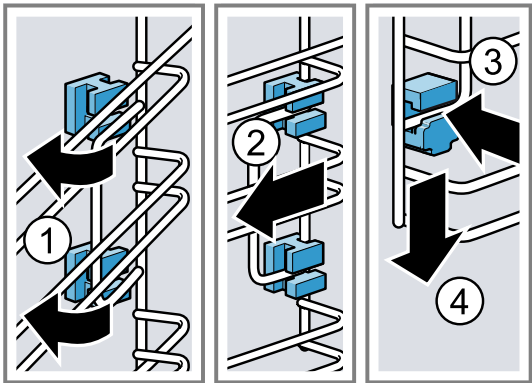

23 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

**⚠ WARNING – Risk of injury!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.  
→ "Customer Service", Page 30

**⚠ WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

23.1 Malfunctions

| Fault                         | Cause and troubleshooting                                                                                 |
|-------------------------------|-----------------------------------------------------------------------------------------------------------|
| The appliance is not working. | The circuit breaker in the fuse box has tripped.<br>▶ Check the circuit breaker in the fuse box.          |
|                               | There has been a power cut.<br>▶ Check whether the lighting in your room or other appliances are working. |
|                               |                                                                                                           |

| Fault                                                                         | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance is not working.                                                 | <p>Electronics fault</p> <ol style="list-style-type: none"> <li>1. Disconnect the appliance from the power supply for at least 30 seconds by switching off the fuse.</li> <li>2. Reset the basic settings to the factory settings.<br/>→ <i>"Basic settings", Page 20</i></li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| "Sprache Deutsch" appears in the display.                                     | <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Configure the initial configuration settings.<br/>→ <i>"Performing initial start-up", Page 12</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| The operation does not start or is interrupted.                               | <p>Different causes are possible.</p> <ul style="list-style-type: none"> <li>▶ Check the notifications that appear on the display.<br/>→ <i>"Displaying information", Page 13</i></li> </ul> <hr/> <p>Malfunction</p> <ul style="list-style-type: none"> <li>▶ Call .<br/>→ <i>"Customer Service", Page 30</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Appliance does not heat up.                                                   | <p>Demo mode is switched on.</p> <ol style="list-style-type: none"> <li>1. Briefly disconnect the appliance from the power supply by switching the circuit breaker in the fuse box off and then on again.</li> <li>2. Switch off demo mode in the basic settings within approx. 5 minutes.<br/>→ <i>"Changing the basic settings", Page 21</i></li> </ol> <hr/> <p>There has been a power cut.</p> <ul style="list-style-type: none"> <li>▶ Open and close the appliance door once after a power failure.</li> <li>✓ The appliance is checked and is ready to use.</li> </ul>                                                                                                                                                                                                                                                                                                                 |
| The time is not displayed when the appliance is switched off.                 | <p>Basic setting has been changed.</p> <ul style="list-style-type: none"> <li>▶ Change the basic setting for the time display.<br/>→ <i>"Basic settings", Page 20</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Home Connect is not working properly.                                         | <p>Different causes are possible.</p> <ul style="list-style-type: none"> <li>▶ Go to <a href="http://www.home-connect.com">www.home-connect.com</a>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| During simple microwave operation, the cooking compartment becomes hot.       | <p>The drying function is switched on.</p> <ul style="list-style-type: none"> <li>▶ You can change the basic setting for the drying function during microwave operation.<br/>→ <i>"Basic settings", Page 20</i></li> <li>▶ Observe the information on operating with microwave.<br/>→ <i>"Microwave", Page 15</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| The interior lighting does not work.                                          | <p>Basic setting has been changed.</p> <ul style="list-style-type: none"> <li>▶ Change the basic setting for the lighting.<br/>→ <i>"Basic settings", Page 20</i></li> </ul> <hr/> <p>The LED light is defective.</p> <ul style="list-style-type: none"> <li>▶ Call .<br/>→ <i>"Customer Service", Page 30</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Maximum operating time reached.                                               | <p>To prevent an unwanted permanent operation, the appliance automatically stops heating after several hours if the settings are unchanged. A message appears in the display.</p> <p>The point at which the maximum operating time is reached is determined by the corresponding settings for an operating mode.</p> <ol style="list-style-type: none"> <li>1. To continue operation, switch the appliance off and on again using . Reset and start the operation.</li> <li>2. If you do not need to use the appliance, press  to switch it off.</li> </ol> <p><b>Tip:</b> To prevent the appliance from switching off when you do not want it to, set a cooking time.<br/>→ <i>"Time-setting options", Page 14</i></p> |
| Error code made up of letters and numbers appears on the display, e.g. E0111. | <p>The electronics have detected a fault.</p> <ol style="list-style-type: none"> <li>1. Switch the appliance off and on again.</li> <li>✓ If the fault was a one-off, the message disappears.</li> <li>2. If the message appears again, call the after-sales service. Please specify the exact error message when calling.<br/>→ <i>"Customer Service", Page 30</i></li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| The cooking result is not satisfactory.                                       | <p>Settings were unsuitable.</p> <p>Adjustment values, e.g. temperature or cooking time, depend on the recipe, quantity and food.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

| Fault                                   | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The cooking result is not satisfactory. | <div>▶ Next time, set lower or higher values.</div> <div><b>Tip:</b> A lot of other information about the preparation, corresponding adjustment values and recipes can be found in the Home Connect app or on our website <a href="http://www.bosch-home.com">www.bosch-home.com</a>.</div> <div></div> |

## 24 Disposal

### 24.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.

2. Cut through the power cord.

3. Dispose of the appliance in an environmentally friendly manner.
- Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## 25 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

**Note:** Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

 
You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website. This product contains light sources from energy efficiency class G. These light sources are available as a spare part and should only be replaced by trained specialist staff.

You can find the information required as per Regulation (EU) 2023/826 online at [www.bosch-home.com](http://www.bosch-home.com) on the product and service pages for your appliance, in the area of user manuals and additional documents.

### 25.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

You will see the rating plate with these numbers if you open the appliance door.



Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

You can also display the appliance information in the basic settings.  
→ "Basic settings", Page 20

## 26 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information".<sup>1</sup> You can

<sup>1</sup> Depending on the appliance specifications

download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany. The source code will be made available to you on request.

Please send your request to [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.  
Subject: „OSSREQUEST“  
The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

## 27 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at [www.bosch-home.com](http://www.bosch-home.com) among the additional documents on the product page for your appliance.



Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.<sup>1</sup>

A detailed Declaration of Conformity can be found online at [www.bosch-home.co.uk](http://www.bosch-home.co.uk) among the additional documents on the product page for your appliance.<sup>1</sup>



2.4 GHz band (2400–2483.5 MHz): Max. 100 mW

5 GHz band (5150–5350 MHz + 5470–5725 MHz): max. 200 mW



|    |    |    |    |    |         |    |    |    |
|----|----|----|----|----|---------|----|----|----|
| BE | BG | CZ | DK | DE | EE      | IE | EL | ES |
| FR | HR | IT | CY | LI | LV      | LT | LU | HU |
| MT | NL | AT | PL | PT | RO      | SI | SK | FI |
| SE | NO | CH | TR | IS | UK (NI) |    |    |    |

5 GHz WLAN (Wi-Fi): For indoor use only.

|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| AL | BA | MD | ME | MK | RS | UK | UA |
|----|----|----|----|----|----|----|----|

5 GHz WLAN (Wi-Fi): For indoor use only.

### 27.1 Statement of Compliance for Great Britain

#### Product type

This statement of compliance covers the products described in this information for use whose model identifier group is seen on the title page. The full model identifier is made up of the characters before the slash in the product number (E no.) which can be found on the rating plate. Alternatively, you can also find the model identifier in the first line of the UK Energy Label.

#### Name and address of manufacturer

BSH Hausgeräte GmbH, Carl-Wery-Strasse 34, 81739 München, Germany

This statement of compliance is prepared by the manufacturer.

The manufacturer, BSH Hausgeräte GmbH deems that it has complied with

- provision 5.1-1 of ETSI EN 303 645 v2.1.1 and, where relevant, provision 5.1-2 of ETSI EN 303 645 v2.1.1;
- provision 5.2-1 of ETSI EN 303 645 v2.1.1;
- provision 5.3-13 of ETSI EN 303 645 v2.1.1.

#### Support period

BSH Hausgeräte GmbH will provide security updates that are necessary to maintain the main functions free of charge until at least 28/02/2034.

## 28 How it works

Here, you can find the ideal settings for various types of food as well as the best accessories and cookware. We

have perfectly tailored these recommendations to your appliance.

<sup>1</sup> Only applies to Great Britain

**Tip:** A lot of other information about the preparation, corresponding adjustment values and recipes can be found in the Home Connect app or on our website [www.bosch-home.com](http://www.bosch-home.com).

## 28.1 General cooking tips

Take note of the following information when cooking all types of food.

- The temperature and cooking time depend on the amount of food and the recipe. Settings ranges are specified for this reason. Try using the lower values to start with.
- The setting values apply to food placed in the cooking compartment while the cooking compartment is still cold. If you want to preheat anyway, do not place accessories into the cooking compartment until it has finished preheating.
- Remove any accessories that are not being used from the cooking compartment.

### ATTENTION

Acidic food may damage the wire rack

- ▶ Do not place acidic food, such as fruit or food with an acidic marinade directly on the wire rack.

### Information for those allergic to nickel

In rare cases, small amounts of nickel may pass into the food.

You can buy suitable accessories from customer service, from specialist retailers or online.

→ "Other accessories", Page 11

**Tip:** For some food, you can use the ventilation function "Crisp Finish". For some food, you can use the ventilation function. The ventilation function "Crisp Finish" extracts moisture from the cooking compartment with increased intensity. This method is recommended for food with lots of moisture, e. g.

- for cooking on several levels
- for baked items with a moist toppings
- for meringue pastry
- when increased crispiness is required

For crispier food, we recommend switching this on in the second half of the cooking time.

→ "Ventilation function Crisp Finish", Page 17

## 28.2 Baking tips

- Dark-coloured metal baking tins are most suitable for baking cakes, bread and other baked goods.
- Use wide, shallow cookware for bakes and gratins. Food takes longer to cook in deep, narrow cookware and it browns more on top.
- If you are cooking bakes directly in the universal pan, place the universal pan into the cooking compartment at level 1.
- The setting values for bread dough apply to both dough placed on a baking tray and dough placed in a loaf tin.
- The recommended settings for baking in combination with the microwave mode are for metal baking tins.

### ATTENTION

When the cooking compartment is hot, any water inside it will create steam. The change in temperature may cause damage.

- ▶ Never pour water into the cooking compartment when it is still hot.
- ▶ Never place cookware containing water on the cooking compartment floor.

### Shelf positions

You will obtain the best results if you use the following shelf positions.

If you are baking on one level, use shelf position 1.

| Baking on 2 levels                   | Height |
|--------------------------------------|--------|
| Universal pan                        | 3      |
| Baking tray                          | 1      |
| Baking tins/dishes on two wire racks | 3<br>1 |

Use the 4D hot air heating function.

### Notes

- Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.
- If you opt for cooking in combination with the microwave mode, you can only cook on one level.

## 28.3 Roasting, braising and grilling tips

- The recommended settings are for fridge-temperature food and unstuffed, oven-ready poultry.
- Place the poultry onto the cookware breast-side or skin-side down.
- Turn roasting joints, grilled items or whole fish after approx. ½ to ⅔ of the specified time.

### Roasting on the wire rack

Food roasted on the wire rack will become very crispy on all sides. You can roast large poultry, for example, or multiple individual pieces at the same time.

- Roast pieces of a similar weight and thickness. The grilled food will brown evenly and will remain succulent and juicy.
- Place the food to be roasted directly on the wire rack.
- To catch any liquids that drip down, place the universal pan into the cooking compartment one level below the wire rack.
- Add up to ½ litre of water to the universal pan, depending on the size and type of food that you want to roast.

You can make a sauce from the juices that are collected. This also means that less smoke is produced and the cooking compartment does not become as dirty.

### Roasting in cookware

If you cover the cookware when you cook your food, this will keep the cooking compartment cleaner.

### General information about roasting in cookware

- Use heat-resistant, ovenproof cookware.
- Place the cookware on the wire rack.
- Glass cookware is best.

- Follow the manufacturer's instructions for your roasting dishes.

### Roasting in uncovered cookware

- Use a deep roasting dish.
- If you do not have any suitable cookware, you can use the universal pan.

### Roasting in covered cookware

- Use a suitable lid that seals well.
- When roasting meat, there should be at least 3 cm between the food and the lid. The meat may expand.

### ⚠ WARNING – Risk of scalding!

Very hot steam may escape when the lid is opened after cooking. Steam may not be visible, depending on the temperature.

- ▶ Lift the lid in such a way that the hot steam can escape away from you.
- ▶ Keep children away from the appliance.

## Grilling

Grill food if you want it to be crispy.

The "Grill" type of heating is good for cooking thinner pieces of poultry, meat and fish such as steaks, drumsticks and burgers. It is also excellent for toasting bread.

Circulated air grilling is very well suited to cooking whole poultry and fish, as well as meat, e.g. roast pork with crackling.

- When grilling several food items, choose pieces that are of a similar weight and thickness. The grilled food will brown evenly and will remain succulent and juicy.
- Place the food to be grilled directly onto the wire rack.
- To catch any liquids that drip down, place the universal pan into the cooking compartment at least one level below the wire rack.

### Notes

- The grill element switches on and off continuously. This is normal. The grill setting that you use determines how frequently this occurs.
- Smoke may be produced when grilling.

## 28.4 Microwave cooking

If you cook food using the microwave mode, you can reduce the cooking time considerably.

### General information

- When using the microwave mode, the cooking time is determined based on the total weight. If you want to cook a quantity that differs from the specified quantity, the general rule is **Double the quantity requires just under double the cooking time.**
- The food transfers heat to the cookware. The cookware may become very hot.

- The main part of the instruction manual contains information on how to configure the microwave and microwave boost oven settings.  
→ "Microwave", Page 15

### Tip

You can find more microwave recipes here:

- → "Defrosting", Page 38
- → "Warming up food using the microwave mode", Page 39

## Cooking, braising or steaming using the microwave mode

- Use microwave-safe cookware with a lid. Alternatively, you can use a plate or special microwaveable film to cover the dish.
- For cereal products, e.g. rice, use deep cookware with a lid. Cereal products foam a lot during cooking. Add liquid in accordance with the instructions and information provided in the recommended settings tables.
- Do not wash or dry food. Add 1-3 tablespoons of water or lemon juice to the food.
- Spread the food out so that as much of it as possible is in contact with the bottom of the cookware. Food that is in contact with the bottom will cook more quickly than food that is piled up.
- Use salt and seasoning sparingly. When cooking food using the microwave mode, most of the food's natural flavour will be retained.
- Turn or stir the food 2-3 times during cooking.
- After cooking, leave the food to rest for 2-3 minutes.

## 28.5 Cooking instructions for ready meals

- The cooking result greatly depends on the quality of the food. Pre-browning and irregularities may already be present in the food before cooking.
- Do not use frozen products that are covered with a thick layer of ice. Remove any ice on the food.
- Take ready meals out of the packaging.
- If you are warming or cooking the ready meal in cookware, make sure that the cookware is heat-resistant.
- Distribute foods that are in the form of separate pieces, such as bread rolls and potato products, so that they are spread out flat and evenly on the accessory. Leave a little space between the individual pieces.
- Follow the manufacturer's instructions on the packaging.
- To achieve best results, we recommend that you re-heat food or ready meals at 600 watts. If the packaging specifies a higher microwave output setting, extend the time.

## 28.6 List of foods

Recommended settings for a variety of foods, sorted into food categories.

## Recommended settings for various types of food

| Food                                                 | Accessories/cook-ware               | Shelf po-sition | Type of heating                                                                     | Temperature in °C/grill setting                     | Microwave power set-ting in W | Cooking time in mins               |
|------------------------------------------------------|-------------------------------------|-----------------|-------------------------------------------------------------------------------------|-----------------------------------------------------|-------------------------------|------------------------------------|
| Sponge cake, simple                                  | Ring-shaped tin or Loaf tin         | 1               |    | 160-180                                             | 90                            | 30-40                              |
| Sponge cake, delicate                                | Ring-shaped tin or Loaf tin         | 1               |    | 150-170                                             | -                             | 60-80                              |
| Fruit tart or cheesecake with shortcrust pastry base | Springform cake tin, diameter 26 cm | 1               |    | 160-170                                             | -                             | 65-85                              |
| Fruit tart or cheesecake with shortcrust pastry base | Springform cake tin, diameter 26 cm | 1               |    | <b>1.</b> 160-180<br><b>2.</b> 100                  | <b>1.</b> 180<br><b>2.</b> -  | <b>1.</b> 30-40<br><b>2.</b> 20    |
| Sponge flan, 6 eggs                                  | Springform cake tin Ø 28 cm         | 1               |    | 150-170 <sup>1</sup>                                | -                             | 30-50                              |
| Sponge flan, 6 eggs                                  | Springform cake tin Ø 28 cm         | 1               |    | 150-160                                             | -                             | 50-60                              |
| Shortcrust tart with moist topping                   | Universal pan                       | 1               |    | 160-180                                             | -                             | 60-80                              |
| Yeast cake with moist topping                        | Universal pan                       | 1               |    | 180-190                                             | -                             | 30-45                              |
| Swiss roll                                           | Baking tray                         | 1               |    | 180-190 <sup>1</sup>                                | -                             | 10-20                              |
| Muffins                                              | Muffin tray                         | 1               |  | 170-190                                             | -                             | 15-30                              |
| Small yeast cakes                                    | Baking tray                         | 1               |  | 160-170                                             | -                             | 30-40                              |
| Biscuits                                             | Baking tray                         | 2               |  | 140-160                                             | -                             | 15-30                              |
| Biscuits, 2 levels                                   | Universal pan + Baking tray         | 3+1             |  | 130-150                                             | -                             | 20-35                              |
| Bread, 750 g                                         | Universal pan or Loaf tin           | 1               |  | <b>1.</b> 210-220<br><b>2.</b> 180-190 <sup>1</sup> | -                             | <b>1.</b> 10-15<br><b>2.</b> 25-35 |
| Bread, 1500 g                                        | Universal pan or Loaf tin           | 1               |  | <b>1.</b> 210-220<br><b>2.</b> 180-190 <sup>1</sup> | -                             | <b>1.</b> 10-15<br><b>2.</b> 40-50 |
| Bread, 1500 g                                        | Universal pan or Loaf tin           | 1               |  | 200-210                                             | -                             | 35-45                              |
| Flatbread                                            | Universal pan                       | 1               |  | 250-270                                             | -                             | 20-30                              |
| Bread rolls, fresh                                   | Baking tray                         | 1               |  | 180-190                                             | -                             | 25-35                              |
| Pizza, fresh                                         | Baking tray                         | 1               |  | 200-220                                             | -                             | 20-30                              |
| Pizza, fresh, 2 levels                               | Universal pan + Baking tray         | 3+1             |  | 180-190                                             | -                             | 35-45                              |
| Pizza, fresh, thin-crust, on a pizza tray            | Pizza tray                          | 1               |  | 210-230                                             | -                             | 20-30                              |
| Börek                                                | Universal pan                       | 1               |  | 180-190                                             | -                             | 35-45                              |
| Quiche                                               | Dark coated quiche tin              | 1               |  | 190-210                                             | -                             | 30-45                              |
| Tarte flambée                                        | Universal pan                       | 1               |  | 260-270 <sup>1</sup>                                | -                             | 10-20                              |
| Bake, savoury, cooked ingredients                    | Ovenproof dish                      | 1               |  | 200-220                                             | -                             | 35-55                              |

<sup>1</sup> Preheat the appliance.

| Food                                          | Accessories/cook-ware | Shelf po-sition | Type of heating                                                                     | Temperature in °C/grill setting | Microwave power set-ting in W  | Cooking time in mins            |
|-----------------------------------------------|-----------------------|-----------------|-------------------------------------------------------------------------------------|---------------------------------|--------------------------------|---------------------------------|
| Bake, savoury, cooked ingredients             | Ovenproof dish        | 1               |    | 140-160                         | 360                            | 20-30                           |
| Lasagne, frozen, 350-450 g, 3 cm deep         | Uncovered cook-ware   | 1               |    | 200-210                         | 180                            | 20-25                           |
| Lasagne, frozen, 600-1000 g, 4-5 cm deep      | Uncovered cook-ware   | 1               |    | 200-210                         | 180                            | 35-45                           |
| Potato gratin, raw ingredi-ents, 4 cm deep    | Ovenproof dish        | 1               |    | 170-180                         | -                              | 50-65                           |
| Potato gratin, raw ingredi-ents, 4 cm deep    | Ovenproof dish        | 1               |    | 170-190                         | 360                            | 20-25                           |
| Chicken, 1.3 kg, un-stuffed                   | Wire rack             | 1               |    | 200-220                         | -                              | 60-70                           |
| Chicken, 1.3 kg, un-stuffed                   | Covered cookware      | 1               |    | 230-250                         | 360                            | 25-35                           |
| Small chicken portions, 250 g each            | Wire rack             | 2               |    | 220-230                         | -                              | 30-35                           |
| Small chicken portions, 250 g each            | Uncovered cook-ware   | 1               |    | 190-210                         | 360                            | 20-30                           |
| Goose, unstuffed, 3 kg                        | Uncovered cook-ware   | 1               |    | 160-170                         | -                              | 120-150                         |
| Joint of pork without rind, e.g. neck, 1.5 kg | Uncovered cook-ware   | 1               |    | 180-200                         | -                              | 120-130                         |
| Joint of pork without rind, e.g. neck, 1.5 kg | Covered cookware      | 1               |  | 180-200                         | 180                            | 55-65                           |
| Joint of pork without rind, e.g. neck, 1.5 kg | Uncovered cook-ware   | 1               |  | 180-190                         | -                              | 120-140                         |
| Fillet of beef, medium, 1 kg                  | Uncovered cook-ware   | 1               |  | 210-220                         | -                              | 40-50                           |
| Pot-roasted beef, 1.5 kg                      | Covered cookware      | 1               |  | 200-220                         | -                              | 130-140                         |
| Pot-roasted beef, 1.5 kg                      | Covered cookware      | 1               |  | 200-220                         | -                              | 140-160                         |
| Sirloin, medium, 1.5 kg                       | Uncovered cook-ware   | 1               |  | 220-230                         | -                              | 60-70                           |
| Sirloin, medium, 1.5 kg                       | Uncovered cook-ware   | 1               |  | 240-260                         | 180                            | 30-40                           |
| Burger, 3–4 cm thick                          | Wire rack             | 2               |  | 3                               | -                              | 20-30 <sup>1</sup>              |
| Leg of lamb, boned, me-dium, 1.5 kg           | Uncovered cook-ware   | 1               |  | 170-190                         | -                              | 50-70                           |
| Leg of lamb, boned, me-dium, 1.5 kg           | Covered cookware      | 1               |  | 240-260                         | <b>1.</b> 360<br><b>2.</b> 180 | <b>1.</b> 30<br><b>2.</b> 35-40 |
| Meat loaf, 1 kg + 50 ml water                 | Uncovered cook-ware   | 1               |  | 170-190                         | 360                            | 30-40                           |
| Fish, grilled, whole, 300 g, e.g. trout       | Uncovered cook-ware   | 1               |  | 170-190                         | -                              | 20-30                           |
| Fish, grilled, whole, 300 g, e.g. trout       | Wire rack             | 1               |  | 2                               | 90                             | 15-20                           |
| Vegetables, fresh, 250 g                      | Covered cookware      | 1               |  | -                               | 600                            | 8-12 <sup>2</sup>               |
| Mixed vegetables, 250 g, + 25 ml water        | Covered cookware      | 1               |  | -                               | 600                            | 10-14 <sup>2</sup>              |

<sup>1</sup> Turn the dish 2/3 of the way through the cooking time.

<sup>2</sup> Stir the food one or two times during cooking.

| Food                                            | Accessories/cookware | Shelf position | Type of heating                                                                   | Temperature in °C/grill setting | Microwave power setting in W   | Cooking time in mins              |
|-------------------------------------------------|----------------------|----------------|-----------------------------------------------------------------------------------|---------------------------------|--------------------------------|-----------------------------------|
| Baked potatoes, halved, 1 kg                    | Universal pan        | 2              |  | 200-220                         | 360                            | 15-20                             |
| Peeled boiled potatoes, quartered, 500 g        | Covered cookware     | 1              |  | -                               | 600                            | 12-15 <sup>1</sup>                |
| Long-grain rice, 250 g + 500 ml water           | Covered cookware     | 1              |  | -                               | <b>1.</b> 600<br><b>2.</b> 180 | <b>1.</b> 7-9<br><b>2.</b> 13-16  |
| Millet, whole, 250 g, + 600 ml water            | Covered cookware     | 1              |  | -                               | <b>1.</b> 600<br><b>2.</b> 180 | <b>1.</b> 8-10<br><b>2.</b> 10-15 |
| Polenta or maize semolina, 125 g + 500 ml water | Covered cookware     | 1              |  | -                               | 600                            | 6-8 <sup>1</sup>                  |

## Desserts

### Making yoghurt

1. Remove the accessories and shelves from the cooking compartment.
2. Heat 1 litre of whole milk (3.5% fat) to 90 °C on the hob and then leave it to cool down to 40 °C. It is sufficient to heat UHT milk to 40 °C.
3. Mix 150 g of chilled yoghurt into the milk.
4. Pour the mixture into small containers, e.g. cups or small jars.
5. Cover the containers with film, e.g. cling film.
6. Place the containers on the cooking compartment floor.
7. Use the recommended settings when configuring the appliance settings.
8. After making the yoghurt, leave it to cool in the refrigerator for at least 12 hours.

### Making blancmange from blancmange powder

1. Use a deep, microwave-safe receptacle.
2. Pour the blancmange powder and all of the milk and sugar into the receptacle and mix.
3. Place the receptacle onto the wire rack and slide the rack into the cooking compartment.
4. Use the recommended settings when configuring the appliance settings.

### Recommended settings for desserts and compote

| Food                                          | Accessory/cookware | Shelf position            | Type of heating                                                                     | Temperature in °C | Microwave power setting in W | Cooking time in mins |
|-----------------------------------------------|--------------------|---------------------------|-------------------------------------------------------------------------------------|-------------------|------------------------------|----------------------|
| Blancmange made from blancmange powder        | Covered cookware   | 1                         |  | -                 | 600                          | 5-8 <sup>1</sup>     |
| Yoghurt                                       | Individual moulds  | Cooking compartment floor |  | 40-45             | -                            | 8-9 hrs              |
| Microwave popcorn, 1 x 100 g bag <sup>2</sup> | Uncovered cookware | 1                         |  | -                 | 600                          | 4-6                  |

5. As soon as the milk starts to rise, stir thoroughly.
6. Repeat the process until the required consistency is achieved.

### Using the microwave mode to make popcorn

#### **WARNING – Risk of burns!**

Airtight packaging may burst when food is heated.

- ▶ Always follow the instructions on the packaging.
- ▶ Always use oven gloves to remove the dishes from the cooking compartment.

1. Use a microwave-safe, shallow ovenproof dish. Do not use porcelain or deep plates.
2. Place the popcorn bag onto the cookware in accordance with the instructions on the packaging.
3. Use the recommended settings when configuring the appliance settings.
4. The time may need to be adjusted, depending on the product and quantity in question.
5. Remove the popcorn bag after 1½ minutes and shake it to ensure that the popcorn does not burn.
6. Place the popcorn bag back into the oven and leave it to continue popping.
7. Once you can only hear popping noises once every 2-3 seconds, switch off the appliance and take the popcorn bag out of the oven.
8. Wipe the cooking compartment clean afterwards.

<sup>1</sup> Stir the food one or two times during cooking.

<sup>2</sup> Place the sealed bag on the cookware.

## 28.7 Special cooking methods and other applications

Information and recommended settings for special cooking methods and other applications, e.g. low-temperature cooking.

### Low-temperature cooking

For all prime cuts which are to be cooked rare or "à point". When slow cooking at low temperatures, meat and poultry remain juicy and tender.

#### Low-temperature cooking poultry or meat

**Note:** When using the low-temperature cooking type of heating, you cannot delay the start of the programme by setting an end time.

**Requirement:** The cooking compartment is cold.

1. Use fresh, hygienically perfect meat. Pieces without bones and without a lot of connective tissue are most suitable.
2. Place the cookware onto the wire rack at level 1 in the cooking compartment.
3. Preheat the cooking compartment and cookware for approx. 15 minutes.
4. Sear the meat on all sides on the hob at a very high heat.

#### Recommended settings for low-temperature cooking

| Food                                 | Accessory/<br>cookware | Height | Searing<br>time in<br>mins | Type of<br>heating                                                                  | Temperat-<br>ure in °C | Mi-<br>crowave<br>power<br>setting in<br>W | Cooking time<br>in mins |
|--------------------------------------|------------------------|--------|----------------------------|-------------------------------------------------------------------------------------|------------------------|--------------------------------------------|-------------------------|
| Duck breast, medium rare, 300 g each | Uncovered cookware     | 1      | 6-8                        |  | 95 <sup>1</sup>        | -                                          | 45-60                   |
| Fillet of pork, whole                | Uncovered cookware     | 1      | 4-6                        |  | 85 <sup>1</sup>        | -                                          | 45-70                   |
| Fillet of beef, 1 kg                 | Uncovered cookware     | 1      | 4-6                        |  | 85 <sup>1</sup>        | -                                          | 90-120                  |
| Veal medallions, 4 cm thick          | Uncovered cookware     | 1      | 4                          |  | 80 <sup>1</sup>        | -                                          | 40-60                   |
| Saddle of lamb, boned, 200 g each    | Uncovered cookware     | 1      | 4                          |  | 85 <sup>1</sup>        | -                                          | 30-45                   |

### Air Fry

Cook food with Air Fry until crispy and with little fat. Air Fry is particularly suitable for meals that are normally fried in oil.

#### Cooking tips for Air Fry

Observe this information when cooking food with Air Fry.

- Only one level can be used when cooking with Air Fry.
- You can achieve the crispiest results using the enamelled Air Fry tray. The perforated surface enables extremely good air circulation around the food. If the Air Fry tray is not included with the appliance as standard, you can obtain the Air Fry tray as an optional accessory.

5. Immediately place the meat into the pre-warmed cookware in the cooking compartment.

To ensure that the temperature in the cooking compartment remains constant, keep the cooking compartment door closed during low-temperature cooking.

#### Tips for low-temperature cooking

Here you will find tips for achieving good results when low-temperature cooking food.

| Issue                                                                  | Tip                                                                                                                                                                                                                                                                                  |
|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You want to cook a duck breast at a low temperature.                   | <ul style="list-style-type: none"> <li>■ Place the cold duck breast into a pan.</li> <li>■ Sear the skin side first.</li> <li>■ Cook the duck breast at low temperature.</li> <li>■ After low-temperature cooking, grill the duck breast for 3 to 5 minutes until crispy.</li> </ul> |
| You want to serve your low-temperature cooked meat as hot as possible. | <ul style="list-style-type: none"> <li>■ Preheat the serving plate.</li> <li>■ Make sure that the accompanying sauces are very hot when you serve them.</li> </ul>                                                                                                                   |

- Do not preheat the oven.
- Do not use greaseproof paper. The air must circulate in the cooking compartment.
- Do not defrost frozen food.
- Cover the Air Fry tray or the universal pan evenly with the food. If possible, only distribute the food on the accessory in a single layer.
- Insert the accessory into the cooking compartment at level 2. If you use the Air Fry tray, you can insert an empty universal pan at level 1 to protect against dirt.
- Turn the food halfway through cooking. If you are cooking larger quantities, turn the food twice.

**Tip:** Do not season the food until after you have cooked it. This makes the food crispier.

<sup>1</sup> Preheat the appliance.

Breaded vegetables are also suitable for cooking with Air Fry. To save fat, use a sprayer to spray the coating with oil. This forms a crispy crust with little fat.

### Recommended settings for Air Fry

| Food                             | Accessory/cook-ware           | Shelf po-sition | Type of heating                                                                     | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|----------------------------------|-------------------------------|-----------------|-------------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Sponge cake, simple              | Ring-shaped tin or Loaf tin   | 1               |    | 160-180           | 90                            | 30-40                |
| Chips                            | Air Fry tray or Universal pan | 2               |    | 190-210           | -                             | 20-25                |
| Potato pockets, filled           | Air Fry tray or Universal pan | 2               |    | 190-210           | -                             | 20-25                |
| Potato rösti, frozen             | Air Fry tray or Universal pan | 2               |    | 190-210           | -                             | 20-25                |
| Chicken goujons, nuggets, frozen | Air Fry tray or Universal pan | 2               |    | 190-210           | -                             | 10-15                |
| Fish fingers                     | Air Fry tray or Universal pan | 2               |    | 190-210           | -                             | 15-20                |
| Broccoli, breaded                | Air Fry tray or Universal pan | 2               |  | 190-210           | -                             | 15-25                |

### Defrosting

You can defrost frozen food in your appliance.

#### Tips for defrosting food

- You can use the "microwave" mode to defrost frozen fruit, vegetables, poultry, meat, fish or baked goods.
- Remove frozen food from its packaging before you defrost it.
- Use heat-resistant, microwave-safe cookware.
- The recommended settings are for freezer-temperature food (-18 °C).

- Defrosting works best if you divide it into more than one step. The steps are listed one after the other in the recommended settings tables.
- Stir or turn the food 1-2 times during defrosting. Turn large items several times. Split the food into smaller pieces as it defrosts. Remove pieces that have already defrosted from the cooking compartment.
- Once the food has defrosted, switch off the appliance and leave the food in the appliance for another 10 to 30 minutes to allow the temperature to equalise.

### Recommended settings for defrosting food

| Food                                    | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                     | Temperature in °C | Microwave power set-ting in W | Cooking time in mins                         |
|-----------------------------------------|---------------------|-----------------|-------------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------------------------------|
| Bread, 500 g                            | Uncovered cook-ware | 1               |  | -                 | <b>1.</b> 180<br><b>2.</b> 90 | <b>1.</b> 3<br><b>2.</b> 10-15               |
| Bread rolls                             | Wire rack           | 1               |  | 140-160           | 90                            | 2-4                                          |
| Cake, moist, 500 g                      | Uncovered cook-ware | 1               |  | -                 | <b>1.</b> 180<br><b>2.</b> 90 | <b>1.</b> 2<br><b>2.</b> 10-15               |
| Cake, dry, 750 g                        | Uncovered cook-ware | 1               |  | -                 | 90                            | 10-15                                        |
| Chicken, whole, 1.3 kg                  | Uncovered cook-ware | 1               |  | -                 | <b>1.</b> 180<br><b>2.</b> 90 | <b>1.</b> 10<br><b>2.</b> 10-20 <sup>1</sup> |
| Meat, whole, e.g. joint, raw meat, 1 kg | Uncovered cook-ware | 1               |  | -                 | <b>1.</b> 180<br><b>2.</b> 90 | <b>1.</b> 15<br><b>2.</b> 20-30 <sup>1</sup> |

<sup>1</sup> Turn the dish halfway through the cooking time.

| Food                      | Accessory/cook-ware | Shelf po-sition | Type of heating | Temperature in °C | Microwave power set-ting in W | Cooking time in mins          |
|---------------------------|---------------------|-----------------|-----------------|-------------------|-------------------------------|-------------------------------|
| Minced meat, mixed, 500 g | Uncovered cook-ware | 1               | ≡               | -                 | 1. 180<br>2. 90               | 1. 5<br>2. 10-15 <sup>1</sup> |
| Fish, whole, 300 g        | Uncovered cook-ware | 1               | ≡               | -                 | 1. 180<br>2. 90               | 1. 3<br>2. 10-15 <sup>1</sup> |
| Berries, 300 g            | Uncovered cook-ware | 1               | ≡               | -                 | 180                           | 5-10                          |
| Butter, defrosting, 125 g | Uncovered cook-ware | 1               | ≡               | -                 | 90                            | 7-9                           |

### Warming up food using the microwave mode

You can use the microwave mode to warm up food or to defrost and warm up food in a single step.

#### Tips for warming up food using the microwave mode


- Use microwave-safe cookware with a lid.
- Turn or stir the food 2-3 times during warming.
- After warming up the food, leave it to rest for 1-2 minutes.
- The food transfers heat to the cookware. The cookware can become very hot.
- Make sure that you do the following when you are warming up baby food:
  - Place bottles on the wire rack without the teat or lid.
  - Shake or stir the baby food well after warming it up.
  - Always check the temperature of the baby food.
- Wipe the cooking compartment dry after using it to warm up food.

#### ⚠ WARNING – Risk of scalding!

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches the boiling

temperature without the usual steam bubbles rising to the surface. Exercise caution even when only gently shaking the container. The hot liquid may suddenly boil over and splatter.

- ▶ Always place a spoon in the container when heating liquids. This prevents delayed boiling.

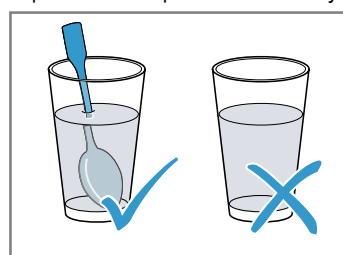

#### ATTENTION

Metal touching the wall of the cooking compartment will cause sparks, which may damage the appliance or the inner door pane.

- ▶ Metal (e.g. a spoon in a glass) must be kept at least 2 cm from the cooking compartment walls and the inside of the door.

### Recommended settings for heating and reheating

| Food                                                        | Accessory/cook-ware | Shelf po-sition | Type of heating | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|-------------------------------------------------------------|---------------------|-----------------|-----------------|-------------------|-------------------------------|----------------------|
| Drinks, warming up, 200 ml                                  | Uncovered cook-ware | 1               | ≡               | -                 | Max.                          | 1-3 <sup>2</sup>     |
| Baby food, heating up, e.g. baby bottle, 150 ml             | Uncovered cook-ware | 1               | ≡               | -                 | 360                           | 1-3 <sup>2</sup>     |
| Vegetables, chilled, 250 g                                  | Covered cookware    | 1               | ≡               | -                 | 600                           | 3-8                  |
| Vegetables, frozen, loose, 250 g                            | Covered cookware    | 1               | ≡               | -                 | 600                           | 8-12                 |
| Plated meal, chilled, 1 portion                             | Covered cookware    | 1               | ≡               | -                 | 600                           | 4-8                  |
| Soup, stew, chilled, 400 ml                                 | Covered cookware    | 1               | ≡               | -                 | 600                           | 5-7                  |
| Side dishes, e.g. pasta, dumplings, potatoes, rice, chilled | Covered cookware    | 1               | ≡               | -                 | 600                           | 5-10                 |
| Plated meal, frozen, 1 portion                              | Covered cookware    | 1               | ≡               | -                 | 600                           | 11-15                |

<sup>1</sup> Turn the dish halfway through the cooking time.

<sup>2</sup> Stir the food well.

| Food                                                               | Accessory/cook-ware | Shelf po-sition | Type of heating | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|--------------------------------------------------------------------|---------------------|-----------------|-----------------|-------------------|-------------------------------|----------------------|
| Soup, stew, frozen, 200 ml                                         | Covered cookware    | 1               | ≡               | -                 | 600                           | 4-6 <sup>1</sup>     |
| Side dishes, 500 g, e.g. pasta, dumplings, pota-toes, rice, frozen | Covered cookware    | 1               | ≡               | -                 | 600                           | 7-10 <sup>1</sup>    |
| Bakes, 400 g, e.g. lasagne, potato gratin, frozen                  | Uncovered cook-ware | 1               | ☐*              | 180-200           | 180                           | 20-25                |

## Keeping food warm

### Tips for keeping food warm

- Using the "Keep warm" heating function prevents condensation from forming. You will not have to wipe down the cooking compartment.
- To prevent the food from drying out, you can cover it.
- Do not keep food warming for longer than 2 hours.
- Be aware that some types of food will actually continue cooking when you are keeping them warm in the oven.

### Recommended settings for baking on one level

| Food                 | Accessory/cook-ware              | Shelf po-sition | Type of heating | Temperature in °C    | Microwave power set-ting in W | Cooking time in mins |
|----------------------|----------------------------------|-----------------|-----------------|----------------------|-------------------------------|----------------------|
| Victoria sponge cake | x 2<br>20 cm diameter cake tin   | 1               | ☐*              | 160-170 <sup>2</sup> | -                             | 20-30                |
| Rich fruit cake      | Deep, 23 cm dia-meter tin        | 1               | ☐*              | 130-150              | -                             | 150-180              |
| Rich fruit cake      | Deep, 23 cm dia-meter tin        | 1               | ☐*              | 130-140              | 90                            | 80-90                |
| Rich fruit cake      | Deep, 23 cm dia-meter tin        | 1               | ☐*              | 140-160              | -                             | 120-180              |
| Fruit pie            | 20 cm diameter plate or Pie tin  | 1               | ☐*              | 180-190              | -                             | 45-50                |
| Fruit pie            | 20 cm diameter plate or Pie tin  | 1               | ☐*              | 170-190              | -                             | 60-75                |
| Bread or white bread | Loaf tin, 1 x 900 g or 2 x 450 g | 1               | ☐*              | 200-210 <sup>2</sup> | -                             | 20-30                |
| Bread or white bread | Loaf tin, 1 x 900 g or 2 x 450 g | 1               | ☐*              | 190-200              | -                             | 45-55                |
| Scones               | Baking sheet on wire rack        | 1               | ☐*              | 180-190 <sup>2</sup> | -                             | 10-14                |
| Biscuits             | Baking sheet on wire rack        | 2               | ☐*              | 140-160 <sup>2</sup> | -                             | 10-25                |
| Small cakes          | 12-cup-tin                       | 1               | ☐               | 150-170              | -                             | 20-30                |
| Pavlova              | Baking tray                      | 2               | ☐*              | 90-100 <sup>2</sup>  | -                             | 120-180              |
| Yorkshire pudding    | 12-cup-tin                       | 1               | ☐*              | 200-220 <sup>2</sup> | -                             | 15-25                |

<sup>1</sup> Stir the food well.

<sup>2</sup> Preheat the appliance.

## 28.8 Meals and tips for cooking for Great Britain

Recommended settings for meals with British cooking habits.

Also follow the instructions in the individual sections. This section contains only special additional information relating to British meals and cooking habits.

### Baking

## Recommended settings for baking on several levels

| Food               | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                   | Temperature in °C    | Microwave power set-ting in W | Cooking time in mins |
|--------------------|---------------------|-----------------|-----------------------------------------------------------------------------------|----------------------|-------------------------------|----------------------|
| Biscuits, 2 levels | x 2<br>Baking tray  | 3+1             |  | 140-160 <sup>1</sup> | -                             | 15-30                |

## Grilling

### Recommended settings for meat

| Food                              | Accessories/cook-ware | Shelf po-sition | Type of heating                                                                   | Temperature in °C/grill setting | Microwave power set-ting in W | Cooking time in mins          |
|-----------------------------------|-----------------------|-----------------|-----------------------------------------------------------------------------------|---------------------------------|-------------------------------|-------------------------------|
| Pork, Bacon rashers               | Wire rack             | 2               |  | 3 <sup>2</sup>                  | -                             | 1. 4-5<br>2. 3-4 <sup>3</sup> |
| Pork, Sausages, thick-ness 2-4 cm | Wire rack             | 2               |  | 3 <sup>4</sup>                  | -                             | 10-15 <sup>5</sup>            |
| Pork, Belly                       | Uncovered cook-ware   | 1               |  | 200-220                         | -                             | 30+25                         |
| Pork, Gammon joint                | Uncovered cook-ware   | 2               |  | 180-200                         | -                             | 30+25                         |

### Recommended settings for poultry

| Food                 | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                     | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|----------------------|---------------------|-----------------|-------------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Chicken, whole       | Uncovered cook-ware | 1               |  | 200-220           | -                             | 25+15                |
| Chicken, whole, 1 kg | Covered cookware    | 1               |  | 230-250           | 360                           | 25-35                |

## Roasting and braising

### Cooking tips for roasting and braising

Follow this information when frying or braising poultry or meat.

Calculating the cooking time, e.g. 20+35:

- To calculate the cooking time, assume 20 minutes per 500 g of meat. Then add an extra 35 minutes to that figure.

- For 1.5 kg, the cooking time would therefore be 95 minutes.

Cooking time range, e.g. 10-15:

- Your food will be ready within the specified range of time (in minutes).

### Recommended settings for meat

| Food                     | Accessories/cook-ware | Shelf po-sition | Type of heating                                                                     | Temperature in °C/grill setting | Microwave power set-ting in W | Cooking time in mins |
|--------------------------|-----------------------|-----------------|-------------------------------------------------------------------------------------|---------------------------------|-------------------------------|----------------------|
| Beef, Top side, Top rump | Uncovered cook-ware   | 1               |  | 160-170                         | -                             | 30+25                |
| Lamb, Leg, bone-in       | Uncovered cook-ware   | 1               |  | 160-170                         | -                             | 25+25                |
| Pork, Belly              | Uncovered cook-ware   | 1               |  | 170-180                         | -                             | 30+25                |

<sup>1</sup> Preheat the appliance.

<sup>2</sup> Preheat the appliance for 5 minutes.

<sup>3</sup> Turn the food occasionally.

<sup>4</sup> Preheat the appliance for 3 minutes.

<sup>5</sup> Turn the food several times.

**Recommended settings for poultry**

| Food                  | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                   | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|-----------------------|---------------------|-----------------|-----------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Chicken, whole        | Uncovered cook-ware | 1               |  | 170-180           | -                             | 25+15                |
| Turkey, crown         | Uncovered cook-ware | 1               |  | 150-160           | -                             | 20+15 <sup>1</sup>   |
| Turkey, whole, 4-8 kg | Universal pan       | 1               |  | 150-160           | -                             | 12+12 <sup>2</sup>   |

**Recommended settings for meat dishes**

| Food                           | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                   | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|--------------------------------|---------------------|-----------------|-----------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Meat loaf, 1 kg, + 50 ml water | Uncovered cook-ware | 1               |  | 170-190           | 360                           | 30-40                |

**28.9 Test dishes**

The information in this section is provided for test institutes to facilitate testing of the appliance in accordance with EN 60350-1 or IEC 60350-1 and EN 60705 or IEC 60705.

**Baking**

- The setting values apply to food that is placed into a cold cooking compartment.
- Take note of the information on preheating in the recommended settings tables. These setting values apply without rapid heat-up.

- For baking, use the lower of the temperatures indicated first.
- Items that are placed in the appliance on baking trays or in baking tins/dishes at the same time will not necessarily be ready at the same time.
- Shelf positions when baking on 2 levels:
  - Universal pan: Shelf position 3
  - Baking tray: Shelf position 1
- Hot water sponge cake
  - When baking on 2 levels, place the springform tins at diagonally opposite corners of the wire racks.
  - As an alternative to a pan support, you can also use the Air Fry baking tray offered by us.

**Recommended settings for baking**

| Food                  | Accessory/cook-ware                 | Shelf po-sition | Type of heating                                                                     | Temperature in °C    | Microwave power set-ting in W | Cooking time in mins |
|-----------------------|-------------------------------------|-----------------|-------------------------------------------------------------------------------------|----------------------|-------------------------------|----------------------|
| Shortbread            | Baking tray                         | 1               |  | 150-160 <sup>3</sup> | -                             | 20-30                |
| Shortbread            | Baking tray                         | 1               |  | 140-150 <sup>3</sup> | -                             | 25-35                |
| Small cakes           | Baking tray                         | 1               |  | 160 <sup>3</sup>     | -                             | 25-35                |
| Small cakes           | Baking tray                         | 1               |  | 150 <sup>3</sup>     | -                             | 20-30                |
| Small cakes, 2 levels | Universal pan<br>+<br>Baking tray   | 3+1             |  | 140 <sup>3</sup>     | -                             | 30-40                |
| Hot water sponge cake | Springform cake tin, diameter 26 cm | 1               |  | 160-170 <sup>4</sup> | -                             | 25-35                |
| Hot water sponge cake | Springform cake tin, diameter 26 cm | 1               |  | 160-170 <sup>4</sup> | -                             | 30-45                |

<sup>1</sup> Do not turn the food.

<sup>2</sup> Turn the food after approx. one hour.

<sup>3</sup> Preheat the appliance for five minutes. Do not use the rapid heating function.

<sup>4</sup> Preheat the appliance. Do not use the rapid heating function.

## Grilling

### Recommended settings for grilling

| Food           | Accessories/cook-ware | Shelf po-sition | Type of heating                                                                   | Temperature in °C/grill setting | Microwave power set-ting in W | Cooking time in mins |
|----------------|-----------------------|-----------------|-----------------------------------------------------------------------------------|---------------------------------|-------------------------------|----------------------|
| Toasting bread | Wire rack             | 3               |  | 3 <sup>1</sup>                  | -                             | 3-6                  |

## Microwave cooking

- To test the microwave mode on its own, switch off the drying function in the basic settings. → *Page 20*

### Recommended settings for defrosting food using the microwave

| Food | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                   | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|------|---------------------|-----------------|-----------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Meat | Uncovered cook-ware | 1               |  | -                 | 1. 180<br>2. 90               | 1. 5<br>2. 10-15     |

### Recommended settings for cooking food using the microwave

| Food      | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                     | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|-----------|---------------------|-----------------|-------------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Custard   | Uncovered cook-ware | 1               |    | -                 | 1. 360<br>2. 180              | 1. 20<br>2. 20-25    |
| Sponge    | Uncovered cook-ware | 1               |   | -                 | 600                           | 7-9                  |
| Meat loaf | Uncovered cook-ware | 1               |  | -                 | 600                           | 22-27                |


### Recommended settings for cooking in combination with the microwave

| Food            | Accessory/cook-ware | Shelf po-sition | Type of heating                                                                     | Temperature in °C | Microwave power set-ting in W | Cooking time in mins |
|-----------------|---------------------|-----------------|-------------------------------------------------------------------------------------|-------------------|-------------------------------|----------------------|
| Potato gratin   | Uncovered cook-ware | 1               |  | 150-170           | 360                           | 25-30                |
| Cakes           | Uncovered cook-ware | 1               |  | 190-210           | 180                           | 12-18                |
| Chicken, halved | Uncovered cook-ware | 1               |  | 180-200           | 360                           | 25-35                |

<sup>1</sup> Do not preheat the appliance.

## 29 Installation instructions

Observe this information when installing the appliance.

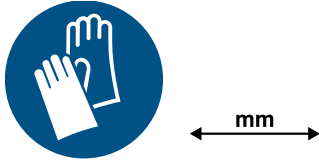


### 29.1 General installation instructions

Follow these instructions before you start installing the appliance.

- There should be a gap of at least 35 mm between the wall and the cabinet base as well as the rear panel of the cabinet situated above.
- Ventilation slots and intake openings must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for damages incurred as a result of incorrect installation.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- Proceed in accordance with the installation sheets for installing accessories.
- Fitted units must be heat-resistant up to 95 °C, and adjacent unit fronts up to 70 °C.
- Do not install the appliance behind a decorative door or the door of a kitchen unit. There is a risk of overheating.
- Cut-out work on the units should be carried out before installing the appliance. Remove any shavings. Otherwise, the correct operation of electrical components may be adversely affected.
- Position the appliance on a horizontal surface.
- The mains socket for the appliance must either be located in the hatched area  or outside of the area where the appliance is installed.

- 1 Any unsecured units must be secured to the
2. wall using a standard bracket .

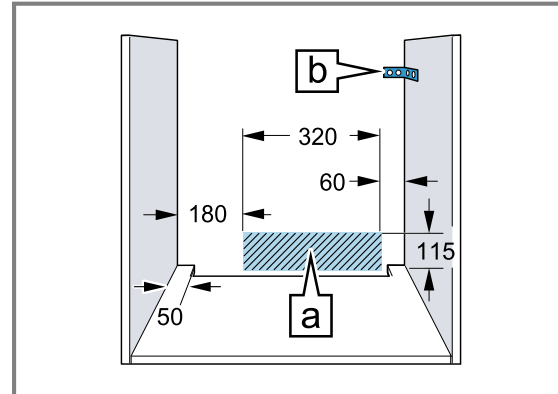

- Wear protective gloves so that you do not cut yourself. Parts that are accessible during installation may have sharp edges.
- Dimensions of the figures in mm.

#### **WARNING – Risk of electric shock!**

Once the appliance has been installed, the openings in the back panel of the appliance must not be accessible to children, not even through the drawers and kitchen cabinets underneath. This must be ensured through the installation. In the case of an island unit, a closed back panel is required.

#### **WARNING – Risk of fire!**

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.


#### **ATTENTION**

Carrying the appliance by the door handle could break it. The door handle cannot support the weight of the appliance.

- ▶ Do not carry or hold the appliance by the door handle.


## 29.2 Appliance dimensions

You will find the dimensions of the appliance here

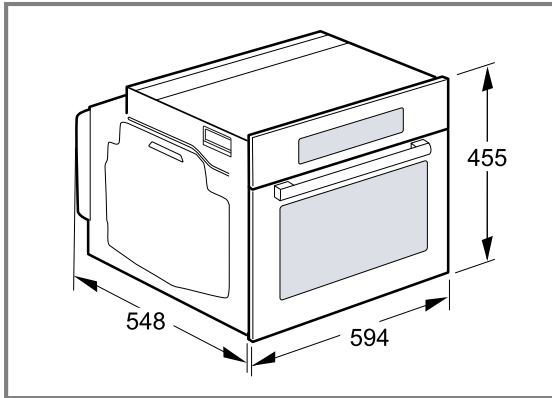

## 29.3 Installation below a worktop


Observe the installation dimensions and the installation instructions when installing below a worktop.

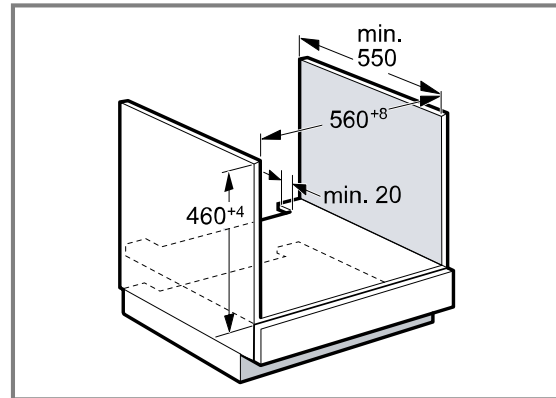

- To ventilate the appliance, the intermediate floor must have a ventilation cut-out.
- The worktop must be secured to the fitted unit.
- Observe any available installation instructions for the hob.
- Observe different national installation instructions for the hob.

## 29.4 Installation underneath a hob

If the appliance is installed under a hob, the following minimum dimensions must be adhered to (including substructure, if applicable).

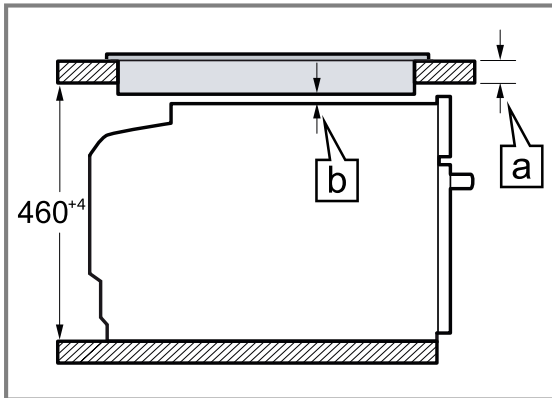


The minimum worktop thickness **a** is based on the required minimum clearance **b**.

| Hob type                   | a raised in mm | a flush in mm | b in mm        |
|----------------------------|----------------|---------------|----------------|
| Induction hob              | 42             | 43            | 5              |
| Full-surface induction hob | 52             | 53            | 5              |
| Gas hob                    | 32             | 43            | 5 <sup>1</sup> |
| Electric hob               | 32             | 35            | 2              |


<sup>1</sup> Observe different national installation instructions for the hob.

## 29.5 Installation in a tall unit

Observe the installation dimensions and the installation instructions when installing in a tall unit.

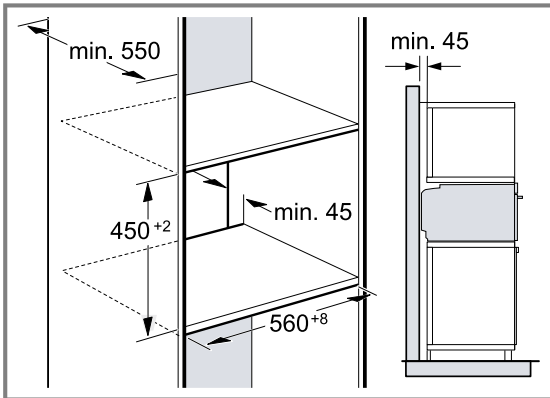


- To ventilate the appliance, the intermediate floors must have a ventilation cut-out.
- In order to ensure sufficient ventilation of the appliance, there must be a ventilation opening of at least 200 cm<sup>2</sup> in the base area. To do this, trim the base panel or fit a ventilation grille. Ensure that the air exchange is guaranteed in accordance with the diagram.

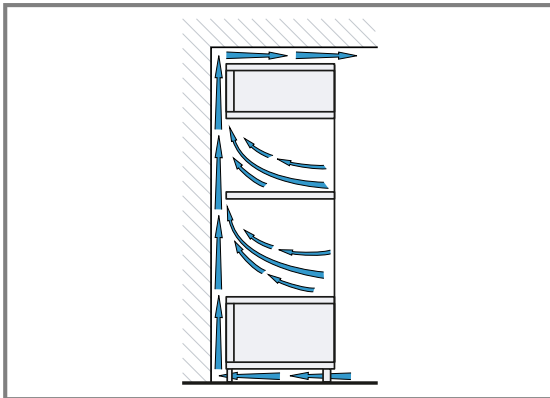


- Only fit the appliance up to a height which allows accessories to be easily removed.

## 29.6 Installing two appliances on top of each other

Your appliance can also be installed above or below another appliance. Observe the installation dimensions and the installation instructions when installing appliances on top of each other.

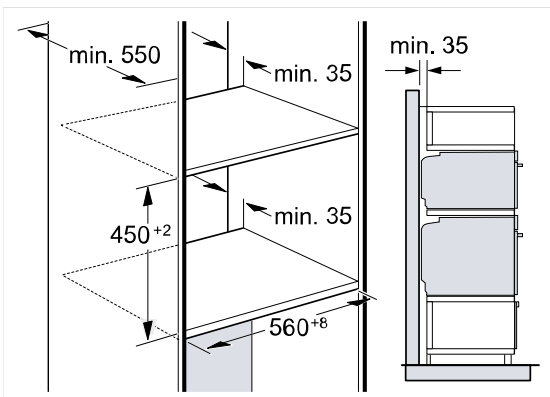


- To ventilate the appliances, the intermediate floor must have a ventilation cut-out.
- To ensure sufficient ventilation of the two appliances, there must be a ventilation opening of at least 200 cm<sup>2</sup> in the base area. To do this, trim the base panel or fit a ventilation grille.
- Ensure that air exchange is guaranteed in accordance with the diagram.

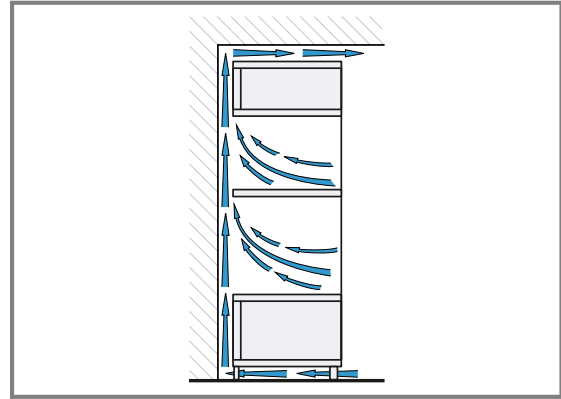

- Only fit appliances up to a height that allows accessories to be easily removed.

## 29.7 Corner installation

Observe the installation dimensions and the installation instructions when installing in a corner.

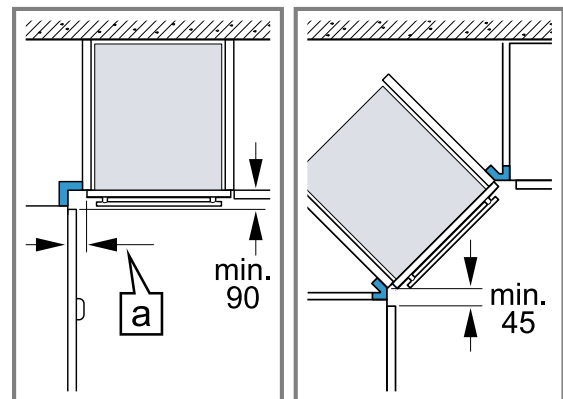


- To ensure that the appliance door can be opened, you must take the minimum dimensions into consideration when installing in a corner. The dimension  $\boxed{a}$  is dependent on the thickness of the unit front and the handle.

## 29.8 Electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

- The appliance corresponds to protection class I and must only be operated with a protective earth connection.
- The fuse protection must correspond to the power rating specified on the appliance's rating plate and to the local regulations.
- The appliance must be disconnected from the power supply whenever installation work is being carried out.
- The appliance must only be connected using the power cable provided.

- The power cable must be plugged in at the rear of the appliance until you hear a clicking sound. A 3 m power cable can be obtained from customer service.

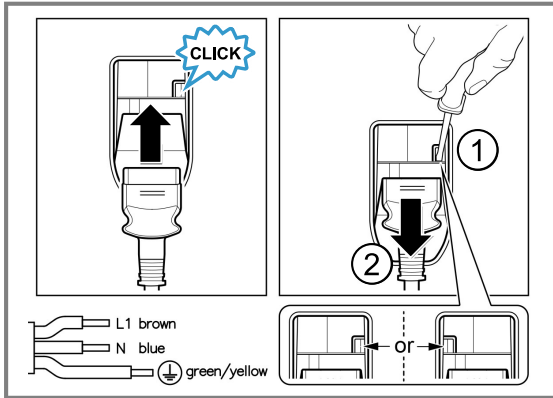

- The power cable must only be replaced with a cable from the original manufacturer. This is available from after-sales service.
- Contact protection must be guaranteed by the installation.
- If the display on the appliance remains dark, it has not been connected correctly. Disconnect the appliance from the mains and check the connection.

### Electrically connect the appliance with the protective contact plug

**Note:** The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ Insert the plug into the protective contact socket. When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.

### Electrically connecting an appliance without a protective contact plug


**Note:** Only licensed specialists may connect the appliance. Damage caused by incorrect connection is not covered under the warranty.

An isolating switch must be integrated into the permanent electrical installation according to the installation regulations.


1. Identify the phase and neutral conductors in the socket.  
The appliance may be damaged if it is not connected correctly.
2. Connect the hob in accordance with the connection diagram.  
See the rating plate for the voltage.
3. Connect the wires of the mains power cable according to the colour coding:
  - ▶ Green/yellow = Protective conductor ⊕
  - ▶ Blue = Neutral conductor
  - ▶ Brown = Phase (external conductor)

## 29.9 Installing the appliance

1. Slide the appliance in fully and centre it.

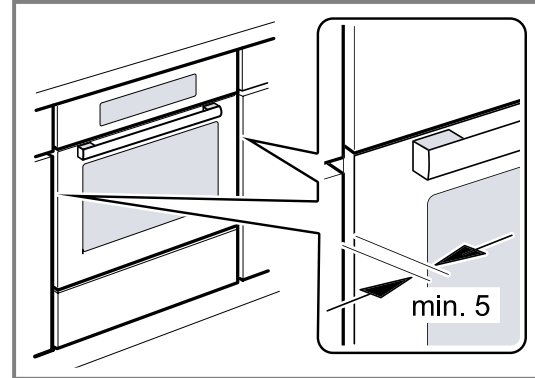


2. Screw the appliance into place.

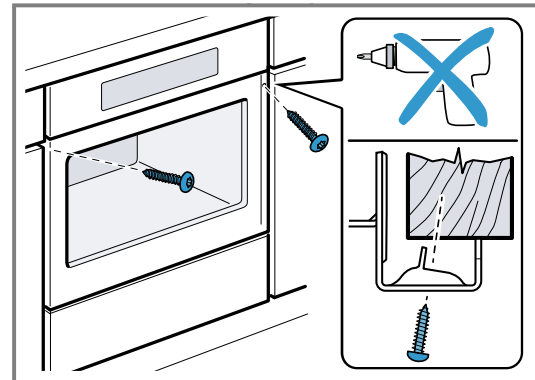

**Note:** The gap between the worktop and the appliance must not be closed by additional battens. Thermal insulation strips must not be fitted to the side panels of the surround unit.


### 29.10 For handleless kitchens with vertical bar handle strips:

1. Attach a suitable filling piece on both sides in order to cover any sharp edges and to guarantee safe installation.

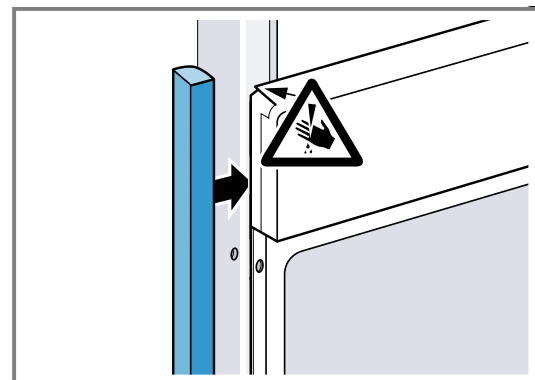


2. Secure the filling piece to the unit.

3. Pre-drill the filling piece and the unit to establish a screw connection.

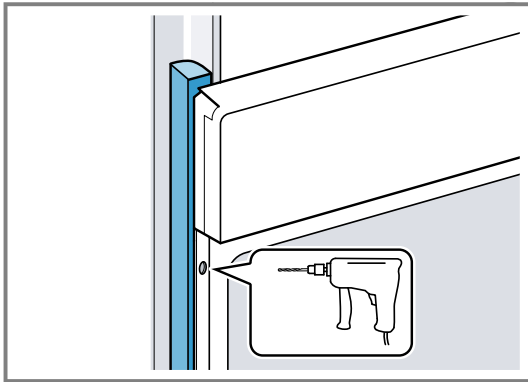

4. Secure the appliance using a suitable screw.

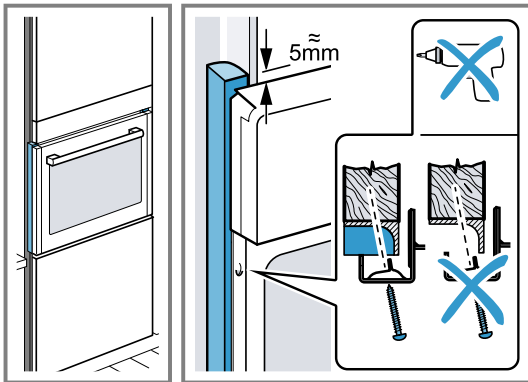

## 29.11 Removing the appliance

1. Disconnect the appliance from the power supply.
2. Undo the fastening screws.
3. Lift the appliance slightly and pull it out completely.



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the width of the page. The lines are evenly spaced and cover the majority of the page area.



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the width of the page. The lines are evenly spaced and cover the majority of the page area.



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the width of the page. The lines are evenly spaced and cover the majority of the page area.



## Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:  
**[www.bosch-home.com/welcome](http://www.bosch-home.com/welcome)**

**BOSCH**  
HOME APPLIANCES  
**SERVICE**

## Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems  
or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

**[www.bosch-home.com/service](http://www.bosch-home.com/service)**

Contact data of all countries are listed in the attached service directory.

### **BSH Hausgeräte GmbH**

Carl-Wery-Straße 34  
81739 München, GERMANY  
[www.bosch-home.com](http://www.bosch-home.com)

A Bosch Company

Valid within Great Britain:  
Imported to Great Britain by  
BSH Home Appliances Ltd.  
Grand Union House  
Old Wolverton Road  
Wolverton, Milton Keynes  
MK12 5PT  
United Kingdom



**9001682757** (050409) REG25

en