

SIEMENS

WQ56C8C10W

Tumble dryer



EN User manual and installation instructions



Further information and explanations are available online:



Table of contents

1 Safety	4	8 Programmes	27
1.1 General information	4	8.1 Automatic programmes	27
1.2 Intended use	4	8.2 Timed programmes	29
1.3 Restriction on user group	4	9 Accessories	32
1.4 Safe installation	5	10 Laundry	33
1.5 Safe use	7	10.1 Preparing the laundry	33
1.6 Safe cleaning and maintenance	9	11 Basic operation	33
2 Preventing material damage	11	11.1 Switching on the appliance ...	33
3 Environmental protection and saving energy	11	11.2 Setting a programme	33
3.1 Disposing of packaging	11	11.3 Saving programme settings ..	33
3.2 Saving energy	11	11.4 Opening the door	34
3.3 Energy saving mode	12	11.5 Loading laundry	34
4 Installation and connection	12	11.6 Starting the programme	34
4.1 Unpacking the appliance	12	11.7 Adding laundry	34
4.2 Contents of package	12	11.8 Cancelling the programme ...	34
4.3 Requirements for the installation location	12	11.9 Unloading the laundry	34
4.4 Installation types	14	11.10 Put the appliance into standby mode	35
4.5 Water outlet hose	15	11.11 Fluff filter	35
4.6 Aligning the appliance	17	11.12 Condensation container	36
4.7 Connecting the appliance to the electricity supply	17	12 Dryness level	37
5 Familiarising yourself with your appliance	18	12.1 Changing the dryness level ...	38
5.1 Appliance	18	12.2 Adjusting the dryness level ...	38
5.2 Control panel	19	13 Childproof lock	38
5.3 Operating logic	19	13.1 Activating the childproof lock	38
6 Display	21	13.2 Deactivating the childproof lock	38
6.1 Programme menu	21	14 Allergen filter	39
6.2 Messages on the display	21	14.1 Inserting the allergen filter	39
7 Buttons	23		

14.2 Starting a programme with the allergen filter.....	40	20 Cleaning and servicing.....	50
14.3 Cleaning and caring for the allergen filter.....	40	20.1 Base unit	50
15 Crease-removal function	41	20.2 Moisture sensor.....	52
15.1 Starting a programme with the crease-removal function..	41	20.3 Condensation container filter	52
15.2 Filling the water tank	42	21 Troubleshooting.....	54
16 Wool basket.....	42	22 Transportation, storage and disposal	59
16.1 Inserting the wool basket	42	22.1 Disposing of old appliance ...	59
16.2 Starting a programme with the wool basket	43	23 Customer Service.....	59
16.3 Examples of how to use the wool basket	44	23.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)	59
17 Home Connect	44	24 Technical data	59
17.1 Setting up the Home Connect app	45	25 Applicable standard.....	60
17.2 Setting up Home Connect....	45		
17.3 Activating Wi-Fi on the appliance	45		
17.4 Deactivating Wi-Fi on the appliance	45		
17.5 Installing the software update	46		
17.6 Resetting the appliance network settings	46		
17.7 Remote start.....	46		
17.8 Data protection.....	46		
18 Basic settings.....	47		
18.1 Overview of the basic settings.....	47		
18.2 Changing the basic settings.....	47		
19 Appliance care	47		
19.1 Preparing for appliance care	47		
19.2 Calling up the appliance care programme.....	48		
19.3 Running the basic appliance care programme	48		
19.4 Running the intensive appliance care programme	49		



1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for drying and freshening up fabrics that are washed with water and suitable for dryers.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

WARNING – Risk of electric shock!

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- ▶ When using a residual current circuit breaker, only use a type with the  mark.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ Never connect the appliance to a circuit that is regularly switched on and off by the energy supplier.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

WARNING – Risk of injury!

The heavy weight of the appliance may result in injury when lifted.

- ▶ Do not lift the appliance on your own.

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.

- ▶ Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
- ▶ Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ▶ Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- ▶ Do not install a washer-dryer stack on a platform; the appliances may tip over.

WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

CAUTION – Risk of injury!

The appliance may vibrate or move when in use.

- ▶ Place the appliance on a clean, even, solid surface.
- ▶ Align the appliance using the appliance feet and a spirit level.

If hoses and power cords have been laid incorrectly, this causes a tripping hazard.

- ▶ Lay hoses and power cords in such a way that there is no risk of tripping.

If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.

- ▶ Do not move the appliance by holding onto protruding parts.

CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ▶ Do not touch the sharp edges on the appliance.

- ▶ Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer services. → *Page 59*

An ingress of moisture can cause an electric shock.

- ▶ Only use the appliance in enclosed spaces.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

WARNING – Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

WARNING – Risk of explosion!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

- ▶ Keep the area around the appliance clean during operation.

⚠ WARNING – Risk of poisoning!

Condensation water from this appliance is not suitable for drinking and may be contaminated with fluff.

- ▶ Do not drink or reuse the condensation water from the appliance.

Detergents and care products may result in poisoning if consumed.

- ▶ If accidentally swallowed, seek medical advice.
- ▶ Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of fire!

The refrigerant R290 in this appliance is environmentally friendly yet combustible and may ignite if it comes into contact with open flames or ignition sources.

- ▶ Keep naked flames and ignition sources away from the appli-



⚠ WARNING – Risk of explosion!

If there is any residual material left in the fluff filter, this may ignite during the drying process.

- ▶ Clean the fluff filter regularly.

Highly flammable objects such as lighters or matches may ignite during the drying process.

- ▶ Remove all highly flammable objects from any pockets in your laundry before the drying process.

Unwashed laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when drying is in progress.

- ▶ Do not place laundry in this appliance to be dried if the laundry has not been washed first.
- ▶ Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- ▶ Do not use the appliance if industrial chemicals have been used to clean the laundry beforehand.

** WARNING – Risk of fire!**

If drying is interrupted early, the laundry is not cooled sufficiently and may ignite.

- ▶ Do not interrupt the drying programme early.
- ▶ If drying is interrupted early, remove the laundry immediately and spread it out.

** CAUTION – Risk of injury!**

The covering plate may break if you stand on or climb onto the appliance.

- ▶ Do not stand on or climb onto the appliance.

The appliance may tip over if you sit on or lean against the open door.

- ▶ Do not sit on or lean against the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the drum while it is still turning may cause hand injuries.

- ▶ Wait for the drum to come to a complete stop before reaching inside.

** CAUTION – Risk of burns!**

The rear panel of the appliance becomes hot during operation.

- ▶ Do not touch the rear panel of the appliance when it is hot.
- ▶ Keep children away from the rear panel of the appliance when it is hot.
- ▶ Position the appliance with the rear panel close against a wall.

1.6 Safe cleaning and maintenance

** WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.

- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

- ▶ Only use the manufacturer's original spare parts and original accessories.

WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

- ▶ Do not use cleaning agents that contain solvents.

2 Preventing material damage

ATTENTION!

The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.

- ▶ Follow the dosage recommendations from the manufacturer.

Exceeding the maximum load capacity impairs the function of the appliance.

- ▶ Observe the maximum load capacity for each programme and do not exceed it.

→ "Programmes", Page 27

The function of the appliance may be impaired if the appliance overheats.

- ▶ Keep the ventilation opening on the appliance clear during operation.
- ▶ Make sure that the area is adequately ventilated.

Light objects such as hair and fluff may be sucked in from the ventilation opening on the appliance during operation and impair the function of the appliance.

- ▶ Keep the area around the appliance clean during operation.
- ▶ Keep light objects away from the appliance.

If you operate the appliance without a fluff guard (e.g. fluff filter, fluff collector, filter mat, etc., depending on appliance specifications), or if the fluff guard is incomplete or defective, this may result in damage to the appliance.

- ▶ Do not operate the appliance without a fluff guard, or with a fluff guard that is incomplete or defective.

Foam and foam rubber may deform or melt during the drying process.

- ▶ Do not dry laundry that contains foam or foam rubber.

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Clean the appliance with nothing but water and a soft, damp cloth.
- ▶ Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

- Operate the appliance in a well-ventilated room and keep the ventilation opening on the appliance clear.
- Spin the laundry in the washing machine before drying.
- For each drying process, use the maximum load for the programs. Programmes → Page 27

en Installation and connection

- Do not exceed the programme's maximum load capacity. Programmes → *Page 27*
- After drying, clean the lint screen.
→ *"Cleaning the fluff filter", Page 35*
- Deactivate Wi-Fi on the appliance if it is not being used.
→ *"Deactivating Wi-Fi on the appliance", Page 45*

3.3 Energy saving mode

If you do not use the appliance for a brief period, it automatically switches to energy-saving mode. All displays go out and  flashes.

Energy-saving mode ends when you use the appliance again.

If you do not use the appliance for an extended period, it automatically switches to standby mode.

4 Installation and connection

4.1 Unpacking the appliance

ATTENTION!

Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.

- ▶ Remove these objects, along with all supplied accessories, from the drum before starting the appliance.

1. Remove any packaging and protective covers completely from the appliance.
→ *"Disposing of packaging", Page 11*
2. Check the appliance for visible damage.
3. Open the door. → *Page 34*

4. Remove any accessories from the drum.
5. Close the door.

4.2 Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

ATTENTION!

If the appliance is operated with incomplete or defective accessories, the appliance may not be able to operate properly, or this may result in material damage or damage to the appliance.

- ▶ Do not operate the appliance with incomplete or defective accessories.
- ▶ Replace the accessories in question before operating the appliance.
→ *"Accessories", Page 32*

The delivery consists of the following:

- Tumble dryer
- Accompanying documents
- Wool basket with insert
→ *"Wool basket", Page 42*
- Allergen filter with packaging
→ *"Allergen filter", Page 39*
- Water outlet hose with connection adapter, fixing material and elbow.
→ *"Water outlet hose", Page 15*

4.3 Requirements for the installation location

ATTENTION!


If the appliance is tilted at an angle greater than 40°, residual water may leak out of the appliance and cause material damage.

- ▶ Tilt the appliance carefully.

- ▶ Transport the appliance in an up-right position.
If residual water in the appliance freezes, this may cause damage to the appliance.
 - ▶ Do not install or operate this appliance anywhere that is liable to experience frost or outdoors.
- If the appliance is operated immediately after transportation, the refrigerant contained in the appliance may result in damage to the appliance.
- ▶ Immediately after transporting the appliance, leave it to rest for two hours before putting it into operation.

Installation location	Requirements
On the floor	Place the appliance on a clean, level and firm surface. Align the appliance → <i>Page 17</i> .

Installation location	Requirements
In a washer-dryer stack	Only use the original connection set from the dryer manufacturer when setting up this appliance in a washer-dryer stack. ■ Connection kit with pull-out worktop → <i>Page 32</i> This appliance must only be stacked on a washing machine from the same manufacturer. The depth and width of this appliance must correspond with the dimensions of the washing machine. Do not place the washer-dryer stack on a platform.
Against a wall	Do not trap the hoses and power cord between the wall and the appliance.

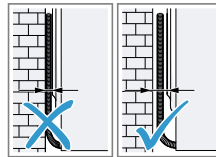

4.4 Installation types

The appliance can be set up in an open cupboard either in a washer-dryer stack or free-standing.


⚠ WARNING
Risk of injury!

If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.


- ▶ Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer . No other installation method is permitted.
- ▶ Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
- ▶ Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
- ▶ Do not install a washer-dryer stack on a platform; the appliances may tip over.

Notes


- In case of set up in a washer-dryer stack, please observe the requirements for the installation location.
→ *"Requirements for the installation location", Page 12*
- When installing in a cupboard, comply with the required minimum dimensions.
- When the appliance is installed in a cupboard, drying times may vary.

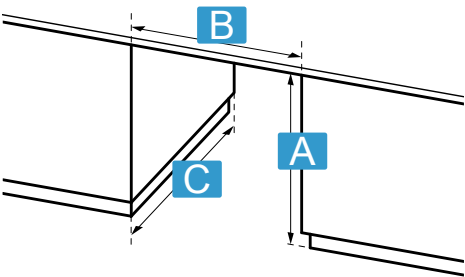

A	86 cm
B	62 cm
C	67 cm

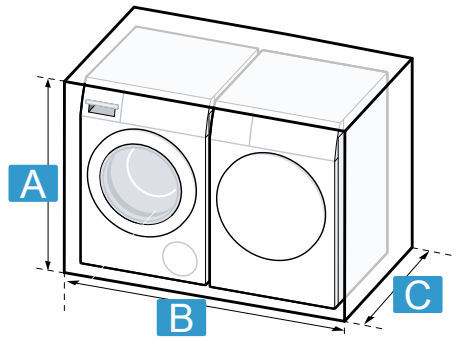

A	86 cm
B	124 cm
C	67 cm

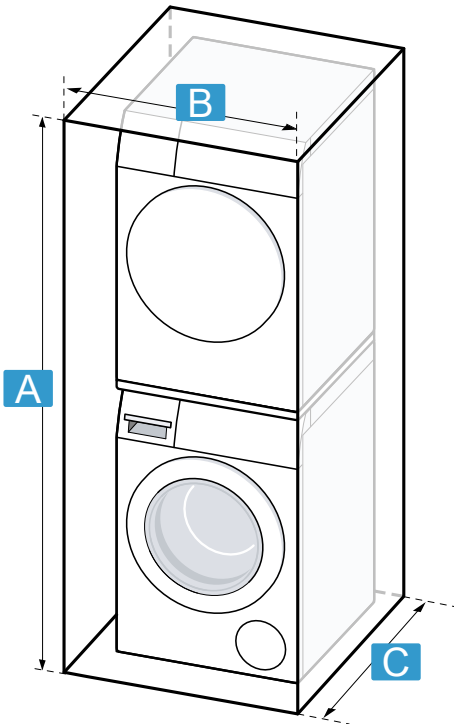

A	173 cm
----------	--------

B	62 cm
----------	-------

C	67 cm
----------	-------

4.5 Water outlet hose

Condensation that forms in the appliance as it dries the laundry is collected by default in the condensation

container. Use the water outlet hose to drain away excess condensation directly into the waste water system.

Note

- Operate this appliance using the water outlet hose provided.
→ *Page 15*
If you connect the water outlet hose, you do not have to regularly empty the condensation container.
→ *"Emptying the condensation container", Page 37*

Connecting the water outlet hose

If you do not want to regularly empty the appliance's condensation container, connect the water outlet hose.

ATTENTION!


When operating the appliance without the condensation hose or water outlet hose being connected properly, liquid may leak out of the connecting piece.

- ▶ Before operating the appliance, connect the condensation hose or water outlet hose properly to the connecting piece.

Requirements

- The appliance and the accessory have been unpacked. → *Page 12*
- The appliance is installed at the installation location. → *Page 12*


1. Pull out the condensation hose from the connecting piece.

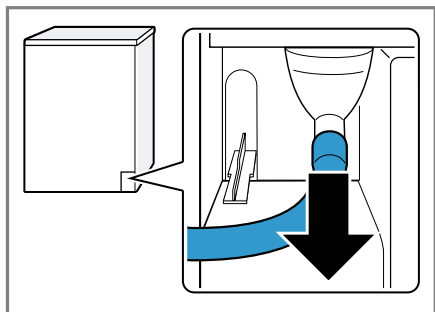


The condensation hose is connected to the connecting piece at the factory.

Note: When removing the condensation hose, liquid may leak out of the connecting piece.


2. Push the condensation hose into the holder.

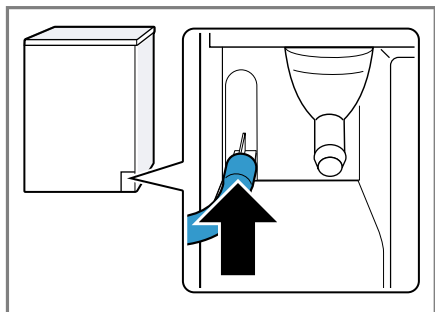

3. Push the water outlet hose as far as it will go into the connecting piece.

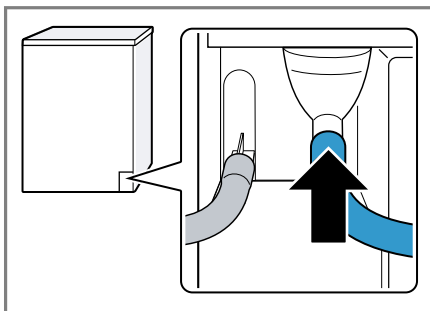

4. Empty the condensation container.
→ Page 37
5. Remove the stopper from the underside ① and insert it in the recess in the top ②.

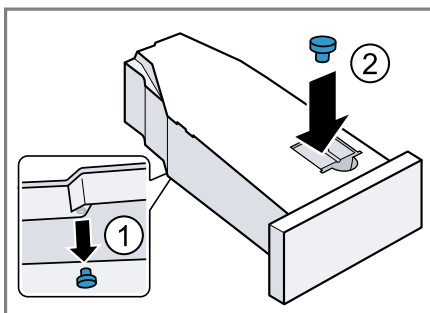

6. Insert the condensation container.
→ Page 37
7. Connect the appliance to the water drain.
→ Page 17

Tip: To collect condensation in the condensation container again (e.g. if you change where the appliance is located), carry out these steps in reverse order.


Water outlet connection types

ATTENTION!

In the event of a blocked or covered outlet, accumulated wastewater can flow back into the appliance.

- Before operating the appliance, ensure that the wastewater drains away quickly and eliminate any blockages.


Drainage into a siphon.

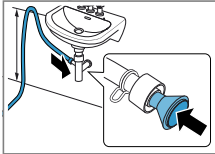

Secure the connection point with a (12-22 mm) hose clamp. Secure the water outlet hose with a hose guide at a height of at least 80 cm and no more than 100 cm.

Note: You can use the Y-distributor → *Page 32* to connect the water outlet hose of an additional appliance, such as a washing machine, to the same siphon outlet.

Drainage into a wash basin.

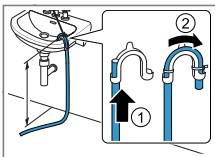


Push the water outlet hose fully through the elbow and secure it using fixing material.

Secure the elbow at a height of no more than 100 cm.

Drainage into a gully.

Push the water outlet hose fully through the el-

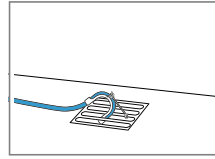


bow and secure it using fixing material. Secure the elbow to the gully.

4.6 Aligning the appliance

In order to reduce vibrations and noises, align the appliance correctly.

- To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

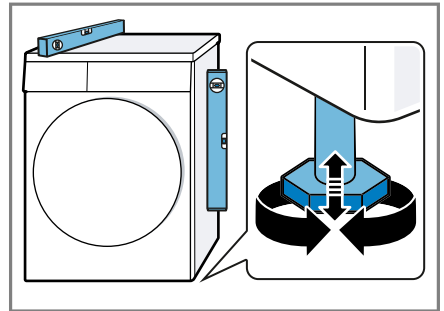

All appliance feet must stand firmly on the ground.

4.7 Connecting the appliance to the electricity supply

1. Insert the mains plug of the appliance's power cable in a socket nearby.


The connection details of the appliance can be found under Technical data → *Page 59*.

2. Check the mains plug is inserted properly.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.

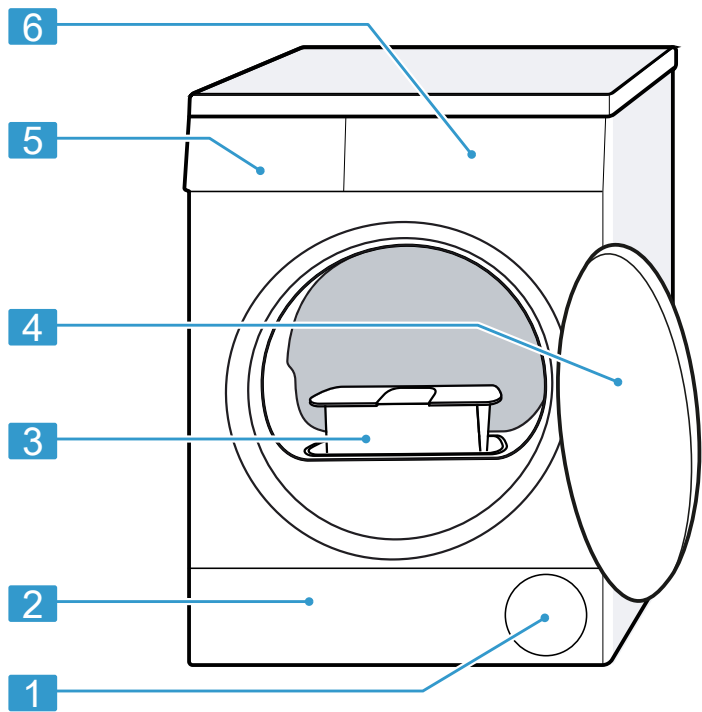


On certain models, specific details such as the colour and shape may differ from those pictured.

1	Ventilation opening	4	Door → <i>Page 34</i>
2	Maintenance flap on the base unit → <i>Page 50</i>	5	Condensation container → <i>Page 36</i>
3	Fluff filter → <i>Page 35</i>	6	Control panel → <i>Page 19</i>

5.2 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

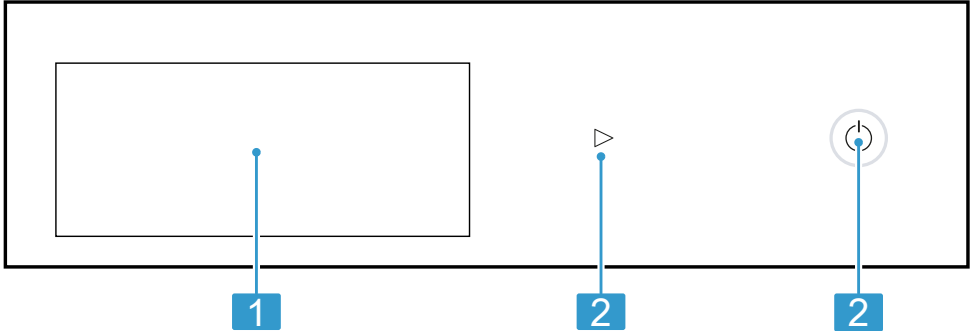

1 Buttons → *Page 23* and display → *Page 21*

2 Buttons → *Page 23*

- ▶ Press the symbol.
→ *"Symbols for navigation",
Page 19*

Symbols for navigation

The symbols shown depend on the menu or message, and cause different actions.

Symbols	Action
>	Proceed in the menu
←	Go back in the menu
×	Close the menu or message

Searching through the menu

If a menu does not show all of its entries, you can search through the menu.

5.3 Operating logic

The appliance's display responds to touch and shows buttons, menus and operating instructions. You can operate the appliance by lightly pressing on the display with your finger or swiping your finger over the display.

ATTENTION!

Pressing on the display with force may cause damage.


- ▶ Do not apply heavy pressure on the display.
- ▶ Do not press on the display using pointed or sharp objects.

Navigating in the menu

If a menu shows certain symbols, you can navigate in the menu.

en Familiarising yourself with your appliance

- ▶ Swipe your finger horizontally or vertically until the menu shows the required entry.

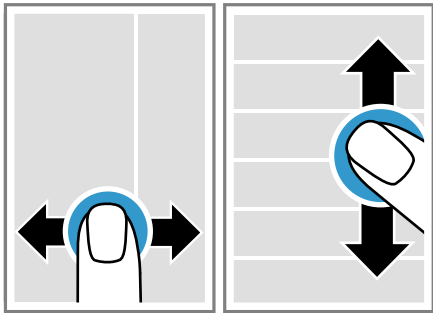

Navigating in the message

If a message shows certain symbols, you can navigate in the message.

- ▶ Press the symbol.
→ *"Symbols for navigation", Page 19*

Confirming or cancelling in the message

If the display shows a message, you can confirm or cancel an action.

- ▶ Press the button with the required action or navigate in the message.
→ *"Navigating in the message", Page 20*

If the display shows further information, press the required action.

Activating or deactivating the setting

If a menu shows certain symbols or colours for a setting, you can activate or deactivate the setting.

Requirement: The menu shows the respective setting.
→ *"Searching through the menu", Page 19*

- ▶ Press the setting.
→ *"Symbols for settings", Page 20*
→ *"Colours for settings", Page 20*

Symbols for settings

The symbols depend on the menu and show activated or deactivated settings.

Symbols	Setting
☒	Activated
☐	
☐	Deactivated
☐	

Colours for settings

The colours depend on the menu and show activated settings or settings that can be activated.


Colour	Setting
White, black	Can be activated
Blue, orange	Activated
Grey	Cannot be activated

Changing a setting value

If a menu shows a scale for a setting, you can change the setting value.

Requirement: The setting is activated.
→ *"Activating or deactivating the setting", Page 20*

- ▶ Press on the scale or wipe over the scale with your finger.
→ *"Colours for settings", Page 20*

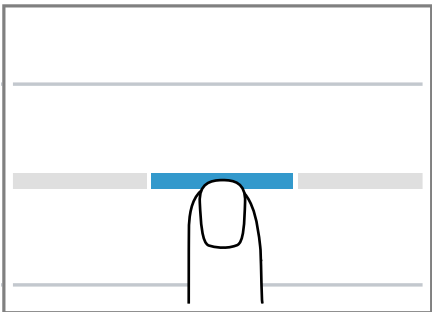

The display shows the set value.


6 Display

The display shows the current settings, options or relevant information.

6.1 Programme menu

The programme menu is the main menu of the display. In this menu, you can adjust important settings for the operation of the appliance or navigate to other menus.

Note: Observe the information about operating logic → *Page 19*.

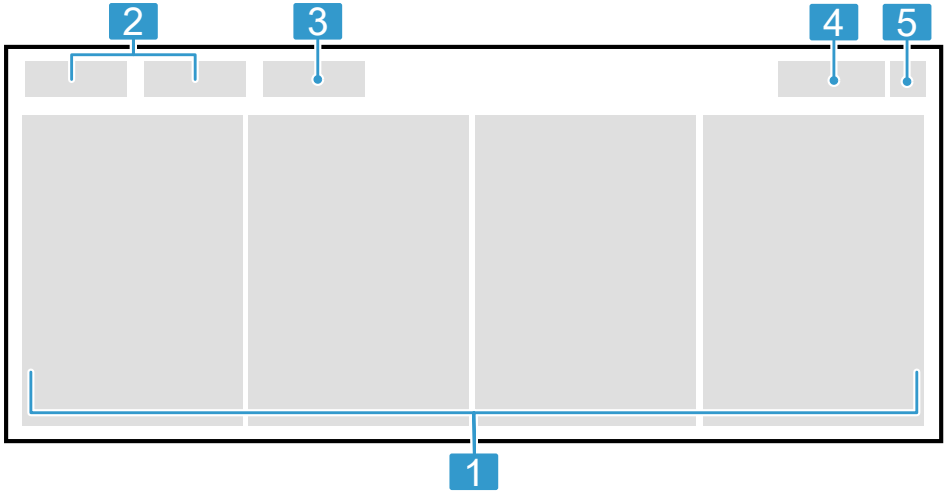

1 Programme selection
→ "Programmes", *Page 27*

2 Programme menu

3 Favourites

4 Status display

5 Appliance settings

6.2 Messages on the display

Display	Description
1h 25min ¹	Expected programme duration or programme time remaining in hours and minutes.
01:25 ¹	Program end time → "Buttons", <i>Page 26</i>
"冷凝水盒已满， 干衣效果和时间将 受影响。请倒空冷 凝水盒"	Empty and insert the condensation container. → <i>Page 37</i>
¹ Example	

Display	Description
“绒毛收集器已满，烘干效率受到影响。请清洁并用温水冲洗绒毛收集器（双层）”	Clean the fluff filter → <i>Page 35</i> .
“清新水盒已空，请重新加水”	Fill the water tank for the crease-removal function. → <i>Page 42</i>
“筒内温度较高，自动冷却已经激活。机器可以正常使用”	The cooling process cools the laundry independently of the programme status for a few minutes while the drum is rotating, in order to avoid damage to the laundry. The cooling process can be cancelled by opening the door. Note: Do not change the set programme.
“自清洁中”	The automatic self-cleaning function rinses the appliance's heat exchanger. Note: Do not remove the condensation container and do not interrupt the programme.
	Change the basic settings. → <i>Page 47</i>
	■ Lights up: The appliance is connected to your home network via Wi-Fi. ■ Flashes: The appliance is trying to connect to your home network via Wi-Fi. → " <i>Home Connect</i> ", <i>Page 44</i>
	Settings that are not available on the appliance have been set via the Home Connect app. You can find more information in the Home Connect app.
程序已结束	Programme status: Programme end
¹ Example	

7 Buttons

Below is an overview of the buttons and their setting options.

Button	Selection	Description
	Start	Start programme. → <i>"Starting the programme", Page 34</i>
暂停/添衣	■ Pause ■ Reload	Pause the programme or add laundry. → <i>"Adding laundry", Page 34</i> Note: Adding laundry depends on the programme status.
终止	Cancel	Cancel the programme. → <i>"Cancelling the programme", Page 34</i>
	Open the menu	Open the menu for additional settings.
 (mains switch)	■ Switch on ■ Standby mode ■ Restart the appliance	Switch on the appliance or put it in standby mode. If the control panel does not respond, press and hold  for approximately 5 seconds to restart the appliance. → <i>"The display and buttons do not respond.", Page 55</i>
 童锁	■ Activate ■ Deactivate	Activate or deactivate the childproof lock. Disable the control panel to prevent unwanted or accidental operation. If the childproof lock is activated and the appliance has been switched off, the childproof lock remains activated. → <i>"Childproof lock", Page 38</i>

Button	Selection	Description
☆	Store	Save your individual programme settings. → "Saving programme settings", Page 33
收藏	Call up	Call up your individual programme settings. → "Saving programme settings", Page 33
☀ 超干储藏	■ Activate ■ Deactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 37
☀ 全干即穿	■ Activate ■ Deactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 37
☀ 微干挂烫	■ Activate ■ Deactivate	The dryness level defines how damp or dry the laundry is after the programme ends. → "Dryness level", Page 37
5件衬衣	■ Activate ■ Deactivate	Adjust the set programme with crease-removal function 衬衫除皱 . Observe the programme description. → "Programmes", Page 27 Suitable for dry shirts and blouses that have not been worn for long or at all. Suitable for 2 to 5 items of laundry.

Button	Selection	Description
1件衬衣	■ Activate ■ Deactivate	Adjust the set programme with crease-removal function 衬衫除皱 . Observe the programme description. → "Programmes", Page 27 Suitable for dry shirts and blouses that have not been worn for long or at all. Suitable for one item of laundry.
 除菌	■ Activate ■ Deactivate	Kill bacteria and viruses in the fabrics. The programme duration and the temperature of the programme are adjusted.
 防皱 1小时	■ Activate ■ Deactivate	Activate or deactivate the crease-reduction function. Once the programme has ended, the drum moves the laundry at regular intervals for 60 minutes to prevent creasing.
 防皱 2小时	■ Activate ■ Deactivate	Activate or deactivate the crease-reduction function. Once the programme has ended, the drum moves the laundry at regular intervals for 120 minutes to prevent creasing.
 提速	■ Activate ■ Deactivate	Activate or deactivate a shorter programme duration. Note: The energy consumption increases. This does not impair the drying result.

Button	Selection	Description
 护衣	■ Activate ■ Deactivate	Activate or deactivate energy-saving drying. The temperature is reduced and the programme duration is extended. This does not impair the drying result.
 低温	■ Activate ■ Deactivate	Activate or deactivate gentle drying. The temperature is reduced for delicate fabrics, e.g. polyacrylic or elastane. The programme duration is extended.
→ 预约	Up to 24 hours	Set the programme end time. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed.
 静音	■ Activate ■ Deactivate	Activate or deactivate operating signals and information signals.
 手机互联	■ Activate ■ Deactivate	Activate or deactivate remote start. → <i>Page 46</i>

8 Programmes

You can dry your fabrics using either an automatic programme or a timed programme.

8.1 Automatic programmes

Automatic programmes are programmes in which humidity sensors measure the residual moisture in the laundry during the drying cycle. The programme only ends once the set dryness level is reached.

Each automatic programme has a dryness level → *Page 37*. The dryness level defines how dry or damp the laundry is after the programme ends.

Tips

- Select the dryness level according to the type of fabric or the desired drying result.
- The laundry's care labels provide you with additional information about programme selection.

Programme	Description	Max. load (kg)
棉织物	Dry hard-wearing, heat-resistant fabrics made of cotton or linen.	9.0
混合	Dry items made of cotton and synthetics.	3.0
床品	Dry duvet covers, pillowcases and sheets made of cotton. Note: The drum movement is optimised for drying large items of laundry.	3.5
丝绸四件套	Dry large and delicate fabrics made from silk and viscose, e.g. Lyocell. Suitable for sheets, duvet covers and pillow cases. Note: The drum movement is optimised for drying large items of laundry.	1.5
内衣	Dry delicate underwear made of lace, Ly-cra, satin or blended fabrics.	2.0
羽绒服	Dry down-filled items of laundry, such as jackets, bedspreads or eiderdowns. Notes ■ Dry large items of laundry, such as blankets or sleeping bags, separately. ■ Once the programme has ended, shake the items of laundry to distribute the stuffing and eliminate any pockets of moisture.	1.5

Programme	Description	Max. load (kg)
	The drum movement is optimised for drying down-filled textiles and large items of laundry.	
除菌	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Also suitable for hygienically treating dry hard-wearing, heat-resistant fabrics made of cotton or linen. Note: Particularly suitable for strict hygiene requirements.	4.0
除螨	Kill and remove mites from dry hard-wearing and heat-resistant fabrics made of cotton and linen.	3.0
牛仔	Dry jeans and thick, double-layered items made of cotton. Note: Turn laundry inside out before drying.	4.0
运动装	Dry self-drying sportswear made of performance fibres, microfibres and synthetics.	1.5
衬衫	Suitable for shirts and blouses made of cotton, linen, synthetics or blended fabrics. Note: For optimal drying results, dry a maximum of 5 shirts or 5 blouses at the same time. Once the laundry is dry, iron it or hang it up. The residual moisture is then distributed evenly.	1.5
夜间烘	Dry hard-wearing, heat-resistant fabrics made of cotton or linen. Suitable for quiet drying.	9.0
衬衫除皱	Reduce creasing and airborne odours. → <i>Page 41</i> To adjust the programme with crease-removal function, press the corresponding button. → <i>Page 23</i> Notes - To prevent creasing, remove the laundry after the programme ends. - The laundry is not cleaned.	-

Programme	Description	Max. load (kg)
洗烘联动	After you have washed your laundry in the washing machine, the dryer recommends a suitable programme for drying the laundry. Note: The washing machine must be compatible with Home Connect. The washing machine and dryer must be connected to your home network and registered in your Home Connect app. The selectable programme settings depend on the selected programme.	–

8.2 Timed programmes

Timed programmes are programmes with a defined or adjustable programme duration. The programme ends once this time has elapsed, even if the laundry is still not dry, for example. Timed programmes are suitable for drying individual items of laundry or thin fabrics.

Tip: The laundry's care labels provide you with additional information about programme selection.

Programme	Description	Max. load (kg)
羊毛抖散	Dry machine-washable items made of wool or containing wool. Note: The laundry becomes fluffier but not dry. Remove laundry once the programme has ended and allow it to dry.	0.5
羊毛-挂架	Dry items made of wool or containing wool. Note ■ Dry these items only using the wool basket. → Page 42	One item of laundry
鞋-挂架	Dry sports and leisure shoes. Notes ■ Dry shoes only using the basket for woollens. → Page 42 ■ Do not dry leather shoes or shoes with leather parts.	One pair of shoes

Programme	Description	Max. load (kg)
冷风护理	Fluff/loosen all fabric types except for wool and silk. This programme is suitable for fluffing dry laundry only. Also suitable for freshening up or airing dry clothing that has hardly been worn. Notes ■ To remove allergens, use the allergen filter. → <i>Page 39</i> ■ This programme is suitable for drying using the wool basket. → <i>Page 42</i>	3.0
热风定时	Dry all types of fabric except for wool and silk. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. Note ■ This programme is suitable for drying using the wool basket. → <i>Page 42</i> If you are using the wool basket, you can also dry fabrics made from wool using this programme.	3.0
快烘30'	Dry thin items made from synthetic fabrics. The programme duration is 30 minutes.	1.0
蚕丝被	Warm dry cotton blankets with silk filling or reduce the moisture of cotton blankets with silk filling. Suitable for fabrics that are slightly damp due to the change in season or because they have been stored for a long time. Notes ■ The laundry is not dried, only heated. ■ If you have problems placing a large blanket into the drum, fold the blanket first.	10.0
洗烘联动	After you have washed your laundry in the washing machine, the dryer recommends a suitable programme for drying the laundry. Note: The washing machine must be compatible with Home Connect.	–

Programme	Description	Max. load (kg)
	The washing machine and dryer must be connected to your home network and registered in your Home Connect app. The selectable programme settings depend on the selected programme.	

9 Accessories

Use original accessories. These have been made especially for your appliance.

Tip: Some accessories are available in other colours. Contact customer service. → *Page 59*

	Use	Order number
Connection kit with pull-out worktop	To save space, stack the appliance on a suitable washing machine of the same width and depth and that is from the same manufacturer. The pull-out worktop makes it easier to load and unload the appliance.	WZ27F2D
Y-distributor	Connect the water outlet hose of an additional appliance to the same siphon outlet.	15000490
Appliance care product	Spare part for the intensive appliance care function.	00311829
Filter bag	Spare part for the allergen filter for removing allergens when airing laundry.	WZPFRK
Allergen filter	Allergen filter for removing allergens when airing laundry.	WZPFSK

10 Laundry

10.1 Preparing the laundry

ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

- ▶ Remove all items from any pockets in your laundry before using the appliance.

Note

The appliance and fabrics are protected when you prepare your laundry.

- Brush off sand and soil
- Sort the laundry according to colour and textiles and observe the care labels
- Close all zips, hook and loop fasteners, hooks and eyes
- Remove curtain fittings and lead strips
- Load the laundry unfolded into the drum
- Spin the laundry before drying
- Dry woollen items, sports shoes and soft toys in the wool basket
→ "Wool basket", Page 42

11 Basic operation

11.1 Switching on the appliance

Note: If you switch the appliance on the first time after you have connected it to the electrical system, the switch-on process takes up to one minute.

Requirement: The appliance has been correctly installed and connected. → Page 12

- ▶ Press .

The switch-on process takes a few seconds.

- ✓ After a few seconds, the appliance displays the start animation and the programme overview.

Note: The lighting for the drum goes out automatically.

11.2 Setting a programme

Requirement: The display shows the programme menu.

1. Search through the menu.
→ Page 19
2. Press the required programme.
→ "Programmes", Page 27
- ✓ The display shows the programme settings.
3. Adjust the programme settings.
→ "Buttons", Page 23

Observe the information about operating logic → Page 19.

The programme settings are not saved permanently for the programme.

11.3 Saving programme settings


Requirement: A programme is set.
→ Page 33

- ▶ Press .


To call up the saved programme, press  in the programme menu → Page 21.

11.4 Opening the door

1. Grip under the door handle and pull on the door.

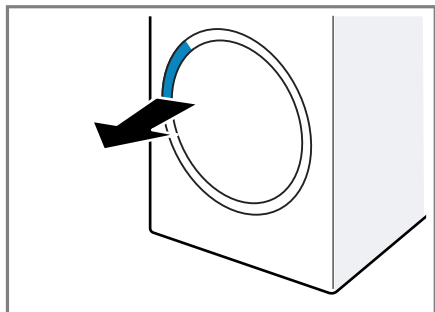

2. Open the door.

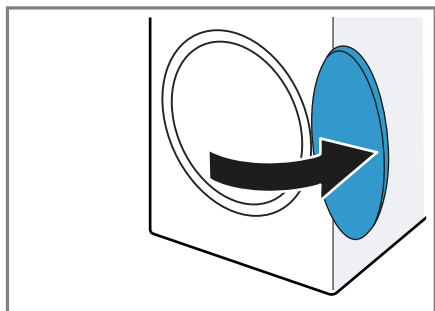

11.5 Loading laundry

Note: To prevent creasing, note the maximum load for the programmes.
→ "Programmes", Page 27

Requirements

- The laundry is prepared and sorted.
→ "Laundry", Page 33
- The drum is empty.

1. Open the door. → Page 34
2. Place the laundry in the drum.
3. Close the door.

Ensure that there is no laundry trapped in the door.

11.6 Starting the programme

Requirement: A programme is set.
→ Page 33

- ▶ Press ▷.
- ✓ The display shows the programme duration or the programme end time.
- ✓ After the programme has ended, the display shows: "程序已结束".

Note: When "筒内温度较高，自动冷却已经激活。机器可以正常使用" is shown on the display, the appliance cools the laundry.

When "筒内温度较高，自动冷却已经激活。机器可以正常使用" goes out, the laundry has cooled down.

11.7 Adding laundry

After the programme starts, you can remove or add laundry at any time.

1. Press 暂停/添衣.

The cooling process starts automatically after approximately 30 seconds and cools down the laundry while the drum is rotating. If you want to avoid or cancel the cooling process, open the door.
→ Page 22

2. Open the door. → Page 34
3. Add or remove laundry.
4. Close the door.
5. Press ▷.

11.8 Cancelling the programme

1. Press 终止.
2. Open the door. → Page 34
3. Remove the laundry. → Page 34

11.9 Unloading the laundry

1. Open the door. → Page 34

2. Remove the laundry from the drum.

11.10 Put the appliance into standby mode

- Press .

11.11 Fluff filter

During drying, fluff from the laundry is collected in the fluff filter. The fluff filter protects the appliance from fluff.

Cleaning the fluff filter


If the drying programme has finished or the display shows a notification while the appliance is in operation, clean the fluff filter.

Note: If you do not clean the appliance as described, the appliance's functionality may be impaired.


Requirements

- The display shows the following after drying: "程序已结束"
- or the display shows the following during operation: "绒毛收集器已满，烘干效率受到影响。请清洁并用温水冲洗绒毛收集器（双层）".


1. Open the door.
2. Remove the fluff from the door.

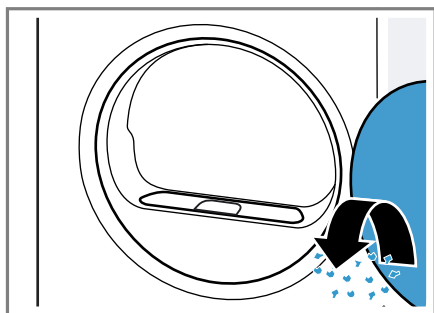

3. Remove the two-part fluff filter.

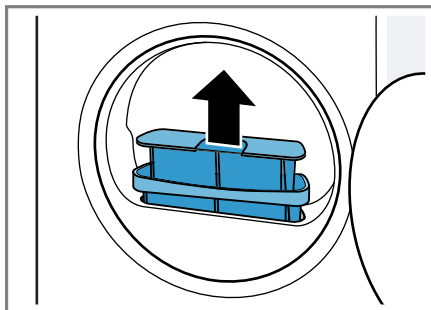


4. Remove the fluff from the recess.

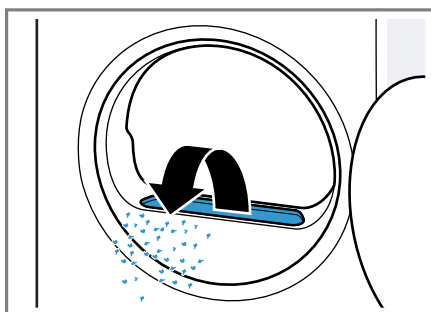


Ensure that no fluff falls into the air channel.


5. Disconnect the two-part fluff filter.

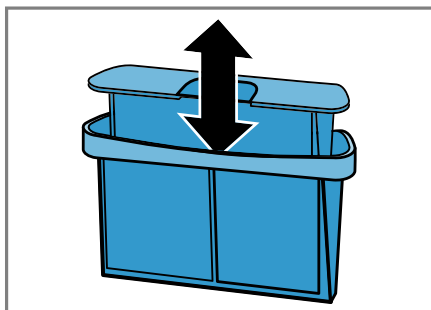


6. Open the two fluff filters.

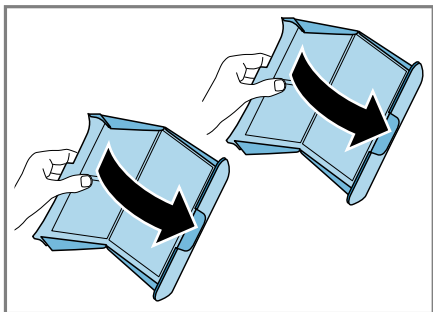


7. Remove the fluff.

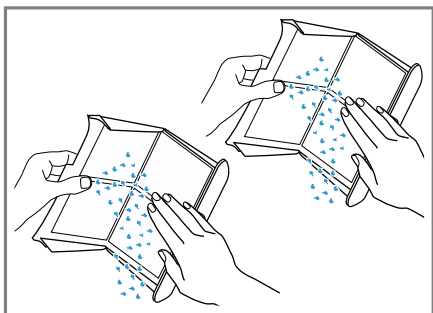


8. Clean the two fluff filters thoroughly under warm, running water and then dry them off.

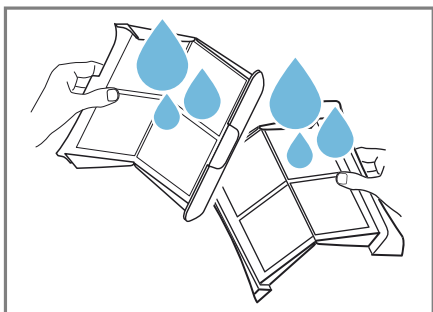

9. Close the two fluff filters and put them together.

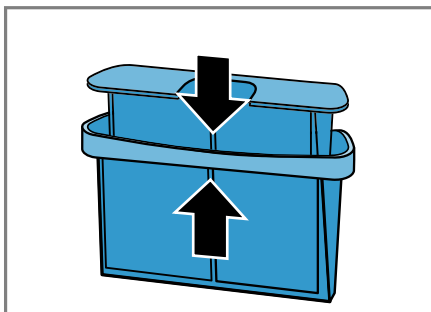

10. Insert the two-part fluff filter.

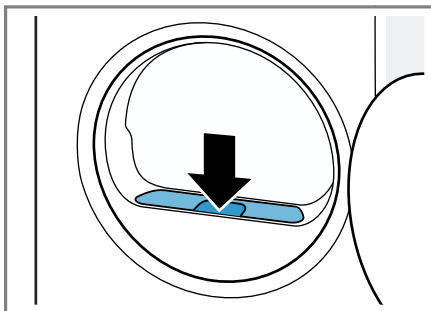

11. Close the door.

11.12 Condensation container

Condensation that forms in the appliance as it dries the laundry is collected by default in the condensation container.

Note: Operate this appliance using the water outlet hose provided.

→ Page 15

If you connect the water outlet hose, you do not have to regularly empty the condensation container.


→ "Emptying the condensation container", Page 37

Emptying the condensation container


If the drying programme has finished or the display shows a notification while the appliance is in operation, empty the condensation container.

Requirements

- The display shows the following after drying: "程序已结束"
 - or the display shows the following during operation: "冷凝水盒已满，干衣效果和时间将受影响。请倒空冷凝水盒".
1. Pull out the condensation container, keeping it level.

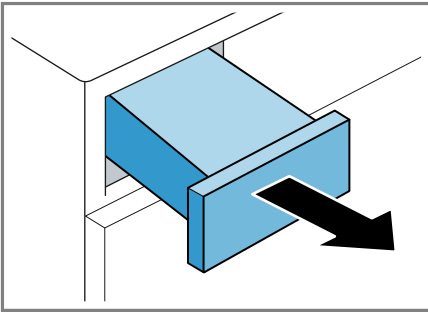

2. Empty the condensation container.

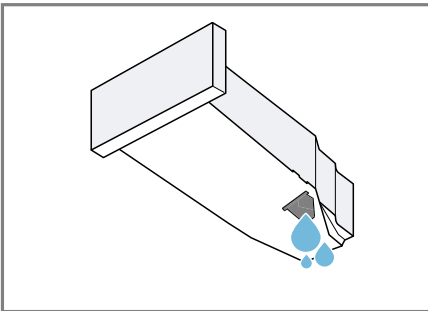


Check the condensation container filter regularly and clean the filter if it is dirty. → Page 52

Make sure that you insert the condensation container before operating the appliance. → Page 37

Inserting the condensation container

- Push the condensation container in as far as it will go.

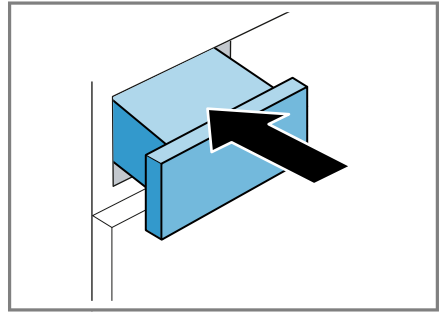

12 Dryness level

Each automatic programme has a specified dryness level. The dryness level defines how dry or damp your laundry is after the programme ends.

Dryness level	Description
☀ 超干储藏	For multi-layered, thick laundry that does not dry readily.
☀ 全干即穿	For normal, single-layered laundry.
☀ 微干挂烫	For normal, single-layered laundry. The laundry is still slightly damp after the programme ends. To prevent creasing after drying, iron the laundry or hang it up.

12.1 Changing the dryness level

For some automatic programmes, you can change the dryness level so that your laundry will be drier or more damp.

1. Set an automatic programme.
→ Page 27
- ✓ The display shows the specified dryness level.
2. Press the specified dryness level.
3. Press ☀ 全干即穿, ☀ 超干储藏 or ☀ 微干挂烫 in order to set the required dryness level.
4. Press ×.

12.2 Adjusting the dryness level

If the laundry feels too damp after it has been dried to a particular dryness level, you can adjust the dryness level.

1. Set an automatic programme.
→ Page 27
- ✓ The display shows the specified dryness level.
2. Press the specified dryness level.
3. Set the required dryness level.
4. Press +/-.
5. Press **0**, **+1**, **+2** or **+3** to adjust the dryness level.
6. Confirm the selection.

13 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

13.1 Activating the childproof lock

1. Press on  to activate the childproof lock.
2. Press  童锁.
- ✓ The display shows a message.
- ✓ The control elements are locked.
- ✓ The childproof lock also remains activated when the appliance is in standby mode and in the event of a power cut.

13.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.


1. Press on the display.
2. Press and hold  for approx. 3 seconds.

14 Allergen filter


The allergen filter removes allergens such as pollen and animal hair when the laundry is aired. Use the allergen filter if you have strict hygiene requirements.

14.1 Inserting the allergen filter

1. Take the accessories out of the packaging.

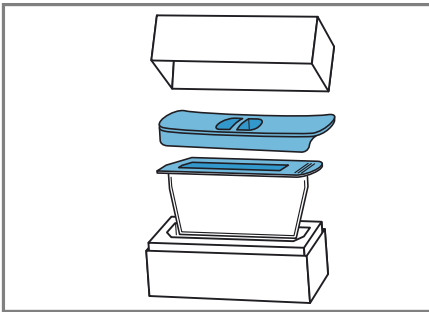


2. Slide the filter cover onto the filter bag.

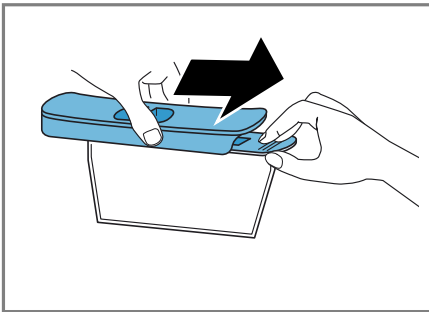


3. Open the door. → *Page 34*

4. Remove the two-part fluff filter.

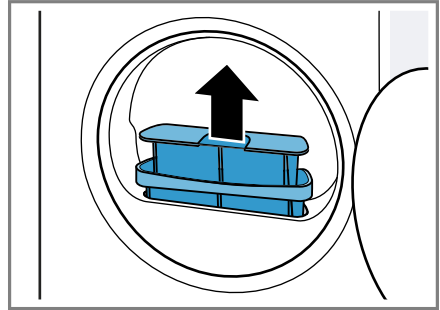


5. Remove the fluff from the recess.

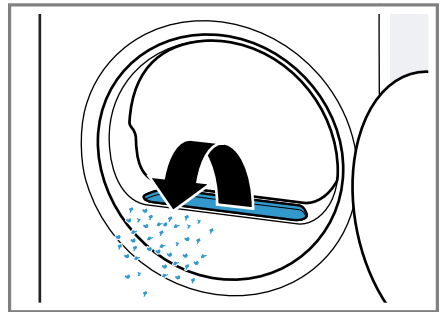


Ensure that no fluff falls into the air channel.

6. Insert the allergen filter.

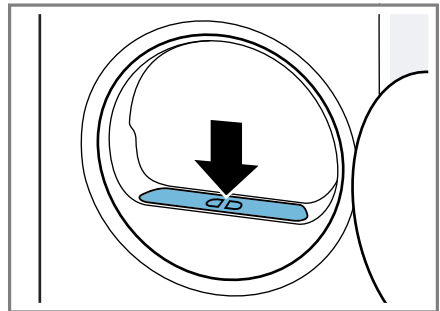

Note

If you remove the fluff filter or the allergen filter from the appliance, keep it stored in the supplied packaging.

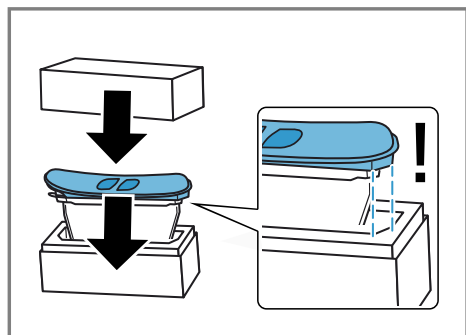

14.2 Starting a programme with the allergen filter

Note: The allergen filter is only suitable for airing laundry. If you want to dry your laundry, remove the allergen filter from the appliance and insert the fluff filter → *Page 35* before drying.

Requirements


- The laundry is prepared. → *Page 33*
 - The laundry is sorted.
 - The allergen filter has been inserted. → *Page 39*
1. Load the dry laundry unfolded into the drum.
 2. Set a programme to air the laundry. → *Page 29*
 3. Start the programme. → *Page 34*
 - ✓ After the programme has ended, the display shows: "程序已结束".
 4. Remove the laundry. → *Page 34*

Note: Change the filter bag for the allergen filter regularly. → *Page 40*


14.3 Cleaning and caring for the allergen filter

If the filter bag is dirty, it will be less effective at removing allergens. Change the filter bag for the allergen filter regularly, after approximately 10 uses.

1. Open the door. → *Page 34*
2. Remove the allergen filter.

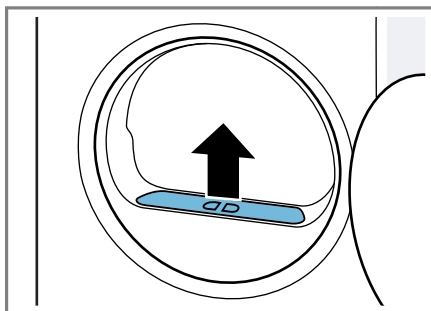

3. Pull the filter cover from the filter bag.

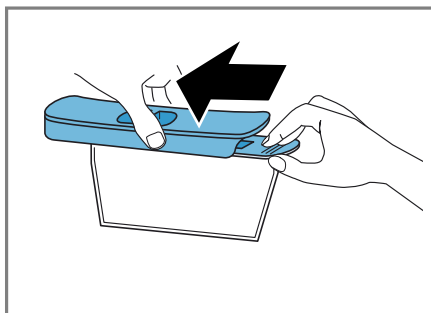


4. Dispose of the filter bag with your household waste.

The filter bag is manufactured from environmentally friendly materials. You can order the → "Accessories", *Page 32* as a spare part from the customer service.


Do not use any cleaned filter bags.

- Clean the filter cover under warm, running water or in the dishwasher.

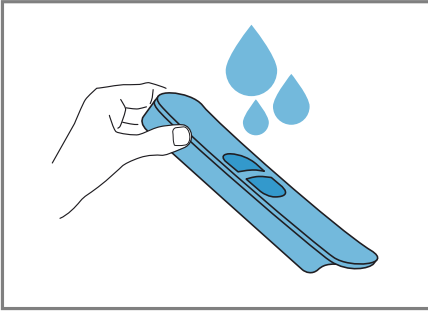

Do not dispose of the filter cover. Use the filter cover for a new filter bag.

- Slide the filter cover onto the new filter bag.

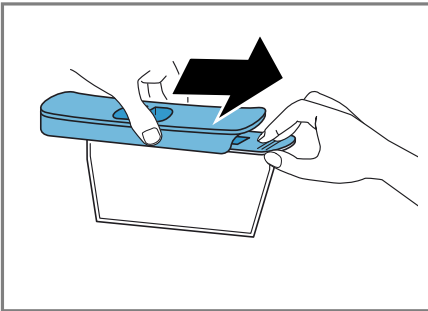

Before operating the appliance, ensure that the fluff filter → *Page 35* is inserted for drying or the allergen filter → *Page 39* is inserted for airing.

15 Crease-removal function

In order to reduce creasing and air-borne odours, such as cigarette smoke, you can use a programme

with a crease-removal function for any dry laundry that has not been worn for long or at all.

15.1 Starting a programme with the crease-removal function

Note

Wash items of laundry that have traces of sweat, perfume or deodorant before wearing them again. Do not use dryer cleaning sets.

Do not use a programme with the crease-removal function for the following fabrics:

- Wool, leather and viscose
- Fabrics with parts made from metal, wood or plastic
- Waxed jackets and oilskin jackets

Requirement: The laundry is placed in the appliance. → *Page 34*

- Set a programme with crease-removal function. → *Page 27*
- If required, adjust the set programme with crease-removal function. → *Page 23*
- Start the programme. → *Page 34*

If the water tank is empty, the display shows: “清新水盒已空，请重新加水”.

→ “Filling the water tank”, *Page 42*

The average programme duration of the crease-removal function is approx. 45 minutes and may be longer or shorter depending on the ambient temperature.

- ✓ After the programme has ended, the display shows: “程序已结束”.
- Remove the laundry. → *Page 34*

The results of the crease-removal function may vary depending on the type of fabric, the amount of laundry and the selected programme.

en Wool basket

Remove the laundry immediately after the programme has ended to prevent creasing.

5. Hang up the items of laundry and pull them into shape.

15.2 Filling the water tank

Your appliance removes the creases from rarely worn clothing using cold mains water. If the display shows a notification while the appliance is in operation, fill the water tank.

ATTENTION!


Operating the appliance with water that is dirty or too hot may result in damage to the appliance.

- ▶ Only fill the water tank with cold drinking water.
- ▶ Never use condensed water, distilled water, additives or descaler for the crease-removal function.

Requirements

- A programme with the crease-removal function has been started.
→ *Page 41*
- The display shows: “清新水盒已空，请重新加水”.
- The condensation container
→ *Page 36* is removed from the appliance.

1. Add approx. 180 ml cold mains water through the front opening, using the water jug provided.

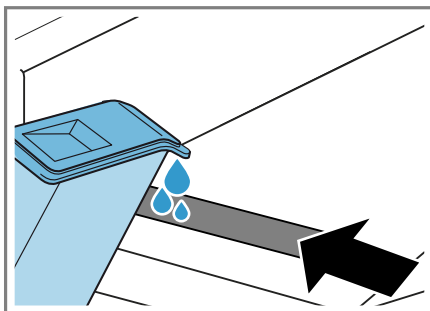

Observe the mark for filling the water tank next to the front opening.

If “清新水盒已空，请重新加水” does not go out on the display, align the appliance correctly.

→ “Aligning the appliance”,
Page 17

- ✓ “清新水盒已空，请重新加水” goes out on the display.
2. Insert the condensation container.
→ *Page 37*
 3. Start the programme. → *Page 34*


16 Wool basket

Use the wool basket to gently dry delicate fabrics, soft toys or sports shoes in a stationary position.


16.1 Inserting the wool basket

1. Open the door.
Ensure that the drum is empty.

2. Insert the feet of the wool basket into the holes from the door opening.

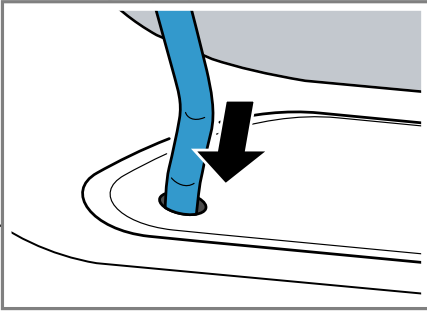

3. Insert the tab on the front of the wool basket into the upper hooks.

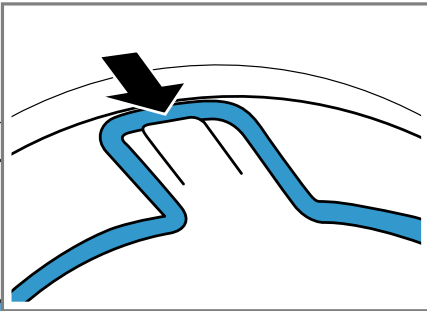

16.2 Starting a programme with the wool basket


ATTENTION!

If items of laundry in the wool basket touch the rotating drum or the ribs of the drum, the laundry may cause material damage and damage to the appliance.

- Place the items of laundry in the insert or wool basket such that they do not touch the drum or the ribs of the drum.

Requirement: The wool basket is inserted into the appliance. → *Page 42*

1. Place the laundry into the wool basket, either directly or using the insert. → *Page 44*

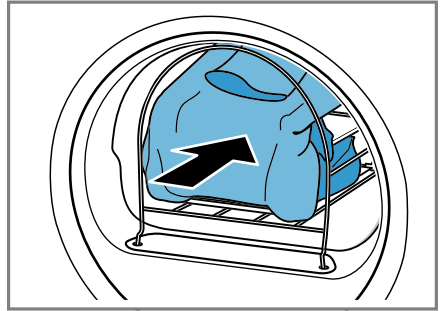

2. Close the door.
3. Set a programme that is suitable for drying with the wool basket.
Observe the programme description. → *Page 29*
4. If required, adjust the duration of the programme.
Observe the recommended programme duration for items of laundry in the wool basket:

Laundry item	Programme duration in hours:minutes
Thin woollen pullover	Approx. 1:20
Thick woollen pullover	Approx. 1:30 - 3:00
Skirt	Approx. 1:00 - 1:30
Trousers	Approx. 1:00 - 1:30
Gloves	Approx. 0:30
Sports shoes	Approx. 1:30/ max. 2:00 with airing

Tip: Increase the programme duration for thick or multi-layered items of laundry.

5. Start the programme. → *Page 34*



6. Remove the wool basket once the programme has ended.



16.3 Examples of how to use the wool basket

ATTENTION!

If items of laundry in the wool basket touch the rotating drum or the ribs of the drum, the laundry may cause material damage and damage to the appliance.

- Place the items of laundry in the insert or wool basket such that they do not touch the drum or the ribs of the drum.

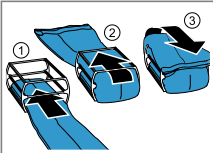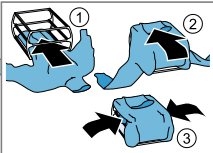Example	Use
Trousers or skirt 	Place the items of laundry unfolded into the insert. Note: Spin the laundry before drying.
Pullover 	

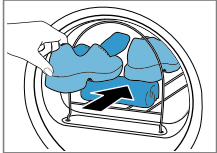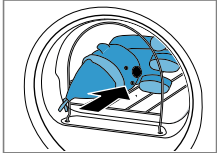Example	Use
Sports shoes 	Lift the tongues of the shoes. Remove the in-soles or heel cushions. Place a rolled-up hand towel in the wool basket to create an inclined surface. Place the shoes on the towel with the heels facing down. Note: Do not use the insert. Do not dry leather shoes or shoes with leather parts.
Soft toys 	Place the soft toy in the wool basket. Note: Do not use the insert. If you place numerous or small soft toys in the wool basket, make sure they do not fall out.

17 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of

Home Connect services in your country. You can find information about this at: www.home-connect.cn.

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

Tip: Please also follow the instructions in the Home Connect app.

Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.
→ "Safety", Page 4
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

17.1 Setting up the Home Connect app

1. Install the Home Connect app on your mobile device.



2. Start the Home Connect app and set up access for Home Connect. The Home Connect app guides you through the entire login process. You can also use Home Connect via the WeChat mini programme.

17.2 Setting up Home Connect

Requirements

- The Home Connect app has been installed on your mobile device.
- The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.

1. Press .
2. Press  手机互联.
3. Press 晶御智能助手.
4. Follow the instructions on the display.
5. Follow the instructions in the Home Connect app.

17.3 Activating Wi-Fi on the appliance

Note: When Wi-Fi is activated, the energy consumption increases in comparison to the values specified in the consumption value table.

1. Press .
 2. Press  手机互联.
 3. Press Wi-Fi设置栏上的开启按钮，设置为开.
- ✓ Wi-Fi is activated.

17.4 Deactivating Wi-Fi on the appliance

1. Press .
 2. Press  手机互联.
 3. Press Wi-Fi设置栏上的关闭按钮，设置为关.
- ✓ Wi-Fi is deactivated.

Note: The connection is automatically re-established when the Wi-Fi is switched back on.

17.5 Installing the software update

Note: If a software update is available, a message appears in the Home Connect app.

- ▶ To install the software update, follow the instructions in the Home Connect app.
- ✓ The control panel is partially locked during the installation.
- ✓ In the event of a malfunction, installation may take up to 40 minutes. Do not reset the network settings or the appliance to the factory settings.

17.6 Resetting the appliance network settings

1. Press .
 2. Press  手机互联.
 3. Press 网络重置 .
 4. Press 继续 .
- ✓ The network settings are reset.

17.7 Remote start

Enable the appliance for remote start via the Home Connect app.

Note

Remote start will be deactivated in the following circumstances:

- The appliance door is opened.
-  手机互联 is pressed.
- Following a power cut.

Activating remote start

Requirements

- The appliance door is closed.
- The refresher tank is not empty.

1. Press .
2. Press  手机互联.

3. Press .

- ✓  手机互联 appears and the appliance is enabled for remote start via the Home Connect app.

Deactivating remote start

Note: You can deactivate remote start on the appliance or in the Home Connect app.

1. Press .
 2. Press  手机互联.
- ✓  手机互联 goes out.

17.8 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

18 Basic settings

You can configure the basic settings for your appliance to meet your needs.

Note: You can also adjust the the basic settings in the Home Connect app.

18.1 Overview of the basic settings

Basic setting	Description
快速保养	Run the basic appliance care programme. → Page 47
深度保养	Run the intensive appliance care programme. → Page 47
结束音	Set the volume of the signal at the end of the programme.
按键音	Set the volume of the audible signal emitted when the buttons are pressed.
设置亮度	Set the display brightness.
语言	Select the language.
智能排序	Activate or deactivate automatic programme sorting.
开始菜单	Select the preferred start menu.
Wi-Fi	Activate or deactivate Wi-Fi.

Basic setting	Description
网络重置	Reset the network settings. → Page 46
晶御智能助手	Set up Home Connect.
开机向导	Start a video that helps you to operate the appliance.
恢复出厂设置	Restore the appliance to the factory settings.
演示模式	Start the demo mode.
错误信息	Display fault messages.

18.2 Changing the basic settings

1. To call up the basic settings, press .
2. Select the required basic setting.
→ Page 47
3. Adjust the basic setting.
4. To exit the basic settings, press 返回键.

19 Appliance care

The appliance offers cleaning programmes for basic and intensive appliance care.

19.1 Preparing for appliance care

Preparing the appliance for the appliance care programme

Prepare the appliance before running the appliance care programme.

Requirements


- The drum is empty.
- The appliance is in standby mode.

1. Clean the fluff filter → Page 35.
2. Pull out the condensation container horizontally and empty it.
→ Page 37

Preparing the condensation container for the appliance care programme

If you drain the condensation from the appliance using the drain hose, prepare the condensation container before running the appliance care programme.

1. Remove the stopper from the recess in the top ① and insert it in the underside ②.

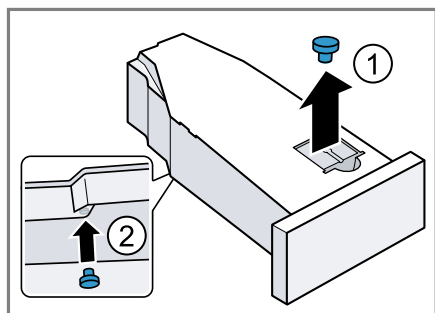

2. Clean the filter in the condensation container.

19.2 Calling up the appliance care programme

Requirement: The appliance care programme is ready. → Page 47

1. Press .
The switch-on process takes a few seconds.
 - ✓ After a few seconds, the appliance displays the start animation and the programme overview.
2. Press .

3. Press the required cleaning programme:
 - 快速保养
 - 深度保养

19.3 Running the basic appliance care programme

To remove light dirt deposits in the appliance, you can run the basic appliance care programme.

Notes

- The basic appliance care programme runs for approximately 1 hour.
- After a lengthy period of use, the appliance reminds you to run the basic appliance care programme. After the programme has ended, the display shows a notification.

Requirements

- The appliance care programme is ready. → Page 47
 - The basic appliance care programme is called up. → Page 48
1. Pour approx. 1.5 litres of hot mains water into the condensation container.
Hold the filled condensation container level so that no liquid spills out.
 2. Insert the condensation container so that it locks into place.
 3. Press .
 - ✓ The appliance care programme starts and a signal tone sounds.
 - ✓ "程序已结束" appears on the display and a signal tone sounds once the appliance care programme has ended.
 4. Pull out the condensation container horizontally and empty it.
 5. If you drain the condensation using the drain hose, remove the stopper from the underside of the condens-

ation container and insert it into the recess in the top of the condensation container. → *Page 48*

6. Insert the condensation container so that it locks into place.
7. Put the appliance into standby mode. → *Page 35*

19.4 Running the intensive appliance care programme

You can run the intensive appliance care programme to remove any stubborn dirt deposits in the appliance and odours after a downtime of more than one month.

Notes

- The intensive appliance care programme runs for approximately 4 hours and must not be cancelled.
- When you run the intensive appliance care programme, you need the original appliance care product → *Page 32*.

Starting the intensive appliance care programme

Requirements

- The appliance care programme is ready. → *Page 47*
 - The intensive appliance care programme is called up. → *Page 48*
1. Pour a bottle of the appliance care product and approx. 1.5 litres of hot mains water into the condensation container.
Hold the filled condensation container level so that no liquid spills out.
 2. Insert the condensation container so that it locks into place.
 3. Press **▷**.
 - ✓ The appliance care programme starts and a signal tone sounds.

- ✓ After around 3 hours, the appliance pauses the appliance care programme and the remaining programme duration flashes on the display.
- 4. Pull out the condensation container horizontally and empty it.
- 5. Pour approx. 1.5 litres of hot mains water into the condensation container.
- 6. Carefully swivel the condensation container horizontally and empty it to rinse out any remaining appliance care product.

Continuing the intensive appliance care programme

1. Pour approx. 1.5 litres of hot mains water into the condensation container.
Hold the filled condensation container level so that no liquid spills out.
2. Insert the condensation container so that it locks into place.
3. Press **▷**.
- ✓ The appliance care programme continues.
- ✓ "程序已结束" appears on the display and a signal tone sounds once the appliance care programme has ended.
4. Pull out the condensation container horizontally and empty it.
5. If you drain the condensation using the drain hose, remove the stopper from the underside of the condensation container and insert it into the recess in the top of the condensation container. → *Page 48*
6. Insert the condensation container so that it locks into place.
7. Put the appliance into standby mode. → *Page 35*

20 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

20.1 Base unit


The base unit is the accessible area at the bottom of the appliance in which you will find the heat exchanger.

Opening the base unit

Requirements


- The appliance has cooled down for 30 minutes.
- The appliance door is closed.

1. Open the maintenance flap.

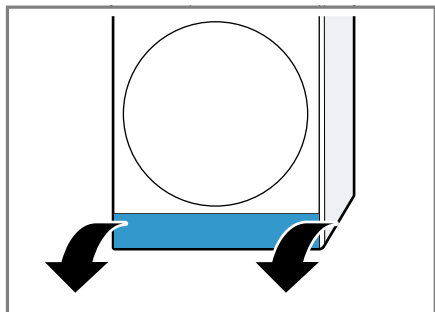


If you place a cloth beneath the maintenance flap, you can collect the remaining water from the base unit.

2. Open the lever for the heat exchanger cover.

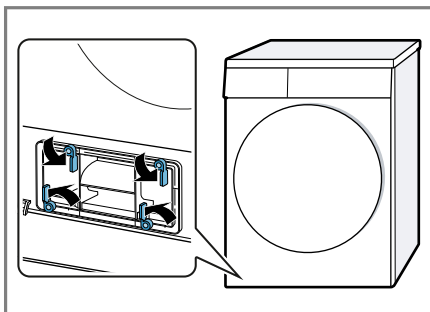

3. Pull out the heat exchanger cover by the handle.

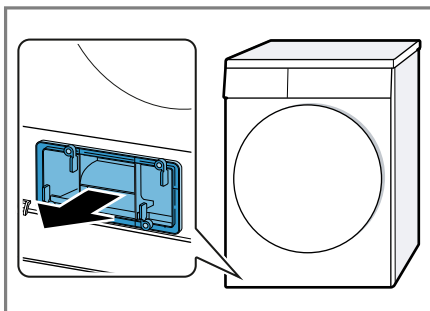


Cleaning the base unit

You can remove any visible dirt in the base unit.


1. Open the base unit → *Page 50*.

2. Use a soft brush to clean the heat exchanger cover.

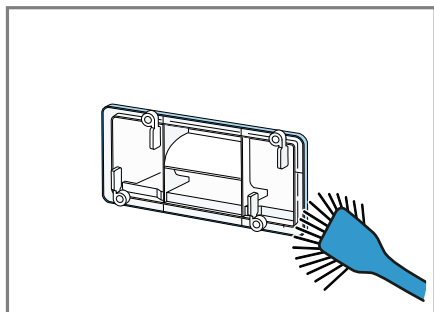


Make sure that you remove all dirt from the seal.


3. Pull the insert out horizontally.

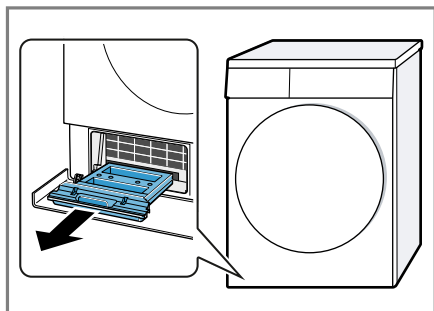


4. Clean the insert under running water and dry it off.

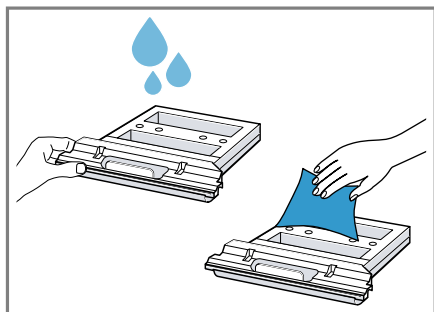

5. Clean the opening with a soft, damp cloth.

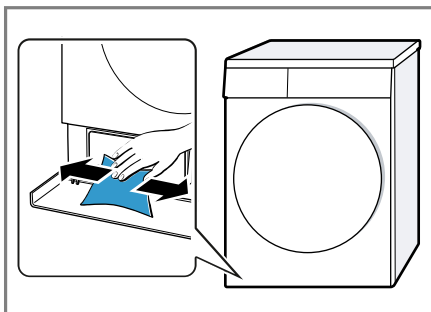

6. Slide the insert in horizontally as far as it will go.

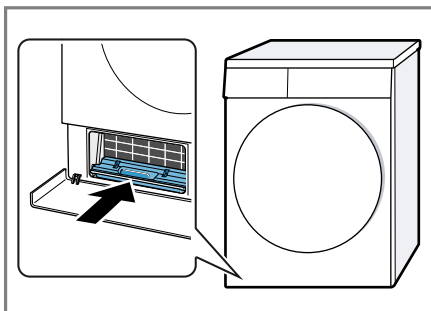


7. Close the base unit → *Page 51*.


Closing the base unit

Requirement: The base unit is open.
→ "Opening the base unit", *Page 50*


1. Insert the heat exchanger cover by the handle.

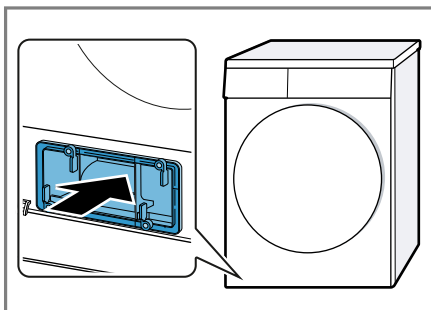

2. Close the lever for the heat exchanger.

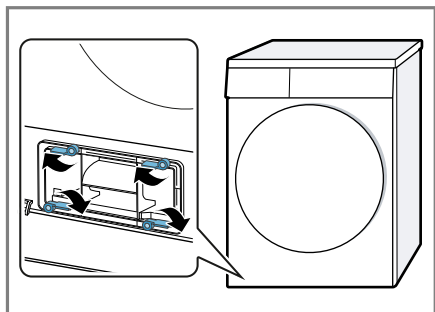

3. Close the maintenance flap.

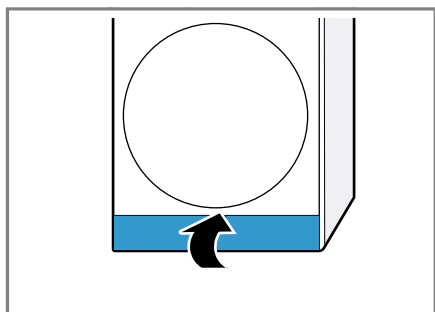

20.2 Moisture sensor

The moisture sensor in this appliance measures how damp the laundry is during the drying cycle. The appliance changes the duration of the automatic programme depending on the residual moisture in the laundry.

Cleaning the moisture sensor

Over time, residue from limescale, detergents and care products can build up on the moisture sensor. Clean the moisture sensor regularly.


ATTENTION!

Hard or rough objects may damage the moisture sensor.

- Do not use hard or rough objects, abrasive cleaning products or steel wool for cleaning.

Note: If you do not clean the appliance as described, the appliance's functionality may be impaired.

1. Open the door.
2. Clean the moisture sensor with a sponge.

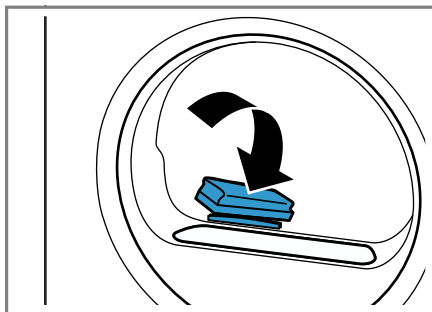


20.3 Condensation container filter

During drying, fluff from the laundry gets into the condensation. The filter in the condensation container protects the appliance from fluff.


Clean the filter for the condensation tank.

The filter is cleaned automatically when the condensation container is emptied. Check the filter regularly and clean the filter if it is dirty.

1. Empty the condensation container.
→ Page 37
2. Remove the filter.

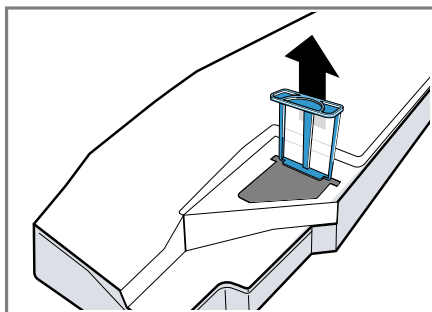

3. Clean the filter under warm, running water or in the dishwasher.
4. Slide in the filter as far as it will go.

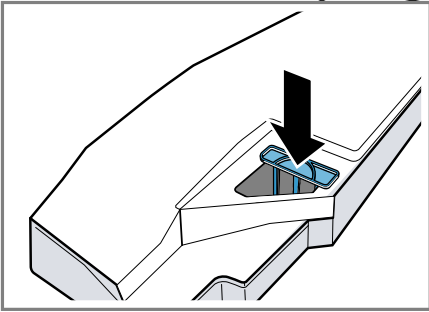

5. Insert the condensation container.
→ *Page 37*

21 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

 WARNING
Risk of electric shock!

Improper repairs are dangerous.

- ▶ Never make any technical modifications to the appliance or its features.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Fault	Cause and troubleshooting
“筒内温度较高，自动冷却已经激活。机器可以正常使用” and the drum rotates.	Not a fault. The cooling process is active. No action required. Note: Do not change the programme during the cooling process. The cooling process takes up to 10 minutes.
"冷凝水盒已满，干衣效果和时间将受影响。请倒空冷凝水盒" and programme terminated.	The condensation container is full. ▶ Empty the condensation container. → <i>Page 37</i>
	The water outlet hose is not connected correctly, or is kinked or trapped. ▶ Check the installation of the water outlet hose. → <i>Page 15</i>
	Water outlet hose is blocked. ▶ Rinse the water outlet hose with tap water.
	The filter for the condensation tank is soiled. ▶ Clean the filter for the condensation container. → <i>Page 52</i>
	A foreign object is in the base unit. 1. Open the base unit. → <i>Page 50</i> 2. Remove any foreign objects. 3. Close the base unit. → <i>Page 51</i>
	Dirt in the appliance. ▶ Run the intensive appliance care programme. → <i>Page 47</i>

Fault	Cause and troubleshooting
“绒毛收集器已满，烘干效率受到影响。请清洁并用温水冲洗绒毛收集器（双层）”	Fluff filter is soiled. ► Clean the fluff filter. → <i>Page 35</i> The allergen filter is dirty. ► Clean and care for the allergen filter. → <i>Page 40</i>
“自清洁中”	Not a fault. The automatic self-cleaning function rinses the appliance's heat exchanger. No action required. Note: Do not pull out the condensation container and do not interrupt the programme.
“清新水盒已空，请重新加水”	The water tank for the crease-removal function is empty. ► Fill the water tank. → <i>Page 42</i>
The display and buttons do not respond.	Software fault. 1. To restart the appliance, press and hold  for approximately 5 seconds. 2. If the fault occurs again, disconnect the appliance from the power supply for at least 30 seconds. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
Home Connect is not working properly.	Different causes are possible. 1. Reset the appliance network settings. → <i>Page 46</i> 2. Set up Home Connect again. → <i>Page 45</i> ► Go to www.home-connect.cn.
Water overflows when filling the water tank.	The water tank is completely full. No action required. Note: The overflowing water is harmless. Do not pour any more water into the water tank. The water tank filter is soiled. ► Clean the water tank filter.
The programme does not start.	Childproof lock is activated. ► Deactivate the childproof lock. → <i>Page 38</i> →  预约 is activated. ► Check whether →  预约 is activated. → <i>Page 26</i>
The length of the programme changes during the drying cycle.	Not a fault. The programme sequence is optimised electronically. No action required.
The drying time is too long.	Fluff filter is soiled. ► Clean the fluff filter. → <i>Page 35</i> The ambient temperature is lower than 15 °C.

Fault	Cause and troubleshooting
The drying time is too long.	▶ Ensure that the ambient temperature is above 15 °C.
	The ambient temperature is greater than 30 °C. ▶ Ensure that the appliance is only operated in a well ventilated location.
	The air circulation at the appliance's installation location is insufficient. ▶ Ventilate the appliance's installation location.
	Insufficient condensation for the automatic self-cleaning function when permanently drying small loads of laundry or when permanently using the crease-removal function. ▶ Regularly dry a load weighing more than 3 kg of damp laundry until the programme ends.
	The appliance's ventilation opening is blocked. ▶ Ensure that the ventilation opening of the appliance is kept clear.
	Heat exchanger is soiled. ▶ Run the basic appliance care programme → <i>Page 47</i>.
The crease-removal function takes too long.	A low ambient temperature extends the duration of the crease-removal function. No action required.
Humming, whirring or pumping noises.	Not a fault. The compressor, compressor ventilation or condensation pump is active. No action required.
The laundry is too damp.	The selected programme is unsuitable for the type of fabric. ▶ Set a time programme for subsequent drying. → <i>Page 29</i>
	The load is too large. ▶ Observe the programme's maximum load capacity. → <i>Page 27</i>
	After the end of the programme, warm laundry feels damper than it actually is. 1. Remove the laundry from the drum as soon as the drying programme has finished. 2. Spread the items of laundry for cooling.
	The selected dryness level is unsuitable. ▶ Change the dryness level. → <i>Page 38</i>
	The dryness level is not adjusted.

Fault	Cause and troubleshooting
The laundry is too damp.	▶ Adjust the dryness level. → <i>Page 38</i>
	The load is too small. ▶ Set a time programme for subsequent drying. → <i>Page 29</i>
	The moisture sensor is dirty. ▶ Clean the moisture sensor. → <i>Page 52</i>
	The appliance has interrupted the drying process due to the condensation container being full. ▶ Empty the condensation container. → <i>Page 37</i>
Creasing.	The selected programme is unsuitable for the type of fabric. ▶ Set a suitable programme. → <i>Page 27</i>
	The load is unsuitable. ▶ Observe the programme's maximum load capacity. → <i>Page 27</i> ▶ Prepare the laundry. → <i>Page 33</i>
	The laundry lies in the drum for too long after drying. 1. Remove the laundry from the drum as soon as the drying programme has finished. 2. Spread the items of laundry for cooling.
	Easy Care fabrics have been dried for too long. ▶ Change or adjust the dryness level. → <i>Page 37</i>
	The crease-reduction function is not activated. ▶ Activate the crease-reduction function. → <i>Page 23</i>
	Appliance is not correctly aligned. ▶ Align the appliance. → <i>Page 17</i>
	The seal for the heat exchanger cover is dirty. ▶ Clean the seal for the heat exchanger cover. → <i>Page 50</i>
Water is leaking from the appliance.	Water outlet hose is not connected correctly. ▶ Check the installation of the water outlet hose. → <i>Page 15</i>
	The lever for the heat exchanger cover is not closed correctly. ▶ Ensure that the lever for the heat exchanger cover is closed correctly. → <i>Page 51</i>

Fault	Cause and troubleshooting
Condensation collects in the condensation container despite the water outlet hose being connected.	Not a fault. The remaining volume of condensation may remain in the condensation container. No action required. Water outlet hose is not connected correctly. ▶ Check the installation of the water outlet hose. → <i>Page 15</i>
Odours have formed in the appliance.	Stubborn dirt in the appliance or an extended appliance downtime of more than one month. ▶ Run the intensive appliance care programme. → <i>Page 47</i>

22 Transportation, storage and disposal

22.1 Disposing of old appliance

Valuable raw materials can be re-used by recycling.

WARNING **Risk of harm to health!**

Children can lock themselves in the appliance, thereby putting their lives at risk.

- ▶ Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- ▶ With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

WARNING **Risk of fire!**

The refrigerant R290 used in this appliance is environmentally friendly. It is however flammable and may ignite if appliances are not disposed of properly.

- ▶ Dispose of the appliance properly.
- ▶ Do not damage the tubing of the refrigerant circuit.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.

Information about current disposal methods are available from your specialist dealer or local authority.

23 Customer Service

Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

23.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

Depending on the model, the rating plate is located:

- On the inside of the door.
- On the inside of the maintenance flap.
- On the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

24 Technical data

Appliance height	84.2 cm
Appliance width	59.7 cm
Appliance depth	64.1 cm
Appliance depth with door closed	64.5 cm

en Applicable standard

Appliance depth with door open	112.4 cm
Weight	54.9 kg
Maximum load	10.0 kg
Mains voltage	220 V, 50 Hz
 Minimum installation protection	10 A
Nominal power	1000 W
Permissible operating conditions in accordance with GB/T 23118	■ Ambient temperature 0–40 °C, not freezing ■ Relative humidity less than 80% at 25 °C, non-condensing
Length of the power cord	145 cm

GB 17625.1	Electromagnetic compatibility – Limits – Part 1: Limits for harmonic current emissions (equipment input current ≤16 A per phase)
GB 4706.20	Safety of household and similar electrical appliances – Particular requirements for tumble dryers

25 Applicable standard

GB 4706.1	Household and similar electrical appliances – Safety – Part 1: General requirements
GB 4343.1	Electromagnetic compatibility requirements for household appliances, electric tools and similar apparatus – Part 1: Emission

Name and content of hazardous substances in products

Component name	Hazardous substance					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCB	x	o	o	o	o	o
Display	x	o	o	o	o	o
Controller	x	o	o	o	o	o
Power cord and connect wiring harness	x	o	o	o	o	o
Pumps and drives	x	o	o	o	o	o
Housing	o	o	o	o	o	o
Door and its constituent parts	x	o	o	o	o	o
Drum-system and its constituent parts	x	o	o	o	o	o
Water supply components (exempted dryer)	x	o	o	o	o	o

This table was developed according to the provisions of SJ/T 11364.

- o The content of such hazardous substance in all homogeneous materials of such component is below the limit required by GB/T 26572.
- x The content of such hazardous substance in a certain homogeneous materials of such component is beyond the limit required by GB/T 26572.



A series of horizontal lines for writing, consisting of 20 lines in total. The lines are evenly spaced and extend across the width of the page.



A series of horizontal lines for writing, consisting of 20 lines in total. The lines are evenly spaced and extend across the width of the page.

EN

总经销商：博西家用电器（中国）有限公司

地址：

中国江苏省南京市鼓楼区清江南路18号3幢

客户服务热线：400 889 9999

客户服务电子邮箱：

careline.china@bshg.com

制造商：博西华家用电器有限公司

地址：

安徽省滁州市滁州经济技术开发区世纪大道1号

siemens-home.bsh-group.cn



9001877412

(040821)

en