

Gaggenau

en-us Use and Care Manual

GO470720, GO471720

Built-in oven

Further information and explanations are available online:



Table of contents

1 IMPORTANT SAFETY INSTRUCTIONS.....	4	7.4 Changing the temperature.....	22
1.1 Safety definitions.....	4	7.5 Displaying the current interior oven temperature	22
1.2 General information.....	4	7.6 Switching on the broiler and changing the broil setting	22
1.3 Safe use.....	4	7.7 Adding the broiler	22
1.4 Child safety	6	7.8 Opening the appliance door automatically after the cooking process	23
1.5 Cleaning function	6	7.9 Deactivating automatic appliance door opening	23
1.6 Proper installation and maintenance	7	7.10 Interrupting and continuing an operation	23
1.7 Remote operation	8	7.11 Opening and closing the control center	23
1.8 State of California Proposition 65 Warnings	8	7.12 Switching the interior lighting on or off	23
2 Preventing material damage	9	7.13 Switching off the appliance	23
2.1 General information.....	9	7.14 Switching on the appliance after automatic shut-off	23
2.2 Core temperature probe	9	7.15 Displaying information	23
2.3 Rotisserie spit	10	7.16 Displaying appliance information	24
3 Environmental protection and energy-saving	10	7.17 Using the quick guides	24
3.1 Disposal of packaging	10	8 Timer functions	24
3.2 Saving energy	10	8.1 Overview of the timer functions	24
4 Familiarizing yourself with your appliance	10	8.2 Call up the timer menu	24
4.1 Appliance	10	8.3 Exiting the timer menu	24
4.2 Oven cavity	11	8.4 Cooking time	24
4.3 Interior lighting	11	8.5 Cooking time end	25
4.4 Control elements	11	8.6 Total cooking timer	25
4.5 Types of heating	15	9 Long-term timer¹	26
4.6 Low power mode display	17	9.1 Selecting a period for the long-term timer	26
4.7 Additional information	17	9.2 Opening the long-term timer	26
4.8 Pop-up notifications.....	18	9.3 Selecting the settings for the interior lighting during the long-term timer	26
4.9 Quick guides	18	9.4 Setting heating cycles	26
4.10 Cooling fan.....	18	9.5 Changing the period for the long-term timer	27
4.11 Automatic switch-off	18	9.6 Changing settings for the interior lighting.....	27
4.12 Wipe protection	18	9.7 Changing the heating cycle	27
4.13 Proximity sensor	18	9.8 Deleting a heating cycle	27
4.14 Automatic door opening	18	9.9 Starting the long-term timer	27
4.15 Door lock.....	18	9.10 Switching off the long-term timer	27
4.16 Catalyzer heating	18	10 Child lock.....	27
5 Accessories.....	19	10.1 Activating the childproof lock	27
5.1 Other accessories	19	10.2 Deactivating the childproof lock	27
5.2 Sliding accessories into the oven cavity	20	11 Rotisserie spit	27
6 Before using for the first time	21	11.1 Preparing the rotisserie spit.....	28
6.1 Initial use.....	21	11.2 Switching on the rotisserie spit	30
7 Basic Operation	21	11.3 Switching off and removing the rotisserie spit.....	30
7.1 Switching on the appliance.....	21		
7.2 Opening the appliance door	21		
7.3 Changing the type of heating	22		

¹ Available depending on the software version.

11.4 Inserting the handle.....	30	19 Pyrolytic self-cleaning	49
11.5 Removing the food from the rotisserie spit	30	19.1 Preparing pyrolytic self-cleaning.....	50
11.6 Removing the handle	31	19.2 Preparing the cleaning of accessories with the pyrolytic self-cleaning function.....	50
11.7 Storing the rotisserie spit.....	31	19.3 Starting the pyrolytic self-cleaning function.....	50
12 Searing function.....	31	19.4 Stopping the pyrolytic self-clean	51
12.1 Starting the searing function.....	31	20 Troubleshooting	52
12.2 Ending the searing function early	31	20.1 Power failure	53
13 Favorites	32	20.2 Demo mode.....	53
13.1 Creating the first favorites	32	21 Disposal	53
13.2 Selecting a favorite.....	32	21.1 Disposal of your old appliance.....	53
13.3 Renaming a favorite	32	22 How it works	53
13.4 Starting a favorite	32	22.1 General cooking tips.....	53
13.5 Changing a favorite	32	23 Customer Service.....	54
13.6 Deleting a favorite	32	23.1 Model number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)	54
14 Programs	32	23.2 Rating plate location.....	54
14.1 Automatic programs	32	24 Information regarding Free and Open Source Software	54
14.2 Recommended settings	33	25 STATEMENT OF LIMITED PRODUCT WARRANTY	55
15 Core temperature sensor	34	25.1 What this warranty covers & Who it applies to.....	55
15.1 Inserting the core temperature probe into the food.....	35	25.2 How long the warranty lasts	55
15.2 Turning the food	36	25.3 Repair/replace as your exclusive remedy	55
15.3 Setting the core temperature probe.....	36	25.4 Out of warranty product.....	56
15.4 Deleting the set core temperature	37	25.5 Warranty exclusions	56
15.5 Changing the set core temperature	37	25.6 Obtaining warranty service	56
15.6 Core temperature guideline values.....	37	25.7 Product information	56
15.7 Estimated cooking time	38		
16 Home Connect®	38		
16.1 Setting up Home Connect®.....	38		
16.2 Home Connect® settings	38		
16.3 Starting functions with the Home Connect® app via manual Remote start	39		
16.4 Starting functions with the Home Connect® app via permanently activated Remote start	39		
16.5 Using the Home Connect® app to change settings	39		
16.6 Switching the Wi-Fi on or off	39		
16.7 Software update.....	39		
16.8 Data Protection	40		
17 Basic settings.....	41		
17.1 Overview of the basic settings.....	41		
17.2 Changing the basic settings	47		
18 Cleaning and maintenance.....	47		
18.1 Cleaning agents	47		
18.2 Microfiber cloth.....	48		
18.3 Removing the shelf supports.....	48		
18.4 Fitting the shelf supports	49		
18.5 Cleaning the fully extendable telescopic pull-out rack.....	49		
18.6 Cleaning the rotisserie spit.....	49		



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

Read all of the instructions carefully before using the appliance. In order to reduce the risk of fire, electric shocks and personal injuries when using the appliance, follow the basic safety precautions, including the following safety instructions.

1.1 Safety definitions

Here you can find explanations of the safety signal words used in this manual.

WARNING

This indicates that death or serious injuries may occur as a result of non-observance of this warning.

CAUTION

This indicates that minor or moderate injuries may occur as a result of non-observance of this warning.

NOTICE:

This indicates that damage to the appliance or property may occur as a result of non-compliance with this advisory.

Note: This alerts you to important information and/or tips.

1.2 General information

Here you can find general information about this manual.

- Please read this manual carefully.
- Observe the safety instructions and warnings.
- Keep the manual and the product information in a safe place for future reference or for the next owner.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.

This appliance is intended for use up to a maximum height of 13,100 feet (4000 meters) above sea level.

1.3 Safe use

WARNING

When properly cared for, your new appliance has been designed to be safe and reliable.

- ▶ Read all instructions carefully before use. These precautions will reduce the risk of burns, electric shock, fire, and injury to persons.
- ▶ When using kitchen appliances, basic safety precautions must be followed, including those in the following pages.

WARNING

While cooking food items, small amounts of certain by-products, such as particulate matter / soot, can be released. To minimize exposure to these substances:

- ▶ Always ensure proper ventilation by using an appropriate ventilation fan or hood vented to the outside and/or an open window.
- ▶ Always operate the unit according to the instructions in this manual.

WARNING

Overheated materials can cause fire or burns and may produce potentially harmful smoke or fumes.

- ▶ To prevent overheating, turn ventilation hood ON when heating grease, fats or frying using medium to high heat settings.
- ▶ Avoid heating empty pots and pans.
- ▶ Do not allow pans to boil dry.
- ▶ Do not allow aluminum foil, plastic, paper, or cloth to come in contact with a hot surface element, burner, or grate.

WARNING

If materials inside an oven or warming drawer should ignite, keep door closed.

- ▶ Turn off the appliance and disconnect the circuit at the circuit breaker box.

A fire could occur during cooking.

- ▶ Always have a working smoke detector near the kitchen.
- ▶ Have an appropriate fire extinguisher available, nearby, highly visible and easily accessible near the appliance.

NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil.

- ▶ Doing so blocks air flow through the oven.
- ▶ Aluminum foil linings may also trap heat, causing a fire hazard.

Cooking fires can spread if extinguished incorrectly.

- ▶ Never use water on cooking fires.

Wear Proper Apparel. Loose-fitting or hanging garments, such as ties, scarves, jewelry, or dangling sleeves, should never be worn while using the appliance.

- ▶ Tie long hair so that it does not hang loose.
 - ▶ Secure all loose garments, etc. before beginning.
- In the event that personal clothing or hair catches fire, drop and roll immediately to extinguish flames.



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

Do Not Use Water on Grease Fires.

- ▶ Smother fire or flame or use dry chemical or foam-type extinguisher.

CAUTION

The oven vents are important for air circulation. Covering the oven vents will cause the oven to overheat. Refer to the appliance overview for the location of the oven vents.

- ▶ Do not obstruct oven vents.

WARNING

Use Only Dry Potholders - Moist or damp potholders on hot surfaces may result in burns from steam.

- ▶ Do not let potholders touch hot heating elements.
- ▶ Do not use a towel or other bulky cloth.

DO NOT TOUCH HEATING ELEMENTS OR INTERIOR SURFACES OF OVEN - Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns.

- ▶ During and after use, do not touch, or let clothing, potholders, or other flammable materials contact heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the appliance may become hot enough to cause burns.

Among these surfaces are oven vent openings, surfaces near these openings and oven doors.

Use Care When Opening Door - Let hot air or steam escape before removing or replacing food.

- ▶ Standing to the side, open the door (or drawer) slowly and slightly to let hot air and/or steam escape.
- ▶ Keep your face clear of the opening and make sure there are no children or pets near the appliance.
- ▶ After the release of hot air and/or steam, proceed with your cooking.
- ▶ Keep doors shut unless necessary for cooking or cleaning purposes.
- ▶ Do not leave open doors unattended.

Do not clean the appliance while it is still hot. Some cleaners produce noxious fumes when applied to a hot surface. Wet clothes and sponges can cause burns from steam.

CAUTION

Use caution when cooking foods with high alcohol content (e.g. rum, brandy, bourbon) in the oven. Alcohol evaporates at high temperatures. There is a risk of burning as the alcohol vapors may catch fire in the oven.

- ▶ Use only small quantities of alcohol in foods, and open the oven door carefully.

Placement of Oven Racks - Always place oven racks in desired location while oven is cool. If the rack must be moved while the oven is hot, do not let potholders contact the hot heating elements in the oven. Use caution when removing oven racks from the lowest rack position to avoid contact with the hot oven door.

WARNING

Storage in or on Appliance - The use of corrosive chemicals in heating or cleaning will damage the appliance and could result in injury.

- ▶ Flammable materials, corrosive chemicals, vapors or non-food products should not be stored or used in an oven or on or near surface units.
- ▶ The appliance is specifically designed for use when heating or cooking food.

This appliance is intended for normal family household use only. It is not approved for outdoor use. See the Statement of Limited Product Warranty. If you have any questions, contact the manufacturer.

WARNING

Using this appliance other than for its intended use can cause fire or injury to persons.

- ▶ Use this appliance only for its intended use as described in this manual.
- ▶ NEVER use your appliances as a space heater for warming or heating the room. Doing so may result in overheating the appliance.
- ▶ Never use the appliance for storage.

WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A GREASE FIRE, OBSERVE THE FOLLOWING.

- ▶ **SMOTHER FLAMES** with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. **BE CAREFUL TO PREVENT BURNS.** If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**
- ▶ **NEVER PICK UP A FLAMING PAN** – You may be burned.
- ▶ **DO NOT USE WATER**, including wet dishcloths or towels – a violent steam explosion will result.
- ▶ Use an extinguisher **ONLY** if:
 - You know you have a Class ABC extinguisher, and you already know how to operate it.
 - The fire is small and contained in the area where it started.
 - The fire department is being called.
 - You can fight the fire with your back to an exit.



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

Do not heat or warm unopened food containers. Build-up of pressure may cause the container to burst and cause injury.

Failure to operate knobs properly may result in personal injury and damage to the appliance.

Cooking or roasting bags might explode.

- ▶ Follow the manufacturer's directions when using cooking or roasting bags.

CAUTION

To avoid possible injury or damage to the appliance, ensure oven rack is installed exactly per installation instructions and not backwards or upside down.

Do not place anything on the oven cavity bottom. Do not cover it with aluminum foil. A build-up of heat could damage the appliance or cause injury.

WARNING

Moisture intrusion may cause an electric shock.

- ▶ Do not use any steam cleaners or high-pressure cleaners to clean the appliance.

To avoid risk of injury from a damaged appliance or damaged power cord, observe the following.

- ▶ Do not turn the power on if the appliance or the power cord is damaged. Doing so may cause injury.
- ▶ Never operate a damaged appliance.
- ▶ If the appliance or the power cord is damaged, immediately switch off the breaker in the circuit breaker box.
- ▶ Call Customer Service. → *Page 54*
- ▶ Repairs to the appliance should only be performed by an authorized service provider.

WARNING

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

1.4 Child safety

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,

unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

When children become old enough to use the appliance, it is the responsibility of the parents or legal guardians to ensure that they are instructed in safe practices by qualified persons.

WARNING

Do not allow children to use this appliance unless closely supervised by an adult.

- ▶ Children and pets should not be left alone or unattended in the area where the appliance is in use. They should never be allowed to play in its vicinity, whether or not the appliance is in use.

Do not allow anyone to climb, stand, lean, sit, or hang on any part of an appliance, especially a door, warming drawer, or storage drawer.

- ▶ This can damage the appliance, and the unit may tip over, potentially causing severe injury.

Do not let children play with the appliance.

CAUTION

Do not store items of interest to children in an appliance, in cabinets above an appliance or on the backguard of an appliance. Children climbing on the appliance to reach items could be seriously injured.

Do Not Leave Children Alone.

- ▶ Children should not be left alone or unattended in the area where the appliance is in use.
- ▶ They should never be allowed to sit or stand on any part of the appliance.
- ▶ Always check inside the oven before turning it on.

WARNING

To avoid the risk of suffocation:

- ▶ Do not allow children to play with packaging material.
- ▶ Store small parts safely as they can be a choke hazard.

1.5 Cleaning function

Follow these safety instructions when using the cleaning function.

WARNING

Do not block the oven vent(s) during the self-cleaning cycle. Always operate the unit according to the instructions in this manual.



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

WARNING

During the elimination of soil during self-cleaning, small amounts of carbon monoxide can be created and the fiberglass insulation could give off very small amounts of formaldehyde during the first several cleaning cycles.

- ▶ To minimize exposure to these substances, provide good ventilation with an open window, or use a ventilation fan or hood.

The oven heats up to a very high temperature during self cleaning. Opening the door can result in injury.

- ▶ When self-cleaning, confirm that the door locks and will not open.
- ▶ If the door does not lock, do not run Self Clean. Contact Customer Service.

WARNING

The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children at a safe distance.

WARNING

Do not leave food or cooking utensils, etc., in an oven during the pyrolytic self-cleaning mode of operation.

CAUTION

Remove broiler pans, pots, and other utensils and excess spillage before self-cleaning.

CAUTION

Birds have very sensitive respiratory systems.

- ▶ Keep pet birds out of the kitchen or other rooms where kitchen fumes could reach them.
- ▶ During self clean, fumes are released that may be harmful to birds.
- ▶ Other kitchen fumes such as overheating margarines and cooking oils may also be harmful.

WARNING

Do not clean the door gasket – The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.

WARNING

Do not use a protective coating to line the oven and do not use commercial oven cleaner.

Clean only parts listed in this manual.

Please note that some pets or humans can be sensitive to the odors created during the self-cleaning process whether it is a manufacturing residue burn off or food. It is recommended that those potentially affected be removed from the kitchen area during the self-clean process.

1.6 Proper installation and maintenance

WARNING

In the event of a malfunction, it might become necessary to turn off the power supply.

- ▶ Have the installer show you the circuit breaker or fuse. Mark it for easy reference.

To avoid electrical shock hazard, before servicing the appliance, turn power off at the service panel and lock the panel to prevent the power from being switched on accidentally.

Proper Installation - Improper installation or grounding can cause electric shock.

- ▶ This appliance must be properly installed and grounded by a qualified technician.
- ▶ Connect only to properly grounded outlet.
- ▶ Refer to installation instructions for details.

User Servicing - Do not repair or replace any part of the appliance unless specifically recommended in this manual.

- ▶ All other servicing should be referred to an authorized service provider.

WARNING

Grease and fat can ignite when heated.

- ▶ Keep the oven free from grease build up.

CAUTION

In the event of an error the display flashes and beeps continuously.

- ▶ Disconnect appliance from the power supply and call an authorized service provider.

WARNING

Malfunctions can cause injuries.

- ▶ Do not operate this appliance if it is not working properly, or if it has been damaged. Contact an authorized service provider.



IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

1.7 Remote operation

CAUTION

This appliance may be configurable to allow remote operation at any time.

- ▶ Do not store any flammable materials or temperature sensitive items inside, on top or near surface units of the appliance.

1.8 State of California Proposition 65 Warnings

This product may contain a chemical known to the State of California, which can cause cancer or reproductive harm. Therefore, the packaging of your product may bear the following label as required by California:

STATE OF CALIFORNIA PROPOSITION 65 WARNING:



WARNING

Cancer and Reproductive Harm - www.P65Warnings.ca.gov

2 Preventing material damage

2.1 General information

NOTICE:

Objects on the oven cavity floor will cause heat to build up. The baking and roasting times will no longer be correct and the enamel will be damaged.

- ▶ Do not place anything directly on the oven cavity floor.
- ▶ Do not cover the oven cavity floor with any sort of foil or baking parchment.

When the oven cavity is hot, any water inside it will create steam. The change in temperature that occurs as a result may cause damage.

- ▶ Never pour water into the oven cavity when it is still hot.
- ▶ Never place cookware containing water on the oven cavity floor.

The prolonged presence of moisture in the oven cavity leads to corrosion.

- ▶ Do not keep moist food in the closed oven cavity for extended periods of time.
- ▶ Do not store food in the oven cavity.

Fruit juice dripping from the baking tray leaves stains that cannot be removed.

- ▶ When baking very juicy fruit flans, do not pack too much on the baking tray.
- ▶ If possible, use the deeper universal pan.

If aluminum foil comes into contact with the door pane, it could cause permanent discoloration.

- ▶ Do not allow aluminum foil in the oven cavity to come into contact with the door pane.

Leaving the appliance to cool down with the door open will damage the front of adjacent units over time.

- ▶ Always allow the oven cavity to cool down with the door closed after cooking at high temperatures.
- ▶ Do not trap anything in the appliance door.
- ▶ Only leave the oven cavity to dry with the door open if a lot of moisture was produced during operation.

If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged.

- ▶ Always keep the seal clean.
- ▶ Never operate the appliance if the seal is damaged or missing.


Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.
- ▶ Do not place any cookware or accessories on the appliance door.

With certain models, accessories may scratch the door panel when closing the appliance door.

- ▶ Always slide accessories into the oven cavity as far as they will go.

Carrying the appliance by the appliance frame may cause it to bend. The appliance frame cannot support the weight of the appliance.

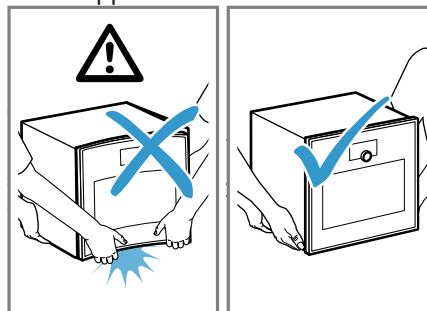

- ▶ Do not lift the appliance using the appliance frame.
- ▶ Always lift the appliance at the casing.

The heat during the pyrolytic self-cleaning may damage certain accessories.

- ▶ Do not clean the wire rack, rotisserie spit, cast iron roaster, baking stone, core temperature probe or other accessories using the pyrolytic self-cleaning function.
- ▶ Only clean GAGGENAU baking trays and grill trays with the pyrolytic self-cleaning function.

Using cleaning agents before the pyrolytic self-cleaning cycle may damage the cooking compartment and the glass on the appliance door.

- ▶ Before the pyrolytic self-cleaning cycle, do not use any cleaning agents in the cooking compartment or on the inside of the appliance door.

The oven's wire rack is not suitable for the combi-steam oven. Corrosion may form on the oven's wire rack.

- ▶ Do not use the oven's wire rack in the combi-steam oven.

2.2 Core temperature probe

WARNING

An incorrect core temperature probe may damage the insulation.

- ▶ Only use the core temperature probe that is suitable for this appliance.

NOTICE:

Temperatures above 480°F (250°C) damage the core temperature probe.

- ▶ Only use the core temperature probe in your appliance at a maximum temperature of 480°F (250°C).
- ▶ Do not use the core temperature probe with any broil heating mode.
- ▶ Before using a broil heating mode, remove the core temperature probe from the oven cavity.

You may damage the cable of the core temperature probe with the appliance door.

- ▶ Do not trap the cable of the core temperature probe in the appliance door.

The heat of the grilling surface may damage the core temperature probe.

- ▶ Ensure that the distance between the glass grilling surface and the core temperature probe and the cable of the core temperature probe is a few centimeters. In doing so, ensure that the meat can expand during the cooking process.

Aggressive cleaning agents may damage the core temperature probe.

- ▶ Do not clean the core temperature probe in the dishwasher.

2.3 Rotisserie spit

To prevent material damage to your accessory, observe the following information.

NOTICE:

The heat in the oven causes damage to the handle of the rotisserie spit.

- ▶ Do not place the handle of the rotisserie spit in the oven.

Cleaning the rotisserie spit drive in the dishwasher can damage it.

- ▶ Do not clean the rotisserie spit drive in the dishwasher. Temperatures above 480°F (250°C) damage the rotisserie spit.
- ▶ Only use the rotisserie spit in your appliance at a maximum temperature of 480°F (250°C).

3 Environmental protection and energy-saving

3.1 Disposal of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

When cooking multiple dishes, do so in succession or in parallel.

- ✓ The oven cavity is heated after cooking the first dish. This reduces the heating-up time for the following dishes.

If the cooking time is relatively long, you can switch the appliance off 10 minutes before the cooking time ends.

- ✓ There will be enough residual heat to finish cooking the dish.

When operating with the "Moist baking", "Convection plus" and "Economy convection" type of heating, you can bake on several levels at the same time.

- ✓ This will save energy.

Use dark-colored or black-coated baking tins.

- ✓ These types of baking tin absorb the heat particularly well.

Open the appliance door as little as possible during operation.


- ✓ This maintains the temperature in the oven cavity and eliminates the need for the appliance to reheat.

4 Familiarizing yourself with your appliance

This Use and Care Manual covers several models. Your model may have some but not all of the features listed.

4.1 Appliance

Here you can find an overview of the parts of your appliance.

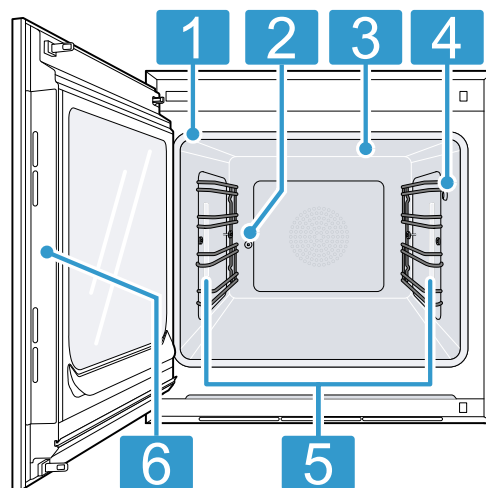

1	Door seal
2	Rotisserie spit socket
3	Broiling area
4	Connection socket for core temperature probe → Page 34
5	Interior lighting
6	Intended area for opening the door

4.2 Oven cavity

The oven cavity has 4 shelf levels. Count the shelf levels from the bottom up.

⚠ WARNING

The inside of the appliance door becomes very hot during operation.

- ▶ During or after operation of the appliance, only touch the appliance door at the surface intended for this on the side.
- ▶ Always open the appliance door as far as it will go.


NOTICE:

Objects on the oven cavity floor will cause heat to build up. The baking and roasting times will no longer be correct and the enamel will be damaged.

- ▶ Do not place anything directly on the oven cavity floor.
- ▶ Do not cover the oven cavity floor with any sort of foil or baking parchment.

The accessories may tip.

- ▶ Do not push the accessories between the shelf positions.

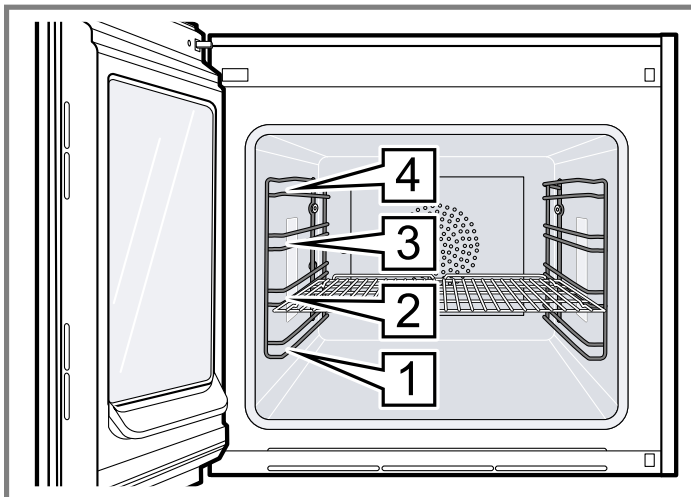

Shelf level 4 is not suitable for cooking.

4.3 Interior lighting

When you open the appliance door, the interior lighting switches on. If the appliance door remains open for longer than around 3 minutes, the interior lighting switches off.

⚠ WARNING

The light emitted by LED lights is very dazzling, and can damage the eyes (risk group 1).

- ▶ Do not look directly into the switched on LED lights for longer than 100 seconds.

You can also switch on the interior lighting when the appliance is in low power mode.

After approximately 20 minutes, the appliance switches the interior lighting off.

When you switch on the appliance, the appliance switches the interior lighting on.

→ "Switching the interior lighting on or off", Page 23


In most operating modes, the appliance keeps the interior lighting switched on.

You can specify whether the appliance will switch the interior lighting on during operation in the basic settings → Page 41. If you select the "Manual" setting in the basic settings, the appliance does not switch on the interior lighting automatically but you can switch on the interior lighting when required. After approximately 30 seconds, the appliance switches the interior lighting off.


4.4 Control elements

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

On certain models, specific details may differ from those pictured.

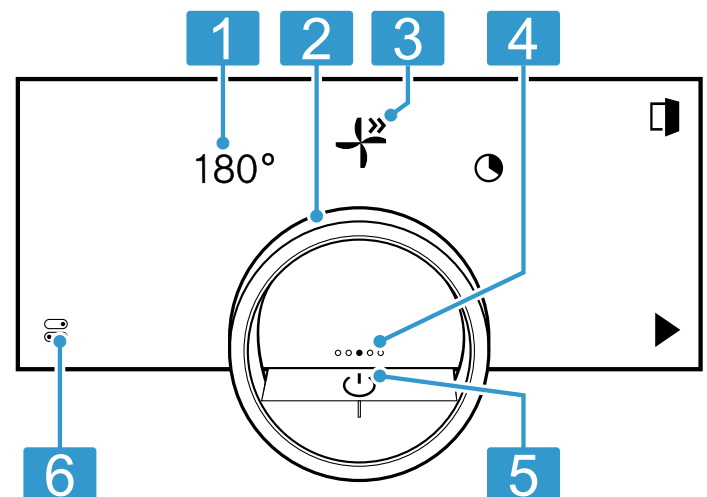


1	Symbols	Show settings, and start or end functions.
2	Control ring	Use the control ring to change the selection.
3	12 o'clock position	The 12 o'clock position shows the value that is currently selected for a function, which you can change using the control ring. If required, press on another function, e.g. on the temperature or cooking time, to position this at the 12 o'clock position.

4	Position indicator	The filled point on the display in the middle of the control ring shows the current horizontal navigation position between the appliance displays.
5	On/off button	Switch the appliance on and off.
6	Status line	<p>The status line shows the current status of functions or appliance components, e.g.:</p> <ul style="list-style-type: none">■ Home Connect® connection status■ Child lock <p>Press  to open the control center → <i>Page 14</i>.</p>

Control ring

Operation using the control ring is only possible when the appliance is switched on. You can use the control ring to navigate through the ring menus or the list menus and select settings.

When you touch the control ring, the display shows a ring in orange behind the control ring.

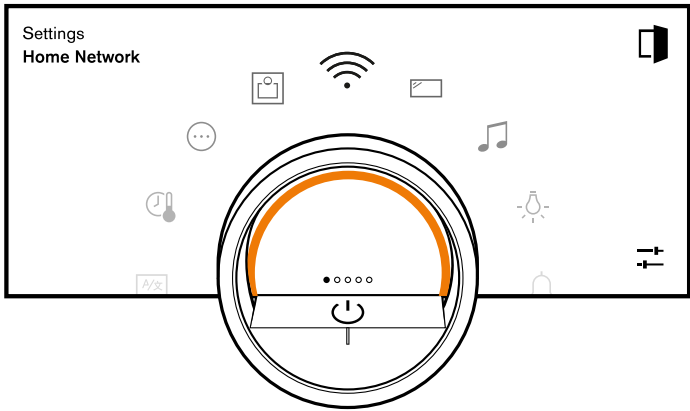

While operating the appliance, you can only use the control ring if you first select a function on the display.

Turn	<p>Navigate in ring menus and list menus:</p> <ul style="list-style-type: none">■ Turn the control ring to the right to increase the values.■ Turn the control ring to the left to decrease the values.■ Turn the control ring to the right or left quickly to change the values in larger increments.
------	--

You can set how the control ring behaves in the basic settings → *Page 41*. In the "Standard" setting, press on the required function on the display and use the control ring to change the value of the function.

In the "Quick selection" setting, use the control ring, which is at the 12 o'clock position, to directly change the values for the function.


Process visualization

For process visualization, the appliance shows a section of a circle in orange behind the control ring.

The appliance shows the section of a circle in orange behind the control ring under the following conditions:

- A cooking time is set.

- A core temperature is set for the core temperature probe.

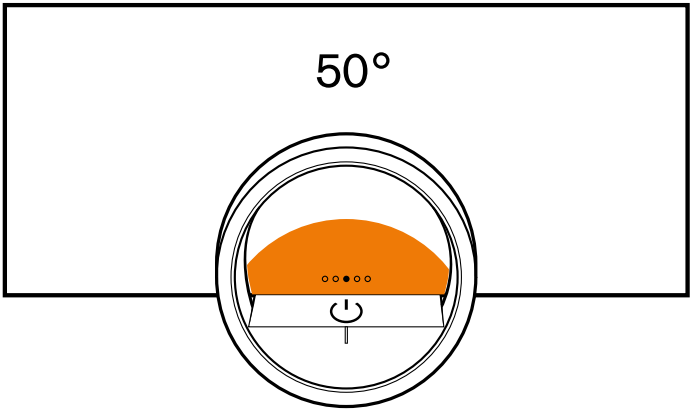

The section of the circle in orange becomes larger the longer the timer runs or the closer the core temperature of the food approaches the set core temperature.

If no cooking time and no core temperature are set, the section of the circle pulsates in orange.

Display

The display shows the selected settings and setting options, as well as messages about the appliance's operating status.

Press	Selects or confirms the procedure or function
Press and hold	Displays additional information
Swipe horizontally	<p>Navigates between appliance displays</p> <p>For example, in the "Manual" appliance display, swipe to the left or right</p> <p>Note: You can only use the function if you are in an appliance display → <i>Page 13</i> and no program is running.</p>

Note: If no display language is available in your national language, select a display language that is available, e.g. English.

Symbols

Use the symbols to start or stop functions, or to navigate in the appliance menu.

Operation

Symbol	Function
	Switch the appliance on or off at the control ring
	Opening the appliance door → <i>Page 21</i>
	Open the control center → <i>Page 23</i>
	Edit settings
	Call up additional information → <i>Page 23</i>
	Save a favorite → <i>"Favorites", Page 32</i>
	Edit a favorite
	Deleting a favorite
	Tip for calling up programs → <i>Page 32</i>
	Start
	Stop
	Switch to the next step
	Back or accept settings
	Next
	Confirm
	Delete
	Cancel
	Turning on the broiler
	Switching between the display for the preferred types of heating and the display of all available types of heating → <i>"Basic settings", Page 41</i>

Symbols in the control center

Symbol	Function
	Opening the appliance door automatically after the cooking process → <i>Page 23</i>
	Activate or deactivate the child lock → <i>Page 27</i>
	Switch the interior lighting on or off → <i>Page 23</i>

Timer functions

Symbol	Function
	Call up the timer menu → <i>Page 24</i>

Appliance displays

You can find an overview of the appliance displays here.

Symbol	Function
	Call up the long-term timer → <i>Page 26</i>
	Deleting the heating cycle from the long-term timer → <i>Page 27</i>
	Delaying the cooking time end → <i>Page 25</i>

Rotisserie spit

Symbol	Function
	Start and stop the rotisserie spit.

Searing function

Symbol	Function
	Searing function ¹

¹ This function is currently unavailable.

Cleaning and maintenance

Symbol	Function
	Pyrolytic self-cleaning

Status

Symbol	Function
	Remote start → <i>Page 39</i>
	Core temperature probe is inserted → <i>"Core temperature sensor", Page 34</i>
	Core temperature probe is missing
	Rotisserie spit is inserted
	Status display for the heating process
	Display of a cooling process
	Appliance is in demo mode → <i>Page 53</i>

Status in the control center

Symbol	Function
	Connection to the router: Strong → <i>"Home Connect®", Page 38</i>
	Connection to the router: Ok → <i>"Home Connect®", Page 38</i>
	Connection to the router: Weak → <i>"Home Connect®", Page 38</i>
	No connection to the router. → <i>"Home Connect®", Page 38</i>
	Appliance connected to the router. No connection to the Home Connect server. → <i>"Home Connect®", Page 38</i>
	Software update status

Appliance displays	Use	Position indicator
Settings	<ul style="list-style-type: none">Adjusting the basic settings → <i>Page 41</i>Adjusting the Home Connect® settings → <i>Page 38</i>	●○○○○
Modes & Service	<ul style="list-style-type: none">Starting the pyrolytic self-cleaning functionStarting the quick guide → <i>Page 24</i>	○●○○○
Manual operation	Setting the temperature, type of heating and timer function	○○●○○
Favorites	Calling up favorites → <i>Page 32</i>	○○○●○
Programs	Calling up automatic programs and recommended settings → <i>Page 32</i>	○○○○●

Tip: In the basic settings → *Page 41*, you can set which appliance menu your appliance starts in.

Colors

The different colors are used to guide the user in the relevant setting situations.

Red	<ul style="list-style-type: none">Error messages for which you may need the help of customer service.
Orange	<ul style="list-style-type: none">Information that you must observe so that you can continue to use your applianceSymbols for starting and stopping
White	<ul style="list-style-type: none">InformationAdditional information

Appearance


Depending on the situation, the appearance of symbols, values or the entire display changes.


Zooming in ring menus and list menus	When you use the control ring to select a list entry in a list menu, the display enlarges this list entry and displays it as underlined. When you use the control ring to select a value in a ring menu, the display shows this value enlarged in the 12 o'clock position.
Zoom at end of cooking or core temperature probe	A few minutes before the cooking process ends, the appliance shows the remaining cooking time enlarged in the center of the display. As soon as the current core temperature is just a few degrees below the set

value, the display shows the current core temperature enlarged. All other displays are hidden.

Pared-down display	If the appliance does not detect a user in the immediate vicinity, the appliance reduces the amount of information shown on the display and only the most important information remains. This function is preset. You can change the setting in the basic settings → <i>Page 41</i> .
--------------------	---

Control center





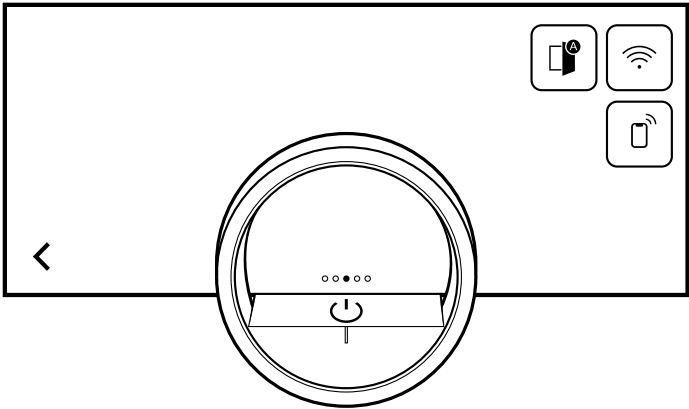

The control center  provides you with access to functions that are only visible in the status bar via symbols. You can activate or deactivate functions in the control center.



  On the left-hand side, the display shows the symbols and texts with information on the current status of the appliance. On the right-hand side, the display shows the touch fields of the control center.









4.5 Types of heating

 This is where you will find an overview of the types of heating. You will find recommendations for using the types of heating.






Symbols	Function/type of heating	Temperature/setting	Use
	Convection plus	122-570°F (50-300°C)	The heat that arises from the back wall of the oven is combined with top and bottom heat and is distributed quickly and optimally by the fan. For baking and cooking on one or more levels. For moist cakes, cookies, bakes, gratins, and meat.
	Economy convection	122-480°F (50-250°C)	Energy-saving mode in which the heat arises from the back wall of the oven cavity and is distributed quickly and evenly by the fan. Convenience functions such as interior lighting remain switched off and the temperature is only displayed during the heating phase. For baking on one level. For cakes, meat, bakes. No preheating is required. The interior lighting can be switched on for a few seconds in the control center.
	Moist baking	122-480°F (50-250°C)	The heat is distributed gently and the inherent moisture of the food is retained in the oven cavity to prevent it from drying out. The interior lighting remains switched off and can be switched on for a few seconds in the control center. For baking on one or more levels. For dry cakes, cookies, and gratins.
	Top + bottom heat	122-570°F (50-300°C)	Constant heat from above and below creates an ideal baking area and preserves the moisture in the food. Only suitable for baking on one level. For cakes, tarts, quiches.
	Top + 1/3 bottom heat	122-570°F (50-300°C)	Constant heat from above, combined with low heat from below. For additional baking time. For bakes, covered cakes.
	Top heat	122-570°F (50-300°C)	Constant heat, targeted from above. For meringues on fruit cakes.

 ¹ This function is currently unavailable.

² Do not preheat the appliance.

Symbols	Function/type of heating	Temperature/setting	Use
	Bottom heat + 1/3 top heat	122-570°F (50-300°C)	Constant heat from below, combined with low heat from above. For lightly browned quiches and tarts, cheesecake, bread in loaf tins, dishes in a bain marie and braising without a lid.
	Bottom heat	122-570°F (50-300°C)	Constant heat, targeted from below. For cooking in a bain marie, boiling down or as additional baking time for moist fruit bases and quiches.
	Convection + bottom heat	122-570°F (50-300°C)	The heat arises from the back wall of the oven and is distributed quickly and evenly by the fan. Heat is also added from below. For moist cakes, fruit bases, cheesecakes.
	Convection + 1/3 bottom heat	122-570°F (50-300°C)	The heat arises from the back wall of the oven and is distributed quickly and evenly by the fan. Low heat is also added from below. For small cakes and tarts.
	Broil + circulated air	122-570°F (50-300°C)	Extremely intensive heat from above, which is distributed quickly and evenly by the fan. Guarantees that a crust is formed with simultaneous all-round heating. For meat, poultry, fish, vegetable skewers. No preheating is required.
	Broiler	low, medium, high Default setting: 2, medium	Extremely intensive heat from above. Ideal for broiling and gratinating. For chicken legs (broil setting 1), vegetables (broil setting 2), strips of bacon and toast (broil setting 3).
	Baking stone function	122-570°F (50-300°C)	Optimal heating of the baking stone with extra-strong, targeted bottom heat. For crispy baked pizza, tarte flambée, bread and bread rolls. It can only be used in conjunction with the GAGGENAU baking stone (special accessory).
	Roaster operation	122-430°F (50-220°C)	Optimal heating of the roaster with bottom heat. For roasting, stews and casseroles. It can only be used for the Gaggenau cast iron roaster and in conjunction with the pull-out system ¹ (special accessory).

¹ This function is currently unavailable.² Do not preheat the appliance.

Symbols	Function/type of heating	Temperature/setting	Use
	Air frying	122-570 °F (50-300 °C)	Extra-fast heat circulation in which the moisture is actively extracted from the cooking compartment. For extremely crispy results with little additional fat. For potatoes, poultry, meat, vegetables. Only in conjunction with the Gaggenau baking tray for hot-air frying (optional accessory).
	Drying ²	85-175 °F (30-80 °C)	For drying thin slices of fruit or vegetables or herbs. When heat is circulating, moisture is actively extracted from the oven cavity.
	Dough proofing ²	85-120 °F (30-50 °C)	Optimal temperature range for proving dough batches and pieces of dough. For yeast dough and sourdough.
	Keeping warm ²	120-195 °F (50-90 °C)	Optimal temperature range for keeping food warm and preheating cookware.
	Defrosting ²	104-140 °F (40-60 °C)	Optimal temperature range for gently defrosting frozen food. For vegetables, fruit, cakes.

¹ This function is currently unavailable.


² Do not preheat the appliance.

4.6 Low power mode display

The appliance has different displays in low power mode. The displays depend on whether or not the appliance detects a user.

On the display without user detection, the appliance is switched off and the display is black. The appliance switches to low power mode without user detection if, when the appliance is switched on, you do not implement any settings for approx. 20 minutes or approx. 20 minutes after the appliance has completed a heating process. If the proximity sensor detects a user or if you touch the control ring or press on the display, the appliance switches to low power mode with user detection.


In low power mode with user detection, the display shows the door opening symbol and the status bar. In the basic settings → *Page 41*, you can select whether the display also shows the GAGGENAU logo.

If the appliance is connected to the Home Connect® app, the display shows .

→ *"Home Connect®", Page 38*


The user detection distance depends on the selected basic settings.

In low power mode with user detection, the display brightness is reduced. The brightness of the display depends on the viewing angle.

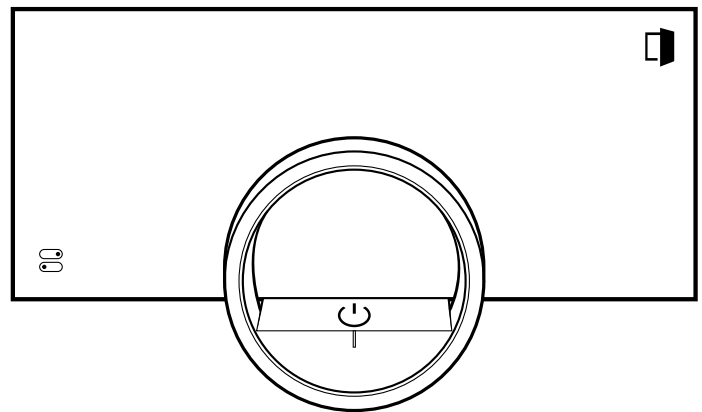

4.7 Additional information

If required, you can display additional information.

When you press on , the display shows additional information about the current function.

When you press and hold certain symbols or values, the display shows additional information about the current function. Additional information is available for all symbols that are arranged around the control ring, e.g. information about the set type of heating or current interior oven temperature.

In the basic settings → *Page 41*, you can activate or deactivate the "Info-i" function.

The appliance also occasionally displays important information about safety and the operating status automatically. These messages disappear automatically after a few seconds, or when you press ✓ to confirm the message.

For messages about Home Connect®, the appliance also displays the Home Connect® status.

→ "*Home Connect®*", *Page 38*

4.8 Pop-up notifications

Pop-up notifications contain explanations about current functions.

In the basic settings → *Page 41*, you can activate or deactivate the "Pop-up hints" function.

4.9 Quick guides

Your appliance comes with a quick guide to help you with various topics.

4.10 Cooling fan

The cooling fan switches on when the appliance is in operation. The hot air escapes beneath the door. After removing your food from the appliance, keep the door closed until the appliance has cooled down. The appliance door must not be left half open as this may damage adjacent kitchen units. The cooling fan continues running for a certain period of time after the appliance has stopped heating and then it switches itself off automatically.

Do not cover the ventilation slots. Otherwise, the appliance may overheat.

4.11 Automatic switch-off

For your protection, the appliance is equipped with an automatic shut-off function. The appliance switches off the heating process after 12 hours if you do not operate the appliance or program a cooking time during this time. The display shows a message.

If you set a cooking time, you can use the appliance for longer.

If you set a cooking time, you can operate the appliance in the "Drying" type of heating for a maximum of 72 hours, and in all other types of heating for a maximum of 24 hours.

When programming with the long-term timer → *Page 26*, the appliance switches off after up to 74 hours.

4.12 Wipe protection

Your appliance detects if you would like to clean the display or navigate between the appliance displays. The appliance locks the operation via the display and the control ring for a short time.

Press the display to return to the operation.


4.13 Proximity sensor

Your appliance detects whether you are in front of the appliance or moving towards it. Your appliance disregards if you are passing in front of it.

If you do not remain in the detection zone for the appliance when it is switched on, the appliance reduces the display to what is essential.

Note: You can set the distance at which the appliance can detect you in the basic settings. To ensure that the proximity sensor optimally detects the user, set the installation height of the appliance's upper edge in the basic settings → *Page 41*.



4.14 Automatic door opening

Press  and the appliance opens the door. Use the recessed grip on the side of the appliance to open the appliance door fully.

If the child lock is activated or in the event of a power failure, the automatic door opening function does not work. You can open the door by hand using the recessed grip on the side.

4.15 Door lock

The "Door lock" function prevents the appliance door from being opened accidentally. This is particularly useful when installing the appliance under the countertop.

In the basic settings → *Page 41*, you can activate or deactivate the "Door lock" function. When you activate the function and press , the display shows a slide control instead of the  symbol.

→ "*Opening the appliance door*", *Page 21*

4.16 Catalyzer heating

The catalyzer heating supports more effective elimination of odors.

In the basic settings → *Page 41*, you can switch the catalyzer heating on or off.

When you switch on the catalyzer heating, this reduces odor development.






To save energy, switch the catalyzer heating off.

5 Accessories

Only use original accessories. These are designed especially for your appliance.

Note: Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.

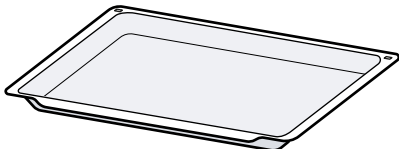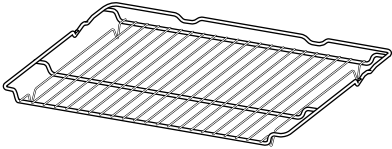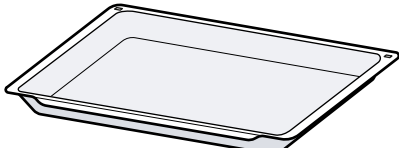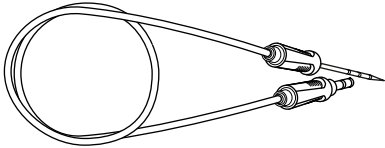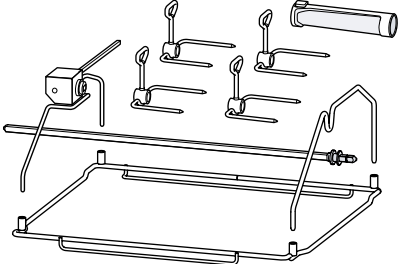Accessories		Use
Baking tray, enameled		<ul style="list-style-type: none"> ■ Tray bakes ■ Small baked items
Wire rack		<ul style="list-style-type: none"> ■ Cookware ■ Cake tins ■ Ovenproof dishes ■ Roaster
Broiling tray, enameled		<ul style="list-style-type: none"> ■ Tray bakes ■ Roaster
Core temperature sensor		<p>Core temperature probe → <i>Page 34</i> for the highly precise cooking of:</p> <ul style="list-style-type: none"> ■ Meat ■ Fish ■ Poultry ■ Bread
Rotisserie spit		<p>Rotisserie spit for evenly cooking:</p> <ul style="list-style-type: none"> ■ Poultry ■ Roaster

5.1 Other accessories

You can purchase other accessories from our Customer Service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online:

www.gaggenau.com

Accessories are appliance-specific. When purchasing, always check for compatibility with your appliance model number (E-Nr).

You can find out which accessories are available for your appliance in our online shop or from our Customer Service.

Other accessories	Order number
Baking tray, enameled, 1½" (30 mm) deep	BA026116

Other accessories	Order number
Broiling tray, enameled, 1½" (38 mm) deep	BA026117
Wire rack	BA036166
Baking tray for hot-air frying, perforated, enameled	BA020110
Baking stone, baking stone supports, and pizza paddle	BA056134
Pizza paddle	BS020003
Core temperature sensor	BA010050
Manual door opening aid	BA010050

5.2 Sliding accessories into the oven cavity



The accessories feature a rack stop function. The rack stop function prevents tilting of accessories when pulling them out. You must insert accessories in the oven cavity correctly so that tilt protection will work.

NOTICE:


The accessories may tip.

- ▶ Do not push the accessories between the shelf positions.

1. Tilt the rack to guide the rack stop in between the rails of the rack holders ①. Lower the rack and slide it into the oven cavity, so that the rack stop can engage ②.

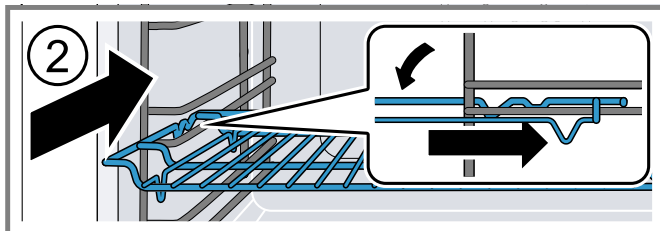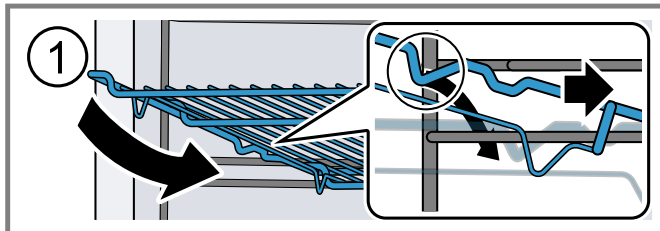


2. Make sure the rack's safety rail [a] is at the rear and top.

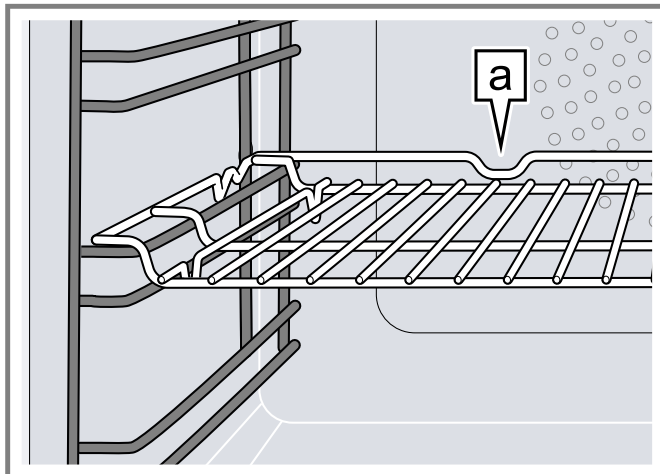


Sliding the baking tray and wire rack together into the oven cavity

1. Correctly position the wire rack on the baking tray.

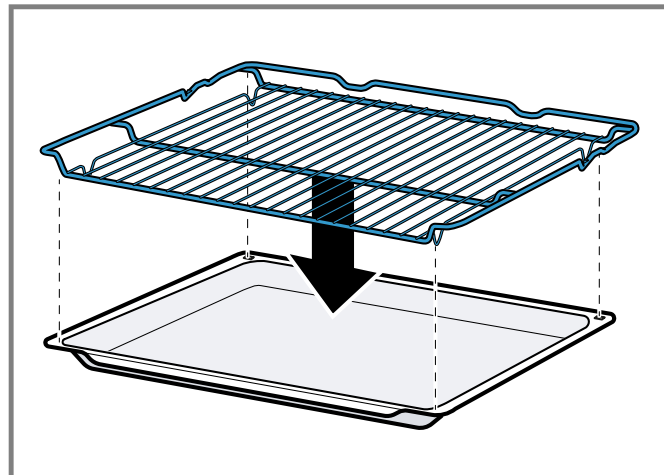


2. Slide the baking tray and wire rack together into the cooking compartment.

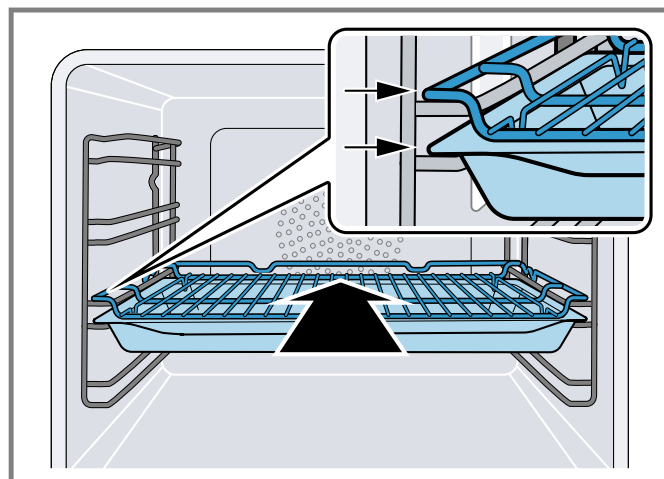


The wire rack slides over the current rack.

Sliding the broiling tray and wire rack together into the oven cavity

1. Correctly position the wire rack on the broiling tray.

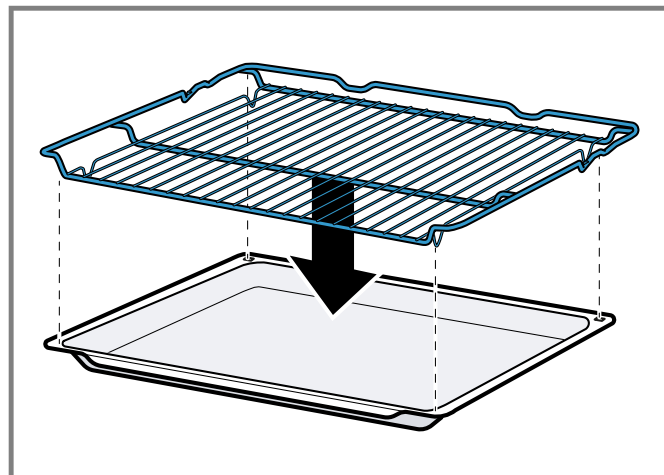

- Slide the broiling tray and wire rack together into the cooking compartment.

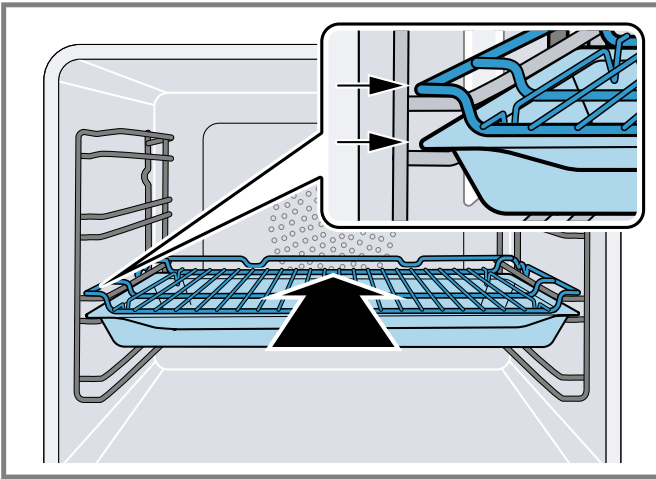

6 Before using for the first time

Apply the initial configuration settings. Clean the appliance and the accessories.

6.1 Initial use

Implement the settings for initial use before using your appliance.

First read the information under Safety.

The appliance must be installed and connected.

After connecting to the power supply, the appliance shows the "Initialization" display.

The appliance shows the "Initialization" display when it is first switched on after being connected to the power supply, if the initial start-up has not been completed successfully or the appliance has been restored to the factory settings.

Implement the following settings:

- Setting the language
- Activating Home Connect®
- Set the temperature unit
- Set the weight unit
- Setting the time format
- Set the time

You can retroactively change all of the settings in the basic settings → *Page 41*.

Follow the instructions in the display. The display guides you through the initial settings.

Setting the language and implementing the remaining settings

- Press .
- ✓ The display shows the preset language.
- Use the control ring to select the required display language.
- Press to confirm.
- Press .

- Implement the remaining settings.

- ✓ The display shows the appliance display that is selected in the basic settings → *Page 41* as the start screen.

Cleaning the door pane

Note: To ensure tightness, the door seal is lubricated at the factory. Residue may remain on the door pane.

- ▶ Before using for the first time, clean the door pane with glass cleaner and a window cloth or a microfiber cloth. Do not use a glass scraper.

Cleaning the accessories

- ▶ Before first use, clean the accessories thoroughly using hot soapy water and a soft cloth.

Heating up the appliance

- Ensure that there is no leftover packaging in the oven cavity.
- Remove any accessories from the oven cavity.
- To eliminate the new-appliance smell, heat up the empty appliance with the door closed.
The ideal setting for heating is 390°F (200°C) in the "Convection plus" type of heating for one hour.
- Clean the appliance interior.

7 Basic Operation

7.1 Switching on the appliance

- To exit low power mode → *Page 17*, press on the appliance's control ring or in the Home Connect® app.
✓ The display shows a temperature, a symbol for the type of heating, and a symbol for the timer.
✓ The appliance switches the interior lighting on.
✓ lights up orange.
- Set the temperature, type of heating and cooking time that you require.

Tip: In the basic settings → *Page 41*, you can specify which appliance display appears on the display after the appliance is switched on and whether you want the interior lighting to switch on.

Note: If you do not implement any settings for an extended period, the display shows the appliance display that is selected in the basic settings → *Page 41* as the start screen, and then the low power mode display.

7.2 Opening the appliance door

WARNING

The inside of the appliance door becomes very hot during operation.

 
 
- ▶ During or after operation of the appliance, only touch the appliance door at the surface intended for this on the side.


- ▶ Always open the appliance door as far as it will go.

⚠ WARNING

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ Open the appliance door carefully.
- ▶ Keep children away from the appliance.

1. Press .
 - If the "Door lock" function is activated in the basic settings → *Page 41*, move the slide control to the other end.
- ✓ The appliance door opens automatically.
2. Only touch the appliance door at the designated area  and open it fully.

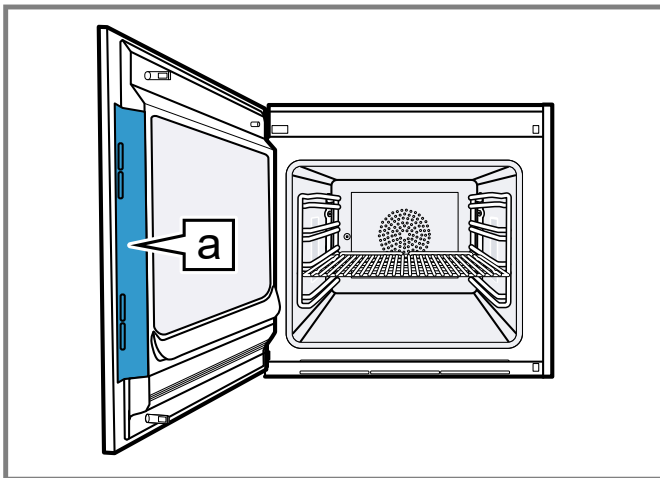



Tip: In the control center, you can set that the appliance door opens automatically after the current cooking process.

→ *"Opening the appliance door automatically after the cooking process", Page 23*

7.3 Changing the type of heating

 Note: You can change the type of heating during operation.


1. Press the current symbol for the type of heating.
2. Use the control ring to select the required type of heating.
3. Press on the selected type of heating or , or wait a few seconds.
- ✓ The display shows the selected type of heating and the suggested temperature.
- ✓ If you have previously used the type of heating, the display shows the last temperature that you used.
4. If required, change the temperature. → *Page 22*
5. If the display shows a notification window, follow the instructions in the notification window.
6. Press  to start the operation.

7.4 Changing the temperature

Note: You can change the temperature during operation.

Requirement: The type of heating is selected.

→ *"Changing the type of heating", Page 22*

1. Press the temperature displayed.
2. Use the control ring to select the desired temperature.
- ✓ The display shows the temperatures that are available for the selected type of heating.
3. To change the previously stored appliance display, press the required temperature or .

If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.
- ✓ The display shows the selected temperature.


Note: Once the operation has started, the display shows a progress bar below the selected temperature if the changed temperature is more than 20 °C higher than the previous temperature.

 






7.5 Displaying the current interior oven temperature

- ▶ Press and hold the set temperature.
- ✓ The display shows the current interior oven temperature.

Note: During continuous operation after heating up, slight temperature fluctuations are normal.

  7.6 Switching on the broiler and changing the broil setting

Note: The core temperature probe cannot be used in combination with the "Broiler"  type of heating.

1. Press .
2. Use the control ring to select the "Broiler"  type of heating.
3. Press .
 - ✓  lights up.
 - ✓ The display shows the symbol for the broil setting instead of the temperature.
4. Press .
5. Turn the control ring to select the broil setting.
6. Press .
7. If required, set the cooking time → *Page 24*.
8. Press  to start the operation.
- ✓ The display shows the type of heating, the broil setting and the cooking time or cooking time end.

7.7 Adding the broiler

You can brown or gratinate your food using the broiler. The "Add broiler" function is available for most types of heating, except for "Broiler", "Broil + circulated air", "Roaster operation", "Drying", "Dough proofing", "Keeping warm" and "Defrosting".

The "Add broiler" function is not available until a temperature of 150 °C is reached.
After around 5 minutes, the appliance switches the broiler off. If required, you can switch the broiler on again.

Turning on the broiler

NOTICE:


Temperatures above 480 °F (250 °C) damage the core temperature probe.

- ▶ If you use the core temperature probe, never place the food on the top shelf level.

1. Use the control ring to select the required type of heating and start the operation.



The "Add broiler" function is not available for all types of heating.

2. Press .

- ✓  lights up.
- ✓ The appliance switches on the broiler for the specified cooking time.

Deactivating the broiler

Requirement:  lights up orange.

- ▶ Press .
- ✓  lights up white.
- ✓ The broiler is deactivated.

7.8 Opening the appliance door automatically after the cooking process

The "automatic door opening" function at the end of the cooking process is only valid for the current cooking process.

⚠ WARNING


The appliance and its parts that can be touched become hot during use.

- ▶ Young children under 8 years of age must be kept away from the appliance.
- ▶ Ensure that young children are not in the vicinity of the appliance when the appliance door opens automatically.

Note: Use the "automatic door opening" function at the end of the cooking process only if required to prevent the food from being overcooked or burning.

In order to reduce the amount of moisture deposited on the unit fronts, open the appliance door fully after the cooking time has elapsed if possible.




1. Press .
2. Press .

- ✓ The display shows .
- ✓ The appliance opens the appliance door automatically after the current cooking process with a set cooking time end or set core temperature.



Notes

- The appliance door also opens when the child lock → *Page 27* is activated or the door lock → *Page 18* is activated.
- Automatic appliance door opening is not available in combination with the rotisserie spit.



7.9 Deactivating automatic appliance door opening

1. Press .
 2. Press .
- ✓ The display shows .
 - ✓ Automatic appliance door opening after the cooking process is deactivated.

7.10 Interrupting and continuing an operation

1. To interrupt the operation, press .
2. To continue the operation, press .

 
7.11 Opening and closing the control center

1. Press  to open the control center.
 - ✓ The appliance shows a description above the functions currently active.
 2. To activate or deactivate a function as required, press the symbol for the function.
 3. Press  to close the control center.
- ✓ A pop-up message → *Page 18* tells you if a function has been activated.

7.12 Switching the interior lighting on or off


1. Press .
2. Press .

7.13 Switching off the appliance


- ▶ Press  on the control ring.
- ✓ The appliance switches to low power mode.

7.14 Switching on the appliance after automatic shut-off

 Requirement: After prolonged operation, the automatic shut-off → *Page 18* switches off the appliance.

- ▶ Press  on the control ring.

7.15 Displaying information

- ▶ Press .
- ✓ The appliance displays information about the selected function.
→ "Additional information", *Page 17*

7.16 Displaying appliance information

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
 - ✓ The display shows the available functions in a list menu.
2. Use the control ring to select the "Appliance information" function.
3. Press "Appliance information".
 - ✓ The display shows the appliance information, e.g. the E-number and the serial number.
4. Press < to exit the display.

7.17 Using the quick guides



1. Select the "Modes & Service" appliance display.
→ *"Appliance displays", Page 13*
2. Use the control ring to select "Quick guide", then release the control ring.
3. Select the required quick guide and view it.

8 Timer functions

Your appliance has different timer functions, with which you can control its operation.

8.1 Overview of the timer functions

Use  to select the different timer functions.

Timer function	Use
	Cooking time
	Cooking time end

A cooking time or cooking time end can only be set in combination with a type of heating.

The "Cooking time" and "Core temperature probe" functions are not available at the same time.

8.2 Call up the timer menu

- ▶ Press .
- ✓ The display shows "h" and "min" for hours and minutes.
- ✓ The display shows the display for the minutes enlarged in the 12 o'clock position.

8.3 Exiting the timer menu

- ▶ Press < or press on the selected cooking time to switch to the previously stored appliance display.
- ✓ The timer menu is closed.

8.4 Cooking time

When you set the cooking time for your food, the appliance automatically switches off after this time. The maximum possible cooking time depends on the set type of heating.


For most types of heating, you can set a cooking time of 1 minute up to 24 hours.

For the "Drying" type of heating, the maximum cooking time is 72 hours.

You can change the type of heating and temperature while the cooking time counts down.

Setting the cooking time

Requirement: No core temperature is set. You cannot use the "Cooking time" and "Core temperature probe" functions at the same time.

1. Place the food in the oven cavity.
2. Press .
 - ✓ The display shows h : min for hours and minutes.
3. Press the required value and use the control ring to change the value.
 - Turn the control ring slowly to change the value in smaller increments.
 - Turn the control ring quickly to change the value in greater increments.

The maximum possible cooking time depends on the type of heating.

 - ✓ The appliance automatically calculates the time for the cooking time end.
4. Press < or press on the selected cooking time to switch to the previously stored appliance display.

If you do not use the appliance for an extended period, the appliance saves the settings and the display returns to the previously stored appliance display.

 - ✓ If the appliance is in operation, the appliance shows the temperature, the operating mode, and the remaining cooking time.
 - ✓ 3 minutes before the end of the cooking time, the display zooms in on the remaining cooking time.
 - ✓ After the cooking time has elapsed, the display shows 00:00 and a signal tone sounds.
5. Turn the control ring or open the appliance door.

The appliance door opens automatically if you have activated this function.


→ *"Opening the appliance door automatically after the cooking process", Page 23*

 - ✓ The signal tone stops.

Note: If there is no further operation following the signal tone, the display shows the "Downtime timer" function with the + symbol. The display shows how much time has elapsed since the cooking time ended. After approx. 20 minutes without any further operation, the appliance switches to low power mode.

Changing the cooking time

Requirement: You have set a type of heating and a temperature.

1. Press .
 - ✓ The display shows h : min for hours and minutes.
2. Press the required value and use C to delete the value, or use the control ring to change the value.
 - Turn the control ring slowly to change the value in smaller increments.

- Turn the control ring quickly to change the value in greater increments.

The maximum possible cooking time depends on the type of heating.

- ✓ The appliance automatically calculates the time for the cooking time end.

3. Press < or press on the selected cooking time to switch to the previously stored appliance display.

If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.

- ✓ The display shows the temperature, the type of heating, the remaining cooking time, and the cooking time end.

Deleting the cooking time

Tip: In the "Manual" appliance display, double-click on the cooking time in order to delete the cooking time without switching to the timer settings.

1. Press .

- ✓ The display shows h : min for hours and minutes.

2. Press the required value and use C to delete the value.

- ✓ The display shows --:--.

3. Press < or press on the selected cooking time to switch to the previously stored appliance display.

If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.

- ✓ The display does not show a cooking time.

8.5 Cooking time end

As soon as you set a cooking time, the display shows the cooking time end. You can delay the cooking time end by a maximum of 12 hours.

For example, if you set a cooking time of 90 minutes at 10 a.m., you can delay the end of the cooking time so that the cooking process ends at 10.30 p.m. at the latest.

For most types of heating, the maximum cooking time is 24 hours.

For the "Drying" type of heating, the maximum cooking time is 72 hours.

Bear in mind that food which spoils easily should not be left in the appliance for too long.

Delaying the cooking time end

Requirement: No core temperature is set. You cannot use the "Cooking time" and "Core temperature probe" functions at the same time.

1. Place the food in the oven cavity.

2. Press .

- ✓ The display shows h : min for hours and minutes.

3. Set the cooking time. → *Page 24*

- ✓ The appliance automatically calculates the time for the cooking time end.

4. Press < or press on the selected cooking time to switch to the previously stored appliance display.

If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.

5. Press on the cooking time end.

6. Use the control ring to set the required cooking time end.

7. Press .

- ✓ The appliance switches to standby.

- ✓ The display shows the temperature, the type of heating, and the cooking time end.

- ✓ If the end of cooking time is one or more days in the future, the display shows "+1d".

- ✓ The appliance starts at the calculated time and automatically switches off once the cooking time has elapsed.

- ✓ After the cooking time has elapsed, the display shows 00:00 and a signal tone sounds.

8. Turn the control ring or open the appliance door.

The appliance door opens automatically if you have activated this function.

→ *"Opening the appliance door automatically after the cooking process", Page 23*

- ✓ The signal tone stops.

Note: If there is no further operation following the signal tone, the display shows the "Downtime timer" function with the + symbol. The display shows how much time has elapsed since the cooking time ended. After approx. 20 minutes without any further operation, the appliance switches to low power mode.

Resetting the delay of the cooking time end

Tip: In the "Manual" appliance display, double-click on the cooking time end in order to reset the delay of the cooking time end without switching to the timer settings.

Requirement: You have used the control ring to manually set the cooking time end.

1. Press .

2. To reset the delay of the cooking time, press .

- ✓ The appliance calculates the cooking time end based on the cooking time.

- ✓ The display shows the cooking time end.

3. Press < or press on the cooking time end to switch to the previously stored appliance display.

If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.

8.6 Total cooking timer

If no cooking time is set, the display shows the time that has elapsed since the start of the process.

In the basic settings, you can switch the "Count-up cooking timer" function on or off.

 
9 Long-term timer¹

You can use this function to keep food warm and cook food for up to 74 hours without having to switch the appliance on or off. You can select the "Convection plus" and "Top + bottom heat" types of heating, the temperature, and the required cooking time.

Bear in mind that food which spoils easily should not be left in the appliance for too long.

You can use the long-term timer to program 9 different heating cycles with a total cooking time of 74 hours. Set a start time and an end time. The display shows which settings have been selected.

You can define whether the interior lighting is switched on or switched off during the selected cooking time.




At the end of the selected cooking time, the appliance automatically deactivates the function. If required, you can deactivate the long-term timer at any time using the on/off button .

When the long-term timer is active, the display screen does not change when you approach the appliance.

If the long-term timer is active, you cannot operate the appliance via the display and the control ring.

 If the long-term timer is active, the "Automatic door opening at the end of the cooking process" function is not available.

9.1 Selecting a period for the long-term timer

1. Press the start time.
2. Use the control ring to change the start time.
3. Press .
- ✓ The appliance automatically calculates the time for the end time.
- ✓ The display shows the start time and the end time.
4. Press the end time.
5. Use the control ring to change the end time.
- ✓ The display shows the start time and the end time.
6. Press  to confirm.
- ✓ The display shows .

 
9.2 Opening the long-term timer

Requirement: The "Long-term timer" function is set to "On" in the basic settings → *Page 41*.








1. Swipe repeatedly from left to right until the display shows "Modes & Service".
2. Use the control ring to select "Long-term timer".
3. Set the switch to the right of the "Long-term timer" list entry to "On".
- ✓ The display shows the start time and the end time.

9.3 Selecting the settings for the interior lighting during the long-term timer

  Requirement: A start time and an end time are selected.
→ *"Selecting a period for the long-term timer", Page 26*


 
 
1. Press .
2. To switch the interior lighting on at the lowest lighting level for the entire cooking time set in the long-term timer, set the switch for the interior lighting to "On".
3. To switch the interior lighting off for the entire cooking time set in the long-term timer, set the switch for the interior lighting to "Off".
- ✓ The display shows the start time and the end time.
4. To program the first heating cycle, if needed, press +.
→ *"Setting heating cycles", Page 26*

9.4 Setting heating cycles



1. Press .
- ✓ The display shows the settings that have been selected for the long-term timer.
2. Press "Summary".
3. Press .
4. Press +.
5. Press the temperature to set it.
 - Use the control ring to select the required temperature and press .
6. Press the current symbol for the type of heating to set the type of heating.
 - Use the control ring to select the required type of heating and press .
7. To change the start time, press the start time.
 - Use the control ring to change the start time and press .
8. To change the end time, press the end time.
 - Use the control ring to change the end time and press .
- ✓ The display shows the settings for the first heating cycle.
9. Press  to confirm.
10. To program a further heating cycle, if needed, press +.
 - Program the settings for the further heating cycle. You can program up to 9 heating cycles.
- ✓ The display shows the settings for the programmed heating cycles.
- ✓ The display shows the start time and the end time for the long-term timer.
11. Touch the control ring.
- ✓ The display shows the settings for the programmed heating cycles.
12. Navigate through the list of programmed heating cycles in the menu with the control ring.

¹ Available depending on the software version.


 
 
9.5 Changing the period for the long-term timer

1. Press .
- ✓ The display shows the settings that have been selected for the long-term timer.
2. Press "Summary".
3. Press .
4. Press .
- ✓ The display shows the start time and the end time.
5. Press the start time and use the control ring to change the start time.




9.6 Changing settings for the interior lighting

1. Press .
- ✓ The display shows the settings that have been selected for the long-term timer.
2. Press "Summary".
3. Press .
4. To switch the interior lighting on at the lowest lighting level for the entire cooking time set in the long-term timer, set the switch for the interior lighting to "On".
5. To switch the interior lighting off for the entire cooking time set in the long-term timer, set the switch for the interior lighting to "Off".


9.7 Changing the heating cycle

1. Press .
- ✓ The display shows the settings that have been selected for the long-term timer.
2. Press "Summary".
3. Press .
4. Navigate through the list of programmed heating cycles in the menu with the control ring and press the required heating cycle.
5. To change the settings for the heating cycle, press the corresponding settings.
6. To save the changed setting, press .

9.8 Deleting a heating cycle

1. Press .
- ✓ The display shows the settings that have been selected for the long-term timer.
2. Press "Summary".
3. Press .
4. Navigate through the list of programmed heating cycles in the menu with the control ring and select the required heating cycle.
5. Press .

9.9 Starting the long-term timer

- ▶ Press  to start.
- ✓ The long-term timer starts.

- ✓ Once the long-term timer has elapsed, the appliance switches off.

9.10 Switching off the long-term timer

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
2. Use the control ring to select "Long-term timer".
3. Set the switch to the right of the "Long-term timer" list entry to "Off".

10 Child lock




Activate the "Child lock" function so that children cannot accidentally switch the appliance on or change the settings.

If the child lock is activated, operation via the display and the control ring is not possible.


If the child lock is activated and the power fails, the child lock can be deactivated when the power comes back on. You can activate the child lock even during operation.

10.1 Activating the childproof lock

Requirement: In the basic settings → *Page 41*, the option "On" is set for the "Display child lock" function.

1. Press .
2. Press .
- ✓ The display shows .
- ✓ The "Child lock" function is activated.

10.2 Deactivating the childproof lock

1. Press and hold  for approximately 2 seconds.
- ✓ The "Child lock" function is deactivated.
2. Set the appliance as normal.

11 Rotisserie spit

The rotisserie spit is particularly good for cooking large roasts, such as rolled roasting joints or poultry. The meat becomes crispy and brown.

NOTICE:


Temperatures above 480°F (250°C) damage the rotisserie spit.

- ▶ Only use the rotisserie spit in your appliance at a maximum temperature of 480°F (250°C).


You can use the rotisserie spit with all operating modes. For best results, use the ""Broiler"" or ""Top heat"" types of heating.

11.1 Preparing the rotisserie spit



1. Position the frame above the broiling tray so that the openings in the broiling tray and the curved frame elements are vertically stacked ①.
 - Push the frame at an angle from the rear onto the broiling tray ②.
 - Place the frame on the front of the broiling tray ③.

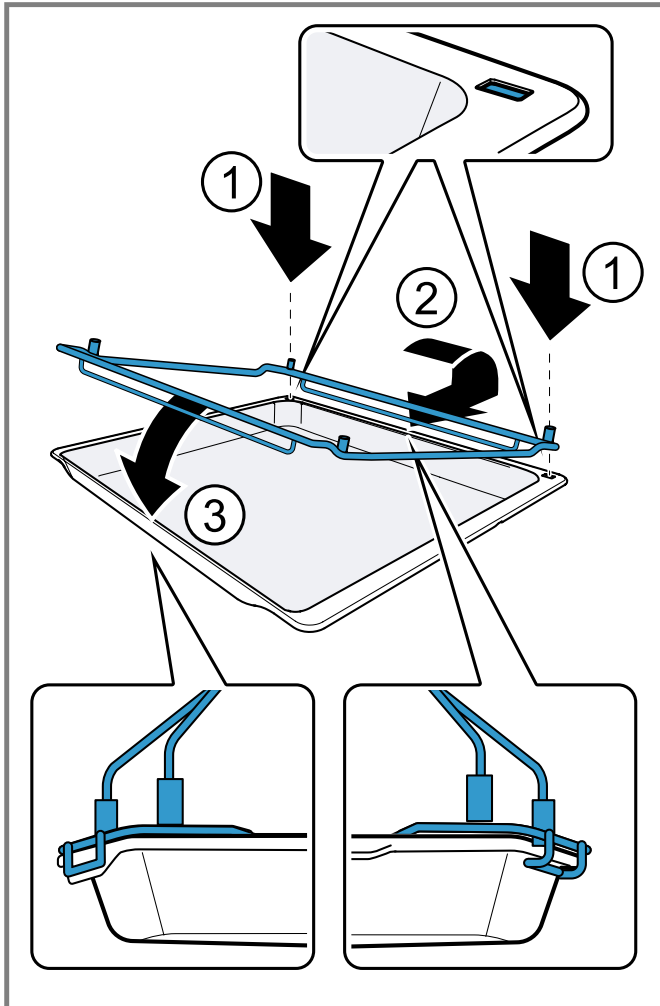


2. Push the two supporting frames into the sockets in the frame.
 - Position the supporting frames with the drive on the left-hand side.

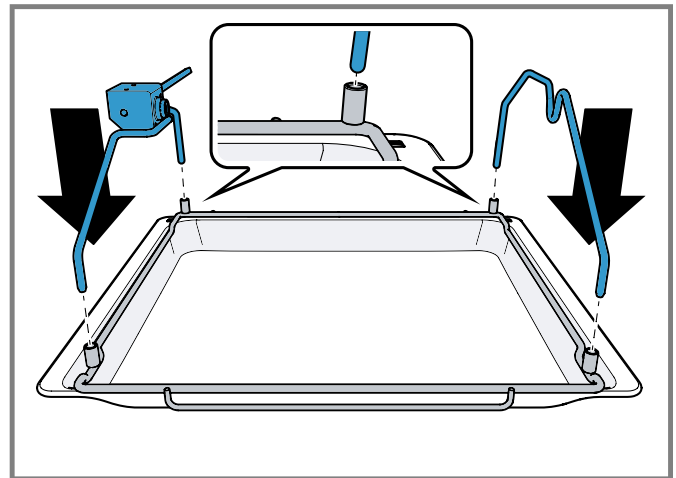


3. Insert the handle.

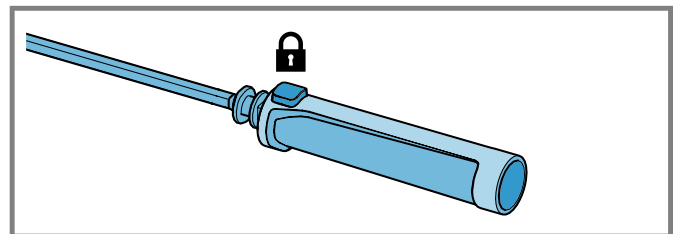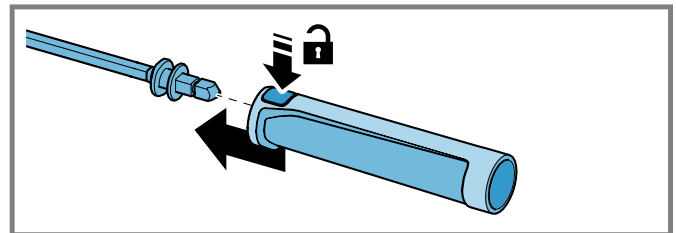


4. Fit the right-hand retaining prongs to the rotisserie spit and screw them in with a fixation screw.

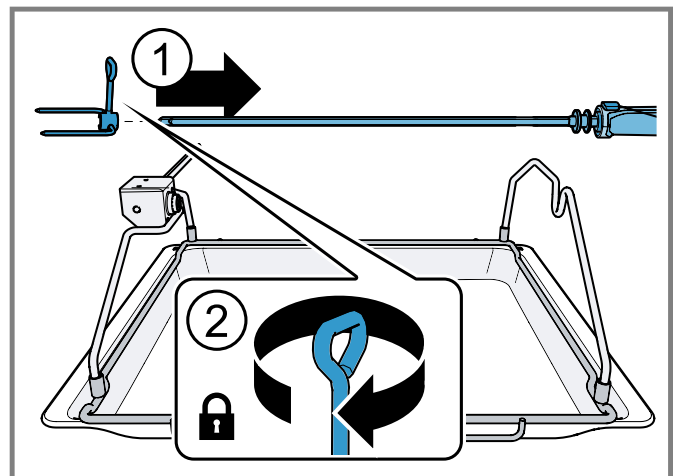

5. Do not exceed the maximum permissible weight for the rotisserie spit.

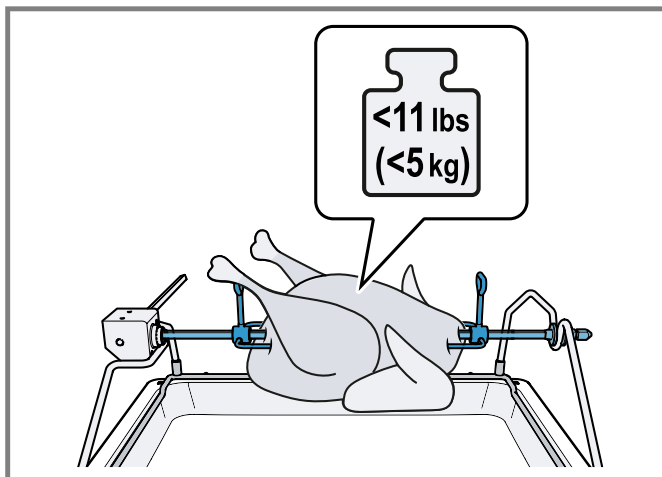


6. Skewer the food and move it to the middle of the rotisserie spit.
7. Secure two smaller chickens using two retaining prongs each.
8. Secure any protruding parts, e.g. chicken wings.
- ✓ The protruding parts must not touch the broiling element.
9. Fit the left-hand retaining prongs to the rotisserie spit ① and screw them in with a fixation screw ②.

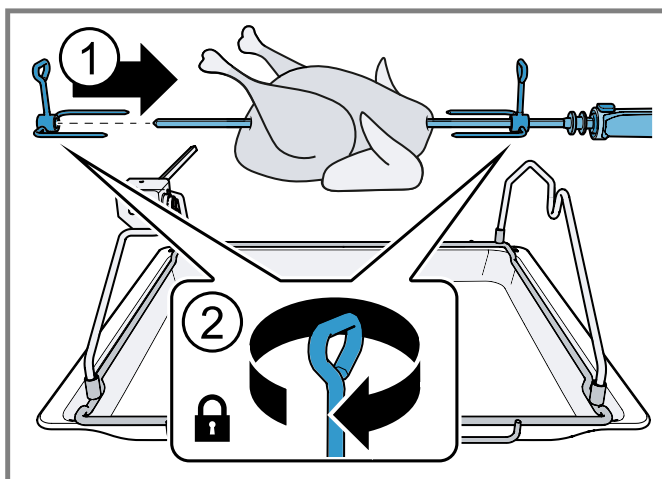


10. Set the rotisserie spit down onto the supporting frames.

- Push the rod of the rotisserie spit into the drive so that it engages with its square profile.

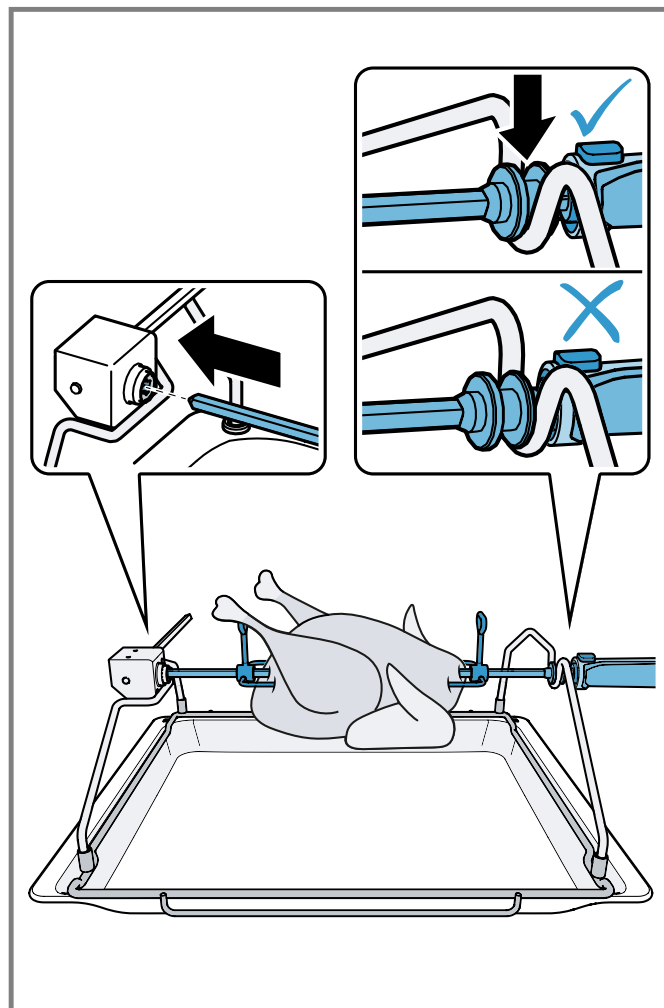


11. Remove the handle.

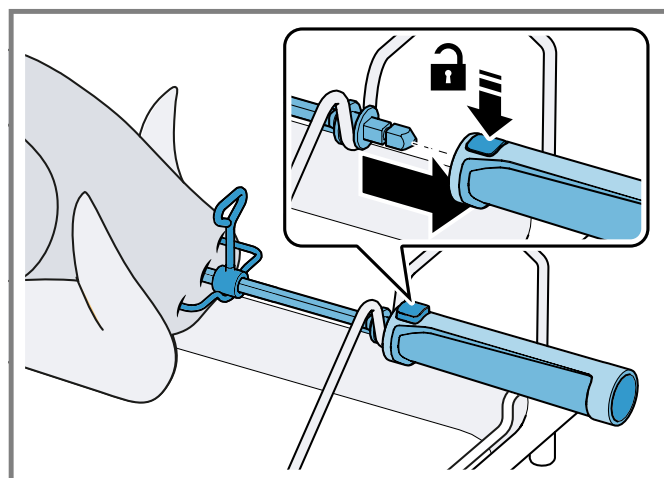


12. Insert the broiling tray along with the rotisserie spit at the bottom shelf level.

- Do not push the broiling tray between the shelf positions.

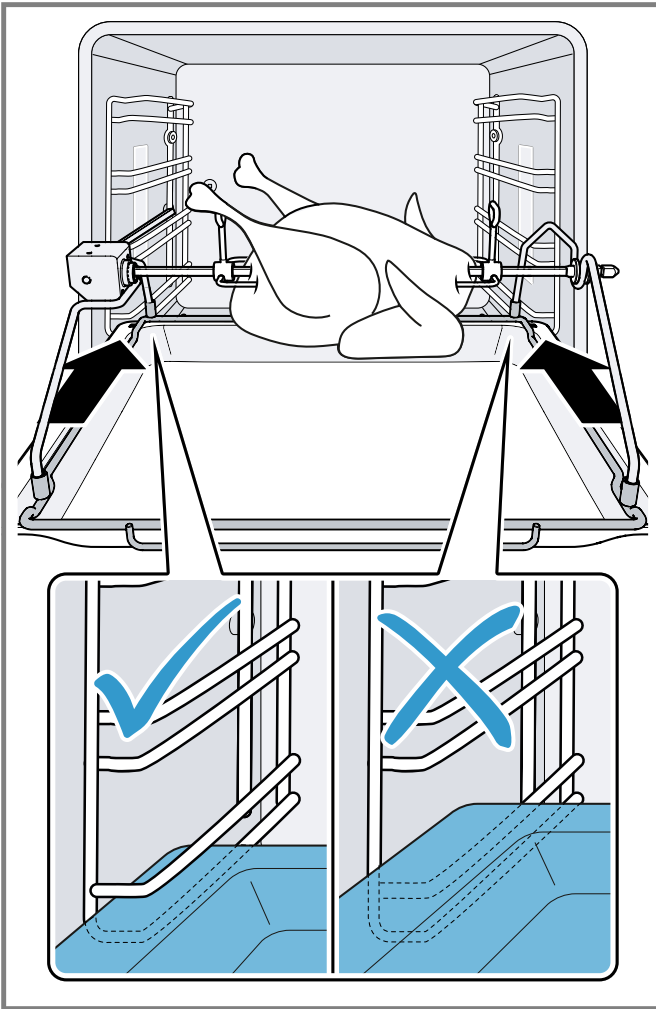

13. The drive shaft must engage in the opening in the rear panel of the appliance.

- If necessary, turn the rotisserie spit slightly.

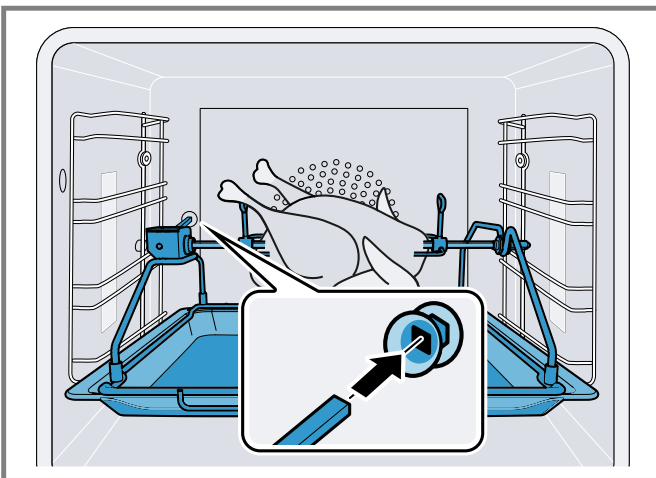


11.2 Switching on the rotisserie spit

1. Set the temperature and type of heating you require.

2. Press .

 3. Press .

✓ The display shows  in the "Manual" appliance display.

4. Press .

✓ The appliance switches on the rotisserie spit drive.

11.3 Switching off and removing the rotisserie spit

⚠ WARNING

The rotisserie spit and associated retaining frame are hot.

- ▶ Wear gloves to take them out.
- ▶ Place the rotisserie spit and the associated retaining frame on a stable and heat-resistant surface.

Press the knob on the handle to release it from the rotisserie spit.

- ▶ When lifting the rotisserie spit, do not press the knob on the handle.

1. Press .

2. Press .


✓ The rotisserie spit drive stops.

3. Switch off the appliance.

4. Remove the broiling tray with the rotisserie spit and place it on a stable, heat-resistant surface.

11.4 Inserting the handle

1. Press and hold the button on the handle.

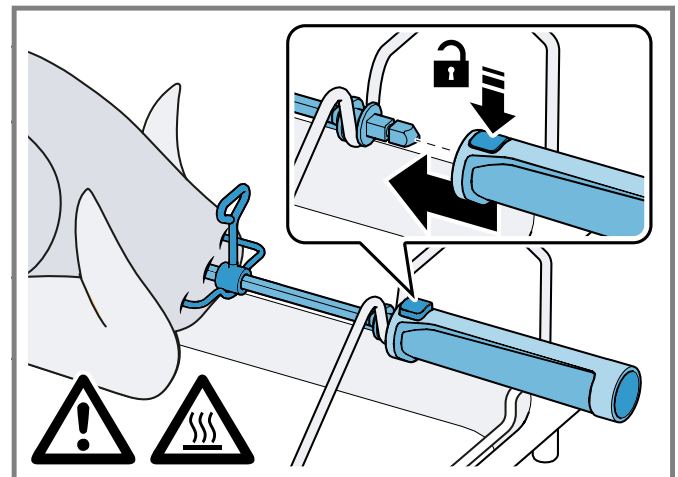


2. Slide the handle onto the rotisserie spit.

3. Release the button.



11.5 Removing the food from the rotisserie spit

- ▶ Pull the rotisserie spit out of the drive ①, loosen the fixation screws on the retaining prongs ②, loosen the left-hand retaining prong ③ and remove the food from the rotisserie spit.

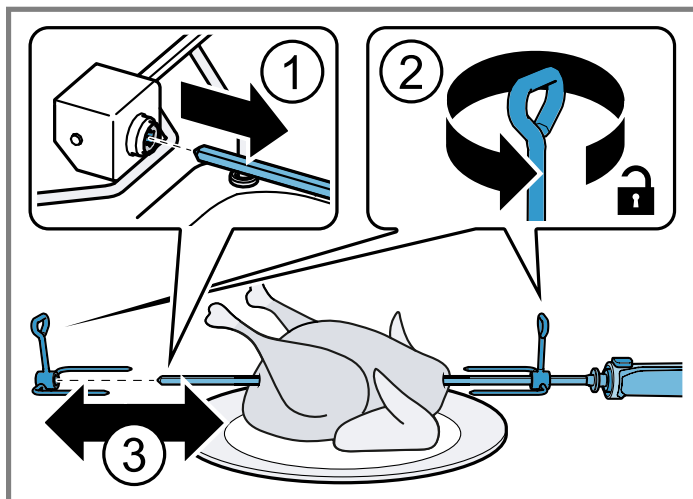


11.6 Removing the handle

1. Press and hold the button on the handle.

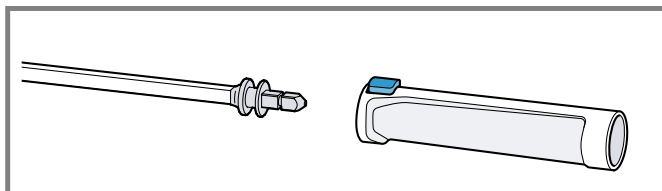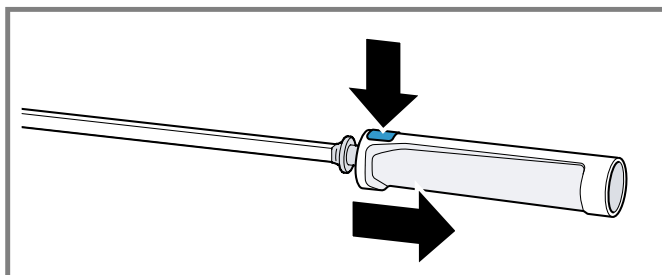

2. Pull the handle off the rotisserie spit.
3. Release the button.
4. Only press down on the button on the handle of the rotisserie spit if there is no food on the spit.

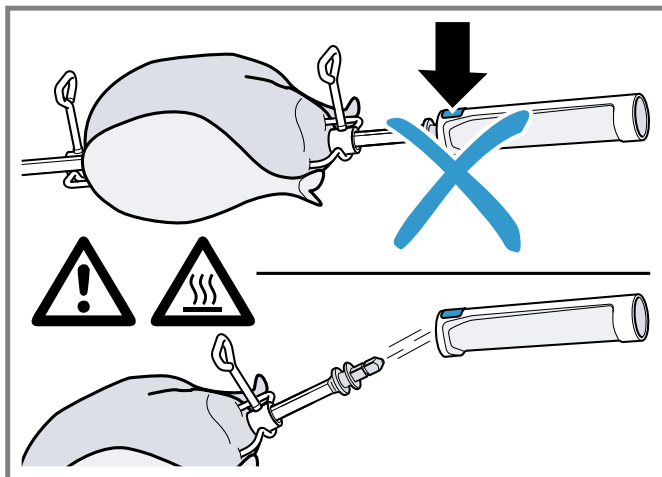


The food may fall down.

11.7 Storing the rotisserie spit

NOTICE:

The heat in the oven causes damage to the handle of the rotisserie spit.

- ▶ Do not place the handle of the rotisserie spit in the oven.
- ▶ After cleaning, store the rotisserie spit handle with the rotisserie spit.

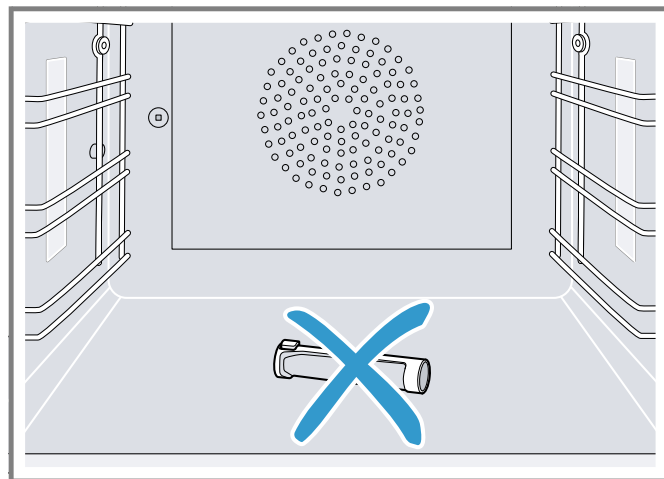




 
12 Searing function

With the searing function, the appliance heats up at full capacity for approximately 3 minutes. You can use this to sear steaks, for example.


To use the searing function, you need a cast iron roaster and pull-out system¹ – these are special accessories.

12.1 Starting the searing function

Requirement: The "Roaster operation"  type of heating is set.

1. Press .
- ✓  lights up orange.
2. Press .
- ✓ The searing function starts.

Tip: You can also set the searing function to start several times consecutively.

Note: When the searing function has ended,  lights up white.

12.2 Ending the searing function early

- ▶ Press .

¹ This function is currently unavailable.




13 Favorites

In the "Favorites" appliance display, you can save preferred automatic programs, recommended settings or combinations of type of heating, temperature, core temperature or cooking time. The appliance adopts the selected settings, such as temperature, cooking time, weight or level of browning for the favorites. You can individually select the names for the favorites. You can use the Home Connect® app to change the saved settings for the favorite or the order of the favorites. After starting the favorite, you can change the settings.
→ *"Changing a favorite", Page 32*

13.1 Creating the first favorites

Note: You can save a food as a favorite at the beginning or end of an automatic program or a setting recommendation.

Requirement: The settings for the favorites are selected or a heating process ends.



1. Press .
- ✓ The display shows the "Favorites" appliance display.
2. Press .
3. Use the keyboard to enter a name.
4. Press .

13.2 Selecting a favorite

1. Swipe repeatedly from right to left until the display shows "Favorites".
→ *"Appliance displays", Page 13*
2. Use the control ring to select the desired favorite.
3. Press the favorite.


13.3 Renaming a favorite

Requirement: The favorite has been selected.
→ *"Selecting a favorite", Page 32*

1. Press .
2. Enter the name for the favorite.
3. Press .

13.4 Starting a favorite



Requirement: The favorite has been selected.
→ *"Selecting a favorite", Page 32*

▶ Press  to start.

13.5 Changing a favorite

Requirements

 

- The favorite has been selected.
→ *"Selecting a favorite", Page 32*
 - The favorite is stopped.
1. Change the selected settings, e.g. the temperature, the type of heating, or the cooking time.

2. Press .
3. Press  to start.
- ✓ The operation starts with the changed settings.

Note: The appliance does not save the changed settings in the selected favorite. If you select the favorite again, the settings match the settings when the favorite was created. You can use the Home Connect® app to change the settings for the favorites.

13.6 Deleting a favorite

Requirement: The favorite has been selected.
→ *"Selecting a favorite", Page 32*

1. Press .
2. Press  to confirm.

14 Programs

The "Programs" appliance display includes the automatic programs and recommended settings.

14.1 Automatic programs

You can use the "Automatic programs" function to cook a wide variety of food. The appliance will choose the optimal setting for you.

In automatic programs, the appliance defines the optimal settings after you enter the weight and required cooking result, for example. The automatic programs are labeled with a checkmark in the overview list.

The cooking time only begins once the appliance has preheated. You can find information about the accessories or shelf levels in the tip for the respective program.

Note: In the basic settings → *Page 41*, you can filter automatic programs, e.g. with the following filters "Vegetarian" or "No meat & poultry".

Information about the settings for the automatic programs

Observe the instructions for the settings of the automatic programs.

- The cooking result depends on the quality of the food and the size and type of cookware. For an optimal cooking result, only use food that is in good condition and meat that is chilled to refrigerator temperature. For frozen food, use food straight out of the freezer only.
- The food is divided into categories. One or more dishes are listed for each category. The display shows the last selected meal.
- For some dishes, the appliance asks you to enter, for example, the weight, the desired level of browning, the thickness of the food or the cooking level of the food.
- For some food, preheat the empty cooking compartment for an optimal cooking result. Place the food in the cooking compartment once the preheating is complete and a message appears in the display.
- The appliance displays the selected settings next time as a suggestion.

- For some programs, you need the core temperature probe. Use the core temperature probe → *Page 34* for these programs.
- To achieve good results, the cooking compartment must not be too hot for the type of food you have selected. If the cooking compartment is too hot, the display shows a corresponding notification. Allow the appliance to cool and then try again.

Selecting an automatic program

1. Swipe repeatedly from right to left until the display shows "Programs".
 - ✓ The display shows the first program in the "Vegetables" category or the last set automatic program.
 - ✓ The display shows the preselected values for the program or the last set values.
 - ✓ The display shows a tip and symbols for the Favorites → *Page 32* category and for the program start.
2. Use the control ring to select the required meal, and press on the required meal.
 - ✓ The display shows the name of the selected dish and the corresponding values.

Changing category

1. Press the symbol for the category.
 - ✓ The display shows the available categories in the ring menu.
2. Select the required category with the control ring.
3. Press < or press the category in order to confirm the selection.
 - ✓ The display shows the first dish in the selected category and the corresponding values.

Changing the program

1. Press the name of the dish.
2. Navigate through the list of dishes in the menu as needed with the control ring.
3. Press the required dish.
 - ✓ The display shows the name of the selected dish and the corresponding settings.
4. Press the setting.
5. Use the control ring to change the setting and press on the required setting.

Not all settings can be changed.
You cannot change the type of heating.
6. Press <.
 - ✓ The display shows the name of the selected dish and the corresponding settings.
7. Press □.
- ✓ The display shows information about the accessories and preparation.
8. Follow the information on the display.

Starting the automatic program

- ▶ Press ▶.

- ✓ Once the cooking time has elapsed, a signal tone sounds.
- ✓ The appliance stops heating.

Note: If you open the appliance door during an automatic program, this affects the cooking result. Do not open the appliance door, or only open it briefly. The appliance interrupts the automatic program and continues to run when you close the appliance door.

Extending the cooking time

If you are still not satisfied with the cooking result, you can increase the cooking time again.

Requirement: The display asks you whether you would like to add additional cooking time.

1. Press ✓ to confirm.
2. Select the required cooking time.
3. Press ✓ to confirm.

Canceling the automatic program

Note: Once you have started the automatic program, you can no longer change the settings.

- ▶ Press ■.
- ✓ The appliance ends the automatic program.

Saving a program as a favorite

You can save a program as a favorite at the start or end of an automatic program.

1. Press □.
- ✓ The display shows the "Favorites" appliance display.
2. Press _/.
3. Use the keyboard to enter a name.
4. Press ✓.

You can only change the settings for a saved favorite via the Home Connect® app.

14.2 Recommended settings

With recommended settings, the appliance specifies the optimal type of heating.

The recommended settings are not labeled with a checkmark in the overview list.

If a weight is specified in the tip, the recommended temperature and the cooking time relate to this weight specification. You can adapt the temperature and cooking time within the available ranges.

The cooking time only begins once the appliance has preheated. You can find information about the accessories or shelf levels in the tip for the respective program.

Information on the recommended settings

Observe the information on the recommended settings.

- The cooking result depends on the quality of the food and the size and type of cookware. For an optimal cooking result, only use food that is in good condition and meat that is chilled to refrigerator temperature. For frozen food, use food straight out of the freezer only.

- The food is divided into categories. One or more dishes are listed for each category. The display shows the last selected meal.
- With the recommended settings, the appliance specifies the type of heating.
- You can change the temperature and the cooking time in the specified areas.
- For some food, preheat the empty cooking compartment for an optimal cooking result. Place the food in the cooking compartment once the preheating is complete and a message appears in the display.
- The appliance displays the selected settings next time as a suggestion.
- To achieve good results, the cooking compartment must not be too hot for the type of food you have selected. If the cooking compartment is too hot, the display shows a corresponding notification. Allow the appliance to cool and then try again.

Selecting a recommended setting

1. Swipe repeatedly from right to left until the display shows "Programs".
 - ✓ The display shows the first program in the "Vegetables" category or the last set automatic program.
 - ✓ The display shows the preselected values for the program or the last set values.
 - ✓ The display shows a tip and symbols for the Favorites → *Page 32* category and for the program start.
2. Use the control ring to select the required meal, and press on the required meal.
 - ✓ The display shows the name of the selected dish and the corresponding values.

Changing category

1. Press the symbol for the category.
 - ✓ The display shows the available categories in the ring menu.
2. Select the required category with the control ring.
3. Press < or press the category in order to confirm the selection.
 - ✓ The display shows the first dish in the selected category and the corresponding values.

Changing the program

1. Press the name of the dish.
2. Navigate through the list of dishes in the menu as needed with the control ring.
3. Press the required dish.
 - ✓ The display shows the name of the selected dish and the corresponding settings.
4. Press the setting.
5. Use the control ring to change the setting and press on the required setting.

Not all settings can be changed.
You cannot change the type of heating.

6. Press <.
 - ✓ The display shows the name of the selected dish and the corresponding settings.
7. Press □.
 - ✓ The display shows information about the accessories and preparation.
8. Follow the information on the display.

Starting a recommended setting

- ▶ Press ▶.
- ✓ Once the cooking time has elapsed, a signal tone sounds.
- ✓ The appliance stops heating.

Note: If you open the appliance door when a recommended setting is running, this affects the cooking result. Do not open the appliance door, or only open it briefly. The appliance interrupts the recommended setting and continues to run when you close the appliance door.

Extending the cooking time

If you are still not satisfied with the cooking result, you can increase the cooking time again.

Requirement: The display asks you whether you would like to add additional cooking time.

1. Press ✓ to confirm.
2. Select the required cooking time.
3. Press ✓ to confirm.

Changing a recommended setting

Note: Once you have started the recommended setting, you can change the settings.

1. Press on the recommended setting.
2. Change the desired settings.

Saving a program as a favorite

You can save a program as a favorite at the start or end of a recommended setting.

Requirements

- The temperature and type of heating are set.
- The cooking time or core temperature is set.

1. Press □.
- ✓ The display shows the "Favorites" appliance display.
2. Press _/.
3. Use the keyboard to enter a name.
4. Press ✓.

You can only change the settings for a saved "Favorites" via the Home Connect® app.

15 Core temperature sensor

The core temperature probe makes it possible to cook with exact precision. The core temperature probe measures the temperature at 3 measuring points inside the food.

When the required core temperature is reached, the appliance automatically switches off, ensuring that all food is cooked perfectly.

⚠ WARNING

The oven cavity and the core temperature probe become very hot.

- ▶ Use oven gloves when inserting and removing the core temperature probe.

NOTICE:

Temperatures above 480°F (250°C) damage the core temperature probe.

- ▶ Only use the core temperature probe in your appliance at a maximum temperature of 480°F (250°C).
- ▶ Do not use the core temperature probe with the "Broil" type of heating.
- ▶ Before using the "Broil" type of heating, remove the core temperature probe from the cooking compartment.
- ▶ When using the core temperature probe with the "Broil + circulated air" type of heating, set the temperature to a maximum of 480°F (250°C).

⚠ WARNING

An incorrect core temperature probe may damage the insulation.

- ▶ Only use the core temperature probe that is suitable for this appliance.

NOTICE:

Aggressive cleaning agents may damage the core temperature probe.

- ▶ Do not clean the core temperature probe in the dishwasher.

⚠ WARNING

The core temperature probe is sharp.

- ▶ Handle the core temperature probe with care.

Only use the core temperature probe supplied. The core temperature probe → Page 19 is available as a spare part from customer service or the online shop.

If you use the core temperature probe, never place the food on the top shelf level.

After use, always remove the core temperature probe from the cooking compartment. Never store the core temperature probe in the cooking compartment. After each use, clean the core temperature probe with a damp cloth.

The measurable range is 60-212 °F (15 °C to 100 °C).

Outside of the measurable range, the display shows "<60 F (15 °C)" or ">212 F (100 °C)" for the current core temperature.


If you leave food in the cooking compartment for some time after cooking, the core temperature will continue to rise somewhat due to the residual heat in the cooking compartment.

15.1 Inserting the core temperature probe into the food

1. Insert the core temperature probe fully into the food.
2. Do not insert the core temperature probe into the fat.
3. Ensure that the core temperature probe is not touching any cookware or any bones.
4. Place the food in the oven cavity.

Inserting the core temperature probe into meat


1. Insert the core temperature probe at the thickest point on the side as far as it will go into the meat.

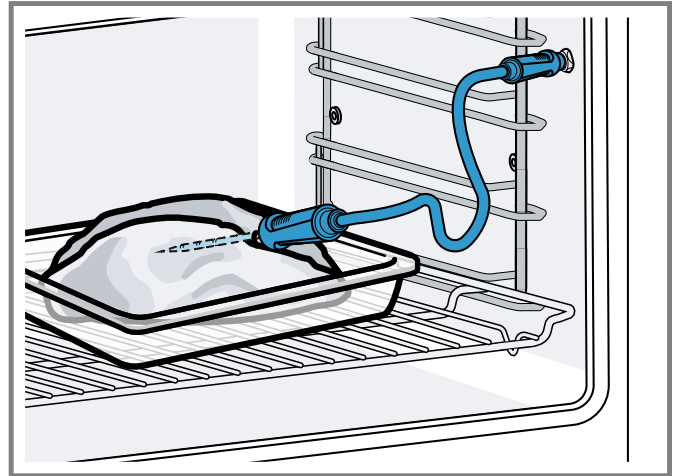


2. If there is more than one piece of meat, insert the core temperature probe into the middle of the thickest piece.

Inserting the core temperature probe into poultry

1. Insert the core temperature probe as far as it will go into the thickest point in the breast.

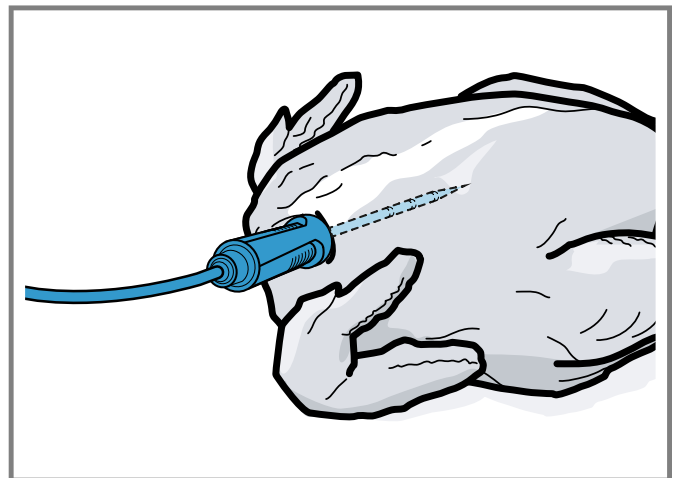


2. Depending on its composition, insert the core temperature probe into the poultry crossways or lengthways.

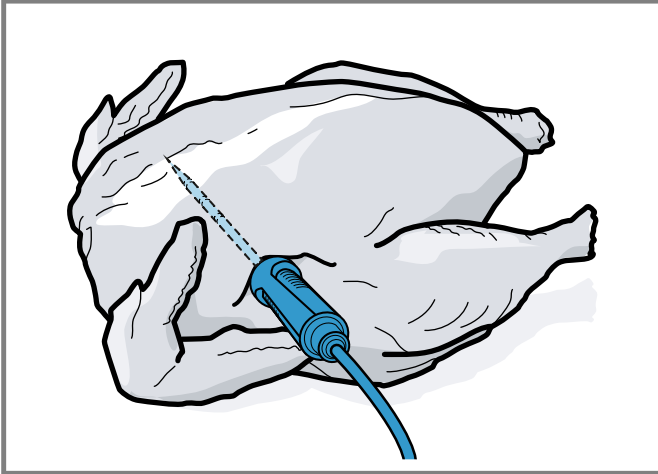

3. With poultry, ensure that the tip of the core temperature probe does not protrude into the cavity in the middle of the bird.

Inserting the core temperature probe into fish

1. Insert the core temperature probe behind the head as far as it will go towards the spine.

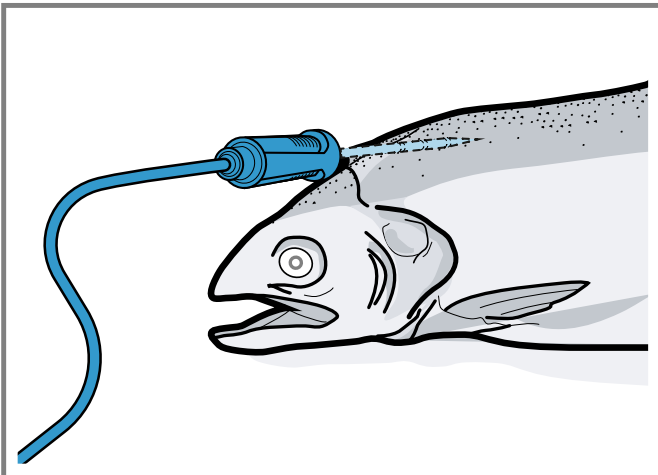

2. Place the whole fish onto the wire rack and prop it up in the swimming position using half a potato.

15.2 Turning the food

1. Do not pull out the core temperature probe when turning the food.

If you pull out the core temperature probe during operation, the appliance resets all settings. You must then reset the settings.

2. Turn the food.
3. Once you have turned the food, check that the core temperature probe is correctly positioned in the food.

15.3 Setting the core temperature probe

NOTICE:



The heat of the grilling surface may damage the core temperature probe.

- ▶ Ensure that the distance between the glass grilling surface and the core temperature probe and the cable of the core temperature probe is a few centimeters. In doing so, ensure that the meat can expand during the cooking process.

You may damage the cable of the core temperature probe with the appliance door.

- ▶ Do not trap the cable of the core temperature probe in the appliance door.

Requirement: A cooking time end is not set. The cooking time end and core temperature probe functions are not available at the same time.


1. Slide the food into the oven cavity with the core temperature probe inserted.
2. Insert the core temperature probe into the socket in the oven cavity.
3. Close the appliance door.
- ✓ The display shows the current interior oven temperature and the symbol for the core temperature probe .
4. Select the required type of heating and interior oven temperature using the control ring.
5. Press .
6. Use the control ring to select the required core temperature → *Page 37*.
 - Ensure that the set core temperature is higher than the current core temperature.You can change the set core temperature at any time.
7. The set core temperature can be cleared and reset as needed using C or the control ring.
8. Press < or press the set core temperature.
9. Press ►.
- ✓ The appliance heats up using the set type of heating.
- ✓ Once you have set the core temperature, the display shows the type of heating and the current core temperature.
- ✓ Once you have set the core temperature, the display shows the type of heating and switches between displaying the estimated time → *Page 38* until the core temperature is reached and the current and set core temperature.
- ✓ If the current core temperature is 9°F (5°C) below the set core temperature, the display shows the current and set core temperature as enlarged.
- ✓ Once the core temperature for the food has been reached, the display shows the required core temperature alongside the set core temperature and a signal sounds.
- ✓ The appliance ends the cooking process automatically.

Note: If you do not continue to operate the appliance after the signal tone, the display shows how much time has elapsed since the food reached the core temperature. Once you start operating the appliance again, the appliance clears the time display. After around 20 minutes without any further operation, the appliance switches to low power mode.

15.4 Deleting the set core temperature

- ▶ In the "Manual" appliance display, double-click on the temperature.
→ *"Appliance displays", Page 13*
- ✓ The display shows the current core temperature.

15.5 Changing the set core temperature

1. Press .
2. Change the set core temperature using the control ring.
Once the display shows the set core temperature enlarged in the 12 o'clock position, you can change the set core temperature directly using the control ring.

15.6 Core temperature guideline values

The following overview provides you with guideline values for the core temperature. The guideline values depend on the quality and composition of the food.

Only use fresh food that has not been frozen. For hygiene reasons, ensure that critical foods such as fish and game reach a core temperature of at least 140-160 °F (62-70 °C) and poultry and minced meat 180-195 °F (80-90 °C).

Food	Core temperature guideline value in °F (°C)
Beef	
Sirloin, fillet of beef, entrecôte, roast beef, rare	116-131 (47-55)
Sirloin, fillet of beef, entrecôte, roast beef, medium rare	133-145 (56-63)
Sirloin, fillet of beef, entrecôte, roast beef, medium	147-158 (64-70)
Sirloin, fillet of beef, entrecôte, roast beef, well done	160-167 (71-75)
Pork	
Joint of pork	167-176 (75-80)
Loin of pork, medium rare	149-158 (65-70)
Loin of pork, medium	160-167 (71-75)
Pork loin, well done	169-176 (76-80)
Meatloaf	185 (85)
Fillet of pork, medium rare	149-158 (65-70)
Fillet of pork, medium	160-167 (71-75)

Food	Core temperature guideline value in °F (°C)
Veal	
Joint of veal, well done	167-176 (75-80)
Breast of veal, stuffed, well done	167-176 (75-80)
Saddle of veal, medium	147-158 (64-70)
Saddle of veal, well done	160-167 (71-75)
Fillet of veal, rare	120-131 (50-55)
Fillet of veal, medium rare	133-145 (56-63)
Fillet of veal, medium	147-158 (64-70)
Fillet of veal, well done	160-167 (71-75)
Game	
Saddle of venison	140-158 (60-70)
Leg of venison	158-167 (70-75)
Venison loin steaks	149-158 (65-70)
Saddle of hare, saddle of rabbit	149-158 (65-70)
Poultry	
Chicken	194 (90)
Guinea fowl	176-185 (80-85)
Goose, turkey, duck	185-194 (85-90)
Duck breast, medium rare	131-140 (55-60)
Duck breast, medium	141-158 (61-70)
Duck breast, well done	160-176 (71-80)
Ostrich steak	140-149 (60-65)
Lamb	
Leg of lamb, medium	149-156 (65-69)
Leg of lamb, well done	158-176 (70-80)
Saddle of lamb, medium rare	131-140 (55-60)
Saddle of lamb, medium	141-147 (61-64)
Saddle of lamb, well done	149-167 (65-75)
Mutton	
Leg of mutton, medium rare	158-176 (70-75)
Leg of mutton, medium	169-176 (76-80)
Leg of mutton, well done	178-185 (81-85)
Saddle of mutton, medium	158-176 (70-75)
Saddle of mutton, well done	169-176 (76-80)
Fish	
Fillet, whole, medium	136-147 (58-64)
Fillet, whole, well done	149-154 (65-68)
Terrine	144-149 (62-65)
Other	
Bread	205 (96)
Pâté	162-167 (72-75)
Terrine	158-176 (70-75)

Food	Core temperature guideline value in °F (°C)
Foie gras	113-140 (45-60)
Reheating food	167 (75)

15.7 Estimated cooking time

After preheating, if the appliance has a temperature setting above 250 °F (120 °C) and the core temperature probe is inserted, the display shows an estimated cooking time a few minutes into the cooking time. The appliance continuously updates the estimated cooking time. The estimated cooking time is only available if you connect your appliance to the Home Connect® app. The longer the cooking process lasts, the more precise the estimated cooking time becomes. Do not open the appliance door; this distorts the estimated cooking time. The display shows the estimated cooking time in manual operation and in the automatic program. To display the current core temperature, press on the set core temperature.

16 Home Connect®

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect® app, adjust its basic settings and monitor its operating status.

The Home Connect® services are not available in every country. The availability of the Home Connect® function depends on the availability of Home Connect® services in your country. You can find information on this at: www.home-connect.com.

The Home Connect® app guides you through the entire registration process. Follow the instructions in the Home Connect® app to implement the settings.

Tip: Follow the instructions in the Home Connect® app as well.

Notes

- Also note the safety information in this instruction manual and ensure that it is also observed when operating the appliance using the Home Connect® app.
- Operating the appliance on the appliance itself always takes priority. It is not possible to operate the appliance using the Home Connect® app during this time.
- In networked standby mode, the appliance requires a maximum of 2 watts.

16.1 Setting up Home Connect®

Requirements

- The appliance is connected to the power supply and is switched on.
- You have a mobile device with a current version of the iOS or Android operating system, e.g. a smartphone.
- The appliance receives signals from the WLAN home network (Wi-Fi) at its installation location.
- The mobile device and the appliance are within range of your home network's Wi-Fi signal.

1. Scan the following QR code.



You can install the Home Connect® app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect® app.

16.2 Home Connect® settings

You can adjust the home network settings in your appliance's basic settings.

Which settings the display shows will depend on whether Home Connect® has been set up and whether the appliance is connected to your home network.

You can switch the network connection on or off as required. The network information is retained after the appliance is switched off. After switching on the appliance, wait for a few seconds until it reconnects to the home network.

The display uses different symbols to show the connection strength to the router.

Note: In networked standby mode, the appliance requires a maximum of 2 W.

You can use the Home Connect® app to access the appliance's functions. If you select the "Off (monitoring only)" setting in the basic settings → *Page 41* for "Remote start", the Home Connect® app only shows the appliance's operating status and you can configure the settings.

If you select the "Permanent" setting in the basic settings → *Page 41* for "Remote start", you can start and operate your appliance at any time without any prior approval on the appliance.

If you select the "Manual" setting in the basic settings → *Page 41* for "Remote start", the appliance requires approval in the control center in order to start a function. In the basic settings → *Page 41*, you can use "Network information" to display the network information.

In the basic settings → *Page 41*, you can use "Network credentials reset" to delete all network access data from the appliance at any time.

16.3 Starting functions with the Home Connect® app via manual Remote start

You can use the Home Connect® app to set the appliance remotely via the "Remote start" function. If you select the "Manual" setting in the basic settings for "Remote start", the appliance requires approval in the control center in order to start a function.



WARNING

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the fuse must be switched off and the door must be held closed in order to stifle any flames.

Requirements

- The appliance is connected to the home network and to the Home Connect® app.
- To start a function, the "Manual" setting is selected in the basic settings for "Remote start".

1. To activate manual remote start, press  and then .
2. Configure a setting in the Home Connect® app and send it to the appliance.
3. Start a function.

Note: If you open the appliance door more than 15 minutes after activating remote start or after the operation ends, the appliance deactivates the manual remote start.
24 hours after activating remote start, the appliance deactivates the manual remote start.

16.4 Starting functions with the Home Connect® app via permanently activated Remote start

You can use the Home Connect® app to set and start the appliance remotely via the "Remote start" function. If you select the "Permanent" setting in the basic settings for "Remote start", the appliance does not require approval in the control center in order to start a function.

WARNING

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the fuse must be switched off and the door must be held closed in order to stifle any flames.

Requirements

- The appliance is connected to the home network and to the Home Connect® app.
- To start a function, the "Permanent" setting is selected in the basic settings for "Remote start".

1. Configure a setting in the Home Connect® app and send it to the appliance.
2. Start a function.

16.5 Using the Home Connect® app to change settings

You can use the Home Connect® app to set the appliance remotely.

WARNING

Combustible objects that are left in the cooking compartment may catch fire.



- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the fuse must be switched off and the door must be held closed in order to stifle any flames.

Requirement: The appliance is connected to the home network and to the Home Connect® app.

- ▶ Configure a setting in the Home Connect® app and send it to the appliance.

16.6 Switching the Wi-Fi on or off

Requirement: The "On" and "Off" settings are only available if a connection to the Home Connect® server has been established.

1. Press  in the status line.
2. Press  in the control center.
3. Press the desired setting.
4. If required, use < to switch to "Settings".

16.7 Software update

Your appliance's software can be updated using the software update function, e.g. for the purposes of optimization, troubleshooting or security updates. To do this, you must be a registered Home Connect® user, have installed the app on your mobile device and be connected to the Home Connect® server.

As soon as a software update is available, you will be informed via the Home Connect® app and will be able to start the software update via the app. Once the update has been successfully downloaded, you can start installing it via the Home Connect® app if you are in your home network (Wi-Fi). The Home Connect® app informs you once the installation is successful.

Notes

- The software update consists of two steps.
 - The first step is the download.
 - The second step is the installation on your appliance.

- You can continue to use your appliance as normal while updates are downloading. Depending on your personal settings in the app, software updates can also be set to download automatically.
- Installation takes a few minutes. You cannot use your appliance during installation.
- We recommend that you install security updates as soon as possible.

16.8 Data Protection

Please read this information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance transmits the following types of data to the Home Connect® server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your home appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect® functions for use and is only required when you want to use the Home Connect® functions for the first time.


Note: Please note that the Home Connect® functions can only be used in conjunction with the Home Connect® app. Information on data protection can be retrieved in the Home Connect® app.

17 Basic settings


You can configure the basic settings for your appliance to meet your needs.

17.1 Overview of the basic settings


Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

Symbol	Basic setting	Setting	Selection	Use
	Wi-Fi	Wi-Fi	<ul style="list-style-type: none"> ■ On ■ Off¹ 	<p>Switching the Wi-Fi on or off</p> <p>Note: The On and Off settings are only available if a connection to the Home Connect® server has been established.</p> <p>All settings are retained after the appliance is switched off.</p> <p>Switch on the Wi-Fi in order to allow the appliance to be controlled via the app and to use additional appliance functions.</p>
		Home Connect® assistant	<ul style="list-style-type: none"> ■ During the initial connection to the Home Connect® app: "Start" ■ If you have already connected successfully to the Home Connect® app: "Connect now" 	<p>Setting up Home Connect® → <i>Page 38</i></p>
		Remote start	<ul style="list-style-type: none"> ■ Off (monitoring only) ■ Manual¹ ■ Permanent <p>Note: The settings are only available if you have selected the "On" setting for Wi-Fi.</p>	<p>Setting "Remote start" → <i>"Starting functions with the Home Connect® app via manual Remote start", Page 39</i></p>
		Network information	<ul style="list-style-type: none"> ■ MAC address ■ Wi-Fi SSID ■ IPv4 address ■ IPv6 address <p>Note: The settings are only available if you have selected the "On" setting for Wi-Fi.</p>	<p>Displaying "Network information"</p>

 


¹ Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
		Network credentials reset	<ul style="list-style-type: none"> Confirm <p>The connections are reset. The appliance deletes saved network access data.</p> <p>Note: The settings are only available if you have selected the "On" setting for Wi-Fi.</p>	Reset the network access data
	Display	Brightness	<ul style="list-style-type: none"> 1 2 3 4¹ 5 6 	Sets the brightness in increments
		Distant view	<ul style="list-style-type: none"> "On"¹: The display shows less content if you are at a greater distance. "Off": The display always shows the same content. 	Switch the remote view on or off
		Screen in off-mode	<ul style="list-style-type: none"> GAGGENAU logo"displayed on approach"¹ None 	Sets the low power mode display → <i>Page 17</i>
		Ring behavior	<ul style="list-style-type: none"> "Standard": Press the required function and use the control ring to change the function "Quick selection"¹: Use the control ring to change the function located above the control ring 	Set the control ring behavior
		Display child lock	<ul style="list-style-type: none"> "On"¹: The symbol for the "Display child lock" function is only visible in the status line if the "Display child lock" function is active. Control ring and touch fields are locked. "Off": The "Display child lock" function cannot be activated. 	Displays or hides the symbol for the child lock → <i>Page 27</i> in the control center





¹ Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
		Door lock	<ul style="list-style-type: none"> ■ Activated ■ Off¹ 	<p>Activates or deactivates the door lock</p> <p>Note: The door lock → <i>Page 18</i> prevents the appliance door from being opened accidentally. This is particularly useful when installing the appliance under the countertop.</p>
		Display alignment	<ul style="list-style-type: none"> ■ Vertical¹ ■ Horizontal 	Aligns the display horizontally or vertically depending on the appliance's installation position or the user's body size
	Sounds	On/off sounds	<ul style="list-style-type: none"> ■ Quiet ■ Standard¹ ■ Loud 	Sets the volume of the on/off tones
		Notification sounds	<ul style="list-style-type: none"> ■ Off ■ Quiet ■ Standard¹ ■ Loud 	<p>Set the volume of the notification tones</p> <p>Note: The notification tones for the warnings and error messages always remain switched on.</p>
		Process sounds	<p>Volume</p> <ul style="list-style-type: none"> ■ Off ■ Quiet ■ Standard¹ ■ Loud <p>"Repetitions":</p> <ul style="list-style-type: none"> ■ 1x ■ "10 s": The appliance emits the signal tone repeatedly for 10 seconds. ■ "30 s"¹: The appliance emits the signal tone repeatedly for 30 seconds. ■ "3 min": The appliance emits the signal tone repeatedly for 3 minutes. <p>"Preheating signal":</p> <ul style="list-style-type: none"> ■ "On"¹ ■ Off 	<ul style="list-style-type: none"> ■ Set the volume of the process tones ■ Sets the desired maximum duration of the process tones ■ Activates or deactivates the process tone following preheating

¹ Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
		Visual feedback	<ul style="list-style-type: none"> ■ On ■ Off¹ 	Switches the pulsating light for program end, notifications or error messages on or off
		Volume reduction	<ul style="list-style-type: none"> ■ "On": Lowers the volume for all tones to a certain volume level in a defined period ■ "Reduced": Lowers the volume for all tones to the "Quiet" volume level in a defined period and switches off the tones for cleaning ■ "Off"¹: Switches off all tones in a defined period <p>Start time</p> <ul style="list-style-type: none"> ■ "22h"¹ <p>End time</p> <ul style="list-style-type: none"> ■ "7h"¹ 	<p>Sets the lowering of the volume</p> <p>Note: The signal tones for warnings, error messages, and switching on and switching off always remain switched on.</p>
	Interior lighting	Brightness	<ul style="list-style-type: none"> ■ Dark ■ Standard¹ ■ Bright 	Sets the brightness of the interior lighting
		Activation	<ul style="list-style-type: none"> ■ Automatic¹ ■ Manual 	Switches the interior lighting on automatically or manually
		Light interaction	<ul style="list-style-type: none"> ■ On¹ ■ Off 	<p>Sets the light interaction</p> <p>Note: If you are outside of the range that the appliance recognizes, the appliance reduces the interior lighting to what is essential.</p>
	Notifications	Info-i	<ul style="list-style-type: none"> ■ On¹ ■ Off 	<p>Display or hide additional information</p> <p>Tip: If you press , the display shows additional information → <i>Page 17</i>. If you switch off the function, the display does not show any symbol or any additional information.</p>
		Pop-up hints	<ul style="list-style-type: none"> ■ On¹ ■ Off 	<p>Displays or hides pop-up notifications</p> <p>→ <i>Page 18</i></p>

 ¹ Factory setting (may vary according to model)


Symbol	Basic setting	Setting	Selection	Use
	Language	-	<ul style="list-style-type: none"> German French [...] English¹ 	Setting the language
	Time & Units	Time	<ul style="list-style-type: none"> Time¹ "Automatic": Select the "Automatic" option if your appliance is connected to Home Connect®. 	Set the time
		Time format	<ul style="list-style-type: none"> 12 24¹ 	Set the time format
		Temperature unit	<ul style="list-style-type: none"> °C¹ °F 	Set the temperature unit
		Weight unit	<ul style="list-style-type: none"> "Metric": "g/kg" "Imperial": "oz/lb" 	Set the weight unit
	Advanced	Display Sabbath mode	<ul style="list-style-type: none"> On Off¹ 	Displays or hides the long-term timer
		Demo mode	<ul style="list-style-type: none"> On Off¹ 	Activates or deactivates demo mode Note: The setting is only available in the first 3 minutes after connecting to the power supply.
		Factory settings	<ul style="list-style-type: none"> Restore 	Resets the appliance to the factory settings Note: The appliance starts the initialization. The display asks you to specify settings that the appliance installer has implemented.
	Appliance	Start screen	<ul style="list-style-type: none"> Manual¹ Favorites Programs 	Select a display that shows the display after switching on
		Preselection of types of heating	Overview of the available types of heating → <i>Page 15</i> .	Selects the preferred types of heating

¹ Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
			<ul style="list-style-type: none"> ■ On ■ Off 	<ul style="list-style-type: none"> ■ Selects the preferred type of heating that is available after the appliance is switched on ■ If required, displays or hides additional types of heating at a later point <p>Note: The sequence of the types of heating is defined.</p>
		Food preference	<ul style="list-style-type: none"> ■ Off¹ ■ Vegetarian ■ No meat & poultry ■ No fish & seafood ■ No pork ■ Kosher 	Selects the preferred food for automatic programs and recommended settings
		Count-up cooking timer	<ul style="list-style-type: none"> ■ On¹ ■ Off 	<p>Sets the total cooking time timer</p> <p>Note: The running cooking time is automatically counted up if no cooking time has been stored.</p>
		User detection	<p>"Behavior":</p> <ul style="list-style-type: none"> ■ Automatic ■ "Below 1.2 m"- "Below 0.1 m" <p>"Installation height":</p> <ul style="list-style-type: none"> ■ Under 91.4 cm/36" ■ Between 91.4 cm/36" and 150 cm/59"¹ ■ Over 150 cm/59" 	<ul style="list-style-type: none"> ■ Sets the distance from which the proximity sensor detects the user ■ Set the appliance's installation height <p>Note: To ensure that the proximity sensor optimally detects the user, store the installation height of the appliance's upper edge.</p>
		Quick heat	<ul style="list-style-type: none"> ■ On¹ ■ Off 	Switches fast pre-heat on or off
		Catalyzer heating	<ul style="list-style-type: none"> ■ On¹ ■ Off 	Switches the catalyzer heating → <i>Page 18</i> on or off
		Introduction to the appliance	Start	<p>Start the appliance introduction</p> <p>Note: The appliance introduction contains a short description of the basic functions.</p>

¹ Factory setting (may vary according to model)

 17.2 Changing the basic settings

1. Swipe repeatedly from left to right until the display shows Basic settings → *Page 41*.
- ✓ The display shows the symbols for the available settings in a ring menu.
2. Use the control ring to select the required basic setting.
3. Press the required basic setting.
- ✓ The display shows the settings for the selected basic setting.
4. Depending on the selected basic setting, use the control ring to select the setting, or press the required setting.
 - With a list menu, ensure that the required setting is above the horizontal line.
5. Use  to activate the setting or use the control ring to select the setting option, and press the setting.
6. If required, use < to switch to the previous view.

18 Cleaning and maintenance

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

18.1 Cleaning agents

To avoid damaging the various surfaces on the appliance, do not use any unsuitable cleaning agents.

WARNING

Moisture intrusion may cause an electric shock.

- ▶ Do not use any steam cleaners or high-pressure cleaners to clean the appliance.

WARNING

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

WARNING

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the appliance door, as they may scratch the surface.

NOTICE:

Unsuitable cleaning agents damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive cleaning agents.
- ▶ Do not use cleaning agents with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use any special cleaners for cleaning the appliance while it is hot.

Salt contained in new sponge cloths may damage surfaces.

- ▶ Wash new sponge cloths thoroughly before use.
- Using oven cleaner in a hot oven cavity damages the stainless steel surfaces.
- ▶ Never use oven cleaner in the oven cavity when it is still warm.
- ▶ Remove all food remnants from the oven cavity and the appliance door before you next heat up the appliance.

WARNING

Loose food remnants, fat and meat juices may catch fire.

- ▶ Before using the appliance, remove the worst of the food residues and remnants from the oven cavity, heating elements and accessories.

Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance.

Appliance door

Area	Suitable cleaning agents	Information
Door pane	■ Glass cleaner	Do not use a glass scraper. Clean it using a soft cloth or a microfiber cloth.
Door seal	■ Hot soapy water	Clean with a dish cloth. Do not remove or scrub. Do not use metal scrapers or glass scrapers for cleaning.
Control ring	■ Soapy water	Clean with a slightly damp soft cloth. Do not spray with any cleaning agent.

Cooking compartment

Area	Suitable cleaning agents	Information
Cooking compartment	■ Hot soapy water	Clean with a dishcloth and dry with a soft cloth.

Area	Suitable cleaning agents	Information
Very dirty oven cavity	<ul style="list-style-type: none"> ■ Cleaning gel spray for ovens 	<p>The cleaning gel spray for ovens can be obtained from customer service or from the online shop.</p> <p>Observe the following information about the cleaning gel spray:</p> <ul style="list-style-type: none"> ■ The cleaning gel spray must not get into the door opening. ■ Leave this to work for no more than 12 hours. ■ Do not use it on hot surfaces. ■ Rinse off thoroughly with water. ■ Follow the manufacturer's instructions.
Glass cover for the oven cavity light	<ul style="list-style-type: none"> ■ Hot soapy water 	Clean with a dish cloth.
Wire rack	<ul style="list-style-type: none"> ■ Hot soapy water 	In the event of heavy soiling, leave to soak and use a brush. Do not clean in the dishwasher.
Accessories	<ul style="list-style-type: none"> ■ Dishwasher ■ Hot soapy water 	Soak burned-on residues and remove with a brush. Rinse thoroughly with clean water.
Core temperature probe	<ul style="list-style-type: none"> ■ Hot soapy water 	Wipe with a damp cloth. Do not clean in the dishwasher.
Rotisserie spit	<ul style="list-style-type: none"> ■ Hot soapy water 	Do not clean the rotisserie spit in the dishwasher. Clean the rotisserie spit with hot soapy water and a soft cloth. After cleaning, dry the rotisserie spit with a soft cloth.
Fully extendable telescopic pull-out rack (special accessory)	<ul style="list-style-type: none"> ■ Hot soapy water 	Clean with a dishcloth or scrubbing brush, and dry with a soft cloth.
Roaster (special accessory)	<ul style="list-style-type: none"> ■ Hot soapy water 	Soak and then clean with a dishcloth or scrubbing brush. Do not clean the roaster in the dishwasher.

18.2 Microfiber cloth


The honeycomb microfiber cloth is especially suitable for cleaning easily damaged surfaces, such as glass, glass ceramic, stainless steel or aluminum. The microfiber cloth removes liquid and greasy deposits in one go. The microfiber cloth can be obtained from customer service or from the online shop.

18.3 Removing the shelf supports


The shelf supports can be removed for cleaning. You can also leave the shelf supports fitted in the appliance and clean them with the pyrolytic self-cleaning program.

1. Place a dish towel in the oven cavity to protect the enamel from scratches.

2. Undo the knurled nuts.

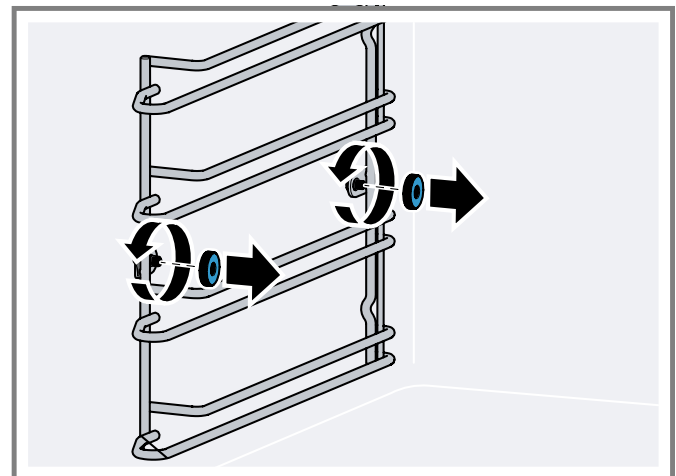


3. Remove the shelf supports.

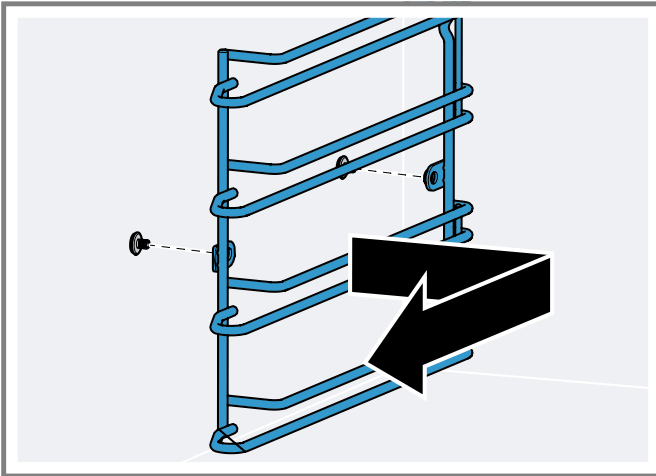

4. Clean the shelf supports with hot soapy water and a soft dish cloth.

18.4 Fitting the shelf supports

1. Fit the shelf supports on the correct side of the cooking compartment.
The shelf supports for the left and right side of the cooking compartment are different.
2. Position the shelf support such that the indentation is located at the rear.

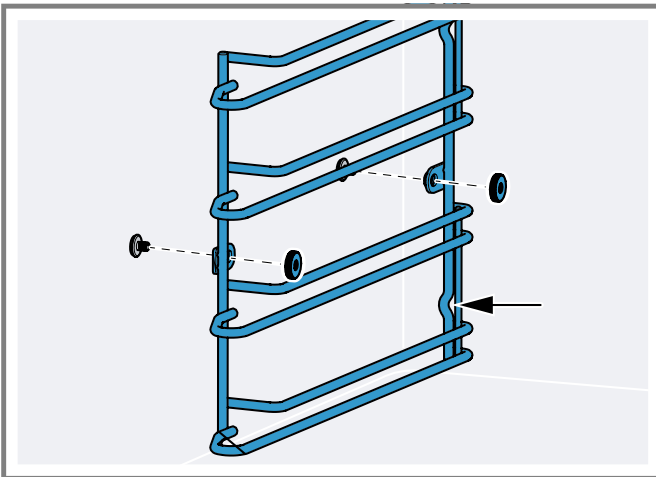

3. Tighten the knurled nuts.

18.5 Cleaning the fully extendable telescopic pull-out rack

NOTICE:

Aggressive cleaners cause damage to the fully extendable telescopic pull-out rack.

- ▶ Do not clean the fully extendable telescopic pull-out rack in the dishwasher.
- ▶ Do not place the fully extendable telescopic pull-out rack in rinsing water.


The cleaning program causes damage to the fully extendable telescopic pull-out rack.

- ▶ Do not clean the fully extendable telescopic pull-out rack using the appliance's cleaning program.

1. Remove the fully extendable telescopic pull-out rack.
2. Undo the knurled nut.
3. Use a damp cloth to clean the pull-out rail.
 - Do not remove the lubricant on the pull-out rail. It is best to clean the pull-out rail while it is pushed in.

18.6 Cleaning the rotisserie spit

1. Do not clean the rotisserie spit, the rotisserie spit drive, the holding clamps and the handle in the dishwasher, but use hot soapy water and a soft cloth for cleaning.

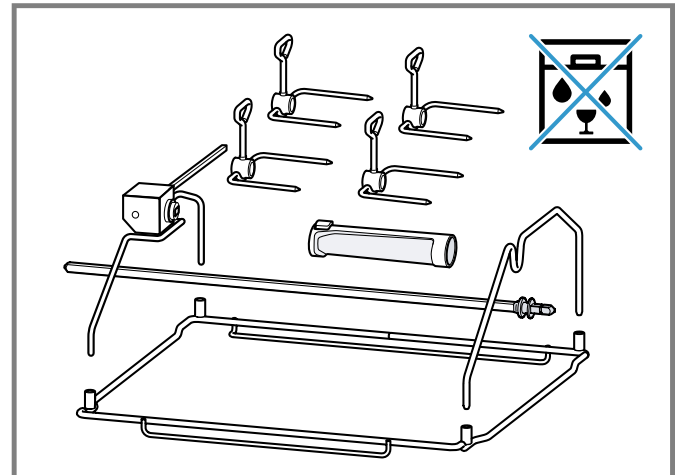

2. After cleaning, dry all parts of the rotisserie spit with a soft cloth.

19 Pyrolytic self-cleaning

Follow these safety instructions when using the pyrolytic cleaning function.

⚠ WARNING

The appliance gets very hot when the cleaning function is in progress. The non-stick coating on baking trays and tins is destroyed and noxious gases are released.

- ▶ Never clean non-stick baking trays or baking tins using the cleaning function.
- ▶ Only clean enameled accessories at the same time.

⚠ WARNING

The oven cavity gets very hot when the cleaning function is in progress.

- ▶ Never open the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children away from the appliance.

⚠ The outside of the appliance gets very hot when the cleaning function is in progress.

- ▶ Never touch the appliance door.
- ▶ Allow the appliance to cool down.
- ▶ Keep children away from the appliance.

⚠ WARNING

The cleaning function heats up the oven cavity to a very high temperature so that food left over from roasting, grilling and baking is incinerated. This process releases vapors, which can irritate mucous membranes.

- ▶ Keep the kitchen well ventilated while the cleaning function is running.
- ▶ Do not remain in the room for long periods.
- ▶ Keep children and pets away.

⚠ WARNING

The oven heats up to a very high temperature during self cleaning. Opening the door can result in injury.

- ▶ When self-cleaning, confirm that the door locks and will not open.
- ▶ If the door does not lock, do not run Self Clean. Contact Customer Service.

⚠ CAUTION

Remove broiler pans, pots, and other utensils and excess spillage before self-cleaning.

When the pyrolytic self-cleaning function is running, the appliance heats up to 905°F (485°C). Residues from roasting, broiling or baking are incinerated. All you have to do is wipe the ash out of the oven cavity.

The total duration of the pyrolytic self-cleaning function comprises the cleaning time and cooling period. Pyrolytic self-cleaning takes around 3 hours. The cooling time is approximately 1 hour. If required, you can delay the pyrolytic self-cleaning switch-off time, e.g. if you want the pyrolytic self-cleaning function to run overnight.

19.1 Preparing pyrolytic self-cleaning**⚠ WARNING**

Loose food residues, fat, and meat juices may catch fire.

- ▶ Before using the cleaning function, always remove the worst of the food residues and remnants from the oven cavity and accessories.

NOTICE:

Using cleaning agents before the pyrolytic self-cleaning cycle may damage the cooking compartment and the glass on the appliance door.

- ▶ Before the pyrolytic self-cleaning cycle, do not use any cleaning agents in the cooking compartment or on the inside of the appliance door.

1. Wipe the oven cavity with a damp cloth.
2. Wipe the door seal and the insides of the doors.
3. Completely remove all traces of cleaning agents.
4. Remove all loose objects from the oven cavity.

The shelf supports are pyrolysis-safe.

→ *"Preparing the cleaning of accessories with the pyrolytic self-cleaning function", Page 50*

19.2 Preparing the cleaning of accessories with the pyrolytic self-cleaning function

GAGGENAU Baking trays and broiling trays are coated with a pyrolysis-safe enamel. Only clean GAGGENAU baking trays and broiling trays with the pyrolytic self-cleaning function.

⚠ WARNING

Loose food residues, fat, and meat juices may catch fire.

- ▶ Before using the cleaning function, always remove the worst of the food residues and remnants from the oven cavity and accessories.

NOTICE:

The heat during the pyrolytic self-cleaning may damage certain accessories.

- ▶ Do not clean the wire rack, rotisserie spit, cast iron roaster, baking stone, core temperature probe or other accessories using the pyrolytic self-cleaning function.
- ▶ Only clean GAGGENAU baking trays and grill trays with the pyrolytic self-cleaning function.

Note: If the oven cavity is extremely dirty, clean the baking tray or grill tray separately.

1. In each case, only slide one baking tray or broiling tray onto the lowest shelf.
2. Slide the baking tray or broiling tray in all the way.

19.3 Starting the pyrolytic self-cleaning function

1. Remove all loose objects from the oven cavity and remove coarse dirt.
2. Completely remove any cleaning agent residue.
3. Swipe repeatedly from left to right until the display shows "Modes & Service".
- ✓ The display shows the available functions in a list menu.
4. Use the control ring to select the "Pyrolytic self-clean" function.
5. Press "Pyrolytic self-clean".
6. Press "Start".
7. If required, delay the end time.
 - Press the end time.
 - Use the control ring to set the end time.
 - Press →.
8. Follow the instructions on the display.
9. Press →.
10. Press ▶ to start.

- If required, press ■ to delay the end time.

The total duration of the pyrolytic self-cleaning function comprises the cleaning time and cooling period. The time for the relevant section of the pyrolytic self-cleaning function counts down on the display.

- ✓ For your safety, the appliance locks the appliance door. During cooling, the appliance unlocks the door mechanism as soon as the temperature has fallen below 390°F (200°C).

- ✓ The cleaning time counts down on the display.
- ✓ If you have delayed the end time, the time until the pyrolytic self-cleaning function starts will count down on the display.
- ✓ The light in the cooking compartment remains switched off.
- ✓ A signal tone sounds once the pyrolytic self-cleaning function has ended.
- ✓ The display shows a message.

11. Once the appliance has cooled down, wipe out the ash that has been left behind in the oven cavity with a damp cloth.

Depending on the type and degree of soiling, white deposits may remain on the enamel surfaces. These deposits are harmless. They do not affect the function or service life of your appliance.

12. Press ✓ to confirm.

19.4 Stopping the pyrolytic self-clean

- ▶ Press ■ on the control ring.
- ✓ For your safety, the appliance locks the appliance door. During cooling, the appliance unlocks the door mechanism as soon as the temperature has fallen below 390°F (200°C).

20 Troubleshooting

 
 


You can eliminate minor issues on your appliance yourself. Please read the information on eliminating issues before contacting Customer Service. This may avoid unnecessary repair visits.

WARNING

To avoid risk of injury from improper repairs, observe the following.

- ▶ Only qualified technicians or authorized service providers should perform repairs.

- ▶ If the power cord of this appliance becomes damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service, or an authorized service provider in order to prevent injury.
- ▶ Only original spare parts may be used to repair the appliance.
- ▶ If the appliance has an issue, call Customer Service.

Issue	Cause and troubleshooting
The appliance is not working.	<p>The circuit breaker in the circuit breaker panel has tripped.</p> <ul style="list-style-type: none"> ▶ Check the breaker panel. <p>There has been a power failure.</p> <ul style="list-style-type: none"> ▶ Check whether the lighting in your kitchen or other appliances in the room are working. <p>Operating error.</p> <ul style="list-style-type: none"> ▶ Switch off the circuit breaker for the appliance in the fuse box and switch it back on after approximately 60 seconds.
The appliance does not start.	<p>The appliance door is not fully closed.</p> <ul style="list-style-type: none"> ▶ Close the appliance door.
The appliance cannot be started via the Home Connect® app.	<p>The appliance is not connected to the Home Connect® app.</p> <ul style="list-style-type: none"> ▶ Start the connection between the appliance and the Home Connect® app. → <i>"Setting up Home Connect®", Page 38</i> <p>The appliance is connected to the Home Connect® app but the remote control function is not activated.</p> <ul style="list-style-type: none"> ▶ Activate the remote control function in the Home Connect settings → <i>Page 38</i>.
The appliance is not working. The display does not respond. The display shows the symbol for the childproof lock  .	<p>Childproof lock is activated.</p> <ul style="list-style-type: none"> ▶ Deactivate the childproof lock. → <i>Page 27</i>
The appliance automatically switches off.	<p>Safety switch-off function: No operation for more than 12 hours.</p> <ol style="list-style-type: none"> 1. Press  to confirm the message. 2. Switch off the appliance.
The appliance does not heat up; the display shows the symbol for the demo mode  .	<p>The appliance is in demo mode.</p> <ul style="list-style-type: none"> ▶ Deactivate the demo mode in the basic settings → <i>Page 41</i>.
The lighting does not work.	<p>The lighting is defective.</p> <ul style="list-style-type: none"> ▶ Call → <i>"Customer Service", Page 54</i>.
Issue	Cause and troubleshooting
The display shows the error message "Exx".	<p>An error occurred.</p> <ol style="list-style-type: none"> 1. If the display shows an error message, press . ✓ If the display no longer shows the error message, it was a one-off problem. 2. If the display continues to show or repeatedly shows the error message, contact customer service → <i>Page 54</i> and provide them with the error code.
Display shows "Initialization".	<p>The initial start-up was not completed successfully.</p> <ul style="list-style-type: none"> ▶ Carry out initial start-up. → <i>"Initial use", Page 21</i>

Issue	Cause and troubleshooting
Display shows "Initialization".	<p>The appliance's factory settings were restored.</p> <ul style="list-style-type: none"> ▶ Carry out initial start-up. → <i>"Initial use", Page 21</i>
	<p>Demo mode was activated during initial start-up and has now been deactivated.</p> <ul style="list-style-type: none"> ▶ Carry out initial start-up. → <i>"Initial use", Page 21</i>

20.1 Power failure


Your appliance can bridge a power failure of a few seconds. The operation continues.

If the power failure lasts longer and the appliance was operating, the display shows a message. The operation is interrupted.

Switch the appliance back on again after a power failure

1. Press .
2. Switch the appliance back on again as usual.

20.2 Demo mode

If the display shows , demo mode is activated. The appliance does not heat up.

Deactivating demo mode

1. To briefly disconnect the appliance from the mains, switch off the household fuse or the circuit breaker in the fuse box.
2. Deactivate demo mode within 3 minutes in the basic settings → *Page 41*.

21 Disposal

21.1 Disposal of your old appliance

Environmentally compatible disposal allows valuable raw materials to be recycled.

- ▶ Dispose of the appliance in an environmentally responsible manner.

Information about current disposal methods can be obtained from your specialist dealer or local authority.

22 How it works

Here, you can find the ideal settings for various types of food as well as the best accessories and cookware. We have perfectly tailored these recommendations to your appliance.

22.1 General cooking tips

Take note of the following information when cooking all types of food.

- Always preheat the appliance for food that you cook above 212°F (100°C). This will produce the best cooking results. The cooking times specified refer to a preheated appliance.
- The cooking times specified are intended as a guide. The actual cooking time depends on the quality and temperature of the food before cooking, as well as its weight and thickness.
- If you have not made a particular dish before, start with the shortest specified time. If required, you can continue to cook the food.
- A lower temperature results in more even browning. If necessary, set a higher temperature.
- The values given refer to average quantities for 4 people. If you want to prepare a larger amount, expect a longer cooking time.
- Use the cookware specified. If you use other cookware, cooking times may be longer or shorter.

- You can use any heat-resistant cookware. Place the ovenware in the center of the wire rack. For large roasts, you can also use the broiling tray or glass tray.
- To ensure optimal heat circulation, do not position the wire racks and baking trays too closely.
- To prepare bulky food items, you can remove the shelf supports at both sides.
- Place the rack directly onto the bottom of the cooking compartment and place the food or roaster onto the rack. Do not place the food or roaster directly onto the bottom of the oven cavity. If required, remove the shelf supports. → *Page 48*
- Open the oven cavity door on the preheated oven for a short time only and quickly place your food inside the appliance.
- Always use plates, baking tins or ovenproof dishes with the wire rack.
- "Economy convection" type of heating:
Energy-saving hot air mode for cakes, meat, bakes, and gratins. Optimal use is made of the residual heat. Convenience functions remain switched off (e.g. the interior lighting). The interior oven temperature can only be displayed while the appliance is heating up. Do not preheat the oven. Make sure that the oven cavity is cold and that there is nothing already in there when you place the food inside. Then start the specified cooking time. Always keep the appliance door closed when cooking. This prevents heat loss.
- "Broiler" and "Broil + circulated air":
With these operating modes, there may be a temperature difference between the temperature you have set and the actual temperature inside the oven. This is because broiling and browning are fast cooking processes that require high temperatures. Consequently, for browning and roasting, a higher temperature than is actually needed on the surface of the food is selected.

23 Customer Service

With any warranty repair, we will make sure your appliance is repaired by an authorized service provider using genuine replacement parts. We use only genuine replacement parts for all repairs.

Detailed information on the warranty period and terms of warranty can be found in the Statement of Limited Product Warranty, from your retailer, or on our website.

If you contact Customer Service, you will need the model number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.

The LED light sources are available as a spare part and should only be replaced by an authorized service provider.

USA:

1-877-442-4436

www.gaggenau.com

www.gaggenau.com/us/appliances/eshop

CA:

1-877-442-4436

www.gaggenau.com


www.gaggenau.ca

For assistance with connecting to Home Connect®, you can also view instructions here:

www.home-connect.com/us/en/help-support/set-up

23.1 Model number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)


You can find the model number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.

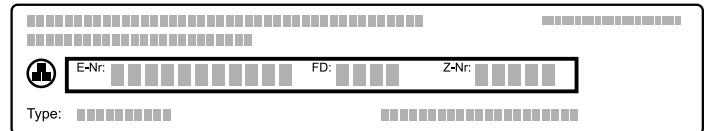

Making a note of your appliance's details and the Customer Service telephone number will enable you to find them again quickly.

23.2 Rating plate location

The rating plate is located at the door frame close to the lower door hinge.

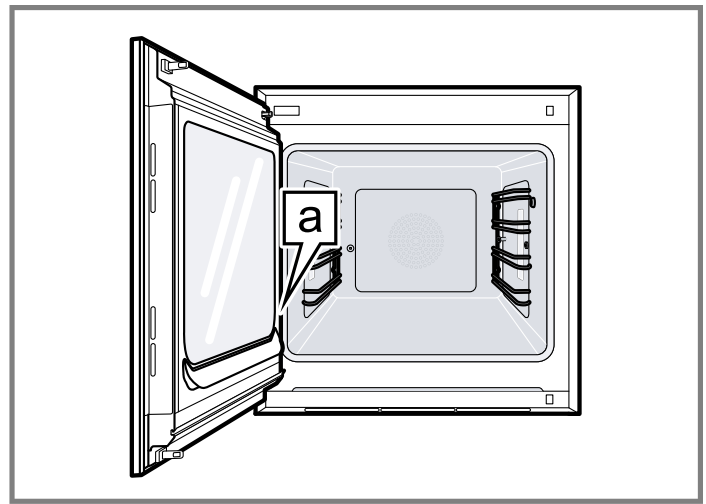

a Rating plate

24 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable license information is stored on your home appliance. You can also access the applicable license information via your Home Connect® app: "Profile -> Legal information -> License Information".¹ You can download the license information on the brand product website. (Please search on the product website for your

¹ Depending on the appliance specifications

appliance model and additional documents). Alternatively, you can request the relevant information from ossrequest@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The source code will be made available to you on request. Please send your request to ossrequest@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: „OSSREQUEST“

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

25 STATEMENT OF LIMITED PRODUCT WARRANTY

25.1 What this warranty covers & Who it applies to

The limited warranty provided by BSH Home Appliances (“Gaggenau”) in this Statement of Limited Product Warranty applies only to the Gaggenau appliance sold to you (“Product”), provided that the Product was purchased:

- For your normal, household (non-commercial) use, and has in fact at all times only been used for normal household purposes.
- New at retail from a BSH authorized dealer or directly from BSH (not a display, “as is”, or previously returned model), and not for resale, or commercial use.
- Within the United States or Canada, and has at all times remained within the country of original purchase.

The warranties stated herein apply to the original purchaser of the product warranted herein and to each succeeding owner of the product purchased for ordinary home use during the term of the warranty.

Please make sure to register your Product; while not necessary to effectuate warranty coverage, it is the best way for Gaggenau to notify you in the unlikely event of a safety notice or product recall.

25.2 How long the warranty lasts

Gaggenau warrants that the Product is free from defects in materials and workmanship for a period of seven hundred and thirty (730) days from the date of the original delivery. The foregoing timeline begins to run upon the date of original delivery, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. This Product is also warranted to be free from **cosmetic** defects in material and workmanship (such as scratches of stainless steel, paint/porcelain blemishes, chips, dents, or other damage to the finish) of the Product, for a period of sixty (60) days from the date of delivery or closing date for new construction. This **cosmetic** warranty excludes slight color variations due to inherent differences in painted and porcelain parts, as well as differences caused by kitchen

lighting, product location, or other similar factors. This **cosmetic** warranty specifically excludes any display, floor, “As Is”, or “B” stock appliances.

25.3 Repair/replace as your exclusive remedy

During this warranty period, Gaggenau or one of its authorized service providers will repair your Product without charge to you (subject to certain limitations stated herein) if your Product proves to have been manufactured with a defect in materials or workmanship. If reasonable attempts to repair the Product have been made without success, then Gaggenau will replace your Product (upgraded models may be available to you, in Gaggenau's sole discretion, for an additional charge). Nothing in this warranty requires damaged or defective parts to be replaced with parts of a different type or design than the original parts. All removed parts and components shall become the property of Gaggenau at its sole option. All replaced and/or repaired parts shall assume the identity of the original part for purposes of this warranty and this warranty shall not be extended with respect to such parts. Gaggenau's sole liability and responsibility hereunder is to repair manufacturer-defective Product only, using a Gaggenau authorized service provider during normal business hours. For safety and property damage concerns, Gaggenau highly recommends that you do not attempt to repair the Product yourself, or use a non-authorized service provider; Gaggenau will have no responsibility or liability for damage resulting from repairs or work performed by a non-authorized service provider. Authorized service providers are those persons or companies that have been specially trained on Gaggenau products, and who possess, in Gaggenau's opinion, a superior reputation for customer service and technical ability (note that they are independent entities and are not agents, partners, affiliates or representatives of Gaggenau). Nevertheless, taking your product to be serviced by a repair shop that is not affiliated with or an authorized dealer of Gaggenau will not void this warranty. Also, using third-party parts will not void this warranty. Notwithstanding the foregoing, Gaggenau will not incur any liability, or have responsibility, for the Product if it is located in a remote area (more than 100 miles from an authorized service provider) or is reasonably inaccessible, hazardous, threatening, or treacherous locale, surroundings, or environment; in any such event, if you request, Gaggenau would still pay for labor and parts and ship the parts to the nearest authorized service provider, but you would still be fully liable and responsible for any travel time or other special charges by the service company, assuming they agree to make the service call. Further, to the extent you have installed the Product in a difficult-to-access location or have otherwise installed temporary or permanent fixtures that create barriers to accessing or removing the Product, Gaggenau will not incur any liability for, or have responsibility, for work or

costs associated with moving the Product or otherwise creating access to the Product in order to repair or replace it. All such costs shall be your sole responsibility.

25.4 Out of warranty product

Gaggenau is under no obligation, at law or otherwise, to provide you with any concessions, including repairs, prorates, or Product replacement, once this warranty has expired.

25.5 Warranty exclusions

The warranty coverage described herein excludes all defects or damage that are not the direct fault of Gaggenau, including without limitation, one or more of the following:

- Use of the Product in anything other than its normal, customary and intended manner (including without limitation, any form of commercial use, use or storage of an indoor product outdoors, use of the Product in conjunction with air or water-going vessels).
- Any party's willful misconduct, negligence, misuse, abuse, accidents, neglect, improper operation, failure to maintain, improper or negligent installation, tampering, failure to follow operating instructions, mishandling, unauthorized service (including selfperformed "fixing" or exploration of the appliance's internal workings).
- Adjustment, alteration or modification of any kind.
- A failure to comply with any applicable state, local, city, or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations.
- Ordinary wear and tear, spills of food, liquid, grease accumulations, or other substances that accumulate on, in, or around the Product.
- Any external, elemental and/or environmental forces and factors, including without limitation, rain, wind, sand, floods, fires, mud slides, freezing temperatures, excessive moisture or extended exposure to humidity, lightning, power surges, structural failures surrounding the appliance, and acts of God.
- Service calls to correct the installation of your Product, to instruct you how to use your Product, to replace house fuses or correct house wiring or plumbing.
- Removal and replacement of trim or decorative panels that interfere with servicing the Product.
- Damage or defects caused by labor or parts installed by any non-authorized service provider, unless approved by Gaggenau before service is performed.

In no event shall Gaggenau have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures or objects around the Product. Also excluded from this warranty are Products, on which the serial numbers have been altered, defaced, or removed; service visits to teach you how to use the Product, or visits where there is nothing wrong with the Product; correction of installation problems (you are solely responsible for any

structure and setting for the Product, including all electrical, plumbing or other connecting facilities, for proper foundation/flooring, and for any alterations including without limitation cabinetry, walls, floors, shelving, etc.); and resetting of breakers or fuses. TO THE EXTENT ALLOWED BY LAW, THIS WARRANTY SETS OUT YOUR EXCLUSIVE REMEDIES WITH RESPECT TO PRODUCT, WHETHER THE CLAIM ARISES IN CONTRACT OR TORT (INCLUDING STRICT LIABILITY, OR NEGLIGENCE) OR OTHERWISE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESS LIMITED WARRANTY IS EFFECTIVE. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR CONSEQUENTIAL, SPECIAL, INCIDENTAL, INDIRECT, "BUSINESS LOSS", AND/OR PUNITIVE DAMAGES, LOSSES, OR EXPENSES, INCLUDING WITHOUT LIMITATION TIME AWAY FROM WORK, HOTELS AND/OR RESTAURANT MEALS, REMODELLING EXPENSES IN EXCESS OF DIRECT DAMAGES WHICH ARE DEFINITELY CAUSED EXCLUSIVELY BY GAGGENAU, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

No attempt to alter, modify or amend this warranty shall be effective unless authorized in writing by an officer of BSH.

25.6 Obtaining warranty service

To obtain warranty service for your product, you should contact Gaggenau Customer Support at 1-877-442-4436 to schedule a repair.

25.7 Product information

For handy reference, copy the information below from the rating plate. Keep your invoice and/or delivery documents for warranty validation.

Model number (E-Nr.)

Production number
(FD)

Date of delivery



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the page.



A series of horizontal lines for writing, spanning the width of the page.



A series of horizontal lines for writing, starting from the top right of the pencil icon and extending across the page.

BSH Home Appliances Corporation

1901 Main Street, Suite 600

Irvine, CA 92614

USA

www.gaggenau.com

1-877-442-4436

© 2025 BSH Home Appliances Corporation

GAGGENAU



9001954219 en-us (050502)