

# STEAM OVEN

GS22.1.0



You can find additional information and explanations online.  
Scan the QR code on the title page.



## Table of contents

<b>INFORMATION FOR USE</b>		<b>13 Programmes</b> .....	<b>19</b>
<b>1 Safety</b> .....	<b>2</b>	<b>14 Home Connect</b> .....	<b>20</b>
<b>2 Preventing material damage</b> .....	<b>4</b>	<b>15 Basic settings</b> .....	<b>22</b>
<b>3 Environmental protection and saving energy</b> .....	<b>6</b>	<b>16 Cleaning and servicing</b> .....	<b>27</b>
<b>4 Familiarising yourself with your appliance</b> .....	<b>6</b>	<b>17 Troubleshooting</b> .....	<b>31</b>
<b>5 Functions in the Home Connect app</b> .....	<b>12</b>	<b>18 Disposal</b> .....	<b>34</b>
<b>6 Accessories</b> .....	<b>12</b>	<b>19 How it works</b> .....	<b>34</b>
<b>7 Before using for the first time</b> .....	<b>13</b>	<b>20 Information regarding Free and Open Source Software</b> .....	<b>47</b>
<b>8 Basic operation</b> .....	<b>14</b>	<b>21 Customer Service</b> .....	<b>47</b>
<b>9 Timer functions</b> .....	<b>16</b>	<b>22 Declaration of Conformity</b> .....	<b>48</b>
<b>10 Long-term timer</b> .....	<b>17</b>	<b>23 INSTALLATION INSTRUCTIONS</b> .....	<b>49</b>
<b>11 Childproof lock</b> .....	<b>18</b>	<b>23.1 General installation instructions</b> .....	<b>49</b>
<b>12 Favourites</b> .....	<b>18</b>		

## 1 Safety

Observe the following safety instructions.

### 1.1 Definition of the signal words

This is where you can find explanations for the safety signal words used in this manual.

#### **WARNING**

This indicates that death or serious injuries may occur as a result of non-observance of this warning.

#### **ATTENTION**

This indicates that damage to the appliance or other material damage may occur as a result of non-compliance with this warning.

**Note:** This alerts you to important information.

### 1.2 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

### 1.3 Intended use

This appliance is designed only to be built into kitchen units. Read the special installation instructions.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

Only use this appliance:

- To prepare meals and drinks.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 4000 m above sea level.

### 1.4 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

### 1.5 Safe use

Always place accessories in the cooking compartment the right way round.

→ "Accessories", Page 12

#### ⚠ **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

#### ⚠ **WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching the cooking compartment.
- ▶ Young children under 8 years of age must be kept away from the appliance.
- ▶ Never touch the ventilation openings. Accessories and cookware get very hot.
- ▶ Always use oven gloves to remove accessories or cookware from the cooking compartment.

The inside of the appliance door becomes very hot during operation.

- ▶ During or after operation of the appliance, only touch the appliance door at the surface intended for this on the side.
- ▶ Always open the appliance door as far as it will go.

When the cooking compartment is hot, any alcoholic vapours inside may catch fire. The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Only use small quantities of drinks with a high alcohol content in food.
- ▶ Do not heat spirits ( $\geq 15\%$  vol.) when undiluted (e.g. for marinating or pouring over food).
- ▶ Open the appliance door carefully.

#### ⚠ **WARNING – Risk of scalding!**

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ When opening the door, do not stand too close to the appliance.
  - ▶ Open the appliance door carefully.
  - ▶ Keep children at a safe distance.
- If there is water in the cooking compartment when it is hot, this may create hot steam.
- ▶ Never pour water into the cooking compartment when the cooking compartment is hot.

#### ⚠ **WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the oven door, as they may scratch the surface.

The appliance and its parts that can be touched may have sharp edges.

- ▶ Take care when handling and cleaning them.
- ▶ If possible, wear protective gloves.

The hinges on the appliance door move when the door is opened and closed, which could trap your fingers.

- ▶ Keep your hands away from the hinges.
- The light emitted by LED lights is very dazzling, and can damage the eyes (risk group 1).
- ▶ Do not look directly into the switched on LED lights for longer than 100 seconds.

#### ⚠ **WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.

If the insulation of the power cord is damaged, this is dangerous.

- ▶ Never let the power cord come into contact with hot appliance parts or heat sources.
- ▶ Never let the power cord come into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ If the glass of the lighting is damaged, switch off the appliance to avoid a possible electric shock.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer service. → *Page 47*

**⚠ WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

## 1.6 Steam

Follow these instructions when using a steam function.

**⚠ WARNING – Risk of scalding!**

Hot steam is generated in the cooking compartment.

- ▶ Do not reach into the cooking compartment when using steam.

Hot liquid may spill over the sides of the accessory when it is removed from the cooking compartment.

- ▶ Remove hot accessories with care and always wear oven gloves.

**⚠ WARNING – Risk of fire!**

Due to the hot surfaces, vapours from flammable liquids may catch fire in the cooking compartment (explosion). The appliance door may spring open. Hot steam and jets of flame may escape.

- ▶ Do not pour flammable liquids (e.g. alcoholic drinks) into the water tank.
- ▶ Only fill the water tank with water or with the descaling solution we have recommended.

**⚠ WARNING – Risk of burns!**

Hot steam may escape during operation.

- ▶ Do not touch the ventilation openings.
- ▶ Keep children away from the appliance.

## 1.7 Cleaning

Follow these safety instructions when cleaning the appliance.

**⚠ WARNING – Risk of scalding!**

The descaling tablets may cause chemical burns in the mouth, throat, eyes and on the skin.

- ▶ Follow the safety instructions on the packaging of the descaling tablets.
- ▶ Avoid the skin coming into contact with the descaling tablets.
- ▶ Keep children away from the descaling tablets.

**⚠ WARNING – Risk of chemical burns!**

The descaling solution may cause chemical burns in the mouth, throat and eyes or on the skin.

- ▶ Avoid the skin coming into contact with the descaling solution.
- ▶ Keep children away from the descaling solution.
- ▶ Do not drink the descaling solution.
- ▶ The descaling solution must not come into contact with food.
- ▶ Clean the water tank in the dishwasher or thoroughly by hand before you next use the appliance.

---

# 2 Preventing material damage

## 2.1 General

**ATTENTION**

A build-up of heat may damage the appliance.

- ▶ Do not place anything directly on the cooking compartment floor.
- ▶ Do not line the cooking compartment floor with aluminium foil.

- ▶ Always place cookware in a perforated cooking container or on a wire rack.

Using unsuitable liquids may damage the appliance.

- ▶ Do not use any liquids other than water.
- ▶ Only use cold, fresh tap water, softened water or non-carbonated mineral water.

Chloride and acids may damage the stainless steel surface.

- ▶ Remove any residues of salt, hot sauces, e.g. ketchup or mustard, salted food, e.g. salted roasts, or other foods containing chloride or acid immediately. If aluminium foil comes into contact with the door pane, it could cause permanent discolouration.
  - ▶ Do not allow aluminium foil in the cooking compartment to come into contact with the door pane.
- Fruit juice can cause permanent stains in the cooking compartment.
- ▶ Always remove fruit juice immediately.
  - ▶ Wipe with a damp cloth, followed by a dry cloth. The prolonged presence of moisture in the cooking compartment leads to corrosion.
  - ▶ Do not keep moist food in the cooking compartment for a long time with the door closed.
  - ▶ Do not store food in the cooking compartment.
- Rusting material may lead to corrosion in the cooking compartment.
- ▶ Only use original accessories in the cooking compartment.
  - ▶ Do not use any enamelled baking trays or grill trays.
  - ▶ Never use serving plates or cutlery that may rust. Small parts that are not original may damage the appliance.
  - ▶ Only use original small parts, e.g. knurled nuts.
  - ▶ If necessary, order small parts from our spare parts service.

Heat can damage stainless steel cooking containers.

- ▶ Only heat stainless steel cooking containers up to 230 °C.
- ▶ Do not use stainless steel cooking containers in the oven.

Leaving the appliance to cool down with the door open will damage the front of neighbouring kitchen units over time.

- ▶ Always allow the cooking compartment to cool down with the door closed after cooking at high temperatures.
- ▶ Take care not to trap anything in the appliance door.
- ▶ Only leave the cooking compartment to dry with the door open if a lot of moisture was produced during operation.

If the seal is very dirty, the appliance door will no longer close properly during operation. This may damage the front of adjacent kitchen units.


- ▶ Keep the seal clean at all times.
- ▶ Never operate the appliance if the seal is damaged or missing.

Sitting or placing objects on the appliance door may damage it.

- ▶ Do not place, hang or support objects on the appliance door.
- ▶ Do not place cookware or accessories on the appliance door.

Carrying the appliance by the appliance frame may cause it to bend. The appliance frame cannot support

the weight of the appliance.

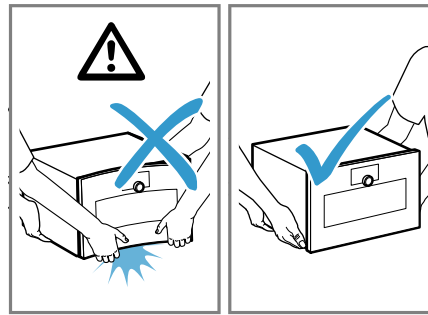

- ▶ Do not lift the appliance using the appliance frame.
- ▶ Always lift the appliance at the casing.

## 2.2 Steam

### ATTENTION

Dripping liquids may damage the cooking compartment.

- ▶ To catch any dripping liquids, when steaming using a perforated cooking container, always insert the unperforated cooking container underneath.

Using cookware with rust spots may cause corrosion in the cooking compartment. Even the smallest spots of rust can cause corrosion.

- ▶ Do not use cookware with rust spots.

Hot water in the water tank may damage the steam system.

- ▶ Only fill the water tank with cold water.

If descaling solution comes into contact with the control panel or other delicate surfaces, it will damage them.

- ▶ Remove descaling solution immediately with water.

## 2.3 Cleaning

### ATTENTION

Limescale may damage the appliance.

- ▶ Descale the appliance regularly.

Using the wrong descaler may damage the appliance.

- ▶ Only use the specified descaling tablets.

Improper care of the appliance can lead to corrosion in the cooking compartment.

- ▶ Follow the care and cleaning instructions for the appliance.

→ "Cleaning and servicing", Page 27

- ▶ Clean the cooking compartment each time you use it as soon as the appliance has cooled down.

- ▶ Dry the cooking compartment after cleaning.

The descaling tablet may damage the cooking compartment.

- ▶ Use the descaling tablet for the descaling programme only.

- ▶ Place the descaling tablet into the water tank.

- ▶ Never place the descaling tablet in the cooking compartment or heat it up in the cooking compartment.

Heat damages the water tank.

- ▶ Do not dry the water tank in the hot cooking compartment.

## 3 Environmental protection and saving energy

### 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

### 3.2 Saving energy

If you follow these instructions, your appliance will use less power.

When steaming, you can cook on several levels at the same time.

- ✓ With steam, various dishes can be prepared at the same time without the different flavours mixing. When preparing dishes with different cooking times, those with the longest cooking time should be placed in the oven first.

When cooking multiple dishes, do so in succession or in parallel.

- ✓ The cooking compartment is heated after cooking the first dish. This reduces the cooking time for the following dishes.

Open the appliance door as little as possible during operation.

- ✓ This maintains the temperature in the cooking compartment and eliminates the need for the appliance to reheat.

Remove any accessories that are not being used from the cooking compartment.

- ✓ Accessories that are not being used do not need to be heated.


Allow frozen food to defrost before cooking.

- ✓ This saves the energy that would otherwise be required to defrost it.

## 4 Familiarising yourself with your appliance

### 4.1 Appliance

You can find an overview of the parts of your appliance here.

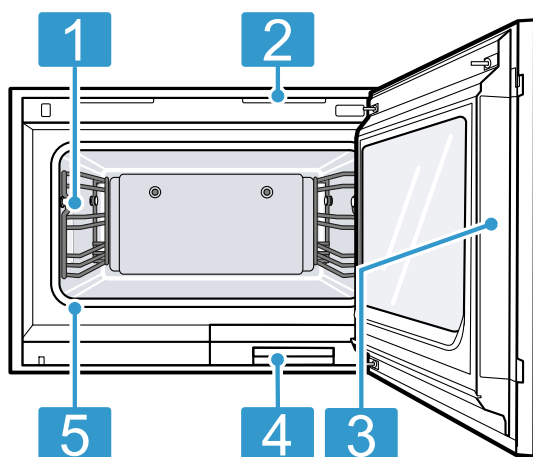

### ATTENTION


A build-up of heat may damage the appliance.

- ▶ Ensure that the cooking compartment floor always remains clear.
- ▶ Do not place anything directly on the cooking compartment floor.
- ▶ Do not line the cooking compartment floor with aluminium foil.
- ▶ Always place cookware in the perforated cooking container or on the wire rack.

The accessories may tip.

- ▶ Do not push the accessories between the shelf positions.

The bottom shelf level has two shelf positions. This means that, when defrosting, for example, you can slide the unperforated cooking container in below the perforated cooking container in order to collect excess liquid. You can use up to three shelf levels at the same time. Always open the appliance door as far as it will go. In this position, the open appliance door does not swing back.

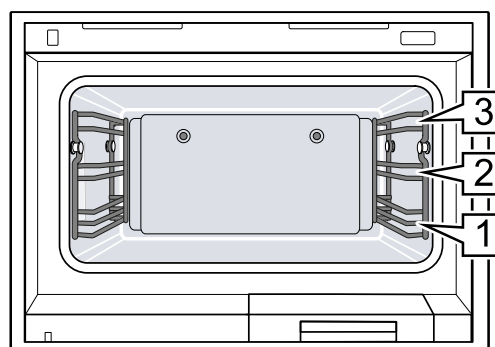

1 Interior lighting

2 Ventilation slots

3 Intended surface for opening the door

4 Water tank

5 Door seal

### 4.2 Cooking compartment

The cooking compartment has three shelf levels. Count the shelf levels from the bottom up.

### 4.3 Interior lighting

When you open the appliance door, the interior lighting switches on. If the appliance door remains open for longer than 3 minutes, the appliances switches the interior lighting off.

**⚠ WARNING – Risk of injury!**

The light emitted by LED lights is very dazzling, and can damage the eyes (risk group 1).

- ▶ Do not look directly into the switched on LED lights for longer than 100 seconds.

You can also switch on the interior lighting when the appliance is in low power mode.

After approx. 20 minutes, the appliance switches the interior lighting off.

When you switch on the appliance, the appliance switches the interior lighting on.

→ "Switching the interior lighting on or off", Page 15

In most operating modes, the appliance keeps the interior lighting switched on.

You can specify whether the appliance will switch the interior lighting on during operation in the basic settings → Page 22. If you select the "Manual" setting in the basic settings, the appliance does not switch on the interior lighting automatically but you can switch on the interior lighting when required. After approx. 20 seconds, the appliance switches the interior lighting off.

### 4.4 Water tank


Your appliance is equipped with a water tank with a maximum capacity of 1.7 litres.

When you open the appliance door, you will see the water tank.

### 4.5 Control elements

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

On certain models, specific details may differ from those pictured.

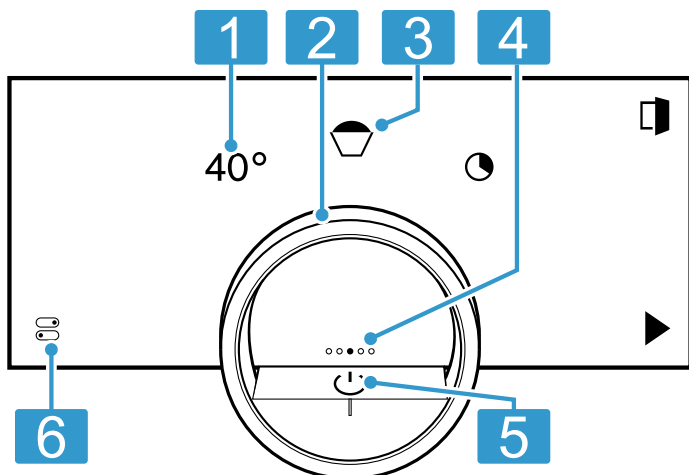


<b>1</b>	Symbols	Show settings and start or end functions.
<b>2</b>	Control ring	Use the control ring to change the selection.

<b>3</b>	12 o'clock position	The 12 o'clock position shows the value that is currently selected for a function, which you can change using the control ring. If required, press on another function, e.g. on the temperature or cooking time, to position this at the 12 o'clock position.
<b>4</b>	Position indicator	The filled point on the display in the middle of the control ring shows the current horizontal navigation position between the appliance displays.
<b>5</b>	On/Off button	Switch the appliance on and off.
<b>6</b>	Status bar & Control centre	The status line shows the current status of functions or appliance components, e.g.: <ul style="list-style-type: none"> <li>■ Home Connect connection status</li> <li>■ Childproof lock</li> <li>■ Water tank fill level</li> </ul> Press  to open the control centre → Page 10.

### Control ring

Operation using the control ring is only possible when the appliance is switched on. You can use the control ring to navigate through the ring menus or the list menus and select settings.

When you touch the control ring, the display shows a ring in orange behind the control ring.

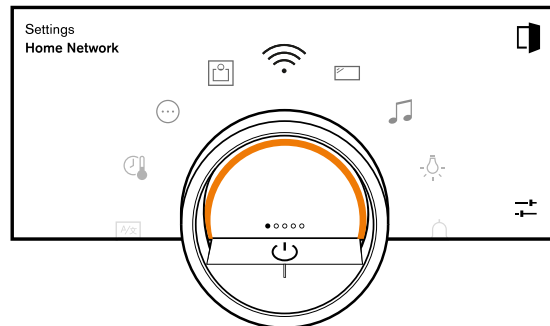

While operating the appliance, you can only use the control ring if you first select a function on the display.

Turn	Navigate in ring menus and list menus: <ul style="list-style-type: none"> <li>■ Turn the control ring to the right to increase the values.</li> <li>■ Turn the control ring to the left to decrease the values.</li> <li>■ Turn the control ring to the right or left quickly to change the values in larger increments.</li> </ul>
------	---

You can set how the control ring behaves in the basic settings → Page 22. In the "Standard" setting, press on the required function on the display and use the control ring to change the value of the function.


In the "Quick selection" setting, use the control ring, which is at the 12 o'clock position, to directly change the values for the function.

### Process visualisation

For process visualisation, the appliance shows a section of a circle in orange behind the control ring.

The appliance shows the section of a circle in orange under the following conditions:

- A cooking time is set.

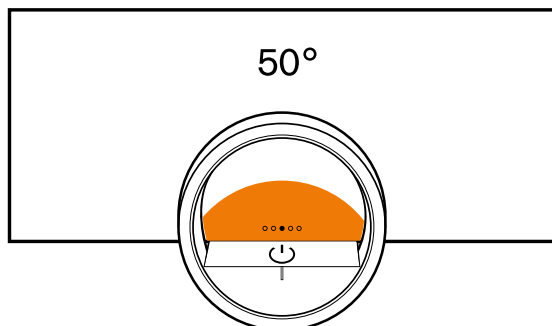

The longer the timer is running, the larger the orange section of a circle will become.

If no cooking time is set, the section of the circle in orange pulsates.

### Display

The display shows the selected settings and setting options, as well as messages about the appliance's operating status.

Press	Selects or confirms the procedure or function
Press and hold	Displays additional information
Swipe horizontally	Navigates between appliance displays For example, in the "Manual" appliance display, swipe to the left or right <b>Note:</b> You can only use the function if you are in an appliance display and no programme is running.

**Note:** If no display language is available in your national language, select a display language that is available, e.g. English.

### Symbols

Use the symbols to start or stop functions, or to navigate in the appliance menu.

#### Operation

Symbol	Function
	Switching the appliance on or off at the control ring
	Opening the appliance door → Page 14
	Opening the control centre → Page 15
	Edit settings
	Call up additional information → Page 15
	Saving a favourite → "Favourites", Page 18

Symbol	Function
	Editing a favourite
	Deleting a favourite
	Calling up tips for programmes → Page 19
	Start
	Pause or stop
	Switch to the next step
	Switch to the previous step
	Back or accept settings
	Continue
	Confirm
	Delete
	Cancel

#### Timer functions

Symbol	Function
	Calling up the timer menu → Page 16
	Call up the long-term timer → Page 17
	Delaying the cooking time end → Page 17
	Reset the delay of the cooking time end → "Resetting the delay of the cooking time end", Page 17








#### Operation in the control center

Symbol	Function
	Opening the appliance door automatically after the cooking process → Page 15
	Activating the childproof lock → Page 18
	Switching the interior lighting on or off → Page 15
	Start functions with the Home Connect app via manual "Remote start" → "Starting functions with the Home Connect app via manual 'Remote start'", Page 21
	Home Connect Call up settings → "Home ConnectSettings", Page 21



#### Cleaning and servicing

Symbol	Function
	Cleaning aid → Page 29
	Descaling programme → Page 29









 
 
**Status**

Symbol	Function
	Remote start → <i>Page 21</i>
	Status display for the heating process
	Display of a cooling process
	Pre-rinsing or post-rinsing
	The appliance is in demo mode → <i>Page 34</i>
	Water tank missing
	Water tank is locked

**Status in the control centre**

Symbol	Function
	Connection to the router: Strong → <i>"Home Connect", Page 20</i>
	Connection to the router: Ok → <i>"Home Connect", Page 20</i>

**Symbol Function**

	Connection to the router: Weak → <i>"Home Connect", Page 20</i>
	No connection to the router. → <i>"Home Connect", Page 20</i>
	Appliance connected to the router. No connection to the Home Connect server. → <i>"Home Connect", Page 20</i>
	Software update status
	Water tank missing
	Water tank is empty
	Water tank is 100% full
	Water tank is 25% full
	Water tank is 50% full
	Water tank is 75% full

**Appliance displays**

You can find an overview of the appliance displays here.

Appliance displays	Use	Position indicator
Settings	<ul style="list-style-type: none"> <li>Adjusting the basic settings → <i>Page 22</i></li> <li>Home Connect Adjusting the settings → <i>Page 20</i></li> </ul>	●○○○○
Modes & Service	<ul style="list-style-type: none"> <li>Starting the cleaning aid → <i>Page 29</i></li> <li>Starting the descaling programme → <i>Page 29</i></li> <li>Starting the quick guide → <i>Page 16</i></li> </ul>	○●○○○
Manual operation	Setting the temperature, type of heating and timer function	○○●○○
Favourites	Calling up favourites → <i>Page 18</i>	○○○●○
Programmes	Calling up the recommended settings → <i>Page 19</i>	○○○○●

**Tip:** In the basic settings → *Page 22*, you can set which appliance menu your appliance starts in.

**Colours**

The different colours are used to guide the user in the relevant setting situations.

red	<ul style="list-style-type: none"> <li>Error messages for which you may need the help of customer service.</li> </ul>
orange	<ul style="list-style-type: none"> <li>Information that you must observe so that you can continue to use your appliance</li> <li>Symbols for starting and stopping</li> </ul>
White	<ul style="list-style-type: none"> <li>Information</li> <li>Additional information</li> </ul>

**Appearance**

Depending on the situation, the appearance of symbols, values or the entire display changes.

**Zooming in ring menus and list menus**

When you use the control ring to select a list entry in a list menu, the display enlarges this list entry and displays it as underlined. When you use the control ring to select a value in a ring menu, the display shows this value enlarged in the 12 o'clock position.

**Zoom at end of cooking**


A few minutes before the cooking process ends, the appliance shows the remaining cooking time enlarged in the centre of the display.

All other displays are hidden.

Pared-down display

If the appliance does not detect a user in the immediate vicinity, the appliance reduces the amount of information shown on the display and only the most important information remains. This function is preset. You can change the setting in the basic settings → *Page 22*.

You can activate or deactivate functions in the control centre.

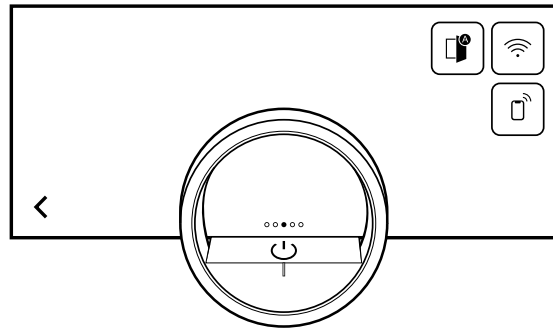

On the left-hand side, the display shows the symbols and texts with information on the current status of the appliance. On the right-hand side, the display shows the touch fields of the control centre.


**Control centre**

The control centre provides you with access to functions that are only visible in the status bar via symbols.

**4.6 Types of heating**

This is where you will find an overview of the types of heating. You will find recommendations for using the types of heating.

Symbols	Function/type of heating	Temperature/setting	Application
	100% humidity	30-100 °C	Steaming at 90 - 100 °C: The food is fully enveloped by steam and is gently cooked without being overcooked. For vegetables, fish, poultry.
	Sous-vide cooking	50-95 °C	Highly precise steaming of vacuum-packed meals in the temperature range of 50 - 95 °C. Nutrients and flavour are perfectly preserved. For meat, fish, vegetables and desserts. The cooking temperature should only be 1 - 2 °C above the target core temperature. As a result, the cooking time is relatively long and, at the same time, it is almost impossible to overcook the food. Meat and vegetables can be briefly seared after sous-vide cooking; it is preferable to sear fish before cooking it. With , you must pay attention to special food hygiene.
	Low temperature steaming	70-90 °C	Slow and gentle cooking of meat, poultry and fish with steam at 70 - 90 °C for a particularly tender result. Briefly sear meat and poultry before cooking and wrap in foil. Steam fish without foil.
	Dough proving	30-50 °C	Optimal climate at which the dough rises quickly without drying out. For yeast and sourdough.
	Defrosting	40-60 °C	Optimal climate for gently defrosting frozen food without it drying out. For roasts, fish, vegetables.

Symbols	Function/type of heating	Temperature/setting	Application
	Regenerating	60-100 °C	For gently reheating cooked food. The steam ensures that the food does not dry out.


## 4.7 Low power mode display

The appliance has different displays in low power mode. The displays depend on whether or not the appliance detects a user.

On the display without user detection, the appliance is switched off and the display is black. The appliance switches to low power mode without user detection if, when the appliance is switched on, you do not implement any settings for approx. 20 minutes or approx. 20 minutes after the appliance has completed a heating process.

If the proximity sensor detects a user or if you touch the control ring or press on the display, the appliance switches to low power mode with user detection.


In low power mode with user detection, the display shows the door opening symbol and the status bar. In the basic settings → *Page 22*, you can select whether the display also shows the GAGGENAU logo.

If the appliance is connected to the Home Connect app, the display shows .

→ *"Home Connect", Page 20*


The user detection distance depends on the selected basic settings.

In low power mode with user detection, the display brightness is reduced. The brightness of the display depends on the viewing angle.

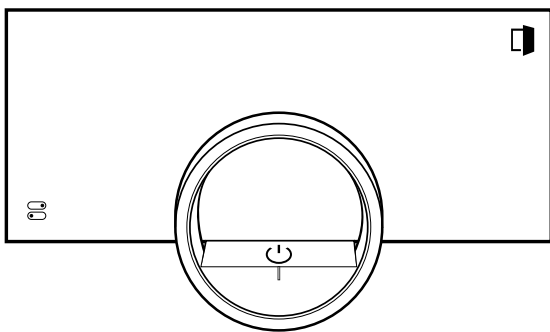


## 4.8 Additional information

If required, you can display additional information.

When you press on , the display shows additional information about the current function.

When you press and hold certain symbols or values, the display shows additional information about the current function. Additional information is available for all symbols that are arranged around the control ring, e.g. information about the set type of heating or current interior temperature.

 In the basic settings → *Page 22*, you can activate or deactivate the "Info-i" function.

The appliance also occasionally displays important information about safety and the operating status automatically. These messages disappear automatically after a few seconds, or when you press  to confirm the message.

For messages about Home Connect, the appliance also displays the Home Connect status.

→ *"Home Connect", Page 20*

## 4.9 Pop-up information

Pop-up messages contain explanations about current functions.

In the basic settings → *Page 22*, you can activate or deactivate the "Pop-up hints" function.

## 4.10 Quick guides

Your appliance comes with a quick guide to help you with various topics.

## 4.11 Cooling fan

The cooling fan switches on when the appliance is in operation. The hot air escapes above the door.

After removing your food from the appliance, keep the door closed until the appliance has cooled down. The appliance door should not be left half open as this may damage adjacent kitchen units. The cooling fan continues running for a certain period of time after the appliance has stopped heating and then it switches itself off automatically.

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

## 4.12 Automatic switch-off

For your protection, the appliance is equipped with an automatic switch-off function. The appliance switches off the heating process after 12 hours if you do not operate the appliance or programme a cooking time during this time. The display shows a message.

If you set a cooking time, you can use the appliance for longer.

If you set a cooking time, you can operate the appliance in the "Sous-vide cooking" type of heating for a maximum of 72 hours.

When programming with the long-term timer → *Page 17* function, the appliance switches off after up to 74 hours.

## 4.13 Wipe protection

Your appliance detects if you would like to clean the display or navigate between the appliance displays. The appliance locks the operation via the display and the control ring for a short time.

Press the display to return to the operation.



## 4.14 Proximity sensor

Your appliance detects whether you are in front of the appliance or moving towards it. Your appliance disregards if you are passing in front of it.

If you do not remain in the detection zone for the appliance when it is switched on, the appliance reduces the display to what is essential.

**Note:** You can set the distance at which the appliance can detect you in the basic settings. To ensure that the proximity sensor optimally detects the user, set the installation height of the appliance's upper edge in the basic settings → *Page 22*.

#### 4.15 Door lock

The "Door lock" function prevents the appliance door from being opened accidentally. This is particularly useful when installing the appliance under the worktop. In the basic settings → *Page 22*, you can activate or deactivate the "Door lock" function. When you activate the function and press , the display shows a slide control instead of the  symbol.

→ "Opening the appliance door", *Page 14*

## 5 Functions in the Home Connect app

The Home Connect app offers a range of functions and benefits.


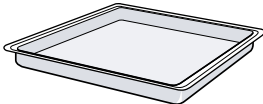
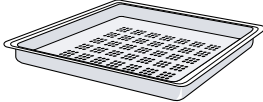
- Monitor the cooking process, e.g. the remaining cooking time or the current core temperature.
- Start or stop a type of heating or program, or change the settings.
- Run important updates to the appliance software.
- Find the optimum settings or the optimum program for your recipe with the Oven Assistant function.
- When using the core temperature probe, obtain an estimate of the remaining cooking time.
- Change the basic settings for the appliance.
- Operate the main functions via Voice Control (using Alexa or Google Home).
- Find the appliance information and instructions.
- Find new recipes.

## 6 Accessories

Use original accessories. These have been made especially for your appliance.

**Note:** Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.

Accessories	Use
Wire rack 	<ul style="list-style-type: none"> <li>▪ Tableware</li> <li>▪ Ovenproof dishes</li> </ul>
Stainless steel cooking container, unperforated 	<ul style="list-style-type: none"> <li>▪ Cooking rice, cereals and pulses</li> <li>▪ Catching dripping liquid during steaming and defrosting</li> </ul>
Stainless steel cooking container, perforated 	<ul style="list-style-type: none"> <li>▪ Steaming vegetables and fish</li> <li>▪ Extracting juice from berries</li> <li>▪ Defrost</li> </ul>

### 6.1 Other accessories

You can purchase other accessories from our customer service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online:

[www.gaggenau.com](http://www.gaggenau.com)

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our customer service.

Other accessories	Order number
Stainless steel cooking container, perforated	BA220370

Other accessories	Order number
Stainless steel cooking container, unperforated	BA220360
Set with 4 descaling tablets	17002490
Stainless steel cooking container, GN 1/3, unperforated, 40 mm deep, 1.5 l	GN114130
Stainless steel cooking container, GN 1/3, perforated, 40 mm deep, 1.5 l	GN124130
Stainless steel cooking container, GN 2/3, unperforated, 40 mm deep, 3 l	GN114230

Other accessories	Order number
Stainless steel cooking container, GN 2/3, perforated, 40 mm deep, 3 l	GN124230

## 6.2 Sliding accessories into the cooking compartment

The wire rack and the perforated cooking container are fitted with a locking function. For the tilt protection to work correctly, always insert the wire rack and the perforated cooking container into the cooking compartment the right way round. The locking function is not available for the unperforated cooking tray.

 
### ATTENTION


The accessories may tip.


- ▶ Do not push the accessories between the shelf positions.


The oven's wire rack is not suitable for the steam oven. Corrosion may form on the oven's wire rack.

- ▶ Do not use the oven's wire rack in the steam oven.

1. When inserting the wire rack, ensure that the lug  is at the rear and is facing downwards.

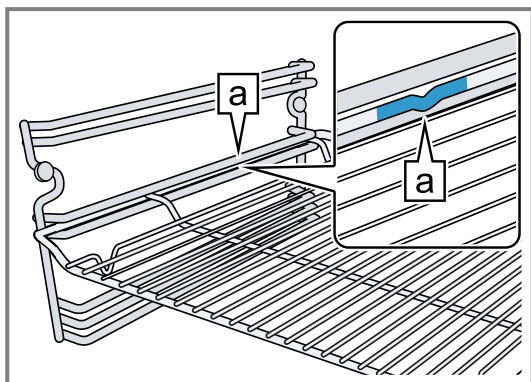

2. Ensure that the safety bracket on the wire rack is located at the rear and is facing upwards.
3. When inserting the cooking container, ensure that the lug  is facing upwards.

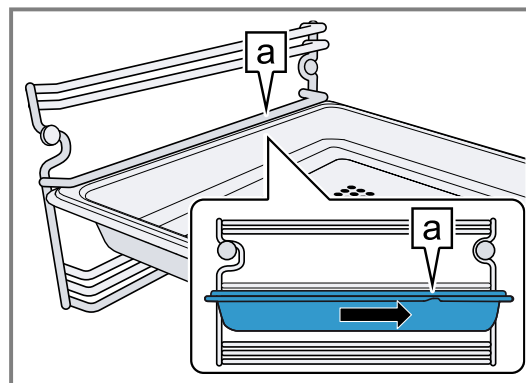

The locking function prevents the accessories from tilting when they are pulled out.

**Note:** To completely pull out the accessories, lift them slightly.

Remove any accessories that you do not require from the cooking compartment.

## 7 Before using for the first time

Configure the settings for initial start-up. Clean the appliance and accessories.

### 7.1 Initial start-up

Implement the settings for initial use before using your appliance.

First read the information under safety → Page 2.

The appliance must be installed and connected.

After connecting to the power supply, the appliance shows the "Initialisation" display.

The appliance shows the "Initialisation" display when it is first switched on after being connected to the power supply, if the initial start-up has not been completed successfully or the appliance has been restored to the factory settings.

 
Implement the following settings:

- Set the language
- Activating Home Connect
- Set the temperature unit
- Set the time format
- Setting the time

You can retroactively change all of the settings in the basic settings → Page 22.

Follow the instructions in the display. The display guides you through the initial settings.

### Setting the language and implementing the remaining settings

1. Press .
- ✓ The display shows the preset language.
2. Use the control ring to select the required display language.
3. Press ✓ to confirm.
4. Press →.
5. Implement the remaining settings.
- ✓ The appliance starts a rinsing process.
- ✓ The display shows the appliance display that is selected in the basic settings → Page 22 as the start screen.

### Cleaning the door pane

**Note:** To ensure tightness, the door seal is lubricated at the factory. Residue may remain on the door pane.



- ▶ Before using for the first time, clean the door pane with glass cleaner and a window cloth or a microfibre cloth.  
Do not use a glass scraper.

## Cleaning accessories

- ▶ Before first use, clean the accessories thoroughly using hot soapy water and a soft cloth.

# 8 Basic operation

## 8.1 Switching on the appliance

1. To exit low power mode → *Page 11*, press  on the appliance's control ring or in the Home Connect app.
  - ✓ The display shows a temperature, a symbol for the type of heating and a symbol for the timer.
  - ✓ The appliance switches the interior lighting on.
  - ✓  lights up orange.
2. Set the temperature, type of heating and cooking time that you require.

**Tip:** In the basic settings → *Page 22*, you can specify which appliance display appears on the display after the appliance is switched on and whether you want the interior lighting to switch on.

**Note:** If you do not implement any settings for an extended period, the display shows the appliance display that is selected in the basic settings → *Page 22* as the start screen, and then the low power mode display.

## 8.2 Opening the appliance door

### **WARNING – Risk of burns!**


The inside of the appliance door becomes very hot during operation.


- ▶ During or after operation of the appliance, only touch the appliance door at the surface intended for this on the side.
- ▶ Always open the appliance door as far as it will go.


### **WARNING – Risk of scalding!**

Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ When opening the door, do not stand too close to the appliance.
- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

1. Press .
  - ▶ If the "Door lock" function is activated in the basic settings → *Page 22*, move the slide control to the other end.
- ✓ The appliance door opens automatically.

2. Only touch the appliance door at the designated area  and open it fully.

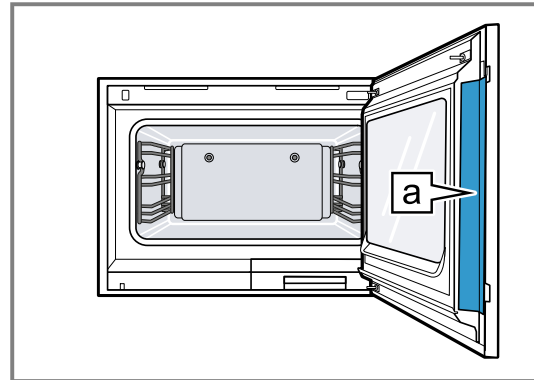



**Tip:** In the control centre, you can set that the appliance door opens automatically after the current cooking process.

→ *"Opening the appliance door automatically after the cooking process"*, *Page 15*

## 8.3 Changing the type of heating

**Note:** You can change the type of heating during operation.

1. Press the current symbol for the type of heating.
2. Use the control ring to select the required type of heating.
3. Press on the selected type of heating or , or wait a few seconds.
- ✓ The display shows the selected type of heating and the default temperature.
- ✓ If you have previously used the type of heating, the display shows the last temperature that you used.
4. If required, change the temperature. → *Page 14*
5. If the display shows a message window, follow the instructions in the message window.
6. Press  to start the operation.

## 8.4 Changing the temperature

**Note:** You can change the temperature during operation.

**Requirement:** The type of heating is selected.

→ *"Changing the type of heating"*, *Page 14*

1. Press the temperature displayed.
2. Use the control ring to select the desired temperature.
- ✓ The display shows the temperatures that are available for the selected type of heating.

- To change the previously stored appliance display, press the required temperature or <. If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.
- ✓ The display shows the selected temperature.

**Note:** Once the operation has started, the display shows a progress bar below the selected temperature if the changed temperature is more than 20 °C higher than the previous temperature.

## 8.5 Displaying the current interior temperature

- ▶ Press and hold the set temperature.
- ✓ The display shows the current interior temperature.

**Note:** During continuous operation after heating up, slight temperature fluctuations are normal.

## 8.6 Opening the appliance door automatically after the cooking process




The "automatic door opening" function at the end of the cooking process is only valid for the current cooking process.

### ⚠ WARNING – Risk of burns!

The appliance and its parts that can be touched become hot during use.




- ▶ Young children under 8 years of age must be kept away from the appliance.
- ▶ Ensure that young children are not in the vicinity of the appliance when the appliance door opens automatically.

**Note:** Use the "automatic door opening" function at the end of the cooking process only if required to prevent the food from being overcooked or burning. In order to reduce the amount of moisture deposited on the unit fronts, open the appliance door fully after the cooking time has elapsed if possible.



- Press .
- Press .
- ✓ The display shows .
- ✓ The appliance opens the appliance door automatically after the current cooking process with a set cooking time end.

**Note:** The appliance door also opens when the child-proof lock → *Page 18* is activated or the door lock → *Page 12* is activated.


## 8.7 Deactivating the automatic appliance door opening

- Press .
- Press .
- ✓ The display shows .
- ✓ The automatic appliance door opening after the cooking process is deactivated.

## 8.8 Interrupting and continuing an operation

- To interrupt the operation, press .
- To continue the operation, press .

## 8.9 Opening and closing the control centre

- Press  to open the control centre.
- ✓ The appliance shows a description above the functions currently active.
- To activate or deactivate a function as required, press the symbol for the function.
- Press < to close the control centre.
- ✓ A pop-up message → *Page 11* tells you if a function has been activated.

## 8.10 Switching the interior lighting on or off

- Press .
- Press .

## 8.11 After each use

Dry the cooking compartment to ensure that no moisture remains in the appliance and to prevent odour from building up.

### ⚠ WARNING – Risk of scalding!


Hot steam may escape when you open the appliance door. Steam may not be visible, depending on the temperature.

- ▶ When opening the door, do not stand too close to the appliance.
- ▶ Open the appliance door carefully.
- ▶ Keep children at a safe distance.

## Drying the cooking compartment


- Remove food residues and/or dirt from the cooking compartment as soon as the appliance has cooled down. Burnt-on food residue and/or dirt will be much harder to remove later.
- Once the cooking compartment has cooled down, wipe it out and dry it thoroughly with a soft cloth.
- If necessary, wipe dry any condensation on units or handles.

## 8.12 Switching off the appliance


- ▶ Press  on the control ring. Depending on the type of heating, you may hear an automatic rinsing process.
- ✓ The appliance switches to low power mode.

## 8.13 Switching on the appliance after automatic switch-off

**Requirement:** After prolonged operation, the Automatic switch-off → *Page 11* switches off the appliance.

- ▶ Press  on the control ring.

## 8.14 Displaying information

- ▶ Press .
- ✓ The appliance displays information about the selected function.  
→ "Additional information", *Page 11*

## 8.15 Displaying appliance information

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
- ✓ The display shows the available functions in a list menu.
2. Use the control ring to select the "Appliance information" function.
3. Press "Appliance information".
- ✓ The display shows the appliance information, e.g. the E-number and the serial number.

4. Press < to exit the display.

## 8.16 Using quick guides


 
1. Select the "Modes & Service" appliance display.
2. Use the control ring to select "Quick guide", then release the control ring.
3. Select the required quick guide and view it.

# 9 Timer functions

Your appliance has different timer functions, with which you can control its operation.


## 9.1 Overview of the timer functions

Use  to select the different timer functions.

Timer function	Use
	Cooking time
	Cooking time end

A cooking time or cooking time end can only be set in combination with a type of heating.

## 9.2 Calling up the timer menu

- ▶ Press .
- ✓ The display shows "h" and "min" for hours and minutes.
- ✓ The display shows the display for the minutes enlarged in the 12 o'clock position.

## 9.3 Exiting the timer menu

- ▶ Press < or press on the selected cooking time to switch to the previously stored appliance display.
- ✓ The timer menu is closed.

## 9.4 Cooking time


When you set the cooking time for your food, the appliance automatically switches off after this time. The maximum possible cooking time depends on the set type of heating.

For most types of heating, you can set a cooking time of 1 minute up to 24 hours.

For the "Sous-vide cooking" type of heating, the maximum cooking time is 72 hours.

You can change the type of heating and temperature while the cooking time counts down.

### Setting the cooking time


1. Place the food in the cooking compartment.
2. Press .
- ✓ The display shows h : min for hours and minutes.
3. Press the required value and use the control ring to change the value.
  - ▶ Turn the control ring slowly to change the value in smaller increments.

- ▶ Turn the control ring quickly to change the value in greater increments.  
The maximum possible cooking time depends on the type of heating.
- ✓ The appliance automatically calculates the time for the cooking time end.
- 4. Press < or press on the selected cooking time to switch to the previously stored appliance display. If you do not use the appliance for an extended period, the appliance saves the settings and the display returns to the previously stored appliance display.
- ✓ If the appliance is in operation, the appliance shows the temperature, the operating mode, and the remaining cooking time.
- ✓ 3 minutes before the end of the cooking time, the display zooms in on the remaining cooking time.
- ✓ After the cooking time has elapsed, the display shows 00:00 and a signal tone sounds.
- 5. Turn the control ring or open the appliance door. The appliance door opens automatically if you have activated this function.  
→ "Opening the appliance door automatically after the cooking process", Page 15
- ✓ The signal tone stops.

**Note:** If there is no further operation following the signal tone, the display shows the "Standing time timer" function with the + symbol. The display shows how much time has elapsed since the cooking time ended. After approx. 20 minutes without any further operation, the appliance switches to low power mode.

### Changing the cooking time


**Requirement:** You have set a type of heating and a temperature.

1. Press .
- ✓ The display shows h : min for hours and minutes.
2. Press the required value and use C to delete the value or use the control ring to change the value.
  - ▶ Turn the control ring slowly to change the value in smaller increments.
  - ▶ Turn the control ring quickly to change the value in greater increments.  
The maximum possible cooking time depends on the type of heating.
- ✓ The appliance automatically calculates the time for the cooking time end.

3. Press < or press on the selected cooking time to switch to the previously stored appliance display. If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.
- ✓ The display shows the temperature, the type of heating, the remaining cooking time, and the cooking time end.

### Deleting the cooking time

**Tip:** In the "Manual" appliance display, double-click on the cooking time in order to delete the cooking time without switching to the timer settings.

1. Press .
- ✓ The display shows h : min for hours and minutes.
2. Press the required value and use C to delete the value.
- ✓ The display shows --:--.
3. Press < or press on the selected cooking time to switch to the previously stored appliance display. If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.
- ✓ The display does not show a cooking time.

## 9.5 Cooking time end

As soon as you set a cooking time, the display shows the cooking time end. You can delay the cooking time end by a maximum of 12 hours.

For example, if you set a cooking time of 90 minutes at 10 a.m., you can delay the end of the cooking time so that the cooking process ends at 11.30 p.m. at the latest.


For most types of heating, the maximum cooking time is 24 hours.


For the "Sous-vide cooking" type of heating, the maximum cooking time is 72 hours.

With the "Sous-vide cooking" type of heating, it is not possible to postpone the end of the cooking time for hygiene reasons.

Bear in mind that food which spoils easily should not be left in the appliance for too long.

### Delaying the cooking time end

1. Place the food in the cooking compartment.
2. Press .
- ✓ The display shows h : min for hours and minutes.
3. Set the cooking time. → *Page 16*
- ✓ The appliance automatically calculates the time for the cooking time end.
4. Press < or press on the selected cooking time to switch to the previously stored appliance display. If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.

 
 
5. Press on the cooking time end.
6. Use the control ring to set the required cooking time end.
7. Press .
- ✓ The appliance switches to standby.
- ✓ The display shows the temperature, the type of heating, and the cooking time end.
- ✓ If the cooking time end is one or more days in the future, the display shows "+1d".
- ✓ The appliance starts at the calculated time and automatically switches off once the cooking time has elapsed.
- ✓ After the cooking time has elapsed, the display shows 00:00 and a signal tone sounds.
8. Turn the control ring or open the appliance door. The appliance door opens automatically if you have activated this function.  
→ *"Opening the appliance door automatically after the cooking process", Page 15*
- ✓ The signal tone stops.

**Note:** If there is no further operation following the signal tone, the display shows the "Standing time timer" function with the + symbol. The display shows how much time has elapsed since the cooking time ended. After approx. 20 minutes without any further operation, the appliance switches to low power mode.

### Resetting the delay of the cooking time end

**Note:** In the "Manual" appliance display, double-click on the cooking time end in order to reset the delay of the cooking time end without switching to the timer settings.

**Requirement:** You have used the control ring to manually set the cooking time end.


 
1. Press .
2. To reset the delay of the cooking time, press .
- ✓ The appliance calculates the cooking time end based on the cooking time.
- ✓ The display shows the cooking time end.
3. Press < or press on the cooking time end to switch to the previously stored appliance display. If you do not use the appliance for an extended period, the display returns to the previously stored appliance display.

## 9.6 Count-up cooking timer

If no cooking time is set, the display shows the time that has elapsed since the start of the process.

In the basic settings, you can switch the "Count-up cooking timer" function on or off.

### Resetting "Count-up cooking timer"

1. Press and hold .
2. Press .
- ✓ The "Count-up cooking timer" function is reset.

# 10 Long-term timer

If the "Long-term timer" function is active, the display screen does not change when you approach the appliance. If the "Long-term timer" function is active, you can-

not operate the appliance via the display and the control ring.

If the "Long-term timer" function is active, the appliance does not heat up and the interior lighting remains switched off even when the appliance door is opened. If the "Long-term timer" function is active, you cannot operate the appliance via the display and the control ring and you can only open the door manually using the manual door opening aid. Install the manual door opening aid before you start the "Long-term timer" function.

### 10.1 Opening the "Long-term timer" function

**Requirement:** The "Long-term timer" function is set to "On" in the basic settings → *Page 22*.

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
  2. Use the control ring to select the "Long-term timer" function.
  3. Set the switch to the right of the "Long-term timer" list entry to "On".
- ✓ The display shows the start time and the end time.

### 10.2 Selecting a time period for the "Long-term timer" function

**Requirement:** The "Long-term timer" function is set to "On" in the basic settings → *Page 22*.

1. Press the start time.
  2. Use the control ring to change the start time.
  3. Press <.
- ✓ The appliance automatically calculates the time for the end time.
- ✓ The display shows the start time and the end time.
4. Press the end time.
  5. Use the control ring to change the end time.
- ✓ The display shows the start time and the end time.

6. Press ✓ to confirm.
- ✓ The display shows ⌚.

### 10.3 Changing the time period for the "Long-term timer" function

1. Press ⌚.
- ✓ The display shows the settings that have been selected for the "Long-term timer" function.
2. Press "Summary".
  3. Press ←.
  4. Press →.
- ✓ The display shows the start time and the end time.
5. Press the start time and use the control ring to change the start time.

### 10.4 Starting the "Long-term timer" function

**Tip:** Install the manual door opening aid before you start the "Long-term timer" function.

- ▶ Press ▶ to start.
- ✓ The "Long-term timer" function starts.
- ✓ At the end of the "Long-term timer" function, the appliance switches off.

### 10.5 Switching off the "Long-term timer" function

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
2. Use the control ring to select the "Long-term timer" function.
3. Set the switch to the right of the "Long-term timer" list entry to "Off".

**Note:** To switch off the "Long-term timer" function, you can also press ⏻ on the control ring.

---

## 11 Childproof lock

Activate the "Childproof lock" function so that children cannot accidentally switch the appliance on or change the settings.

If the childproof lock is activated, operation via the display and the control ring is not possible.

If the childproof lock is activated and the power fails, the childproof lock can be deactivated when the power comes back on.

You can activate the childproof lock even during operation.

### 11.1 Activating the childproof lock

**Requirement:** In the basic settings → *Page 22*, the option "On" is set for the "Display child lock" function.

1. Press ⌘.
  2. Press ⏻.
- ✓ The display shows ⏻.
- ✓ The "Childproof lock" function is activated.

### 11.2 Deactivating the childproof lock

1. Press and hold ⏻ for approx. 2 seconds.
- ✓ The "Childproof lock" function is deactivated.
2. Set the appliance as normal.

---

## 12 Favourites

In the "Favourites" appliance display, you can save preferred combinations of type of heating, temperature or cooking time. The appliance adopts the selected settings, such as temperature, cooking time, weight or level of browning for the favourites.


You can individually select the names for the favourites.

You can use the Home Connect app to change the saved settings for the favourite or the order of the favourites.


 

After starting the favourites, you can change the settings.

→ *"Changing the favourite", Page 19*

## 12.1 Creating the first favourites

**Note:** You can save a favourite in the "Manual operation" appliance display. As soon as you have selected the settings for the temperature, the type of heating and the cooking time, the display shows .

**Requirement:** The settings for the favourites are selected or a heating process ends.

1. Press .
- ✓ The display shows the "Favourites" appliance display.
2. Press .
3. Use the keyboard to enter a name.
4. Press .

 
 
## 12.2 Selecting a favourite

1. Swipe repeatedly from right to left until the display shows "Favourites".
2. Use the control ring to select the desired favourites.
3. Press the favourites.

## 12.3 Renaming a favourite

**Requirement:** The favourite has been selected.

→ "Selecting a favourite", Page 19

1. Press .
2. Enter the name for the favourite.
3. Press  to confirm.

## 12.4 Starting the favourite

**Requirement:** The favourite has been selected.



→ "Selecting a favourite", Page 19

- ▶ Press  to start.

## 12.5 Changing the favourite

The availability of settings depends on the favourite selected.

### Requirements

- The favourite has been selected.  
→ "Selecting a favourite", Page 19
  - The favourite is stopped.
1. Change the selected settings, e.g. the temperature, the type of heating or the cooking time.  
The "Automatic door opening at process end" function is available.  
If you have saved a setting recommendation as a favourite, you can change the settings on the appliance as soon as the favourite is started. You can only save the changed settings via the Home Connect app. As soon as the favourite is stopped or has finished, the Home Connect app asks if you would like to save the settings in the favourite.
  2. Press .
  3. Press  to start.
  - ✓ The operation starts with the changed settings.



**Note:** The appliance does not save the changed settings in the selected favourite. If you select the favourite again, the settings match the settings when the favourite was created.

You can use the Home Connect app to change the settings for the favourites.

## 12.6 Deleting a favourite

**Requirement:** The favourite has been selected.

→ "Selecting a favourite", Page 19

1. Press .
2. Press  to confirm.

# 13 Programmes

The appliance display "Programmes" includes the recommended settings.

## 13.1 Recommended settings

With setting recommendations, the appliance specifies the optimal type of heating.

If a weight is specified in the tip, the recommended temperature and the cooking time relate to this weight specification. You can adapt the temperature and cooking time within the available ranges.

You can find information about the accessories or shelf levels in the tip for the respective programme.

### Information on the setting recommendations

Observe the information on the setting recommendations.

- The cooking result depends on the quality of the food and the size and type of cookware. For an optimal cooking result, only use food that is in good condition and meat that is chilled to refrigerator temperature. For frozen food, only use food straight out of the freezer.

- The food is divided into categories. One or more dishes are listed for each category. The display shows the last selected meal.
- With the setting recommendations, the appliance specifies the type of heating.
- You can change the temperature and the cooking time in the specified areas.
- The appliance displays the selected settings next time as a suggestion.
- To achieve good results, the cooking compartment must not be too hot for the type of food you have selected. If the cooking compartment is too hot, the display shows a corresponding notification. Allow the appliance to cool and restart it.

### Selecting a setting recommendation

1. Swipe repeatedly from right to left until the display shows "Programmes".
- ✓ The display shows the first programme in the "Vegetables" category or the last set automatic programme.
- ✓ The display shows the preselected values for the programme or the last set values.
- ✓ The display shows a tip and symbols for the Favourites → Page 18 category and for the programme start.

2. Use the control ring to select the required meal and press on the required meal.
- ✓ The display shows the name of the selected dish and the corresponding values.

### Changing category

1. Press the symbol for the category.
- ✓ The display shows the available categories in the ring menu.
2. Select the required category with the control ring.
3. Press < or press the category in order to confirm the selection.
- ✓ The display shows the first dish in the selected category and the corresponding values.

### Changing the programme

1. Press on the name of a dish or navigate through the list of dishes in the menu with the control ring.
2. Press the required food.
- ✓ The display shows the name of the selected dish and the corresponding settings.
3. Press the setting.
4. Use the control ring to change the setting and press on the required setting.  
Not all settings can be changed.  
You cannot change the type of heating.
5. Press <.
- ✓ The display shows the name of the selected dish and the corresponding settings.
6. Press □.
- ✓ The display shows information about the accessories and preparation.
7. Follow the information on the display.

### Starting a setting recommendation

- ▶ Press ▶.
- ✓ Once the cooking time has elapsed, a signal tone sounds.
- ✓ The appliance stops heating.

**Note:** If you open the appliance door when a setting recommendation is running, this affects the cooking result. Do not open the appliance door, or only open it briefly. The appliance interrupts the setting recommendation and continues to run when you close the appliance door.

### Extending the cooking time

If you are still not satisfied with the cooking result, you can increase the cooking time again.

1. Press 00.00.
2. Select the required cooking time.
3. Press ✓ to confirm.

### Setting recommendations

**Note:** Once you have started the setting recommendation, you can change the settings.

1. Press on the setting recommendation.
2. Change the desired settings.

### Saving a programme as a favourite

You can save a programme as a favourite at the start or end of a setting recommendation.

**Requirement:** The temperature, type of heating and cooking time are set.

1. Press □.
- ✓ The display shows the "Favourites" appliance display.
2. Press ./.
3. Use the keyboard to enter a name.
4. Press ✓.

You can only change the settings for a saved "Favourites" via the Home Connect app.

## 14 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your country. You can find information about this at: [www.home-connect.com](http://www.home-connect.com).

The Home Connect app guides you through the entire login process. Follow the instructions, noting the information in the Home Connect app.

### Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.  
→ "Safety", Page 2
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

- In networked standby mode, the appliance requires a maximum of 2 W.

### 14.1 Setting up Home Connect

#### Requirements

- The appliance is connected to the power supply and is switched on.
- You have a mobile device with a current version of the iOS or Android operating system, e.g. a smartphone.
- The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.
- The mobile device and the appliance are within range of your home network's Wi-Fi signal.

1. Scan the following QR code.



You can install the Home Connect app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect app.

## 14.2 Home Connect Settings

You can adjust the home network settings in your appliance's basic settings.

Which settings the display shows will depend on whether Home Connect has been set up and whether the appliance is connected to your home network. You can switch the network connection on or off as required. The network information is retained after the appliance is switched off. After switching on the appliance, wait for a few seconds until it reconnects to the home network.

The display uses different symbols to show the connection strength to the router.

**Note:** In networked standby mode, the appliance requires a maximum of 2 W.

You can use the Home Connect app to access the appliance's functions. If you select the "Off (monitoring only)" setting in the basic settings → *Page 22* for "Remote start", the Home Connect app only shows the appliance's operating status and you can configure the settings.

If you select the "Permanent" setting in the basic settings → *Page 22* for "Remote start", you can start and operate your appliance at any time without any prior approval on the appliance.

If you select the "Manual" setting in the basic settings → *Page 22* for "Remote start", the appliance requires approval in the control centre in order to start a function. In the basic settings → *Page 22*, you can use "Network information" to display the network information.

In the basic settings → *Page 22*, you can use "Network credentials reset" to delete all network access data from the appliance at any time.

## 14.3 Starting functions with the Home Connect app via manual "Remote start"

You can use the Home Connect app to set the appliance remotely via the "Remote start" function. If you select the "Manual" setting in the basic settings for "Remote start", the appliance requires approval in the control centre in order to start a function.

### ⚠ **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.

- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

### **Requirements**

- The appliance is connected to the home network and to the Home Connect app.
- To start a function, the "Manual" setting is selected in the basic settings for "Remote start".

1. To activate manual remote start, press and then .
2. Configure a setting in the Home Connect app and send it to the appliance.
3. Start a function.

**Note:** If you open the appliance door more than 15 minutes after activating remote start or after the operation ends, the appliance deactivates the manual remote start.

24 hours after activating remote start, the appliance deactivates the manual remote start.

## 14.4 Starting functions with the Home Connect app via permanently activated "Remote start"

You can use the Home Connect app to set and start the appliance remotely via the "Remote start" function. If you select the "Permanent" setting in the basic settings for "Remote start", the appliance does not require approval in the control centre in order to start a function.

### ⚠ **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.

- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

### **Requirements**

- The appliance is connected to the home network and to the Home Connect app.
- To start a function, the "Permanent" setting is selected in the basic settings for "Remote start".

1. Configure a setting in the Home Connect app and send it to the appliance.
2. Start a function.

## 14.5 Using the Home Connect app to change settings

You can use the Home Connect app to set the appliance remotely.

### ⚠ **WARNING – Risk of fire!**

Combustible objects that are left in the cooking compartment may catch fire.



- ▶ Never store combustible objects in the cooking compartment.
- ▶ If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

**Requirement:** The appliance is connected to the home network and to the Home Connect app.

- ▶ Configure a setting in the Home Connect app and send it to the appliance.

## 14.6 Switching the Wi-Fi on or off

**Requirement:** The On and "Off" settings are only available if a connection to the Home Connect server has been established.

1. Press  in the status bar.
2. Press  in the control centre.
3. Press the required setting.
4. If required, press < to switch to the "Settings" appliance display.

## 14.7 Displaying the "Long-term timer" function with the Home Connect app

**Requirement:** The appliance is connected to Home Connect.

- ▶ Display or hide the "Long-term timer" function under "Settings" in the Home Connect app under "Additional settings".
- ✓ Under "Type of heating", the Home Connect app shows the "Long-term timer" function without a heating cycle.

**Note:** The appliance display shows the "Long-term timer" function under "Modes & Service".

## 14.8 Deactivate the "Long-term timer" function with programmed start time using the Home Connect app

### Requirements

- The appliance is connected to Home Connect.
- A start time in the future is programmed on the appliance for the "Long-term timer" function.
- The programmed start time for the "Long-term timer" function has not yet been reached.
- ▶ Deactivate the "Long-term timer" function under "Settings" in the Home Connect app under "Additional settings".
- ✓ The "Long-term timer" function does not start.

## 14.9 Starting the "Long-term timer" function using the Home Connect app

The "Long-term timer" function is available in the Home Connect app. In the Home Connect app, you can start the "Long-term timer" function without a heating cycle. A time-delayed start is not possible via the Home Connect app.

**Requirement:** In the Home Connect app, the "Long-term timer" function is activated under "Additional settings".

→ *"Displaying the 'Long-term timer' function with the Home Connect app", Page 22*

1. Under "Type of heating", select the "Long-term timer" function without a heating cycle.
2. Press "Next".
3. Select the time period.

4. Press "Done".
5. Press "Start".

## 14.10 Software update

Your appliance's software can be updated using the software update function, e.g. for the purposes of optimisation, troubleshooting or security updates.

To do this, you must be a registered Home Connect user, have installed the app on your mobile device and be connected to the Home Connect server.

As soon as a software update is available, you will be informed via the Home Connect app and will be able to start the software update via the app. Once the update has been successfully downloaded, you can start installing it via the Home Connect app if you are in your home network (Wi-Fi). The Home Connect app informs you once installation is successful.

You can find the current software version in the Home Connect app under the appliance information for the appliance.

### Notes

- The software update consists of two steps.
  - The first step is the download.
  - The second step is the installation on your appliance.
- You can continue to use your appliance as normal while updates are downloading. Depending on your personal settings in the app, software updates can also be set to download automatically.
- Installation takes a few minutes. You cannot use your appliance during installation.
- We recommend that you install security updates as soon as possible.

## 14.11 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.


**Note:** Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

# 15 Basic settings

 
You can configure the basic settings for your appliance to meet your needs.

## 15.1 Overview of the basic settings



Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

Symbol	Basic setting	Setting	Selection	Use
	Home network	WiFi	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off<sup>1</sup></li> </ul>	<p>Switches the Wi-Fi on or off</p> <p><b>Note:</b> The On and Off settings are only available if a connection to the Home Connect server has been established.</p> <p>All settings are retained after the appliance is switched off. Switch on the Wi-Fi in order to allow the appliance to be controlled via the app and to use additional appliance functions.</p>
		Home Connect assistant	<ul style="list-style-type: none"> <li>▪ During the initial connection to the Home Connect app: "Start"</li> <li>▪ If you have already connected successfully to the Home Connect app: "Connect now"</li> </ul>	Setting up Home Connect → <i>Page 20</i>
		Remote start	<ul style="list-style-type: none"> <li>▪ Off (monitoring only)</li> <li>▪ Manual<sup>1</sup></li> <li>▪ Permanent</li> </ul> <p><b>Note:</b> The settings are only available if you have selected the "On" setting for Wi-Fi.</p>	Setting "Remote start" → <i>"Starting functions with the Home Connect app via manual 'Remote start'", Page 21</i>
		Network information	<ul style="list-style-type: none"> <li>▪ MAC address</li> <li>▪ Wi-Fi SSID</li> <li>▪ IPv4 address</li> <li>▪ IPv6 address</li> </ul> <p><b>Note:</b> The settings are only available if you have selected the "On" setting for Wi-Fi.</p>	Displaying "Network information"
		Network credentials reset	<ul style="list-style-type: none"> <li>▪ Confirm</li> </ul> <p>The connections are reset. The appliance deletes saved network access data.</p> <p><b>Note:</b> The settings are only available if you have selected the "On" setting for Wi-Fi.</p>	Resetting the network access data






<sup>1</sup> Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
	Display	Brightness	<ul style="list-style-type: none"> <li>▪ 1</li> <li>▪ 2</li> <li>▪ 3</li> <li>▪ 4<sup>1</sup></li> <li>▪ 5</li> <li>▪ 6</li> </ul>	Sets the brightness in stages
		Distant view	<ul style="list-style-type: none"> <li>▪ "On"<sup>1</sup>: The display shows less content if you are at a greater distance.</li> <li>▪ "Off": The display always shows the same content.</li> </ul>	Switching the remote view on or off
		Screen in off-mode	<ul style="list-style-type: none"> <li>▪ GAGGENAU logo"displayed on approach"<sup>1</sup></li> <li>▪ None</li> </ul>	Sets the low power mode display → <i>Page 11</i>
		Ring behaviour	<ul style="list-style-type: none"> <li>▪ "Standard": Press the required function and use the control ring to change the function</li> <li>▪ "Quick selection"<sup>1</sup>: Use the control ring to change the function located above the control ring</li> </ul>	Sets the control ring behaviour
		Display child lock	<ul style="list-style-type: none"> <li>▪ "On"<sup>1</sup>: The symbol for the "Display child lock" function is only visible in the status bar if the "Display child lock" function is active. Control ring and touch fields are locked.</li> <li>▪ "Off": The "Display child lock" function cannot be activated.</li> </ul>	Displaying or hiding the symbol for the child lock → <i>Page 18</i> in the control centre
		Door lock	<ul style="list-style-type: none"> <li>▪ Activated</li> <li>▪ Off<sup>1</sup></li> </ul>	Activates or deactivates the door lock <b>Note:</b> The door lock → <i>Page 12</i> prevents the appliance door from being opened accidentally. This is particularly useful when installing the appliance under the worktop.
		Display alignment	<ul style="list-style-type: none"> <li>▪ Vertical<sup>1</sup></li> <li>▪ Horizontal</li> </ul>	Aligns the display horizontally or vertically depending on the appliance's installation position or the user's body size


<sup>1</sup> Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
	Sounds	Switch-on/switch-off sounds	<ul style="list-style-type: none"> <li>▪ Quiet</li> <li>▪ Standard<sup>1</sup></li> <li>▪ Loud</li> </ul>	Set the volume of the on/off tones
		Notification sounds	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Quiet</li> <li>▪ Standard<sup>1</sup></li> <li>▪ Loud</li> </ul>	Sets the volume of the notification tones <b>Note:</b> The notification tones for the warnings and error messages always remain switched on.
		Process sounds	Volume <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Quiet</li> <li>▪ Standard<sup>1</sup></li> <li>▪ Loud</li> </ul> "Repetitions": <ul style="list-style-type: none"> <li>▪ 1x</li> <li>▪ "10 s": The appliance emits the signal tone repeatedly for 10 seconds.</li> <li>▪ "30 s"<sup>1</sup>: The appliance emits the signal tone repeatedly for 30 seconds.</li> <li>▪ "3 min": The appliance emits the signal tone repeatedly for 3 minutes.</li> </ul> "Preheating signal": <ul style="list-style-type: none"> <li>▪ "On"<sup>1</sup></li> <li>▪ Off</li> </ul>	<ul style="list-style-type: none"> <li>▪ Set the volume of the process tones</li> <li>▪ Set the required maximum duration of the process tones</li> <li>▪ Activates or deactivates the process tone following pre-heating</li> </ul>
		Visual feedback	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off<sup>1</sup></li> </ul>	Switches the pulsating light for programme end, notifications or error messages on or off
		Volume reduction	<ul style="list-style-type: none"> <li>▪ "On": Lower the volume for all tones to a certain volume level in a defined period</li> <li>▪ "Reduced": Lower the volume for all tones to the "Quiet" volume level in a defined period and switch off the tones for cleaning</li> <li>▪ "Off"<sup>1</sup>: Switch off all tones in a defined period</li> </ul> Start time <ul style="list-style-type: none"> <li>▪ "22h"<sup>1</sup></li> </ul> End time <ul style="list-style-type: none"> <li>▪ "7h"<sup>1</sup></li> </ul>	Sets the lowering of the volume <b>Note:</b> The signal tones for warnings, error messages and switching on and switching off always remain switched on.
	Interior lighting	Brightness	<ul style="list-style-type: none"> <li>▪ Dark</li> <li>▪ Standard<sup>1</sup></li> <li>▪ Bright</li> </ul>	Sets the brightness of the interior lighting
 
<sup>1</sup> Factory setting (may vary according to model)


Symbol	Basic setting	Setting	Selection	Use
		Activation	<ul style="list-style-type: none"> <li>▪ Automatic <sup>1</sup></li> <li>▪ Manual</li> </ul>	Switches the interior lighting → <i>Page 7</i> on automatically or manually
		Light interaction	<ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>	<p>Sets the light interaction</p> <p><b>Note:</b> If you are outside of the range that the appliance recognises, the appliance reduces the interior lighting to what is essential.</p>
	Notifications	Info-i	<ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>	<p>Displays or hides additional information</p> <p><b>Tip:</b> If you press , the display shows additional information → <i>Page 11</i>. If you switch off the function, the display does not show any symbols or any additional information.</p>
		Pop-up hints	<ul style="list-style-type: none"> <li>▪ On <sup>1</sup></li> <li>▪ Off</li> </ul>	Displays or hides the pop-up notifications → <i>Page 11</i>
	Language	-	<ul style="list-style-type: none"> <li>▪ Deutsch</li> <li>▪ French</li> <li>▪ [...]</li> <li>▪ English <sup>1</sup></li> </ul>	Setting the language
	Time & Units	Time	<ul style="list-style-type: none"> <li>▪ Time <sup>1</sup></li> <li>▪ "Automatic": Select the "Automatic" option if your appliance is connected to Home Connect.</li> </ul>	Setting the time
		Time format	<ul style="list-style-type: none"> <li>▪ 12</li> <li>▪ 24 <sup>1</sup></li> </ul>	Set the time format
		Temperature unit	<ul style="list-style-type: none"> <li>▪ °C <sup>1</sup></li> <li>▪ °F</li> </ul>	Set the temperature unit
		Weight unit	<ul style="list-style-type: none"> <li>▪ "Metric": "g/kg"</li> <li>▪ "Anglo-american": "oz/lb"</li> </ul>	Set the weight unit
		Volume unit	<ul style="list-style-type: none"> <li>▪ "Metric": "ml/l" <sup>1</sup></li> <li>▪ "Anglo-american": "fl oz"</li> </ul>	Setting the capacity unit
	Advanced	Display long-term timer	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off <sup>1</sup></li> </ul>	Displays or hides the "Long-term timer" function
		Demo mode	<ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off <sup>1</sup></li> </ul>	<p>Activates or deactivates demo mode</p> <p><b>Note:</b> The setting is only available in the first 3 minutes after connecting to the power supply.</p>

<sup>1</sup> Factory setting (may vary according to model)

Symbol	Basic setting	Setting	Selection	Use
		Factory settings	<ul style="list-style-type: none"> <li>▪ Restore</li> </ul>	<p>Allows you to restore the appliance's factory settings</p> <p><b>Note:</b> The appliance starts the initialisation. The display asks you to specify settings that the appliance installer has implemented.</p>
	Appliance	Start screen	<ul style="list-style-type: none"> <li>▪ Manual<sup>1</sup></li> <li>▪ Favourites</li> </ul>	Select a display that shows the display after switching on
		Count-up cooking timer	<ul style="list-style-type: none"> <li>▪ On<sup>1</sup></li> <li>▪ Off</li> </ul>	<p>Sets the count-up cooking timer</p> <p><b>Note:</b> The running cooking time is automatically counted up if no cooking time has been stored.</p>
		User detection	<p>"Behaviour":</p> <ul style="list-style-type: none"> <li>▪ Automatic</li> <li>▪ "Below 1.2m"- "Below 0.1 m"</li> </ul> <p>"Installation height":</p> <ul style="list-style-type: none"> <li>▪ Under 91.4 cm/36"</li> <li>▪ Between 91.4 cm/36" and 150 cm/59"<sup>1</sup></li> <li>▪ Over 150 cm/59"</li> </ul>	<ul style="list-style-type: none"> <li>▪ Sets the distance from which the proximity sensor detects the user</li> <li>▪ Sets the appliance's installation height</li> </ul> <p><b>Note:</b> To ensure that the proximity sensor optimally detects the user, store the installation height of the appliance's upper edge.</p>
		Introduction to the appliance	Start	<p>Starting the appliance introduction</p> <p><b>Note:</b> The appliance introduction contains a short description of the basic functions.</p>

## 15.2 Changing the basic settings

1. Swipe repeatedly from left to right until the display shows Basic settings → *Page 22*.
- ✓ The display shows the symbols for the available settings in a ring menu.
2. Use the control ring to select the required basic setting.
3. Press the required basic setting.
- ✓ The display shows the settings for the selected basic setting.

4. Depending on the selected basic setting, use the control ring to select the setting or press the required setting.
  - ▶ With a list menu, ensure that the required setting is above the horizontal line.
5. Use  to activate the setting or use the control ring to select the setting option and press the setting.
6. If required, use < to switch to the previous view.

# 16 Cleaning and servicing

## 16.1 Cleaning products

To avoid damaging the various surfaces on the appliance, do not use any unsuitable cleaning agents.

### **WARNING – Risk of electric shock!**

- An ingress of moisture can cause an electric shock.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

<sup>1</sup> Factory setting (may vary according to model)

**⚠ WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.
- ▶ Never touch the ventilation openings.

**⚠ WARNING – Risk of injury!**

Scratched glass in the appliance door may develop into a crack.

- ▶ Do not use any harsh or abrasive cleaners or sharp metal scrapers to clean the glass on the appliance door, as they may scratch the surface.

**ATTENTION**

Unsuitable cleaning agents damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive cleaning products.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Do not use any special cleaners for cleaning the appliance while it is hot.

Salt contained in new sponge cloths may damage surfaces.

- ▶ Wash new sponge cloths thoroughly before use. Using oven cleaner in a hot cooking compartment damages the stainless steel surfaces.
- ▶ Never use oven cleaner in the cooking compartment when it is still warm.
- ▶ Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance.

**Suitable cleaning agents**

Only use cleaning agents that are suitable for the different surfaces on your appliance.

**Appliance door**

Range	Suitable cleaning agents	Information
Door panel	<ul style="list-style-type: none"> <li>▪ Glass cleaner</li> </ul>	Do not use a glass scraper. Clean it using a soft cloth or a microfibre cloth.
Door seal	<ul style="list-style-type: none"> <li>▪ Hot soapy water</li> </ul>	Clean with a dishcloth. Do not remove or scrub. Do not use metal scrapers or glass scrapers for cleaning.
Control ring	<ul style="list-style-type: none"> <li>▪ Soapy water</li> </ul>	Clean with a slightly damp soft cloth. Do not spray with any cleaning agent.

**Cooking compartment**

Range	Suitable cleaning agents	Information
Cooking compartment inner walls	<ul style="list-style-type: none"> <li>▪ Hot soapy water</li> </ul>	Clean with a dishcloth and dry with a soft cloth. Stainless steel cleaner that is suitable for the appliance can be obtained from customer service or online. To prevent corrosion, remove any patches of limescale, grease, starch or albumin (e.g. egg white) from stainless steel surfaces immediately. Corrosion may form under such stains. Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are unsuitable. These items scratch the surface. Always dry the cooking compartment after cleaning. <b>Note:</b> Undissolved detergent causes patches to appear when heating up and these patches cannot be removed. Thoroughly remove residues from detergents or care products using clean water before drying the cooking compartment.
Lightly soiled cooking compartment	<ul style="list-style-type: none"> <li>▪ Cleaning aid</li> </ul>	The cleaning aid → <i>Page 29</i> loosens stubborn dirt in the cooking compartment and makes cleaning easier.
Very dirty cooking compartment	<ul style="list-style-type: none"> <li>▪ Cleaning gel spray for ovens</li> </ul>	Cleaning gel spray for ovens can be obtained from customer service or from the online shop.

Range	Suitable cleaning agents	Information
		<ul style="list-style-type: none"> <li>▪ Do not spray into the steam outlets on the back of the cooking compartment.</li> <li>▪ The gel must not come into contact with the seals on the door or with the light.</li> <li>▪ Leave this to work for no more than 12 hours.</li> <li>▪ Do not use it on hot surfaces.</li> <li>▪ Rinse off thoroughly with water.</li> <li>▪ Observe the manufacturer's instructions.</li> </ul>
Glass cover for the cooking compartment light	<ul style="list-style-type: none"> <li>▪ Hot soapy water</li> </ul>	Clean with a dishcloth.
Water tank	<ul style="list-style-type: none"> <li>▪ Hot soapy water</li> <li>▪ Dishwasher</li> </ul>	<p>To remove residual detergent after cleaning, rinse thoroughly with clean water.</p> <p>Clean in the dishwasher as necessary.</p> <p>Remove the lid and place the water tank upside down in the dishwasher.</p> <p><b>Note:</b> Before fitting the lid, ensure that the suction hose is free of residues. → "Check the water tank", Page 33</p> <p>After cleaning, leave the water tank to dry with the lid open.</p>
Wire racks	<ul style="list-style-type: none"> <li>▪ Dishwasher</li> <li>▪ Hot soapy water</li> </ul>	<p><b>Note:</b> If required, remove the shelf supports for cleaning. → "Removing the shelf supports", Page 31</p> <p>In the event of heavy soiling, leave to soak and use a brush.</p>
Cooking container, wire rack	<ul style="list-style-type: none"> <li>▪ Dishwasher</li> <li>▪ Hot soapy water</li> </ul>	<p>Soak burnt-on remnants and remove with a brush.</p> <p>Light-coloured patches on stainless steel are caused by protein residues. Remove these stains with lemon juice. Rinse thoroughly with clean water.</p>

## 16.2 Microfibre cloth

The honeycomb microfibre cloth is especially suitable for cleaning easily damaged surfaces, such as glass, glass ceramic, stainless steel or aluminium. The microfibre cloth removes liquid and greasy deposits in one go.

The microfibre cloth can be obtained from customer service or from the online shop.

## 16.3 Cleaning aid

The cleaning aid loosens stubborn dirt in the cooking compartment and makes cleaning easier.

Always allow the cleaning aid to run to the end. You cannot cancel the cleaning aid.

### Preparing the cleaning aid

**Requirement:** The interior temperature is below 40 °C.

1. Remove all accessories from the cooking compartment.
2. Remove the shelf supports from the cooking compartment. → Page 31
3. Clean the accessories and side shelf supports separately.
4. Wipe out any coarse dirt.
5. Spray and wipe out the cooking compartment with a cleaning agent.
6. Close the appliance door.

### Starting the cleaning aid

**Note:** The appliance takes you through the necessary steps.

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
- ✓ The display shows the available functions in a list menu.
2. Use the control ring to select the "Cleaning aid" function.
3. Press "Cleaning aid" in the list menu.
4. Switch to the next window with →.
5. Press ▶ to start.
- ✓ The cleaning time counts down.
- ✓ The light in the cooking compartment remains switched off.
- ✓ An audible signal will sound once the cleaning time has elapsed.
- ✓ The display shows a message.
6. Wipe out the cooking compartment.
7. Wipe the cooking compartment dry with a soft cloth.
8. Before using the oven again, remove any detergent residue from the cooking compartment.
9. Fit the shelf supports.  
→ "Fitting the shelf supports", Page 31

**Note:** If the cleaning aid was cancelled due to a power cut, it must be restarted before using the oven again in order to remove any detergent residues from the appliance.

## 16.4 Descaling programme

You can use the descaling programme to descale the appliance fully automatically. If you descale the appliance regularly, your appliance will be in a good condition.

### ATTENTION

Limescale may damage the appliance.

- ▶ Descale the appliance regularly.

Using the wrong descaler may damage the appliance.

- ▶ Only use the specified descaling tablets.

The descaling tablet may damage the cooking compartment.

- ▶ Use the descaling tablet for the descaling programme only.
- ▶ Place the descaling tablet into the water tank.
- ▶ Never place the descaling tablet in the cooking compartment or heat it up in the cooking compartment.

The descaling tablets can be obtained from customer service, our website or the online shop.

Depending on the water hardness and the use of the appliance, a message on the display reminds you to run the descaling programme.


To prevent damage to the appliance, the appliance locks the operating modes that use steam after this message has been repeated. You can still use the appliance to run operating modes that do not require steam. You can only use the appliance without any restrictions after you have run the descaling programme.

The descaling programme takes 1 hour 50 minutes from beginning to end. After 1 hour 30 minutes, empty, clean and refill the water tank.


### Activating and preparing the descaling programme

1. Swipe repeatedly from left to right until the display shows "Modes & Service".
- ✓ The display shows the available functions in a list menu.
2. Use the control ring to select the "Automatic descaling" function.  
You cannot cancel the descaling programme. Always allow the descaling programme to run to the end.
3. Move the switch to "On".
4. Follow the instructions in the notification texts.
5. Use the control ring to select "End time".
6. Press the preset end time.
7. Use the control ring to change the end time for the descaling.
8. Press <.
- ✓ The end time for the descaling has been set.
9. Remove all accessories from the cooking compartment.
10. Remove the water tank from the appliance and take off the lid.
11. Remove the descaling tablet from the plastic packaging.

12. Place the descaling tablet in the compartment at the back of the water tank.

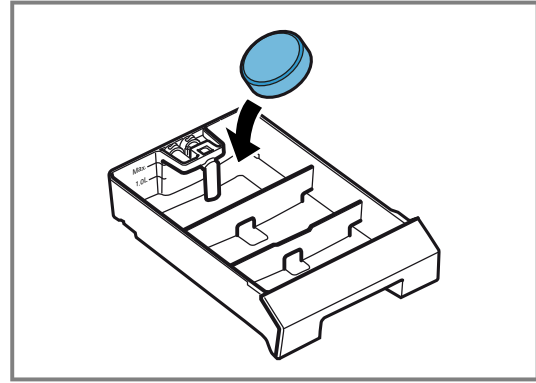

13. Position the lid on the tank and click it into place.
14. Fill the water tank up to the "Max." with 1.7 l cold water.

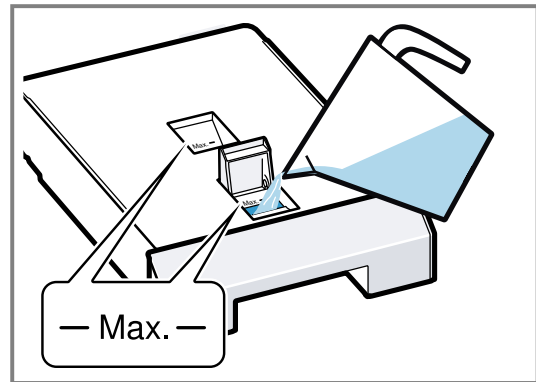

15. Slide the water tank back in as far as it will go.

### Starting the descaling programme

1. Close the appliance door.
2. Use ✓ to confirm the last notification.
3. Press ▶ to start.
  - ✓ The display shows the descaling time of 1.5 hours.
  - ✓ The descaling time counts down on the display.
  - ✓ If you have selected a switch-off time, the switch-off time counts down on the display.
  - ✓ The light in the cooking compartment remains switched off.
  - ✓ After approx. 1 hour 30 minutes, the display shows a message.
4. Clean the water tank.
5. Fill the water tank with fresh water.

### Continuing the descaling programme

#### ⚠ WARNING – Risk of chemical burns!

The descaling solution may cause chemical burns in the mouth, throat and eyes or on the skin.

- ▶ Avoid the skin coming into contact with the descaling solution.
- ▶ Keep children away from the descaling solution.
- ▶ Do not drink the descaling solution.
- ▶ The descaling solution must not come into contact with food.
- ▶ Clean the water tank in the dishwasher or thoroughly by hand before you next use the appliance.

**Requirement:** The display shows a message that the appliance has cancelled the programme.

1. Empty the water tank, thoroughly clean it and slide it into the appliance.
2. Fill the water tank with fresh water.
3. Press →.
- ✓ The appliance starts the rinsing process.
4. Follow the instructions in the notification texts and press →.
- ✓ Once the descaling programme has ended, a signal tone sounds.
5. Use ✓ to confirm the last notification.
6. Clean the water tank.

### Cleaning the water tank

After the descaling programme, remove the descaling residue from the water tank.


1. Remove the water tank from the appliance.
2. Remove the tank lid.
3. Clean the water tank and the tank lid in the dishwasher or thoroughly by hand.

### 16.5 Removing the shelf supports

The shelf supports can be removed for cleaning.

1. Place a dishcloth in the cooking compartment to protect the stainless steel from scratches.

2. Lift the shelf supports slightly at the front ① and pull them out sideways towards the front ②.

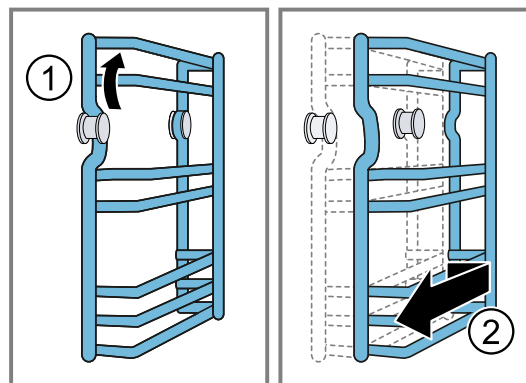

3. Clean the shelf supports in hot soapy water or in the dishwasher.

### 16.6 Fitting the shelf supports

1. Fit the shelf supports the right way round.
  - ▶ Position the stop position in the rear area of the cooking compartment.
2. Slide the back of the shelf supports onto the bolts and attach them at the front.

## 17 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

**Tip:** Permanently connect your appliance to the Home Connect app to automatically receive software updates. This allows errors to be eliminated, performance to be improved and new functions to be made available.

#### ⚠ **WARNING – Risk of injury!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.  
→ "Customer Service", Page 47



#### ⚠ **WARNING – Risk of electric shock!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.




 
### 17.1 Malfunctions

Fault	Cause and troubleshooting
The appliance is not working.	The mains plug of the power cord is not plugged in. ▶ Connect the appliance to the power supply.
	The circuit breaker in the fuse box has tripped. ▶ Check the circuit breaker in the fuse box.
	There has been a power cut. ▶ Check whether the lighting in your room or other appliances are working.
	Operating error. ▶ Switch off the circuit-breaker for the appliance in the fuse box and switch it back on after approx. 60 seconds.

Fault	Cause and troubleshooting
The appliance does not work. Display shows "Appliance locked. Descaling required."	Build-up of limescale in the appliance. ▶ Start the descaling programme → <i>Page 29</i> .
Despite descaling, "Please de-scale" appears on the display.	Build-up of limescale in the appliance, incorrect descaler used. <b>1.</b> Use the specified descaling tablets. <b>2.</b> Start the descaling programme → <i>Page 29</i> .
The appliance does not start.	The appliance door is not fully closed. ▶ Close the appliance door.
The appliance cannot be started via the Home Connect app.	The appliance is not connected to the Home Connect app. ▶ Start the connection between the appliance and the Home Connect app. → <i>"Setting up Home Connect", Page 20</i>
	The appliance is connected to the Home Connect app but the remote control function is not activated. ▶ Activate the remote control function in the Home Connect settings → <i>Page 21</i> .
The appliance does not work. The display shows E5117.	The appliance does not receive water. <b>1.</b> Check the water tank. → <i>Page 33</i> <b>2.</b> If the display shows the error message again, contact customer service → <i>Page 47</i> .
The appliance does not work. The display does not respond. The display shows the symbol for the childproof lock  .	Childproof lock is activated. ▶ Deactivate the childproof lock. → <i>Page 18</i>
The appliance automatically switches off.	Safety switch-off function: No operation for more than 12 hours. <b>1.</b> Press ✓ to confirm the message. <b>2.</b> Switch off the appliance.
The appliance does not heat up; the display shows the symbol for demo mode  .	The appliance is in demo mode. ▶ Deactivate the demo mode in the basic settings → <i>Page 22</i> .
The appliance cannot be started; the display shows a message.	The water tank is empty. ▶ Fill the water tank.
The display always shows the orange ring behind the control ring, even if you are not touching the control ring.	During cleaning, too much moisture got behind the control ring. <b>1.</b> Wait until the moisture has evaporated. <b>2.</b> If necessary, wait a few hours until the moisture has evaporated.
The display never shows the orange ring behind the control ring, even if you touch the control ring.	During cleaning, too much moisture got behind the control ring. <b>1.</b> Wait until the moisture has evaporated. <b>2.</b> If necessary, wait a few hours until the moisture has evaporated.
No steam is visible.	Water vapour above 100 °C is not visible. ▶ This is normal. No action required.
Powerful steam release at the top of the door.	You have changed the operating mode. ▶ This is normal. No action required.
Powerful steam release at the side of the door.	The door seal is dirty or loose. <b>1.</b> Clean the door seal. <b>2.</b> Insert the door seal into the groove.
Humming noise when switching on.	The drain pump starts running. ▶ Normal operating noise No action required.  The appliance has been switched off for a few days. Automatic rinsing during initial use. ▶ Normal: Automatic rinsing during initial use. No action required.
A whistling noise occurs during heating.	Noises may occur during steam generation. ▶ This is normal. No action required.
A "plop" sound can be heard during cooking.	Voltage expansion when the temperature difference is large. ▶ This is normal.

Fault	Cause and troubleshooting
A "plop" sound can be heard during cooking.	No action required.
Steaming is not possible.	Build-up of limescale in the appliance. The appliance must be descaled to avoid damage to the appliance. ▶ Start the descaling programme → <i>Page 29</i> .
The appliance is no longer producing steam correctly.	Build-up of limescale in the appliance. ▶ Start the descaling programme → <i>Page 29</i> .
The lighting does not work.	The lighting is defective. ▶ If the fault cannot be eliminated, inform after-sales service.
Water drips out when you open the appliance door.	The collecting channel on the underside of the door panel is full. ▶ Dry the collecting channel with a sponge.

## 17.2 Information on display panel

Fault	Cause and troubleshooting
The display shows "Empty left-hand water tank" even though you inserted the left-hand water tank while it was empty.	The side panel of the water tank is dirty. <b>1.</b> Clean and empty the water tank. <b>2.</b> Insert the water tank into the appliance.
Display shows  .	There is water, dirt or limescale in the insertion shaft. ▶ Clean and dry the insertion shaft.
Display shows  .	The water tank is not OK. <b>1.</b> Press  . <b>2.</b> Refer to the instructions on the display.
Display shows "Cleaning aid programme terminated. Wipe out the cooking compartment. Remove undissolved detergent."	The appliance was switched off during the cleaning aid programme or the power supply was disconnected. <b>1.</b> Fill the water tank. <b>2.</b> Wipe out the cooking compartment. <b>3.</b> Restart the cleaning aid programme. → " <i>Starting the cleaning aid</i> ", <i>Page 29</i>
The display shows the error message "Exx".	An error occurred. <b>1.</b> If the display shows an error message, press  . ✓ If the display no longer shows the error message, it was a one-off problem. <b>2.</b> If the display continues to show or repeatedly shows the error message, contact customer service → <i>Page 47</i> and provide them with the error code.

## 17.3 Power failure


Your appliance can bridge a power failure of a few seconds. The operation continues. If the power failure lasts longer and the appliance was operating, the display shows a message. The operation is interrupted.


### Switch the appliance back on again after a power failure

 

1. Press .
2. Switch the appliance back on again as usual.


## 17.4 Check the water tank


1. Remove the right-hand water tank.
2. Remove the tank lid.

3. Remove the suction hose  towards the rear of the water tank and clean it under running water.

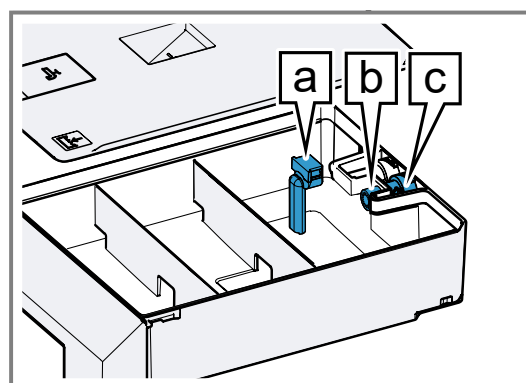


4. Check whether the suction hose is free of residues.
5. Check whether the filter  is free of residues at the discharge valve  towards the rear of the water tank.

6. Push the suction hose  on fully.
  - ▶ Ensure that the suction hose is not kinked.

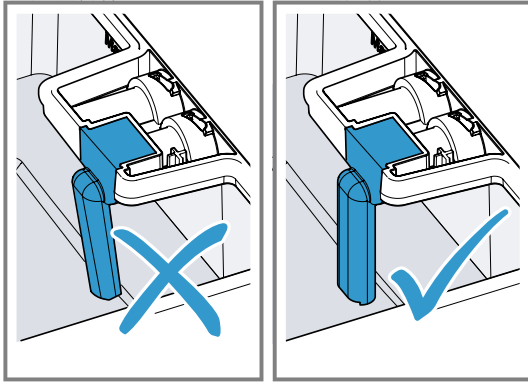

7. Fit the tank lid.

### 17.5 Demo mode

If the display shows , demo mode is activated. The appliance does not heat up.

#### Deactivating demo mode

1. To briefly disconnect the appliance from the mains, switch off the household fuse or the circuit breaker in the fuse box.
2. Deactivate demo mode within 3 minutes in the basic settings → *Page 22*.

## 18 Disposal

### 18.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.  
Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## 19 How it works

Here, you can find the ideal settings for various types of food as well as the best accessories and cookware. We have perfectly tailored these recommendations to your appliance.

### 19.1 General cooking tips

Take note of the following information when cooking all types of food.

- The cooking times specified are intended as a guide. The actual cooking time depends on the quality and temperature of the food before cooking, as well as its weight and thickness.
- The values given refer to average quantities for 4 people. If you want to prepare a larger amount, expect a longer cooking time.
- Use the cookware specified. If you use other cookware, the cooking time may be longer or shorter.
- Always use plates, baking tins or ovenproof dishes with the wire rack.
- If you have not made a particular dish before, start with the shortest specified time. If required, you can continue to cook the food.
- Open the cooking compartment door on the pre-heated oven for a short time only and quickly place your food inside the appliance.
- When steaming, defrosting, dough proving and reheating, you can use up to 3 shelf levels at a time (shelf levels 1, 2 and 3). This will not cause the flavour to transfer. You can therefore cook fish, vegetables and desserts at the same time. The specified

cooking times may need to be extended for large quantities of food.

- Ensure that the food does not lie against the cooking compartment or the back panel.
- The appliance door must shut properly. Keep the seal surfaces clean at all times.
- To ensure optimal steam circulation, do not position the racks and containers too closely.
- The estimated cooking time starts as soon as the cooking compartment reaches the selected temperature.

### 19.2 Cooking with steam

Food can be cooked particularly gently using steam. You can use the special types of steam heating, or use steam assistance with certain types of heating.

#### Vegetables

Take note of the recommended settings for vegetables.


 
 
 
 
 

 
 
 

 
 
 
 
 
 





- Vegetables are prepared better in steam than in boiling water: The taste, colour, and consistency are retained better. Virtually none of the water-soluble vitamins and nutrients are washed out.
- All of the information refers to 1 kg washed vegetables.
- To steam vegetables, use the perforated cooking container. Slide the perforated cooking container in at the second level from the bottom. Slide the unperforated cooking insert into the level below this. You can use





the vegetable broth that is collected here as the basis for a sauce or a vegetable stock.

   - Blanch for 8 to 10 minutes in the preheated appliance. If you are not serving the vegetables or fruit im-

mediately, chill them in ice water to prevent continued cooking due to residual heat.

## Vegetables

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Artichokes, large	Perforated steaming tray	100		100	55-60	
Artichokes, small	Perforated steaming tray	100		100	40-45	
Cauliflower, whole	Perforated steaming tray	100		100	20-25	
Cauliflower, in florets	Perforated steaming tray	100		100	10-20	
Broccoli, in florets	Perforated steaming tray	90		100	20-25	
Beans, green	Perforated steaming tray	100		100	30-45	
Chicory	Perforated steaming tray	100		100	20-25	
Peas, fresh	Unperforated steam container	100		100	15-20	Cover with water
Fennel, sliced	Perforated steaming tray	100		100	15-20	
Vegetable terrine	Perforated steaming tray or Vegetable terrine	90		100	45-55	
Carrots, in 0.5 cm slices	Perforated steaming tray	100		100	15-25	
Potatoes, peeled and quartered	Perforated steaming tray	100		100	25-30	
Kohlrabi, sliced	Perforated steaming tray	100		100	15-25	
Leeks, sliced	Perforated steaming tray	100		100	15-25	
Leeks, whole	Perforated steaming tray	100		100	25-35	
Potatoes boiled in the skin, approx. 50 g each	Perforated steaming tray	100		100	20-25	
Potatoes boiled in the skin, approx. 100 g each	Perforated steaming tray	100		100	25-30	
Brussels sprouts	Perforated steaming tray	100		100	15-25	
Beetroot, sliced	Perforated steaming tray	100		100	60-70	
Asparagus, green	Perforated steaming tray	100		100	10-15	
Asparagus, white	Perforated steaming tray	100		100	15-30	
Spinach	Perforated steaming tray	100		100	1-3	Then sweat in a pan with onions and garlic.

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Sweet potatoes, sliced	Perforated steaming tray	100		100	5-10	
Peeling tomatoes	Perforated steaming tray	100		100	3-4	Preheat. Cut the tomatoes, and rinse with ice-cold water after steaming.
Courgettes, sliced	Perforated steaming tray	100		100	10-15	
Mangetouts	Perforated steaming tray	100		100	5-10	



 
 



 


### Fish

Take note of the recommended settings for fish.

- Steaming is a cooking method that does not use any fat and does not allow the fish to dry out.
- For food hygiene reasons, ensure that fish has a core temperature of at least 62 to 65 °C after cooking. This is also the ideal cooking temperature.
- To ensure that the natural flavour is retained and that less water is removed from the fish, do not season the fish with salt until after cooking.

- When using the perforated cooking container: You can grease the container if the fish sticks too much.
- Slide the unperforated cooking insert into the first level from the bottom to avoid getting fish stock on the cooking compartment surfaces.
- For fillets with skin: Place the fish on the rack or tray with the skin side up – this helps to retain its texture and flavour.




### Fish

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Sea bream, whole, 500 g each	Perforated steaming tray	100		100	15-25	Can be cooked in the swimming position if placed on half a potato.
Fish dumplings, 20-40 g each	Unperforated steam container	90-100		100	3-8	Line the cooking container with greaseproof paper.
Prawns	Unperforated steam container	80		100	1-5	
Lobster, cooked, removed from the shell, reheating	Perforated steaming tray	70-80		100	5-10	
Carp, rare, whole, 1.5 kg	Unperforated steam container	90-100		100	30-40	In stock
Salmon fillet, 150 g each	Perforated steaming tray	80		100	15-20	
Salmon, whole, 2.5 kg	Perforated steaming tray	100		100	60-70	
Blue mussels, 1.5 kg	Perforated steaming tray	100		100	8-10	Blue mussels are cooked once the shell has opened up.
Pollock, whole, 800 g	Perforated steaming tray	90-100		100	15-20	
Sea bass, whole, 400 g each	Perforated steaming tray	90-100		100	15-20	

### Poultry - steaming

Take note of the recommended settings for poultry.

## Poultry


 
 
 
 

 
 
 
 
 
 
 
 
 
Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Chicken breast, stuffed, steamed, 200 g each	Perforated steaming tray	100		100	20-25	Recipe tip: Fill with spinach and sheep's cheese.
Turkey breast fillet, steamed, 300 g each	Perforated steaming tray	100		100	12-20	
Poussin, quail, pigeon, 300 g each	Perforated steaming tray	100		100	20-25	



## Side dishes

Also follow the instructions on the packaging.

Take note of the recommended settings for side dishes.

## Side dishes

 






Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Basmati rice, 250 g + 500 ml water	Unperforated steam container	100		100	10-15	
Bulgur wheat, 250 g + 250 ml water	Unperforated steam container	100		100	1-5	
Couscous, 250 g + 250 ml water	Unperforated steam container	100		100	1-5	
Royale, 500 g	Glass dish or Wire rack	90		100	20-25	Insert in level 1
Semolina dumplings	Unperforated steam container	90-100		100	5-10	
Dumplings, 90 g each	Perforated steaming tray or Unperforated steam container	95-100		100	20-25	
Long-grain rice, 250 g + 500 ml water	Unperforated steam container	100		100	20-25	
Brown rice, 250 g,+ 375 ml water	Unperforated steam container	100		100	25-30	
Polenta, 250 g + 625 ml water for hard polenta, 250 g + 1125 ml water for soft polenta	Unperforated steam container	100		100	1-5	
Quinoa, 250 g + 500 ml water	Unperforated steam container	100		100	20-25	
Risotto, 250 g + 750 ml stock	Unperforated steam container	100		100	25-30	
Red beans	Unperforated steam container	100		100	75-85	Soak for 1 hour. Cover with water.
Red lentils, 250 g + 375 ml water	Unperforated steam container	100		100	7-12	
Lentils, 250 g + 375 ml water	Unperforated steam container	100		100	50-60	
Pasta, fresh, refrigerated, 250 g + 1 l water	Unperforated steam container	100		100	8-12	

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Pasta, stuffed, fresh, refrigerated, 250 g + 1 l water	Unperforated steam container	100		100	10-15	
White beans, pre-soaked, 250 g + 1 l water	Unperforated steam container	100		100	50-60	

## Desserts

Note the recommended settings for desserts.

### Desserts

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Crème brûlée, 130 g each	Perforated steaming tray + Soufflé dishes	90-95		100	40-45	
Steamed dumplings or yeast dumplings, 100 g each	Unperforated steam container	100		100	15-25	Allow steamed dumplings to rise for 30 minutes before steaming. → "Dough proving – leaving to rise", Page 45
Flan or crème caramel, 130 g each	Perforated steaming tray + Soufflé dishes	90-95		100	30-35	
Semolina pudding, 20 g + 200 ml milk	Unperforated steam container	100		100	5-10	
Compote	Unperforated steam container	100		100	15-20	E.g. apples, pears, rhubarb Recipe tip: Add sugar, vanilla sugar, cinnamon or lemon juice.
Rice pudding, 200 g rice + 800 ml milk	Unperforated steam container	100		100	50-55	Allow to cool down for 10 minutes and stir. Recipe tip: Add fruit, sugar or cinnamon.
Porridge, 40 g + 200 ml milk	Unperforated steam container	100		100	10-15	

## 19.3 Low-temperature steaming

Note the recommended settings for low-temperature steaming of fish, meat and poultry.

### Fish













 
 
 
 
Use low-temperature steaming to cook fish.

- If you steam the fish at between 70 and 90 °C, it is less likely to be overcooked or to fall apart. Steaming

at these temperatures is particularly advantageous for delicate fish.

- The values given for the different types of fish refer to fillets.
- Slide the unperforated cooking insert into the first level from the bottom to avoid getting fish stock on the cooking compartment surfaces.
- Serve on a pre-warmed dish.
- With low-temperature steaming, no preheating is necessary. Place the food in the cold oven and then switch on the appliance.

## Fish

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Oysters, 10 pcs	Unperforated steam container	80-90		100	2-5	In stock
Tilapia, 150 g each	Perforated steaming tray	80-90		100	10-15	
Sea bream, 200 g each	Perforated steaming tray	80-90		100	12-15	
Fish fillet, 200-300 g each	Perforated steaming tray	80-90		100	12-15	
Fish terrine	Terrine mould	80-90		100	45-85	
Trout, whole, 250 g each	Perforated steaming tray	80-90		100	12-15	
Halibut, 300 g each	Perforated steaming tray	80-90		100	12-15	
Scallops, 15-30 g each	Unperforated steam container	80		100	2-8	The more the scallops weigh, the longer the chosen cooking time should be.
Cod, 250 g	Perforated steaming tray	80-90		100	10-12	
Red snapper, 200 g each	Perforated steaming tray	80-90		100	12-15	
Ocean perch, 120 g each	Perforated steaming tray	80-90		100	10-12	
Monkfish, 200 g each	Perforated steaming tray	80-90		100	10-12	
Sole rolls, stuffed, 150 g each	Perforated steaming tray	80-90		100	12-15	
Turbot, 300 g each	Perforated steaming tray	80-90		100	12-15	
Sea bass, 150 g each	Perforated steaming tray	80-90		100	10-12	
Pikeperch, 250 g each	Perforated steaming tray	80-90		100	12-15	

## Poultry and meat

Take note of the recommended settings for meat and poultry for low-temperature steaming.


 

 


- Meat seared at a high temperature develops as it cooks for an extended period at a low temperature. Heating it up gently gives the meat an even, delicate pink colour throughout (other than a very thin edge) and makes it extraordinarily succulent. No turning or basting is required.
- The cooking times listed are intended as a guide only and depend heavily on the temperature of the meat at the start of cooking and on how long the meat was seared for.
- Take the meat out of the refrigerator 1 hour before you begin preparing it.
- For food hygiene reasons, sear the meat briefly on all sides at a high temperature in the frying pan before cooking it. This gives the meat a crust, which prevents the meat juices from escaping and produces the kind of flavour characteristic of a roast.
- So that the crust formed during searing is not softened by the steam, wrap the seared meat in an oven bag or heat-resistant cling film before you place the meat in the appliance to develop. The meat therefore cooks in its own humidity.
- Season with care: Because the meat develops as it cooks slowly, all of the flavours become more intense.
- When game and horse meat is cooked at low temperatures, its flavour becomes stronger than when prepared the conventional way.
- Use the "Low temperature cooking" operating mode.
- Note that the core temperature of the food cannot be higher than the temperature inside the cooking compartment. As a rule of thumb, select an interior temperature that is 10 to 15 °C higher than the required core temperature.
- If your guests arrive late, towards the end of the cooking time, you can reduce the temperature to 60 °C to extend the cooking time. If you want to pause cooking, the temperature in the cooking compartment

must be no higher than the required core temperature. Large items can remain in the cooking compart-

ment for 1–1.5 hours, and small items can remain in there for 30–45 minutes.

- Serve on a pre-warmed dish.

## Poultry and meat

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Duck breast, medium rare, 350 g each	Unperforated steam container	70-80		100	25-45	After cooking, you can crisp up the skin side quickly in the frying pan.
Entrecôte, medium rare, 350 g each	Unperforated steam container	70		100	15-25	
Leg of lamb, boned, tied, medium rare, 1.5 kg	Unperforated steam container	70-80		100	150-180	Turn in garlic and herbs before cooking in oil
Beef steaks, medium rare, 200 g each	Unperforated steam container	70		100	15-30	
Sirloin, medium rare, 1-1.5 kg	Unperforated steam container	70-80		100	120-180	
Pork medallions, well done, 70 g each	Unperforated steam container	80		100	25-35	

## 19.4 Sous-vide cooking

When sous-vide cooking, you cook the food under a vacuum at low temperatures between 50 and 95 °C and at 100% steam.

### **WARNING – Risk of harm to health!**

Due to the low sous-vide cooking temperatures, there is a risk to health if you do not follow the instructions for use and hygiene instructions below.

- ▶ Use only fresh, good-quality food.
- ▶ Wash and disinfect your hands. Use disposable gloves or grill tongs.
- ▶ Take extra care when preparing critical food, such as poultry, eggs and fish.
- ▶ Always thoroughly rinse and/or peel fruit and vegetables where necessary.
- ▶ Always keep work surfaces and chopping boards clean. Use different chopping boards for different types of food.
- ▶ Maintain the cold chain. Only interrupt the cold chain briefly to prepare the food. Store vacuum-sealed food back in the refrigerator until it is ready to be cooked.
- ▶ The food is suitable for immediate consumption only. Once the food is cooked, consume it immediately. Do not store it after cooking. Do not store the food in the refrigerator either. The food is not suitable for reheating.
- Sous-vide cooking is a gentle, low-fat method of cooking meat, fish, vegetables and desserts. A vacuum-sealing machine uses heat to hermetically seal the food in a special heat-resistant cooking bag.
- The protective envelope retains the nutrients and flavours. The low temperatures and the direct heat transfer help you to achieve precisely controlled cooking in order to achieve the required cooking results. It is almost impossible to overcook the food.
- Use the portion sizes listed in the cooking table. For larger quantities and items, adjust the cooking time

accordingly. The portions specified for fish, meat and poultry correspond to a single serving. The portions specified for vegetables and desserts correspond to servings for 4 people.

- You can cook on up to two levels. Slide the cooking containers in at levels 1 and 3 to achieve the best cooking results. If you are cooking on just one level, use level 2.
- When using the sous-vide cooking method, only use heat-resistant vacuuming bags designed for this purpose. Do not cook the food in the vacuuming bag in which you bought the food, e.g. portioned fish. These bags are not suitable for sous-vide cooking.
- To ensure an even transfer of heat and a perfect cooking result, use a chamber vacuum-sealing machine that can create a 99% vacuum when vacuum-sealing food.
- With the "Sous-vide cooking" type of heating, it is not possible to postpone the end of the cooking time for hygiene reasons.

### Vacuum-sealing

When vacuuming, heat-seal the food in a special plastic bag so that it is airtight.

Note the following points when vacuum-sealing:

- There is no/hardly any air in the vacuum-sealing bag.
- The heat-sealed seam is perfectly sealed.
- The vacuum-sealing bag has no holes in it. Do not use a core temperature probe.
- Pieces of meat or fish that have been vacuum-sealed together are not pressed directly against one another.
- You have vacuum-sealed vegetables and desserts as flat as possible.

Before cooking the food, check whether the vacuum in the bag is intact.

If in doubt, place the food into a new bag and vacuum-seal it again. Vacuum-seal food no more than one day before the cooking process. This is the only way to pre-

vent the escape of gases from the food (e.g. from vegetables) which inhibit the transfer of heat, or to prevent the texture of the food from changing, and thus altering how it cooks, as a result of the vacuum pressure.

### Quality of the food

The quality of the cooking result is 100% influenced by the quality of the ingredients you use.

Use only fresh, top-quality food. This is the only way to guarantee a consistent cooking result that delivers impeccable flavour.

### Cooking


 
 
 
 
 
 
 
Sous-vide cooking prevents flavours from escaping, intensifying the food's natural flavour. Note that the usual quantities of seasoning and condiments, such as herbs, spices and garlic, will have a much greater effect on the flavour. Start off by halving the quantities you usually use.

If the ingredients are of high quality, it is often sufficient to enclose them in the bag with just a small knob of butter and a little salt and pepper. Generally, the fact that the food's natural flavours intensify during cooking is sufficient on its own to produce a flavourful cooking result.

Do not place the vacuum-sealed food items on top of one another or too close together in the cooking containers. In order to ensure even heat distribution, make sure that you do not touch the food. If you have more than one vacuum-sealing bag, cook on two levels. Remove the vacuum-sealing bags with care after cooking, as hot water accumulates on the bags. Place the

### Meat

**Note:** Once the meat is cooked, sear it on a teppan yaki or grill it briefly at a high temperature on both sides. This gives the meat a nice crust and the flavours you would expect from frying, without overcooking it.

Food	Accessory/cookware	Temperature in °C	Heating function	Cooking time in min.	Comments
Entrecôte, rare, 180 g each	Perforated steaming tray	58		90-105	
Entrecôte, medium rare, 180 g each	Perforated steaming tray	63		80-95	
Entrecôte, well done, 180 g each	Perforated steaming tray	70		75-90	
Veal topside steaks, 160 g each	Perforated steaming tray	60		70-80	
Beef steaks, rare, 180 g each	Perforated steaming tray	58		55-65	
Beef steaks, medium rare, 180 g each	Perforated steaming tray	63		40-55	
Beef steaks, well done, 180 g each	Perforated steaming tray	70		40-55	
Pork medallions, 80 g each	Perforated steaming tray	63		65-80	

unperforated cooking container into the cooking compartment at the level below the perforated cooking container containing the hot food.

Dry the outside of the bag, place it into a clean, unperforated cooking container and cut it open with scissors. Place all of the food, along with its juices, into the cooking container.




The food can be finished off as follows once the sous-vide cooking stage is complete:

- Vegetables: Flash fry in a frying pan or on the teppan yaki to give them the flavours you would expect from frying. In doing so, you can effortlessly season the vegetables or mix them with other ingredients without the vegetables cooling down.
- Fish: Season and coat with hot butter. Since many types of fish fall apart easily after cooking using the sous-vide method, if you want to flash fry fish, this should be done before the sous-vide cooking stage. Fry the food for longer if has not been sufficiently well cooked during the sous-vide cooking stage.
- Meat: Flash fry at a very high temperature for a few seconds only on each side. This gives the meat a nice crust and the flavours you would expect from frying, without overcooking it. You can achieve a particularly good result using a teppan yaki or under the grill.






**Note:** Dab the meat with a tea towel before placing it into hot oil, in order to avoid fat spitting out of the pan.

Serve the food on pre-heated plates and, if possible, with a hot sauce or butter as sous-vide cooking takes place at relatively low temperatures.






## Poultry


 




Food	Accessory/cookware	Temperature in °C	Heating function	Cooking time in min.	Comments
Duck breast, 350 g each	Perforated steaming tray	58		60-75	Once the breast is cooked, fry the skin side in a hot frying pan until it is crispy.
Foie gras, 1 roll, 300 g each	Perforated steaming tray	80		25-30	Recipe tip: Prepare the goose liver and mix it with other ingredients. Roll it in foil and prick it several times. Vacuum-seal the roll and leave it to chill for several hours in the refrigerator before cooking it using the sous-vide method.
Chicken breast, 250 g each	Perforated steaming tray	65		55-70	

## Fish and Seafood

 





Food	Accessory/cookware	Temperature in °C	Heating function	Cooking time in min.	Comments
Prawns, 125 g each	Perforated steaming tray	60		20-30	Recipe tip: Vacuum-seal along with some olive oil, salt and garlic.
Scallops, 20-50 g each	Perforated steaming tray	60		2-8	The more the scallops weigh, the longer the chosen cooking time should be.
Cod, 140 g each	Perforated steaming tray	59		20-30	
Salmon fillet, 140 g each	Perforated steaming tray	58		25-35	If you wish, you can flash fry the salmon fillet in a hot frying pan once it is cooked.
Pikeperch, 140 g each	Perforated steaming tray	60		15-25	

## Vegetables

Food	Accessory/cookware	Temperature in °C	Heating function	Cooking time in min.	Comments
Mushrooms, quartered, 500 g	Perforated steaming tray	85		15-20	Recipe tip: Vacuum-seal along with some butter, rosemary, garlic and salt.
Chicory, halved, 4-6 pieces	Perforated steaming tray	85		30-40	Recipe tip: Cut the chicory in half. Vacuum-seal along with some orange juice, sugar, salt, butter and thyme.
White asparagus, whole, 500 g	Perforated steaming tray	85		40-50	Recipe tip: Vacuum-seal along with some butter, salt and a little sugar.
Green asparagus, whole, 600 g	Perforated steaming tray	85		10-15	Recipe tip: Blanch before vacuum-sealing to retain the colour. Vacuum-seal along with some butter, salt and pepper.
Carrots, in 0.5 cm slices, 600 g	Perforated steaming tray	95		30-35	Recipe tip: Vacuum-seal along with some orange juice, curry powder/paste and butter.

Food	Accessory/cookware	Temperature in °C	Heating function	Cooking time in min.	Comments
Potatoes, peeled, in 2 x 2 cm cubes, 800 g	Perforated steaming tray	95		30-45	Recipe tip: Vacuum-seal along with some butter and salt. Can easily be used for making dishes such as salad.
Potatoes, skin on, whole or halved, 800 g	Perforated steaming tray	95		40-55	Recipe tip: Vacuum-seal along with some butter and salt. Wash thoroughly beforehand.
Cherry tomatoes, whole or halved, 500 g	Perforated steaming tray	85		10-15	Recipe tip: Vacuum-seal along with some olive oil, salt and sugar. Mix red and yellow cherry tomatoes together.
Squash, in 2 x 2 cm cubes, 600 g	Perforated steaming tray	90		15-20	The cooking time may vary depending on the type of squash.
Courgettes, in 1 cm slices, 600 g	Perforated steaming tray	85		20-35	Recipe tip: Vacuum-seal along with some olive oil, salt and thyme.
Mangetouts, whole, 500 g	Perforated steaming tray	85		5-10	Recipe tip: Vacuum-seal along with some olive oil, salt and thyme.
 
## Desserts

Food	Accessory/cookware	Temperature in °C	Heating function	Cooking time in min.	Comments
Pineapple, in 1.5 cm slices, 400 g	Perforated steaming tray	85		65-75	Recipe tip: Vacuum-seal along with some butter, honey and vanilla
Apples, peeled, in 0.5 cm slices, 2-4 pcs	Perforated steaming tray	85		5-10	Recipe tip: Vacuum-seal along with some caramel sauce.
Bananas, whole, 2-4 pcs	Perforated steaming tray	65		10-15	Recipe tip: Vacuum-seal along with some butter, honey and a vanilla pod.
Pear, peeled, sliced, 2-4 pcs	Perforated steaming tray	85		25-35	Recipe tip: Add honey or sugar to sweeten.
Kumquats, halved, 12-16 pcs	Perforated steaming tray	85		70-80	Recipe tip: Vacuum-seal along with some butter, a vanilla pod, honey and apricot jam. Rinse under warm water, cut in half and de-seed.
Vanilla sauce, 0.5 l	Perforated steaming tray	82		13-15	

## 19.5 Defrosting

 
In your appliance, you can defrost frozen food gently and faster than in the refrigerator and more evenly than in the microwave.

### **WARNING – Risk of serious harm to health!**

There is a risk of salmonella from meat and poultry. Meat and poultry may transmit germs.

- ▶ When defrosting food from animal sources, you must remove the liquid that escapes during defrosting. Ensure that the liquid that escapes during defrosting never comes into contact with other foods.
- ▶ Slide the unperforated cooking insert under the food. Pour away the liquid that collects in the dish or tray as the meat and poultry defrosts. Then clean the sink and rinse it with plenty of water. Clean the cooking insert in hot soapy water or in the dishwasher.

- ▶ After defrosting, operate the appliance for 15 minutes with 100% humidity at 100 °C.

- Use the "Defrosting"  type of heating for this.
- The defrosting times specified are intended as a guide only. The defrosting time depends on the size, weight and shape of the frozen food. To reduce the defrosting time, freeze your food flat and in individual pieces.
- Remove the food from the packaging before defrosting.
- Do not defrost more food than you intend to eat on this occasion.
- Remember: Food that has been defrosted may not keep for as long as fresh food and it will spoil more quickly. Prepare defrosted food immediately and cook it thoroughly.

- After half of the defrosting time, turn fish or meat and separate pieces of frozen food, such as berries or pieces of meat. Fish does not need to be fully defros-

ted. When the surface is soft enough to absorb the spices, the fish is sufficiently defrosted.

## Defrosting

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Berries, 300 g	Perforated steaming tray	40	*	-	6-8	
Roasts, 1-1.5 kg	Perforated steaming tray	45	*	-	90-120	
Fish fillet, 150 g each	Perforated steaming tray	45-50	*	-	15-20	
Goulash, 600 g	Perforated steaming tray	45-50	*	-	40-55	
Chicken, 1 kg	Perforated steaming tray	45-50	*	-	60-70	
Chicken thighs, 400 g each	Perforated steaming tray	45-50	*	-	40-50	
Vegetables, 400 g	Perforated steaming tray	45-50	*	-	10-12	

## 19.6 Reheating – warming

You can use steam assistance to gently warm up food. The food tastes and looks as though it has been freshly cooked.

- In your appliance, you can create the perfect conditions for warming cooked food without drying it out. This retains the flavour and quality; the food tastes as though it has been freshly prepared.

- To do this, use the "Reheat" mode .
- Do not cover the food. Do not use any aluminium foil or cling film.
- The figures listed are for portions for one person. Larger quantities of food can also be warmed up in the unperforated cooking insert. This increases the specified times.

## Reheating

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Vegetables	Plates	90-100		-	5-10	
Starchy side dishes	Plates	100		-	5-10	E.g. pasta, quartered potatoes, rice; baked or fried food such as chips or croquettes are not suitable
Plated meals	Plates	100		-	10-15	

## Meat or sausage - heating

Recommended settings for cooking meat or sausage.

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Smoked pork, cooked, sliced	Unperforated steam container	100		100	10-15	
Sausages, boiled, e.g. Bologna sausages, Bavarian veal sausages	Unperforated steam container	85-90		100	5-15	


## 19.7 Preparing yoghurt

Use your appliance to make yoghurt.

- You can prepare yogurt using your appliance.
- Heat pasteurised milk to 90 °C on the hob to prevent the yoghurt cultures from being overcome by any unwanted microbes. You must not heat ultra-high temperature processed milk (UHT milk). If you use cold milk to make yoghurt, the incubation time will be longer.
- Allow the milk in the water bath to cool to 40 °C so that the yoghurt cultures are not destroyed.
- Stir some natural yoghurt with identified yoghurt cultures into the milk. Use one to two teaspoons of yoghurt per 100 ml milk.


- When using yoghurt ferment, follow the instructions on the packet.
- Pour the yoghurt into washed jars.
- You can sterilise the washed jars in your appliance at 100 °C and 100% humidity for 20 to 25 minutes. Leave the jars and the cooking compartment to cool down before you pour the yoghurt into the disinfected jars, and place the jars in the appliance.
- Once you have finished making the yoghurt, place it in the refrigerator.
- To make thick yoghurt, add skimmed milk powder to the milk before heating it. Use one to two table-spoons of skimmed milk powder per litre of milk.

### Preparing yoghurt

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Yoghurt starter, in sealed jars	Perforated steaming tray	45		100	300	Recipe tip: Flavour the yoghurt starter with fruit purée, marmalade, honey, vanilla or chocolate, and then increase the preparation time if necessary.



## 19.8 Dough proving – leaving to rise

Your appliance provides the ideal conditions for proving dough and dough mixtures or raw pastries without them drying out.

- To do this, use the "Dough proving" operating mode .

- You do not have to cover the bowl with a damp cloth. Proving only takes half as long as it usually does.
- The cooking time specified is intended as a guide only. Leave the dough to rise until it has doubled its volume.

### Dough proving

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Dough mixture, pizza	Bowl	38		-	25-35	E.g. yeast dough, natural fermentation starter, sourdough
Dough mixture, bread	Bowl	45		-	40-50	E.g. yeast dough, natural fermentation starter, sourdough
Dough mixture, brioché	Bowl	45		-	55-70	E.g. yeast dough, natural fermentation starter, sourdough

 

## 19.9 Preserving food

Preserve fruit and vegetables in jars.

- You can easily preserve fruit and vegetables in your appliance.
- Cook food as soon as possible after purchase or after it has been harvested. Prolonged storage reduces the vitamin content and means that food is on the verge of fermenting.
- Only use fruit and vegetables that are in good condition.
- The appliance is not suitable for preserving meat.

- Carefully check and clean the preserving jars, rubber sealing rings, clips and springs.
- Sterilise the washed jars in your appliance for 20 to 25 minutes at 100 °C and 100% humidity before preserving.
- Place the sealed preserving jars in the perforated cooking container. They must not be in contact with each other.
- Once the cooking time has elapsed, open the oven door. Do not remove the preserving jars from the cooking compartment until they have completely cooled down.

## Preserving food

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Fruit, vegetables, in sealed 0.75 l preserving jars	Perforated steaming tray	100		100	35-40	
Beans, peas, in sealed 0.75 l preserving jars	Perforated steaming tray	100		100	120-140	

### 19.10 Juicing – berries

 
Your appliance lets you extract juice from berries effortlessly and cleanly.

- Place the berries into the perforated cooking insert and slide it into the 2nd level from the bottom. Slide

the unperforated cooking insert one level underneath to catch any liquid that drips down.

- Leave the berries in the appliance until all of the juice has been extracted.
- You can then place the berries in a tea towel and squeeze to extract the remaining juice.





### Juicing (berries)

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Berries	Perforated steaming tray or Unperforated steam container	100		100	60-120	

### 19.11 Other

    Note the recommended settings.

#### Other

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Sterilising, e.g. baby bottles, jam jars	Wire rack	100		100	20-25	
Eggs, medium, 5 pcs	Perforated steaming tray	100		100	12-19	
Royale, 500 g	Glass dish or Wire rack	90		100	25-30	Insert in level 1
Melting chocolate	Heat-resistant cookware	60		100	15-20	Cover with heat-resistant cling film.

### 19.12 Preparing bulky food

Recommendation for preparing bulky food.



- To prepare bulky food items, you can remove the shelf supports.
- Lift the shelf supports slightly in the cooking compartment at the front and pull them out sideways towards the front.
- Place the rack directly onto the bottom of the cooking compartment and place the food or roaster onto the

rack. Do not place the food or roaster directly onto the bottom of the cooking compartment. If required, remove the shelf supports. → *Page 31*

### 19.13 Test dishes

These overviews have been produced for test institutes to facilitate appliance testing in accordance with EN 60350-1:2013 or IEC 60350-1:2011 and EN 60705:2012, IEC 60705:2010.

## Cooking with steam

Food	Accessory/cookware	Temperature in °C	Type of heating	Humidity in %	Cooking time in min.	Comments
Broccoli, in florets, in accordance with EN 60350-1	Perforated steaming tray	90-100		100	20-25	
Peas, frozen, in accordance with EN 60350-1, 2 kg	Perforated steaming tray	100		100	35-40	

## 20 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free software or open source software. The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information".<sup>1</sup> You can also download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information

from [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany. The relevant source code will be made available on request. Please send your request to [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany. Subject: „OSSREQUEST“ The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

## 21 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Directive can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area. Furthermore, our Customer Service will continue to provide you with other function-relevant and storable genuine spare parts for up to 15 years from the date on which your appliance was placed on the market. For more information, please contact our Customer Service team.

**Note:** Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

 
You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website. This product contains light sources from energy efficiency class G. These light sources are available as a

spare part and should only be replaced by trained specialist staff.

You can find the information required as per Regulation (EU) 2023/826 online at [www.gaggenau.com](http://www.gaggenau.com) on the product and service pages for your appliance, in the area of user manuals and additional documents.

### 21.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.), which you can find on the appliance's rating plate. You will see the rating plate with these numbers if you open the appliance door.



Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

<sup>1</sup> Depending on the appliance specifications

## 22 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at [www.gaggenau.com](http://www.gaggenau.com) among the additional documents on the product page for your appliance.




Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.<sup>1</sup>

A detailed Declaration of Conformity can be found online at [www.gaggenau.com/gb](http://www.gaggenau.com/gb) among the additional documents on the product page for your appliance.<sup>1</sup>



2.4 GHz band (2400–2483.5 MHz): Max. 100 mW

5-GHz band (5150–5350 MHz + 5470–5725 MHz): max. 150 mW

	BE	BG	CZ	DK	DE	EE	IE	EL	ES
	FR	HR	IT	CY	LI	LV	LT	LU	HU
	MT	NL	AT	PL	PT	RO	SI	SK	FI
	SE	NO	CH	TR	IS	UK (NI)			

5 GHz WLAN (Wi-Fi): For indoor use only.

AL	BA	MD	ME	MK	RS	UK	UA
----	----	----	----	----	----	----	----

5 GHz WLAN (Wi-Fi): For indoor use only.

### 22.1 Statement of Compliance for Great Britain

#### Product type

This statement of compliance covers the products described in this information for use whose model identifier group is seen on the title page. The full model identifier is made up of the characters before the slash in the product number (E no.) which can be found on the rating plate. Alternatively, you can also find the model identifier in the first line of the UK Energy Label.

#### Name and address of manufacturer

BSH Hausgeräte GmbH, Carl-Wery-Strasse 34, 81739 München, Germany

This statement of compliance is prepared by the manufacturer.

The manufacturer, BSH Hausgeräte GmbH deems that it has complied with

- provision 5.1-1 of ETSI EN 303 645 v2.1.1 and, where relevant, provision 5.1-2 of ETSI EN 303 645 v2.1.1;
- provision 5.2-1 of ETSI EN 303 645 v2.1.1;
- provision 5.3-13 of ETSI EN 303 645 v2.1.1.


#### Support period

BSH Hausgeräte GmbH will provide security updates that are necessary to maintain the main functions free of charge until at least 28/02/2034.

<sup>1</sup> Only applies to Great Britain

## 23 Installation instructions

Observe this information when installing the appliance.

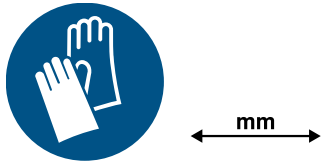

### 23.1 General installation instructions

Follow these instructions before you start installing the appliance.

#### **WARNING – Risk of fire!**

It is dangerous to use an extended power cord and non-approved adapters.

- ▶ Do not use extension cables or multiple socket strips.
- ▶ Only use adapters and power cords approved by the manufacturer.
- ▶ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.


#### **WARNING – Risk of injury!**

The appliance is heavy.

- ▶ To move the appliance, two people are required.
- ▶ Use only suitable tools and equipment. Sharp-edged parts may be accessible during installation.
- ▶ Wear protective gloves.

#### **ATTENTION**

Carrying the appliance by the appliance frame may cause it to bend. The appliance frame cannot support the weight of the appliance.

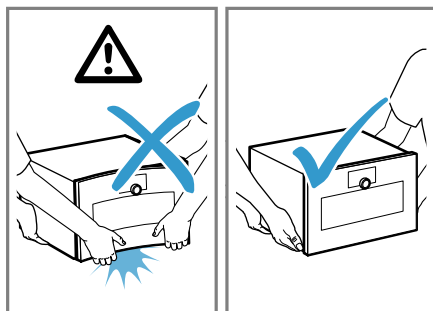

- ▶ Do not lift the appliance using the appliance frame.
- ▶ Always lift the appliance at the casing.

#### **WARNING – Risk of electric shock!**

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.

- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

#### **ATTENTION**


Surface damage caused by pulling or pushing the appliance.

- ▶ Do not pull or push the appliance; lift it instead.
- ▶ Place a tea towel under the appliance.
- Read this instruction manual carefully.
- The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for damages incurred as a result of incorrect installation.
- Switch off the power supply before carrying out any work.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
- Do not lift the appliance using the door or the appliance frame.
- When installing, observe the current, valid building regulations as well as the regional power company's regulations.
- Install the appliance in accordance with the installation diagram. Observe the minimum clearances.
- Installation behind cabinet doors: Suitable measures should be taken to ensure these types of doors cannot close during operation. There is a risk of overheating if the door does not remain open during operation or during cooling (fan operation).

- Before starting up the appliance, remove any packaging material and adhesive film from the cooking compartment and the door.
- The dimensions in the figures are in mm.

### 23.2 QR code for the installation video

This is where you will find the QR code for the installation video.

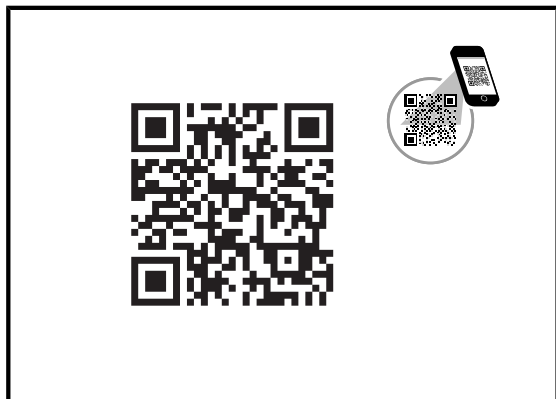


### 23.3 Planning notes

Observe the following planning notes before installing the appliance.

- The door direction cannot be reversed.
- The distance from the furniture cavity to the door panel surface is 42 mm.
- Consider the overhang when planning to open drawers next to the appliance.
- When planning a corner solution, consider a door opening angle of at least 97°.
- Do not install any other electrical appliance in the cupboard above this appliance.
- Do not install a sink above this appliance.
- When installing above a fully automatic coffee machine, use the intermediate floor or the metal bracket. You can obtain the intermediate floor and the metal bracket from after-sales service or the online shop.
- When installing two appliances above each other directly beside a fully automatic coffee machine, use the intermediate floor or the metal bracket between the four appliances.
- The appliance's mains socket must be located outside of the built-in niche.

### 23.4 Appliance dimensions

You will find the dimensions of the appliance here

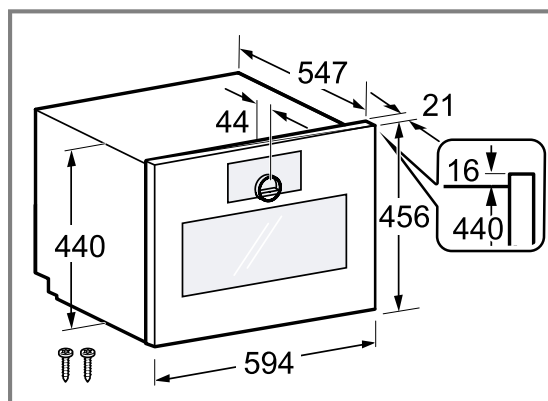

### 23.5 Installation accessories

Use original accessories.

Accessories	Order number
Intermediate floor	GA601010

### 23.6 Preparing the units

**Requirement:** Fitted units must be heat-resistant up to 90 °C, and adjacent unit fronts up to 70 °C.

1. Ensure that the mains socket is located outside of the built-in niche.
2. Carry out cut-out work on the units and then insert the appliance.
3. After making the cut-outs, remove any shavings. Shavings may impair the function of electrical components.
4. Secure any unsecured units to the wall using a standard bracket.
5. Install the appliance only so high that the customer can remove any accessories effortlessly.

### 23.7 Electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

#### ⚠ WARNING – Risk of electric shock!

It must always be possible to disconnect the appliance from the electricity supply. The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ The mains plug for the mains power cable must be easily accessible after the appliance is installed.
- ▶ If this is not possible, an all-pole isolating switch must be integrated into the permanent electrical installation according to the conditions of overvoltage category III and according to the installation regulations.
- ▶ The permanent electrical installation must only be wired by a professional electrician. We recommend installing a residual-current circuit breaker (RCCB) in the appliance's power supply circuit.

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.

- ▶ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.
- ▶ If the power cord of this appliance is damaged, it must be replaced by trained specialist staff.
- The appliance corresponds to protection class I and must only be operated with a protective earth connection.
- The fuse protection must correspond to the power rating specified on the appliance's rating plate and to local regulations.
- The appliance must be disconnected from the power supply whenever installation work is being carried out.
- The appliance must only be connected using the power cable provided. Fully connect the power cord to the back of the appliance.
- The power cable must only be replaced with a cable from the original manufacturer. The power cable can be obtained from customer service.
- Contact protection must be ensured by the installation.

### Power cable with a plug with earthing contact

For an appliance with a plug with earthing contact, follow these instructions.

- Connect the appliance only to a correctly installed, earthed socket.
- If the plug with earthing contact can no longer be accessed after installation, an energy-isolating device in the phases must be provided in the permanent electrical installation in accordance with the installation regulations.
- Do not use extension cables, socket strips or multiple socket strips. Overloading leads to a risk of fire.

### Power cable without a plug with earthing contact

For an appliance without a plug with earthing contact, follow these instructions.

**Note:** Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

An isolating switch must be integrated into the permanent electrical installation according to the installation regulations.


### Connecting a power cord without a plug with earthing contact

1. Identify the phase (external conductor) and neutral conductor in the mains socket.  
The appliance may be damaged if it is not connected correctly.
2. Observe the specifications on the rating plate.
3. Connect the wires of the mains power cable according to the colour coding:
  - GN/YE: Green and yellow = Conductor ⊕
  - BU: Blue = Neutral conductor
  - BN: Brown = Phase (external conductor)

## 23.8 Installing the appliance in a tall unit




**Note:** The red label sticking out of the appliance door provides support during installation. Before connecting to the mains, pull on the red label to open the appliance door.

1. Observe the clearances when installing in a tall unit.
  - ▶ Note the dimensions for the built-in niche in the intermediate floor.

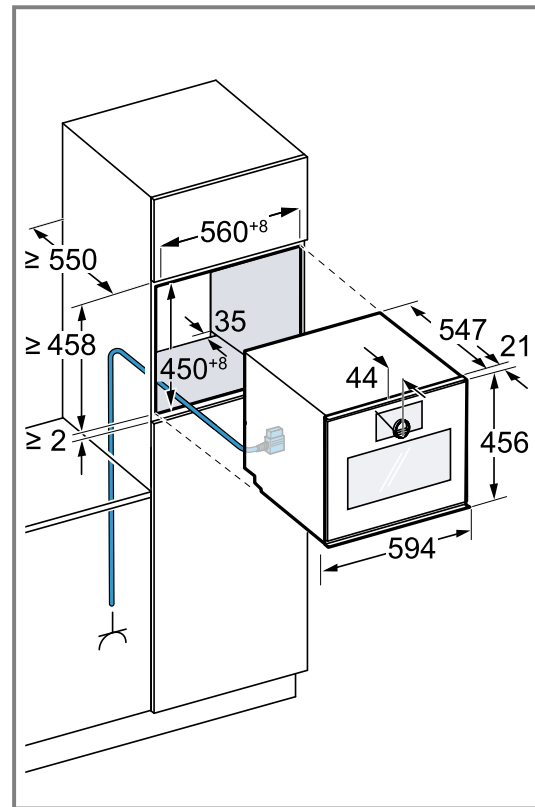


Depending on the product variant, the appliance is equipped with or without a plug.


2. When installing beside a wall, ensure that the potential opening angle of the appliance door is based on the minimum clearances to the wall.

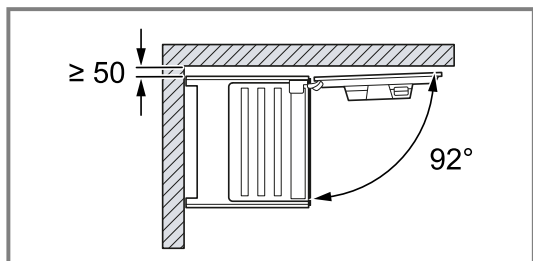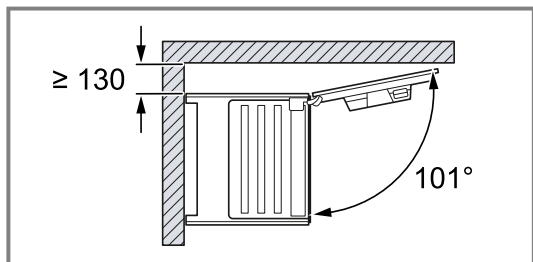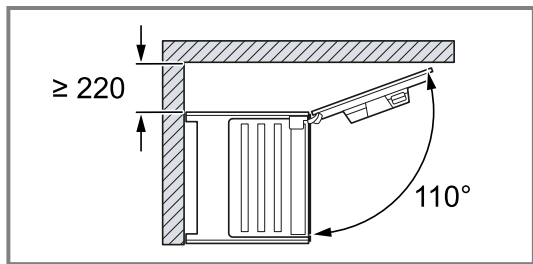


3. When installing 2 appliances on top of each other, observe the clearances.
- ▶ Make sure that the distance between the appliance and the wall is at least 35 mm.

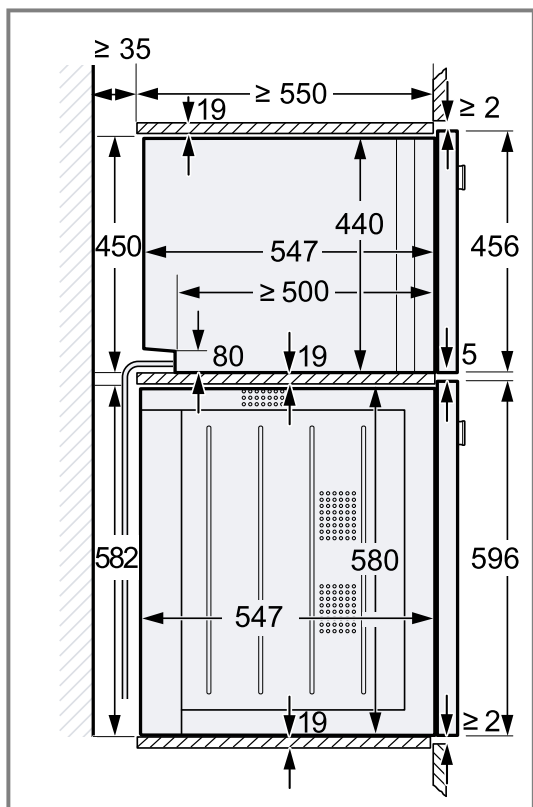


4. If there is no intermediate floor above the appliance, secure the appliance against tipping in the built-in niche.
- ▶ Secure two brackets from the GA601010 installation accessories to both sides of the built-in niche.
  - ▶ Observe the installation instructions for the brackets.
5. **Note:** Ensure that you adjust all white plastic elements on the appliance: Left and right, top and bottom.
- If the thickness of the side sections of the unit is 16 mm, do not remove the white plastic elements. The white plastic elements provide support when centring the appliance.
6. If the thickness of the side sections of the unit is 20 mm, remove the white plastic elements.

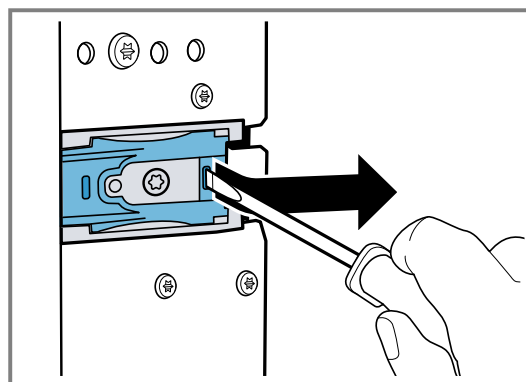


7. If the thickness of the side sections of the unit is 19 mm, remove the white plastic elements ①, turn them 180° ② and refit them ③.

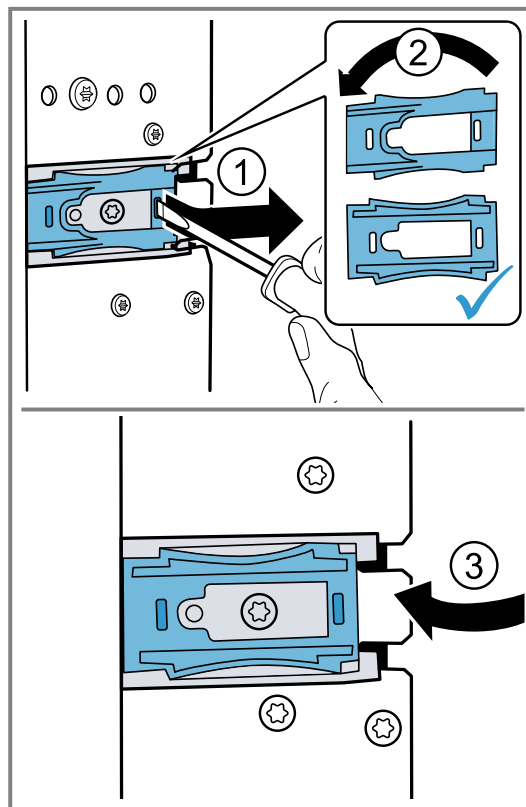


8. Push the appliance all the way into the built-in unit.  
 ▶ Do not kink or trap the connection cable.

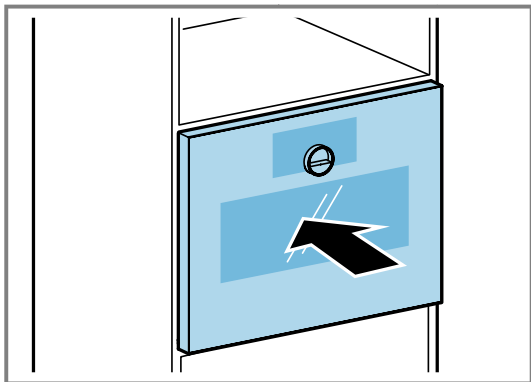

9. Centre the appliance.  
 There must be an air gap of at least 5 mm between the appliance and the adjacent unit fronts.
10. Use a spirit level to adjust the appliance so that it is perfectly level.

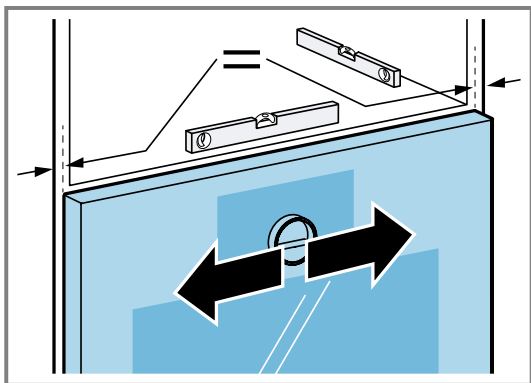

11. Open the appliance door.
12. Secure the appliance to the unit using the enclosed screws.

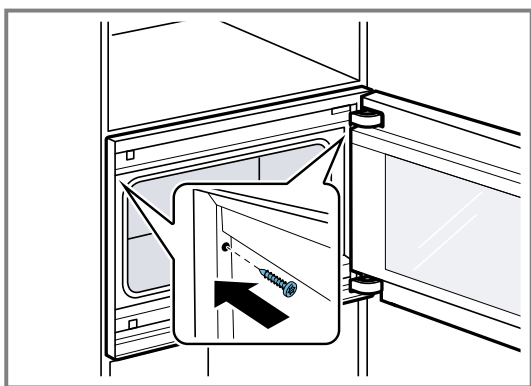

13. Remove the red plastic transport lock from the upper door catch.

### 23.9 Adjustable intermediate floors with brackets

An adjustable intermediate floor with brackets (GA601010) is available for your appliance.

### ATTENTION

If you install appliances on the intermediate floor with brackets that are too heavy, the intermediate floor may bend.

- ▶ Do not install the intermediate floor with brackets below an oven.
- ▶ Install the intermediate floor with brackets below a steam oven.

If you do not install the appliance correctly on intermediate floor GA601010, the intermediate floor may bend.

- ▶ Do not position the appliance at an angle in the recess on the intermediate floor.
- ▶ Slide the appliance into the tall unit parallel to the side walls of the recess.

**Note:** Do not install a microwave below a fully automatic coffee machine.

Only install the intermediate floor with brackets:


- Below a steam oven in the same series.
- Below a microwave in the same series.
- Below a fully automatic coffee machine that you install above an oven in the same series.
- Below a fully automatic coffee machine that you install above a steam oven in the same series.

Do not install the intermediate floor with brackets:

- Below an oven.
- Between two fully automatic coffee machines that you want to install vertically stacked.
- Above a steam oven in the same series.

### Installing the appliance above intermediate floors with brackets

- ▶ Do not position the appliance at an angle in the recess on the intermediate floor with brackets. Slide the appliance into the tall unit parallel to the side walls of the recess.

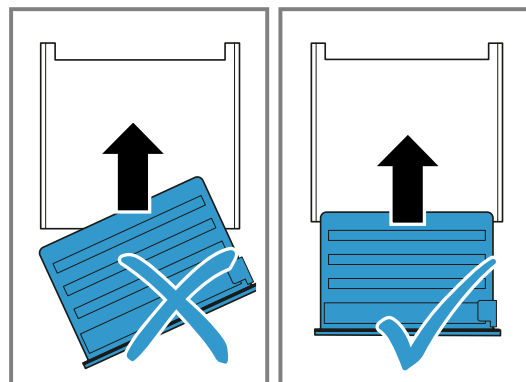

### 23.10 Aligning the appliance door


The appliance door is already aligned when the appliance is delivered. Alignment is not normally required. If you install multiple appliances next to each other or on top of each other, align the appliance door.

- Correct the appliance height → *Page 53*
- Changing the door opening angle → *Page 54*


### Correcting the appliance height

1. Pull the appliance out slightly from its built-in niche.

- Loosen the locking screw.

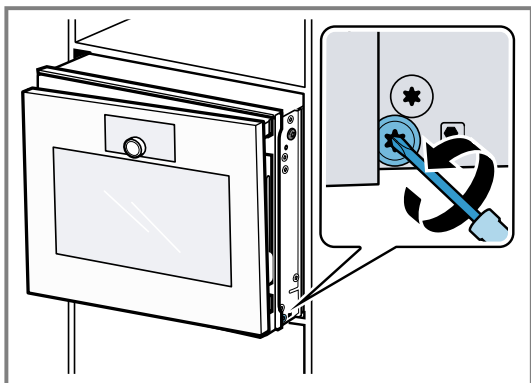

- Open the appliance door.
- Use the setting screw to correct the appliance height.

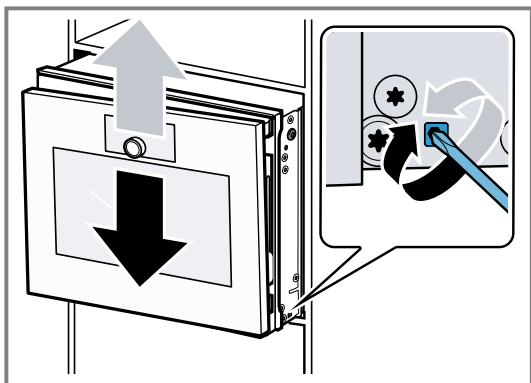


- Tighten the locking screw.
- Slide the appliance into the built-in niche.


### Changing the door opening angle

There are two available opening angles for the appliance door.


- Pull the appliance out slightly from its built-in recess.
- Loosen the screw on the right-hand side at the very rear of the appliance slightly.

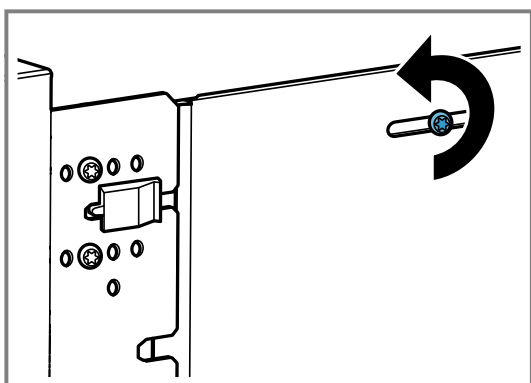


- Remove the two screws in front of the black plastic element.

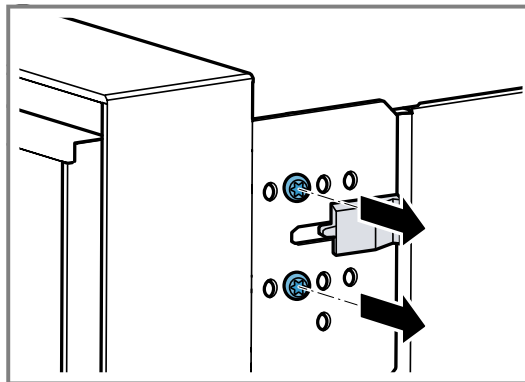

- Slide the black plastic element to the right.

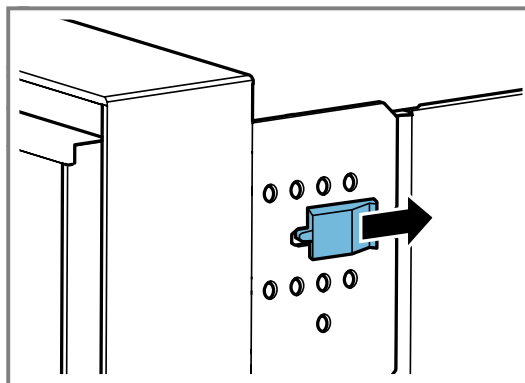

- Screw the two screws into the holes further to the right on the appliance.

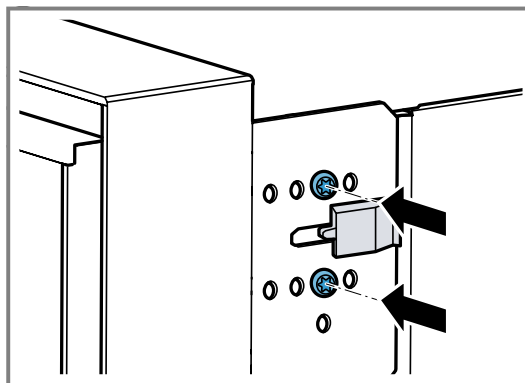

The further right you screw the screws into the appliance, the smaller the door opening angle. When the screws are positioned to the right, the opening angle of the appliance door is approx. 97°.

### 23.11 Starting up the appliance after installation

**Requirement:** The appliance has been installed and connected.

- Press on the control ring.
- ✓ The display shows the GAGGENAU logo for approx. 30 seconds and then "Initialisation".
- Set the language.
- Follow the information in the installation assistant on the display.
  - ▶ Press or turn the control ring.
- Select the settings for the "Installation height".

5. Aligns the display horizontally or vertically depending on the installation position or the user's body size.
6. Deactivate demo mode.

### **23.12 Combining the appliance with an oven**

1. Only combine suitable appliances of the same brand and series.
2. Fit the steam oven first, then the oven.
3. When installing the appliance beside an oven, ensure that the appliance doors open in the opposite direction.

### **23.13 Combining the appliance with a fully automatic coffee machine**

1. Only combine suitable appliances of the same brand and series.
2. Follow the installation instructions for the fully automatic coffee machine and for the intermediate floor.
3. When installing above a fully automatic coffee machine, use the intermediate floor or the metal bracket. You can obtain the intermediate floor and the metal bracket from after-sales service or the online shop.
4. When installing two appliances above each other directly beside a fully automatic coffee machine, use the intermediate floor or the metal bracket between the four appliances.

### **23.14 Combining the appliance with a warming drawer**

#### **ATTENTION**

Sharp edges on the appliance may damage the front panel of the warming drawer.

- ▶ Do not damage the front panel of the warming drawer when sliding the appliance in.
- ▶ Before installing another appliance, open the warming drawer, place a cloth over the front panel and close the warming drawer to protect the front panel of the warming drawer from damage.

1. Only combine suitable appliances of the same brand and series.
2. Install the warming drawer first.
3. Follow the installation instructions for the warming drawer.
4. Slide the appliance, on the warming drawer, into the built-in cabinet.

### **23.15 Combining the appliance with a microwave**

1. Only combine suitable appliances of the same brand and series.
2. Fit the microwave first, then the steam oven.

### **23.16 Removing the appliance**

1. Disconnect the appliance from the power supply
2. Undo the fastening screws.
3. Lift the appliance slightly and pull it out completely.

The difference is Gaggenau

[gaggenau.com](http://gaggenau.com)

**BSH Hausgeräte GmbH**  
Carl-Wery-Straße 34  
81739 München, GERMANY  
[www.gaggenau.com](http://www.gaggenau.com)

Valid within Great Britain:  
Imported to Great Britain by  
BSH Home Appliances Ltd.  
Grand Union House  
Old Wolverton Road  
Wolverton, Milton Keynes  
MK12 5PT  
United Kingdom



9001954385 (060209) REG25  
en