



Register your
new device on
MyBosch now and
get free benefits:
**[bosch-home.com/
welcome](https://bosch-home.com/welcome)**



Fully-Automatic Top-Loader Washing machine

en Instruction Manual and Installation Instructions



Your new washing machine

You have chosen a Bosch washing machine.

Please take a few minutes to read and become familiar with the advantages of your washing machine.

To meet the high quality demands required by Bosch, every washing machine that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.bosch-home.com or contact our after-sales service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before switching on the washing machine.

Display rules

Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

Note/tip

Information about the optimum use of the appliance/any other useful information.

1. 2. 3. a) b) c)

The steps are represented by numbers or letters.



Lists are represented by a small box or a dash.

Contents

Safety.....	4	Description of other functions	
Identification of Parts.....	13	Child lock.....	23
Packing List.....	13	Troubleshooting.....	24
Installation		Exception Display and	
Appropriate installation Location....	14	Handling.....	25
Connecting water supply.....	14	Cleaning And Maintenance	
Connecting to the drain.....	15	Washer Clean.....	26
Adjusting the feet.....	15	Cleaning Lint filter.....	26
Electrical connection.....	16	Clean The Water Inlet Valve	
Connection of inlet hose connector		Filter.....	26
and tap.....	16	Wiring Diagram	
Connecting to the water supply		Wiring Diagram Non-Heater.....	27
important.....	17	Wiring Diagram Heater.....	27
Using detergent / softener.....	17	Programme Overview	
Put rat mesh into the machine.....	17	Program/type of	
Preparation		laundry/information.....	28
Preparing laundry for washing.....	18	Technical Data	29
Things to be done for energy		Warranty terms and	
saving.....	18	conditions.....	30
Using softeners.....	19	Warranty Card.....	32
Using liquid and tablet detergent..	19	Environmental Protection.....	33
Using bleaches.....	19	Customer Service.....	33
Function of Each Button		Notes.....	34-35
Child Lock			
Function.....	20		
Operating			
Procedure.....	21		

1 Safety

Observe the following safety instructions.

1.1 General information



- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- for washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- with tap water and commercially available detergents and care products suitable for washing machines.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 2000 m above sea level.

1.3 Restriction on user group

- This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.
- Do not let children play with the appliance.
- Cleaning and user maintenance must not be performed by children unless they are being supervised.
- Keep children under the age of 3 years and pets away from the appliance.

1.4 Safe installation

WARNING - Risk of electric shock!

Incorrect installation is dangerous.

- Connect and operate the appliance only in accordance with the specifications on the rating plate.
- Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
- When using a residual current circuit breaker, only use a type with the mark.
- Never equip the appliance with an external switching device, e.g. a timer or remote control.
- When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- When installing the appliance, check that the power cable is not trapped or damaged.
- If the insulation of the power cord is damaged, this is dangerous.
- Never let the power cord come into contact with hot appliance parts or heat sources.
- Never let the power cord come into contact with sharp points or edges.
- Never kink, crush or modify the power cord.

WARNING - Risk of fire!

- It is dangerous to use an extended power cord and non-approved adapters.
- Do not use extension cables or multiple socket strips.
- Only use adapters and power cords approved by the manufacturer.
- If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

WARNING - Risk of injury!

The heavy weight of the appliance may result in injury when lifted. Do not lift the appliance on your own.

WARNING - Risk of suffocation!

- Children may put packaging material over their heads or wrap themselves up in it and suffocate.
- Keep packaging material away from children.
- Do not let children play with packaging material.

CAUTION - Risk of injury!

- The appliance may vibrate or move when in use.
- Place the appliance on a clean, even, solid surface.
- Align the appliance using the appliance feet and a spirit level. If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
- Lay hoses and power cords in such a way that there is no risk of tripping.
- If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.
- Do not move the appliance by holding onto protruding parts.

CAUTION - Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- Do not touch the sharp edges on the appliance.
- Wear protective gloves when installing and transporting the appliance.

1.5 Safe use

WARNING - Risk of electric shock!

- If the appliance or the power cord is damaged, this is dangerous.
- Never operate a damaged appliance.
- Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- If the appliance or the power cord is damaged, immediately un- plug the power cord or switch off the fuse in the fuse box and turn off the

water tap.

Call customer service.

- An ingress of moisture can cause an electric shock.
- Only use the appliance in enclosed spaces.
- Never expose the appliance to intense heat or humidity.
- Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

WARNING - Risk of harm to health!

- Children can lock themselves in the appliance, thereby putting their lives at risk.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close. When spinning larger, waterproof items of laundry, imbalances may arise and lead to injuries.
- Do not wash and spin larger items of laundry, such as blankets or mattress covers, in the appliance.

WARNING - Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- Keep small parts away from children.
- Do not let children play with small parts.

WARNING - Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- If accidentally swallowed, seek medical advice.
- Keep detergents and care products out of the reach of children.

WARNING - Risk of explosion!

Laundry that has been pretreated with flammable cleaning agents that contain solvents may cause an explosion in the appliance.

- Rinse pretreated laundry thoroughly with water before washing.

CAUTION - Risk of injury!

The door may break if you stand on or climb onto the appliance.

- Do not stand on or climb onto the appliance.

- The appliance may tip over if you sit on or lean against the open door.
- Do not sit on or lean against the appliance door.
- Do not place any objects on the appliance door.
- Reaching into the drum while it is still turning may cause hand injuries.
- Wait for the drum to come to a complete stop before reaching inside.

CAUTION - Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

- Do not touch the hot detergent solution.

CAUTION - Risk of chemical burns!

If the detergent drawer is opened, detergent and care products may spray out from the appliance.

- Contact with eyes or skin may cause irritation.
- Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- If accidentally swallowed, seek medical advice.
- Keep detergents and care products out of the reach of children.

1.6 Safe cleaning and maintenance

WARNING - Risk of electric shock!

Improper repairs are dangerous.

- Never make any technical modifications to the appliance or its features.
- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be re-placed by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.
- An ingress of moisture can cause an electric shock.
- Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

WARNING - Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

- Only use the manufacturer's original spare parts and original accessories.

WARNING - Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

- Do not use cleaning agents that contain solvents.

1 Important instructions for safety

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Never place the product on a carpet-covered floor. Otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.

If the product has a failure, it should not be operated unless it is repaired by the Authorized Service Agent. There is the risk of electric shock!

- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the program, see "Cancelling the program" section.

- Connect the product to a Delegated grounded outlet. Do not neglect to have the grounding installation made by a qualified electrician. BOSCH shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, there is the risk of water leakage.

- Never remove the Lint filter while there is still water in the drum. Otherwise, risk of flooding and injury from hot water will occur.

- Unplug the product when not in use.

- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!

- Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.

- Use detergents, softeners and supplements suitable for automatic washing machines only.

Follow the instructions on the textile tags and on the detergent package.

- The product must be unplugged during installation, maintenance, cleaning and repairing procedures.

- Always have the installation and repairing procedures carried out by the Authorized Service Agent.

- Manufacturer shall not be held liable. for damages that may arise from procedures carried out by unauthorized persons.

Important instructions for safety

- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
- If the power cable is damaged, it must be replaced by the manufacturer, after sales service or a qualified person or someone designated by the importer in order to avoid possible risks.
- Place the product on a rigid, flat and level surface.
- Do not place it on a long-pile rug or similar surfaces.
- Do not place the product on a high platform or near the edge on a cascaded surface.
- Do not place the product on the power cable.
- Never use sponge or scrub materials. These will damage the painted, chrome plated and plastic surfaces.

1.2 Intended use

- This product has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.



- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of your product is 10 years. During this period, original spare parts will be available to operate the appliance properly.


1.3 Children's safety

- Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep children away from the product when it is in use. Do not let them to tamper with the product. Use child lock to prevent children from intervening with the product.
- Do not forget to close the lid when leaving the room where the product is located.
- Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.
- Children of less than 3 years should be kept away unless continuously supervised.

1.4 Package information

- Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Identification of Parts

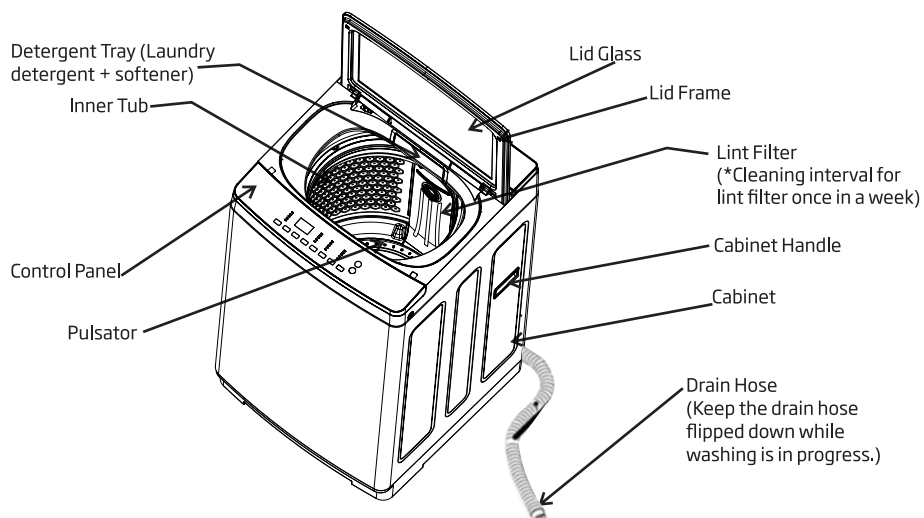

Packing list

Name	Quantity
● Washing Machine	● One Set
● Owner Manual	● One piece
● Inlet Hose	● One piece
● Rat Mesh	● One piece
● Drain Hose	● One piece
● Drain Hose clamp	● One piece

3 Installation

To make the product ready for use, review the information in the user manual and make sure that the electricity, tap water supply and water drainage systems are appropriate before calling the Authorized Service Agent. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.

	Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
	WARNING: Installation and electrical connections of the product must be carried out by the Authorized Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
	WARNING: Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.
	Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.

3.1 Appropriate installation location

- Place the machine on a rigid floor. Do not place it on a long pile rug or similar surfaces.
- Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0°C.
- Place the product at least 1 cm away from the edges of other furniture.

3.2 Connecting water supply

	The water supply pressure required to run the product is between 0.2-10 bars. It is necessary to have 10-80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher.
	If you are going to use the double water- inlet product as a single (cold) water-inlet unit, you must install the supplied stopper to the hot water valve before operating the product. (Applies for the products supplied with a blind stopper group.)
	WARNING: Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.
	WARNING: Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.

1. Connect the special hoses supplied with the product to the water inlets on the product. Blue hose (right) (max. 25 °C) is for cold water inlet.

	WARNING: Ensure that the cold and hot water connections are made correctly when installing the product. Otherwise, your laundry will come out hot at the end of the washing process and wear out.
--	--


*Applicable for both models.

Installation


2. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
3. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leaks occur, turn off the tap and remove the nut. Re-tighten the nut carefully after checking the seal. To prevent water leakages and damages caused by them, keep the taps closed when the machine is not in use.

3.3 Connecting to the drain

1. Use the spring clip to secure the water drain hose to the outlet on the appliance.

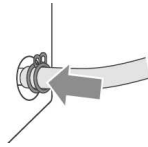

2. Second end of the water drain hose to be properly laid to a floor drain.

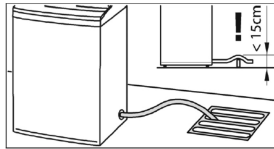


Notes

- The height difference between the surface on which the appliance is installed and the water drain hose should be no more than 15 cm.
- If you extend the drain hose, its total length should be no more than 3 m. Otherwise, the water will not be able to drain properly.

3.4 Adjusting the feet

- The one front feet of washing machine can adjust the positive, when the washing machine is not level, you can up the front of washing machine for a little, then left or right rotation to adjustable the feet, make it level. You can check the level by the help of the indicator on top Cover.

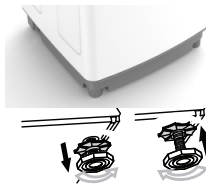

WARNING: Your house will be flooded if the drain hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! To prevent such situations and to ensure smooth water intake and discharge of the machine, fix the end of the discharge hose tightly so that it cannot come out.

3.5 Electrical connection

Connect the product to a Delegated grounded outlet. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- Power cable plug must be within easy reach after installation.
- Do not search the power plug or the appliance control with wet hands.
- Do not make connections via extension cables or multi-plugs.



WARNING: Damaged power cables must be replaced by the Authorized Service Agents.

Transportation of the product


1. Unplug the product before transporting it.
2. Remove water drain and water supply connections.
3. Drain all water that has remained in the product.
4. Install all Styrofoam and then package the machine.



WARNING: Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.


3.6 Connection of inlet hose connector and tap

1. Press down the cap, remove the inlet hose connector as shown in Fig a.
2. Loosen four screws on the inlet hose connector, put the connector on the tap as shown in Fig b.
3. If the tap caliber is too large and the connector can not put on it, loosen four screws and remove the bushing as shown in Fig c.
4. Tighten four screws as shown in Fig d.
5. Tighten nuts as shown in Fig e.

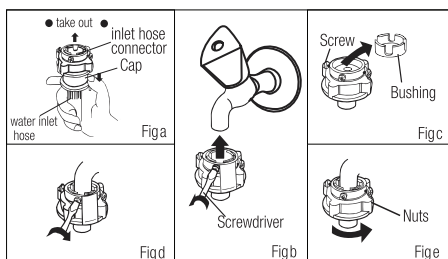

3.7 Connecting to the water supply Important:


- The water supply pressure required to run the machine must be 0.2-10 bar.
- Connect the special hoses supplied with the machine to the water intake valves on the machine.

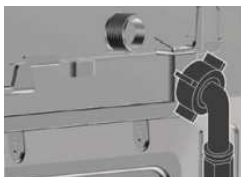

- Models with a single water inlet should not be connected to the hot water tap.
- When returning the appliance to its place after maintenance or cleaning, care should be taken not to fold, squeeze or block the hoses.



3.8 Using detergent /softener

When using detergent, softener, starch, fabric dye, bleached lime scale remover read the manufacturer's instruction the package carefully and follow the suggested dosage values. Use measuring cup if available.

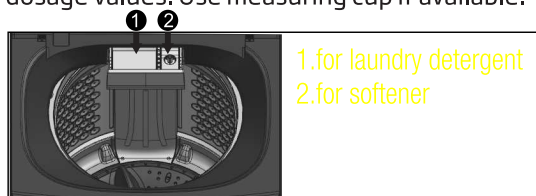

3.9 Put rat mesh into the machine

If you want to put rat mesh into the machine, you should take the screw out, then assemble rat guard into the machine, the last step is putting the screw to fix the rat mesh.

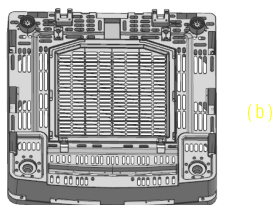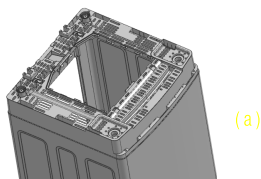

Preparing laundry for washing

- Laundry items with metal attachments such as, underwired bras, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "machine washable" or "hand washable" labeled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing. If unsure, check with a dry cleaner.
- Use only dyes/colour changers and lime scale removers suitable for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in the freezer for a few hours before washing. This will reduce pilling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the machine. Such dusts and powders on the laundry may build up on the inner parts of the machine in time and can cause damage.

Things to be done for energy saving

Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product in the highest capacity allowed by the programme you have selected, but do not overload.
- Always follow the instructions on the detergent packaging.
- Do not use detergent in excess of the amount recommended on the detergent package.

Using softeners

All of our product has softener compartment in detergent drawer.

If the softener has lost its fluidity, dilute it with water before putting it in the softener drawer.

Using liquid and tablet detergent

Apply the following instructions when using tablet, gel and similar detergents.

- If the liquid detergent thickness is fluidal, put the liquid detergent into the main wash detergent compartment during first water intake.
- If the liquid detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment or directly into the drum before washing.

Using bleaches


- Add the bleaching agent to the dedicated compartment on the top cover.
- Do not use bleaching agent and detergent by mixing them.
- Use just a little amount of bleaching agent and rinse the clothes very well as it causes skin irritation. Do not pour the bleaching agent onto the clothes and do not use it for coloured clothes.




Tablet detergents may leave residues in the detergent compartment. If you encounter such a case, place the tablet detergent between the laundry, close to the lower part of the drum in future washings.

Function of Each Button

Non Heater

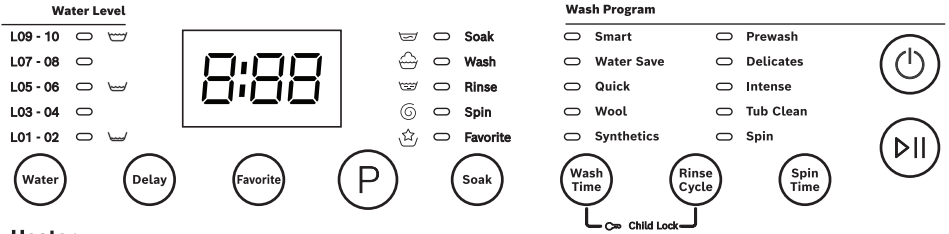

Heater

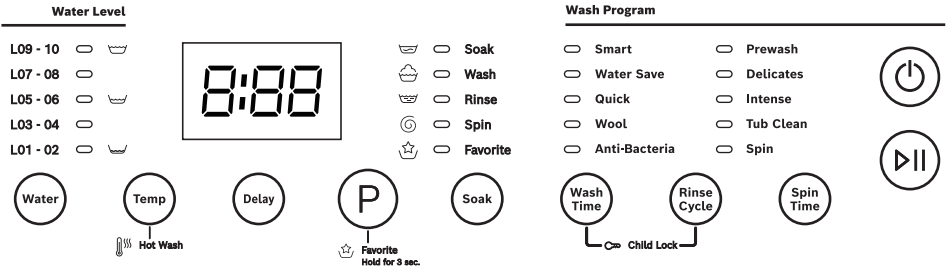

Child Lock Function

The Function is intended for children safety and preventing from accidental changes to washing program.

Press Power button ,set the desired washing program after setting, press Start/Pause button then Press " Wash + Rinse "button at the same time and hold for 2s. The digital tube display "CL" All the button are lock have no function

Release Child Lock Function : Press " Wash + Rinse "button at the same time and hold for 2s After beep sound child function is release

Note : If you open the lid , when the child lock state the digital screen display alarm code E4/E5, you need to close the lid to release alarm.

Function of Each Button

Operating Procedure

	Display Screen During operations it display remaining reserve time (minutes). In case of trouble, it display abnormal symbol.
 Power	Power Button 1. Press the "Power" button to switch on the power. 2. When the power is on, press to switch off. 3. If the start/pause button not pressed the machine will shut down automatically 10 minutes.
	Start/Pause Button 1. After the power is Switched on , Press it to start the machine. 2. During working Press, it to Pause . 3. During Pause , Press this button to restart.
Water	1. Different programs, Different default water, Different adjustment Range. 2. Five lights from bottom to top: L1~2/L3~4/L5~6/L7~8/L9~10 Display Screen shows water range L01~L10. 3. Press the Power button then Press water button to select water accordingly and then press start pause button to start the machine. 4. Do not switch the water during the current dehydration/air drying process.
Favorite	"Favorite" button - (Non-heater model only) 1. User can save the program they prefer to use, and they can quickly call them up and use them by pressing "Favorite Button". 2. Press Power button , Select water level , wash , Soak & Spin time , Rinse . 3. Then Press start / Pause button to start /run. 4. Then Press "Favorite" button for 3s after that buzzer (b) to save it as "Favorite" program.
Favorite (Heater)	"Favorite" Function - (Heater model only) 1. User can save the program they prefer to use, and they can quickly call them up and use them by pressing "Program Button 3s". 2. Press Power button , Select water level , wash , Soak & spin time , Rinse . 3. Then Press start / Pause button to start /run. 4. Then Press "Program" button for 3s after that buzzer beep. to save it as "Favorite" program.
Delay	1. User can adjust the delay start time (0~24). 2. Press Delay button to select delay time. 3. Press "Start /Pause" button to start the reservation . 4. After booking digital tube display 0 to 24hours. 5. To cancel reservation : Press the "Power" button . Note : During Reservation Child lock key combination and power button work . No other button will work.
Program	1. User can select the program manually . 2. Press "Power" button. 3. Press Program button to select program. 4. Press "Start/Pause" button to start the program . Note : Besides tub clean /Air dry/soft/wool all program has fuzzy function.
Soak	User can adjust the soak time manually by pressing Soak button to adjust the soak time .
Wash Time	User can adjust the wash time manually by pressing wash button to adjust the wash time .
Rinse Cycle	User can adjust the number of rinses manually by pressing Rinse.
Spin Time	User can adjust the Spin time manually by pressing Spin button.

Washing Programs

After turning on the power, press the start button, the Smart program will start to run, and the washing machine will automatically set the washing water amount according to the amount of clothes.



If you want to use other programs to wash, you can press the program button to select after turning on the power button, and press the water level button to select the appropriate water level.



1. Smart: Intelligent selection of the appropriate program, with fuzzy weighing function.

2. Water Save: Program after completing the last rinse, it enters a pause state, and the display screen shows "Water save", And beep every minute to remind users to perform operations; After the user completes the operation, press the start stop button to drain the water; If the user does not take action, the machine will automatically shut down 10 minutes after the alarm.

3. Quick: Suitable for small items of laundry with light soiling.

4. Wool: Use this program to clean delicate fabrics such as underwear, wool (wash only "washable" clothes).

5.1. Synthetics: Used for mixed washing of clothes of various materials. **(Non-Heater)**

5.2. Anti-Bacteria: Used for mixed washing of clothes of various materials. **(Heater)**

6. Prewash: Before formal washing, first wash the clothes with water or a small amount of detergent. Its main purpose is to remove floating ash, dirt or stubborn stains on the surface of the clothing, laying the foundation for the subsequent main washing procedure, thereby improving the overall cleaning effect. (When Fill & Wash & Drain is completed, the Machine displays "Add" and buzzes every 1 minute to remind the user to add the washing liquid. After the user adds the washing liquid, press the start and stop button to continue the subsequent main washing process.)

7. Delicates: Perfect for delicate clothes that require gentle washing.

8. Intense : Suitable for washing some jeans and other fabrics of clothes, as well as some dirty clothes.

 
9. Tub Clean: Program for cleaning and caring for the drum and the impeller, e.g. before running the first wash cycle or if an "Odour" has developed after an extended period of non-use.

10. Spin: Increase the dehydration time, can air dry clothes.

Description of other functions

Child-Lock

After starting, press the two keys to the left and right of the child lock at the same time to start the child lock function, if you need to unlock, you can press the two keys at the same time again. The specific settings are as follows.



1. If the top cover of the washing machine is opened, the washing machine will stop all load work, and the buzzer will remind the user to close the door cover. In the child lock state, the digital tube alternately displays "CL" and the original display state.

2. If the top cover cannot be closed within 5 s of opening, if there is water in the washing machine bucket at this time, the washing machine will drain until the reset water level. During this time, the Buzzer sounded a reminder that an accident had occurred, and closing the door cover did not work at this time, only the combination of keys "wash + rinse" could disengage the child lock and E5 alarm.

Note: Washer doesn't operate while the lid is opened. If the lid is opened during the spin cycles, the operation stops for safety.

Description Of The Energy Efficiency Test Procedure

Press Power Button to turn on the machine

Press Program button to select the "INTENSE" Program. Press the Wash Button to select wash time as per below table. Press the rinse Button to select the rinse table press the spin button to select the spin time as per below table press the start/pause button to start the machine.

7.0KG

Program	Water Level	Wash	No. of Rinse	Spin
Intense	10	27 Min.	1	4

7.5 to 9.0KG

Program	Water Level	Wash	No. of Rinse	Spin
Intense	10	27 Min.	1	6

*Under test conditions, when tested in accordance with standard IEC 60456: 2010 & BEE Schedule -12 (Revision 03) Actual Performance of machine will depend on how the appliance is being used.

Troubleshooting

Problem	Check & Solution
The power is cut off.	- Is the electric voltage normal? - Is the washer plugged in? Plug in the electric cord.
Water does not drain.	- Is the drain hose down? Put the drain hose down. - Is the drain hose folded? Unfold the drain hose. - Is the drain hose outlet clogged? Unclog the outlet hose.
Washing machine won't work.	- Is the washer lid open? Close the lid. - Is the Pause button on? Press the Start/Pause button one more time and check if the washer starts. - Is enough water filled to the water level? - If the water pressure is low, it takes a long time to start washing. - Is the tap closed? Open the tap to supply water.
If the drain hose, water tap and drum are frozen, do as follows.	- Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. - Pour hot water into the drum for about 10 minutes. - Put a hot water towel on the drain hose connector. - If the drain hose defrosts, connect again and check for proper water draining.
The water does not drain out immediately.	- The drain is clogged with coins or pins. - Half fill the drum with water and try for spinning again.
The water leaks at the water supply hose connector.	- If the connecting part is loose, water may leak. Repeat the assembling steps again. (Refer to "Connection of inlet hose connector and tap" and "Connecting to the water supply") - Is the water supply hose folded? Unfold the hose. - If the water supply is too strong, water may leak. Close the tap a little. - Is water leaking from the tap itself? Fix the tap.
Water is not supplied	- Did you press the Start/Pause button after selecting the water supply? - If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause- button. - Is the tap closed? Turn on the tap. - Is the filter net at the water supply hose connector clogged with dirty matters? Clean the filter net by brushing with a toothbrush. - Is the water supply cut off? If the water supply is suspended, turn off the tap and power off.
Spinning makes loud noises and vibrations.	- Check if the laundry is spread evenly in the washer. Spread out the laundry evenly and start again. - Check if the washing machine levels on a sturdy flat floor. Set the machine at level. Adjust the feet for leveling. - Check if washing machine is touching any nearby things. - Remove those unnecessary things away from the wash machine.
	WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

Exception Display and Handling

Error Message	Error	Control
E1	Alarm for Water Level inlet overtime	Open and close the cover / press start pause button to cancel the alarm
E2	Alarm for Water Level out overtime	Open and close the cover / press start pause button to cancel the alarm
E3	Out of Balance Alarm	Open and close the cover to cancel the alarm
E4	Alarm for Lid open	Close the cover and disarm the alarm
E5	Child lock Alarm	Close the cover and disarm the alarm
E6	Water Level too high	Automatic drainage to 10 stages of water level to lift the alarm
F1	Zero Crossing circuit Failure	Call for repair
F2	Auto weighing failed	Call for repair
F5	Volt<160VAC	Dis-alarm when the Voltage is normal
F6	Volt>270VAC	Dis-alarm when the Voltage is normal
F7	Water Level Sensor Failure	Call for repair, Disengage after normal frequency
F3	Temperature Sensor Failure	Power off, stop heating, check whether there is water in the washing machine, whether the water temperature meets the control requirements
F4	Temperature Rises to Fast	



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

Washer Clean

After Washing Clothes, unplug the power cord and turn off the running water. Wipe the washing machine with a dry soft cloth. If the box is dirty, please use neutral detergent, do not wipe with volatile items such as gasoline or alcohol.

 


Cleaning Lint filter

When the water level reaches a certain level, some of the lint from the washing process will be collected in the lint filter. Please clean the lint in the lint filter regularly. The specific operation method is as follows.



1. Press the tongue spring and pull out the wire chip collector to the outside.



2. Take out the back cover of the wire chip collector and clean it.



3. Assemble the assembled wire chip collector.
*Cleaning interval for lint filter once in a week.


Clean The Water Inlet Valve Filter

Water inlet valve filter is clogged with dirt will cause poor water intake or no water intake, should be regularly screwed down the water inlet pipe connector, use a brush to clean the filter dirt.




Wiring Diagram

Wiring Diagram Non-Heater

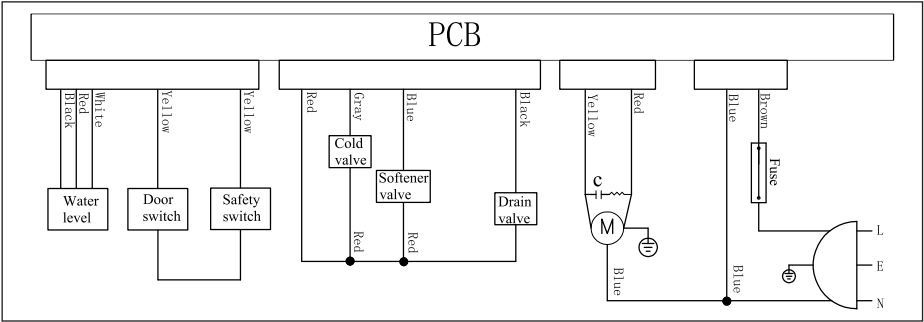

Wiring Diagram Heater

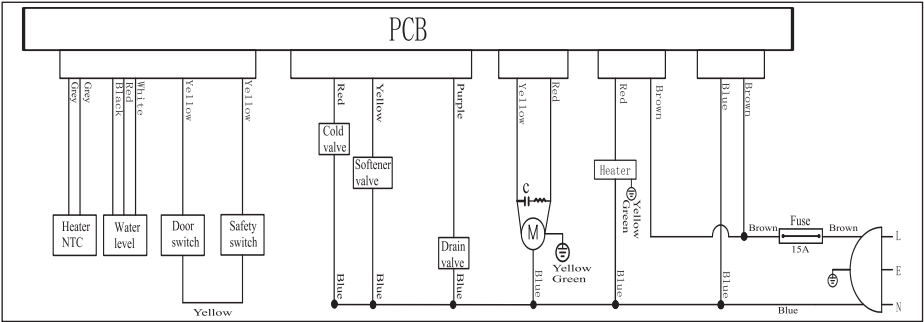

Programme overview*

*Programs will vary based on the models.

Refer the user interface in the machine for available programs.

Program/type of laundry/information	Load Size
Smart Use this Program for everyday washing e.g. sheets, towels T-shirts.	Full Drum
Water Save Use this program to prevent automatic draining of water at the end of cycle.	
Quick Quick can be selected to wash lightly soiled clothes of less than 2.0 kg in a short time.	30% of your drum
Wool Delicate clothes (lingerie, woolens, saree, etc.) which may be easily damaged can be washed. The machine washable woolens or saree are specifically made to prevent damage during machine-washing. Most hand-knitted garments are not machine washable, so recommend you to hand wash them. A. For the washing instruction, check the clothing label before wash. B. A neutral detergent is recommended for the woolens or saree. C. Do not use a tumble dryer to prevent damage. D. To avoid direct sunlight, cover up the clothes with towels during natural dry. Some woolens or sweater may clog a drain hose by their lint, so recommend you to use spin only after hand-wash them.	50% of your drum
Prewash Use as pre treatment to heavily soiled/ dirty cloths to get best wash performance.	60% of your drum
Intense Use this Program for heavily soiled durable garments e.g. overalls, jeans. Thick and heavy clothes or those which are excessively dirty like jeans or working uniforms can be washed.	60% of your drum

*Clothes up-to balance ring is full load.

Technical Data

Check the voltage, frequency and maximum load on your appliance's rating plate.

Models:

Dimensions (in mm)	Weight (in kg)	Rated voltage	Rated frequency (in Hz)	Maximum load (in kg)
545 x 575 x 965	34	220-240	50	7.0
545 x 575 x 965	34	220-240	50	7.5
545 x 575 x 965	34	220-240	50	8.0
545 x 575 x 965	34	220-240	50	9.0
545 x 575 x 965	34	220-240	50	10.0

Warranty terms and conditions

Check the voltage, frequency and maximum load on your appliance's rating plate.

Product	Standard warranty period	Warranty on parts
Top loading washing machine	2 year	10 year (only on eco silence driver)

- 1.** The warranty is confined only to the first purchase of the appliance and is non-transferable. This warranty card shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered / tampered with or lost.
- 2.** The Warranty period (both Standard Warranty Period and Extended Warranty Period) starts from the date of purchase of the appliance.
- 3.** The warranty covers only manufacturing defect in material and workmanship that may arise despite normal operation and usage of the appliance, as prescribed in the instruction manual.
- 4.** Repairs, installations and removal of the appliance shall be carried out only by an Authorized Service Personnel, failing which this warranty will be void.
- 5.** In the event of change of address, the new address shall be intimated to the Authorised Service Center by calling our after-sales service. Enclosed after-sales service directory.
- 6.** Repairs & replacements of parts would be purely at the discretion of the Authorised Service Personnel only. The company's obligation under this warranty shall be limited to repair and providing replacement of defective parts only. It is hereby clarified that after the Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended Warranty period, in case the appliance needs to be transported to the Authorised Service Centre for repair, the transportation charges from and to the place of installation shall be borne by the customer.
- 7.** The customer shall provide a reasonable, sufficient and safe working space to access the appliances for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity/ water supply and drainage for testing of the appliance.
- 8.** In case repair cannot be completed onsite, the company reserves the right to carry the appliance to its authorised service centre and return the same after repair.

9. In case of appliances installed beyond municipal limits of the jurisdiction of company's Authorised Service Center, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorised Service Center, as well as expenses incurred on deputing of service personnel/ technician towards conveyance and other incidental expenses, will be borne by the customer.

10. In case of repairs the appliance and/ or the replaced spare part will be warranted only for the remaining of the original warranty period and the replaced components will become property of the company.

11. The company shall be under no obligation or deemed to be in default for any delay or failure in performance resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and / or accessories.

12. In case of repair, the company owns the right to repair or replace the spare part, which are tested thoroughly to ensure the appliance is operational.

13. Authorised Personnel appointed and trained by the company will provide installation, demonstration and repair services to the customer.

WARRANTY CARD

WARRANTY CARD

Customer's name: _____
Address: _____
City: _____
Pin: _____
State: _____
Mobile: _____
Email: _____
Model/E-Nr: _____
Serial No: _____
Date of Purchase: _____
Date of Expiry: _____

BSH Household Appliances Manufacturing Pvt. Ltd.

WARRANTY CARD-COPY

Customer's name: _____
Address: _____
City: _____
Pin: _____
State: _____
Mobile: _____
Email: _____
Model/E-Nr: _____
Serial No: _____
Date of Purchase: _____
Date of Expiry: _____

BSH Household Appliances Manufacturing Pvt. Ltd.

Dealer's name :

Customer's Signature :

Environmental Protection

Dispose of packaging and the appliance in an environmentally responsible manner. This appliance is certified in accordance with the guidelines on E-waste (Management) Rules 2022 which govern waste electrical and electronic equipment. The guidelines provide a framework for the return and recycling of used Appliances.

Note: This product doesn't contain any of hazardous substances as specified in the E-waste.

Do's

Please visit our website to find out more details regarding e-waste disposal. Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding. Consult the retailer about appliance take back schemes.

Don'ts

Don't dump the discarded Electronic Equipment in the open or in any land fill site, as this will result in contamination of the soil and the ground water. Don't dispose of the discarded Electronic Equipment in household bins or Municipal bins. The product is not meant for re-sale to any unauthorized agencies/scrap dealers. Don't keep any replaced spare parts from the product in an exposed area.

Customer Service

If you cannot rectify the error yourself by turning the appliance off and on again, please contact our after-sales service. Enclosed after-sales service directory

We will always find an appropriate solution and, where possible, prevent the need for an engineer to visit.

Please provide the after-sales service with the product number (E no.) and the production number (FD) of the appliance.

E-Nr. _____	FD _____
-------------	----------

E nr. Product number
FD Production number

You can find this information:

On the inside of the lid and on the back of the appliance.

You can trust in the manufacturer's expertise.

Contact us for assistance. This will ensure that the repair is carried out by trained service engineers with genuine spare parts.

Helpline no.: 1800-266-1880
(Monday to Saturday - 8 am to 8 pm)
Email ID: service.in@bosch-home.com
Chat with us (WhatsApp):
+91-8451000555

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.





Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:

www.bosch-home.com/welcome

BOSCH
HOME APPLIANCES
SERVICE

Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, need help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Household Appliances Manufacturing Pvt. Ltd.

Arena House, 2nd Floor Main Building, Plot No. 103,
Road No. 12, MIDC, Andheri East, Mumbai-400093,
Maharashtra, India.



9002060758 (060122) V01

