



Siemens Home Appliances, the world renowned premium German brand stands for outstanding engineering achievements, characterized by intelligent design, innovation, creativity, perfection and precision. For more than 160 years, Siemens Home Appliances has provided a continuous flow of innovations improving people's lives. "Progress in the service of mankind" was the aspiration of the company's founder Werner von Siemens. With this goal in mind, Siemens Home Appliances engineers continuously endeavour to optimize home appliances for water and energy efficiency.

The tested and approved Cleaning and Care Collection from Siemens Home Appliances aims to bring lasting benefits to your precious appliances with lifespan extension and top performance. Intensive testing on the Collection can assure you of a worry-free application on appliances and dedicated inside out cleaning results as a blessing. We do believe there is nothing more heart-warming than indulge your family time while you can simply leaving your appliances in our good hand.

Website: www.siemens-home.com.hk
E-mail: siemens.hk.service@bshg.com
Parts and Accessories Hotline: (852) 2388 7538


Customer Contact Centre
3/F, North Block, Skyway House, 3 Sham Mong Road, Tai Kok Tsui,
Kowloon, Hong Kong

Right of technical modification reserved, delivery subject to availability, colors of actual products may vary from illustrations.
® Registered trademark.

©2016 BSH Home Appliances Limited. All rights reserved.
All contents and information contained in this catalogue are proprietary to BSH Home Appliances Limited and are subject to copyright protection. Reproduction, republication, redistribution or unauthorized use of any content or information contained in this catalogue is expressly prohibited without the prior written consent of BSH Home Appliances Limited. Printed in Hong Kong 04. 2016

BSH Home Appliances Limited
Manufacturer's Service for Siemens Home Appliances

BSH Group is a Trademark Licencee of Siemens AG

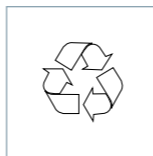

SIEMENS



Dishwashing with Utmost Efficiency.
Cleaning and Care

siemens-home.com.hk

Siemens. The future moving in.

User tips for dishwashing





- Scrape leftovers (without rinsing the utensils). Face down utensils to avoid puddles with sharp cutleries facing down.
- Load suitable amount of chlorine-free detergent and rinse aid to take the best cleaning and drying results. Thanks to the new drying technology, High Glass Drying, and the Siemens wine glass tray, brilliant shine and hygienic drying results of delicate wine glasses can be easily archived with your Siemens dishwasher.
- To ensure that the door seal always remains clean and hygienic, regularly clean it with a damp cloth. Also, if the appliance is switched off for a prolonged period; leave the door ajar to prevent the formation of an unpleasant odour.
- If you find deposits of grease and limescale in your dishwasher, you may fill detergent and start the appliance without utensils in the programme with the highest rinsing temperature. The hot water passing through the appliance can help to dissolve the deposits and lower the chance of cultivating bacteria and odour. For thorough cleaning, you are recommended to use our cleaning and care products of dishwashers.

Leftovers would be brought into dishwashers together with utensils. Utensils are clean and bright after washing, but where do the leftovers go? They would go away with water while some would stay in and generate unpleasant odor. Cleaning the filter and spray arms regularly are the simplest way you can do it by yourself to avoid this. Check out the below steps for your routines.

How to clean the filter for my Dishwashers?

1. After each washing cycle, check the filters for residue.
2. Carefully unscrew filter cylinder at the base of the dishwasher and take out filter system.

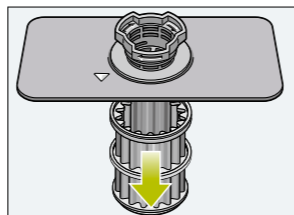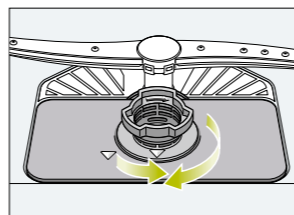


3. Use a washing up brush to clean smaller pieces of debris and rinse filters under running water.

4. Reassemble the filter system and twist in reverse sequence and lock it into position until both arrows line up.

How to clean the Spray Arms for my Dishwashers?

1. Unscrew the upper spray arms for blockages and remove downwards. Remove the lower spray arm upwards.

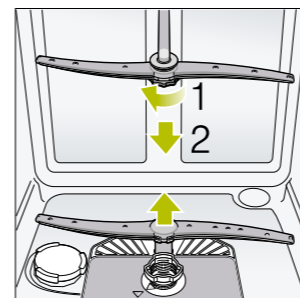

2. Use a cocktail stick to clean the small outlet nozzles.
3. Clean spray arms and the clip under running water.
4. Re-engage or screw on spray arms.

Quick Descaler for Washing Machines and Dishwashers	Dishwasher Care	Dishwasher Maintenance Cleaning Powder
---	-----------------	--



Model	00311506	00311565	00311580
Features	<ul style="list-style-type: none"> • Effectively removes harmful limescale deposits from your appliances • Avoids negative impact from water quality to extend the lifespan of appliances • Tested and approved product by manufacturer which brings you the best caring solutions 	<ul style="list-style-type: none"> • Prevents rust formation with regular application and improves lifespan and performance of dishwashers • Removes grease and limescale for bright and shiny cleaning results. Pleasant and fresh smell • Tested and approved product by manufacturer which brings you the best caring solutions 	<ul style="list-style-type: none"> • Effectively removes grease, starch and protein residues to give you an entire hygienically clean interior of appliance • Improves lifespan and performance of the dishwasher by cleaning internal equipment parts, hoses and pumps perfectly • Tested and approved product by manufacturer which brings you the best caring solutions
Usage Frequency	Dishwasher: Use annually Washing Machine: Depends on the water hardness on the local area, recommend to use every 3-6 months	1 bottle every 1-2 months is recommended	1 pack every 4-6 months is recommended

To Shop:

- Call Parts and Accessories Hotline: (852) 2388 7538
- Visit Customer Contact Centre



Find out more on our Cleaning and Care Collection

