

[en] Instruction manual .....	2
[zh-hk]說明手冊 .....	15



HF15M564HK

**Microwave**  
微波

**SIEMENS**

# en Table of contents

<b>Important safety information .....</b>	<b>2</b>	<b>After-sales service.....</b>	<b>9</b>
Causes of damage.....	4	E number and FD number .....	9
<b>Installation and connection .....</b>	<b>4</b>	Technical data .....	9
<b>The control panel.....</b>	<b>5</b>	Environmentally-friendly disposal .....	9
Rotary selector.....	5	<b>Automatic programmes .....</b>	<b>10</b>
Accessories.....	5	Setting a programme .....	10
<b>Before using the appliance for the first time .....</b>	<b>6</b>	Defrosting using the automatic programmes .....	10
Setting the clock.....	6	Cooking with the automatic programmes.....	10
<b>The microwave.....</b>	<b>6</b>	<b>Tested for you in our cooking studio .....</b>	<b>11</b>
Notes regarding ovenware.....	6	Information regarding the tables .....	11
Microwave power settings.....	6	Defrost .....	11
Setting the microwave.....	6	Defrosting, heating up or cooking frozen food .....	11
Cooling fan.....	7	Heating food .....	12
<b>Memory.....</b>	<b>7</b>	Cooking food.....	13
Saving memory settings.....	7	Microwave tips .....	13
Starting the memory.....	7	<b>Test dishes in accordance with EN 60705.....</b>	<b>14</b>
<b>Changing the signal duration .....</b>	<b>7</b>	Cooking and defrosting with microwave .....	14
<b>Care and cleaning .....</b>	<b>8</b>		
Cleaning agents.....	8		
<b>Malfunction table .....</b>	<b>8</b>		

Additional information on products, accessories, replacement parts and services can be found at [www.siemens-home.bsh-group.com](http://www.siemens-home.bsh-group.com) and in the online shop [www.siemens-home.bsh-group.com/eshops](http://www.siemens-home.bsh-group.com/eshops)

## ⚠ Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance is intended for use up to a maximum height of 4000 metres above sea level.

This appliance may be used by children over the age of 8 years old and by persons with

reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always insert the accessories into the cooking compartment correctly. See "Description of accessories in the instruction manual.

### Risk of fire!

- The appliance becomes very hot. If the appliance is installed in a fitted unit with a decorative door, heat will accumulate when the decorative door is closed. Only operate

the appliance when the decorative door is open.

- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.
- Using the appliance for anything other than its intended purpose is dangerous and may cause damage.  
The following is not permitted: drying out food or clothing, heating slippers, grain or cereal pillows, sponges, damp cleaning cloths or similar.  
For example, heated slippers and grain or cereal pillows may catch fire, even several hours after they have been heated. The appliance must only be used for the preparation of food and drinks.
- Food may catch fire. Never heat food in heat-retaining packages.  
Do not leave food heating unattended in containers made of plastic, paper or other combustible materials.  
Do not select a microwave power or time setting that is higher than necessary. Follow the information provided in this instruction manual.  
Never use the microwave to dry food.  
Never defrost or heat food with a low water content, e.g. bread, at too high a microwave power or for too long.
- Cooking oil may catch fire. Never use the microwave to heat cooking oil on its own.

### Risk of explosion!

Liquids and other food may explode when in containers that have been tightly sealed.  
Never heat liquids or other food in containers that have been tightly sealed.

### Risk of serious damage to health!

- The surface of the appliance may become damaged if it is not cleaned properly.  
Microwave energy may escape. Clean the appliance on a regular basis, and remove any food residue immediately. Always keep the cooking compartment, door seal, door and door stop clean; see also section Care and cleaning.
- Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the

cooking compartment door or the door seal is damaged. Contact the after-sales service.

- Microwave energy will escape from appliances that do not have any casing. Never remove the casing. For any maintenance or repair work, contact the after-sales service.

### Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- Penetrating moisture may cause electric shock. Never subject the appliance to intense heat or humidity. Only use this appliance indoors.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- The appliance is a high-voltage appliance. Never remove the casing.

### Risk of burns!

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.
- Foods with peel or skin may burst or explode during, or even after, heating. Never cook eggs in their shells or reheat hard-boiled eggs. Never cook shellfish or

crustaceans. Always prick the yolk when baking or poaching eggs. The skin of foods that have a peel or skin, such as apples, tomatoes, potatoes and sausages, may burst. Before heating, prick the peel or skin.

- Heat is not distributed evenly through baby food. Never heat baby food in closed containers. Always remove the lid or teat. Stir or shake well after the food has been heated. Check the temperature of the food before it is given to the child.
- Heated food gives off heat. The ovenware may become hot. Always use oven gloves to remove ovenware or accessories from the cooking compartment.
- Airtight packaging may burst when food is heated. Always observe the instructions on the packaging. Always use oven gloves to remove dishes from the cooking compartment.

## Risk of scalding!

- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.
- There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only vibrates a little, the hot liquid may suddenly boil over and spatter. When heating, always place a spoon in the container. This will prevent delayed boiling.

## Risk of injury!

- Scratched glass in the appliance door may develop into a crack. Do not use a glass

scraper, sharp or abrasive cleaning aids or detergents.

- Unsuitable ovenware may crack. Porcelain or ceramic ovenware can have small perforations in the handles or lids. These perforations conceal a cavity below. Any moisture that penetrates this cavity could cause the ovenware to crack. Only use microwave-safe ovenware.
- If using the appliance in microwave mode only, placing cookware and containers made of metal inside the appliance may cause sparks when the appliance is operating. This will damage the appliance. Never use metal containers when using the appliance in microwave mode only.

## Causes of damage

### Caution!

- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a glass plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- Never use the microwave oven without the turntable.
- Creation of sparks: Metal - e.g. a spoon in a glass - must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Foil containers: Do not use foil containers in the appliance. They damage the appliance by producing sparks.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Condensation in the cooking compartment: Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. To prevent corrosion, wipe off the condensation every time you cook.

## Installation and connection

This appliance is intended for domestic use only.

This appliance is only intended to be fully fitted in a kitchen.

Please observe the special installation instructions.

The appliance can be fitted in a 60 cm wide wall cabinet (min. 30 cm deep and 85 cm off the floor).


The appliance is fitted with a plug and must only be connected to a properly-installed earthed socket. The fuse protection must be rated at 10 amperes (L or B circuit breakers). The mains voltage must correspond to the voltage specified on the rating plate.

The socket must be installed and the power cable replaced by a qualified electrician only. If the plug is no longer accessible following installation, an all-pin disconnecting device must be present on the installation side, with a contact gap of at least 3 mm.

Multiple plugs, plug bars and extension leads must not be used. Overloading can result in a risk of fire.

# The control panel

Here, you will see an overview of the control panel. Depending on the appliance model, individual details may differ.

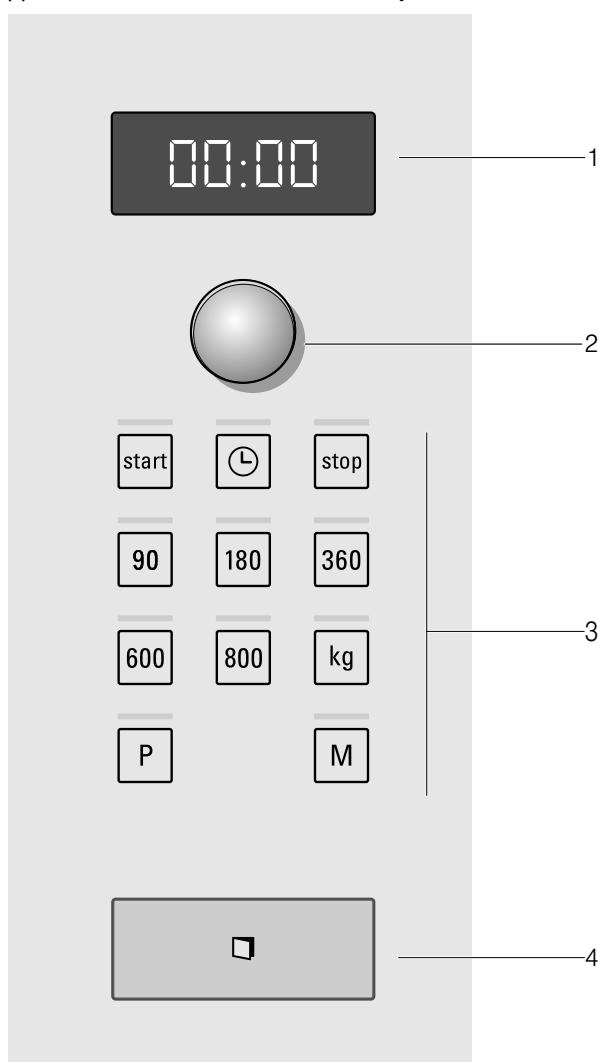

1 **Display**  
for clock and cooking time

2 **Rotary selector**  
for setting the time and cooking time or for setting automatic programmes

3 **Buttons**

4 **Door opener**

Buttons	Use
	Starts operation
	Sets the clock
	Stops operation
90	Selects 90 watt microwave power
180	Selects 180 watt microwave power
360	Selects 360 watt microwave power
600	Selects 600 watt microwave power
800	Selects 800 watt microwave power
	Selects the kilogrammes for the programmes
	Selects automatic programmes
	Selects the memory

## Rotary selector

The rotary selector is used to alter the default values and set values.

The rotary selector is retractable. Press on the rotary selector to lock it in or out.

## Accessories


### Caution!

When removing dishes, make sure that the turntable does not move. Make sure that the turntable is properly locked. The turntable can turn left or right.

### The turntable

#### How to fit the turntable:

1. Place the turntable ring **a** in the recess in the cooking compartment.
2. Let the turntable **b** slot in place in the drive **c** in the centre of the cooking compartment floor.

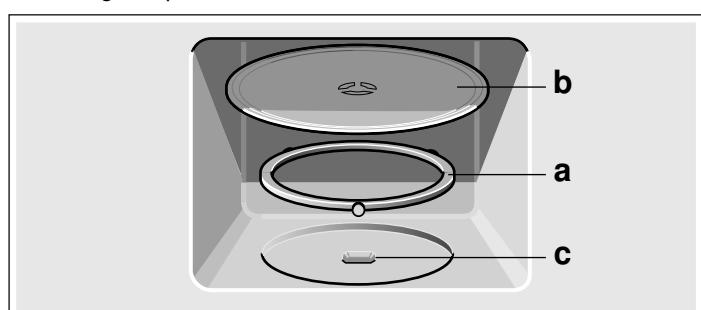

**Note:** Do not use the appliance if the turntable is not in place. Ensure that it is properly slotted into place. The turntable can turn clockwise or anti-clockwise.

### Special accessories

You can purchase special accessories from the after-sales service or specialist retailers. Please specify the HZ number. You will find a comprehensive range of products in our brochures and on the Internet. The availability of special accessories and whether it is possible to order them online may vary depending on your country. Please see the sales brochures for more details.

Steamer ovenware HZ 86 D 000

# Before using the appliance for the first time

Here you will find everything you need to do before using the microwave to prepare food for the first time. First read the section on Safety information.

## Setting the clock

When the appliance is first connected or after a power cut, three zeros will appear in the display panel.

1. Press the  button.

*12:00h* appears in the display and the indicator lamp above the  button lights up.

2. Set the clock using the rotary selector.

3. Press the  button again.

The current time is set.

### Hiding the clock

Press the  button and then press the .

The display is blank.

### Resetting the clock

Press the  button.

The time *12:00*. appears in the display. Then make the settings as described in steps 2 and 3.

### Change the clock, e.g. from summer to winter time

Set as described in point 1 to 3.

# The microwave

Microwaves are converted to heat in foodstuffs. You will find information about ovenware and how to set the microwave.

**Note:** In the Tested for you in our cooking studio section, you will find examples for defrosting, heating and cooking with the microwave oven.

Try out the microwave straight away. You could heat up a cup of water for your tea, for example.

Use a large cup without any decorative gold or silver trim and place a teaspoon in it. Place the cup containing the water on the turntable.

1. Press the 800 W button.

2. Set *1:30* minutes using the rotary selector.

3. Press the  button.

After 1 minute 30 seconds, an audible signal sounds. The water for the tea is hot.

As you are drinking your tea, please take time to read again the safety precautions that can be found at the front of the instruction manual. This is very important.

## Notes regarding ovenware

### Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

### Unsuitable ovenware

Metal ovenware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

### Caution!

Creation of sparks: metal – e.g. a spoon in a glass – must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

### Ovenware test

Do not switch on the microwave unless there is food inside. The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave:

1. Heat the empty ovenware at maximum power for  $\frac{1}{2}$  to 1 minute.

2. Check the temperature occasionally during that time.

The ovenware should still be cold or warm to the touch.

The ovenware is unsuitable if it becomes hot or sparks are generated.

## Microwave power settings

Use the button to set the desired microwave power.

90 W	For defrosting delicate foods
180 W	For defrosting and continued cooking
360 W	For cooking meat and heating delicate foods
600 W	For heating and cooking food
800 W	For heating liquids

**Note:** You can set the 800 W microwave power setting for 30 minutes, 600 W for 1 hour, the other power settings for 1 hour and 39 minutes respectively.


## Setting the microwave

Example: microwave power 600 watts, 5 minutes

1. Press the required microwave power setting.

The indicator light above the button lights up.

2. Set a cooking time using the rotary selector.

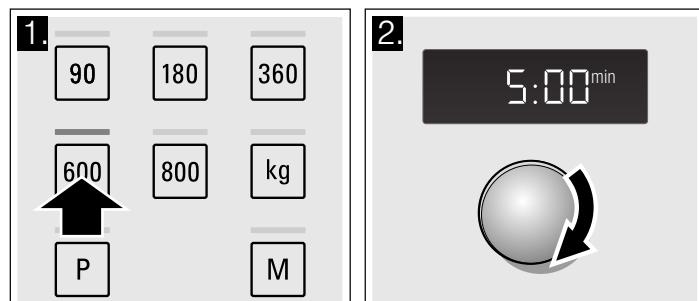

3. Press the  button.

The cooking time counts down in the display.

### The cooking time has elapsed

An audible signal sounds. Open the appliance door or press .

## Changing the cooking time

This can be done at any time. Change the cooking time using the rotary selector.

### Pausing

Press the **stop** button once or open the appliance door. Operation is suspended. The display above the **start** button flashes. After closing the door, press the **start** button again.

### Cancelling operation

Press the **stop** button twice or open the door and press the **stop** button once.

**Note:** You can also adjust the cooking time first and then the microwave power setting.

## Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

### Notes

- The cooking compartment remains cold during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

## Memory

You can save the settings for a dish in the memory and call it up again at any time.

The memory is useful for if you frequently prepare a specific dish.

### Saving memory settings

**Example: 360 W, 25 minutes**


1. Press the **M** button.

The indicator light above the button lights up.

2. Press the required microwave power setting.

The indicator light above the button lights up and 1:00 min appears in the display.

3. Set the cooking time using the rotary selector.

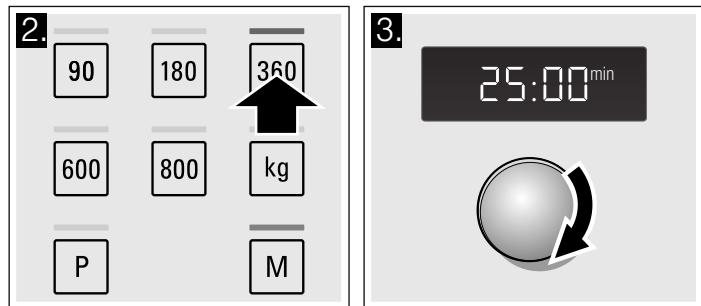

4. Confirm by pressing the **M** button.

The clock reappears. The setting is saved.

### Notes

- You can save the memory settings and start the appliance immediately. When finishing, instead of pressing **M**, press **start**.

■ You cannot save several microwave power settings one after the other.

■ You cannot save automatic programmes.

■ **Saving a new setting in the memory:** press the **M** button. The old settings appear. Save the new programme as described in steps 1 to 4.

### Starting the memory

It is very easy to start the saved programme. Place your meal into the appliance. Close the appliance door.

1. Press the **M** button.

The saved settings are displayed.

2. Press the **start** button.

The cooking time counts down in the display.

### The cooking time has elapsed

An audible signal sounds. Open the appliance door or press **stop**. The clock reappears.

### Pausing

Press the **stop** button once or open the appliance door. Operation is suspended. The display above the **start** button flashes. After closing the door, press the **start** button again.

### Cancelling operation

Press the **stop** button twice or open the door and press the **stop** button once.

## Changing the signal duration

You will hear an audible signal when the appliance is switched off. You can change the duration of the signal.

To do so, press the **start** button for approx. 6 seconds.

The new signal duration is adopted.

The clock reappears.

The following are possible:

Short signal duration - 3 tones

Long signal duration - 30 tones.

# Care and cleaning

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

## **⚠ Risk of short circuit!**

Never use high-pressure cleaners or steam cleaners to clean the oven.

## **⚠ Risk of burns!**

Never clean the appliance immediately after switching off. Let the appliance cool down.

## **⚠ Risk of electric shock!**

Do not immerse the appliance in water or clean under a jet of water.

Surfaces are different, and damage caused by using the wrong cleaning agent can be avoided by observing the information in the table below.

### **Do not use**

- sharp or abrasive cleaning agents.  
The surface could be damaged. If such a substance comes into contact with the front of the appliance, wash it off immediately with water.
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers for cleaning the seal.
- hard scouring pads or cleaning sponges.  
Wash new sponge cloths thoroughly before use.
- cleaning agents with high concentrations of alcohol.

## Cleaning agents

### **Caution!**

Before cleaning, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Clean the outside of the appliance and the cooking compartment with a damp cloth and mild detergent. Dry with a clean cloth.

Area	Cleaning agents
Appliance front	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or metal or glass scrapers for cleaning.
Appliance front with stainless steel	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist shops. Do not use glass cleaners or metal or glass scrapers for cleaning.
Cooking compartment made of stainless steel	Hot soapy water or a vinegar solution: Clean with a dish cloth and dry with a soft cloth. If the oven is very dirty: use oven cleaner, but only when cooking compartment is cold. It is best to use a stainless-steel sponge. Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry thoroughly.
Recess in cooking compartment	Damp cloth: Ensure that no water seeps through the turntable drive into the appliance interior.
Turntable and turntable ring	Hot soapy water: When putting the turntable back in place, make sure it slots in correctly.
Door panels	Glass cleaner: Clean with a dish cloth. Do not use a glass scraper.
Seal	Hot soapy water: Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning.

# Malfunction table

Malfunctions often have simple explanations. Please refer to the malfunction table before calling the after-sales service.

If a meal does not turn out exactly as you wanted, refer to the Tested for you in our cooking studio section, where you will find plenty of cooking tips and tricks.

### Troubleshooting

Error message	Possible cause	Remedy/note
The appliance does not work	The plug is not plugged in.	Plug the plug in
	Power failure	Check whether the kitchen light works.
	Faulty circuit breaker	Look in the fuse box to make sure that the circuit breaker for the appliance is in working order.
	Faulty operation	Switch off the circuit breaker in the fuse box. Switch it back on after approx. 10 seconds.
Three zeros light up in the display.	Power failure	Reset the time.

## **⚠ Risk of electric shock!**

Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers.

You can take remedial action yourself for some error messages.

Error message	Possible cause	Remedy/note
The appliance is not in operation. A cooking time appears in the display.	The rotary selector was actuated accidentally.	Press the <b>stop</b> button.
	The <b>start</b> button was not pressed after setting.	Press the <b>start</b> button or cancel the setting with the <b>stop</b> button.
The microwave does not work.	The door was not fully closed.	Check whether food residue or debris is trapped in the door.
	The <b>start</b> button was not pressed.	Press the <b>start</b> button.
It takes longer than before for the food to heat up	The microwave power level setting was too low.	Select a higher microwave power setting.
	A larger amount of food than usual has been placed in the appliance.	Double the amount – double the time.
	The food was colder than usual.	Stir or turn the food during cooking.
The turntable makes a scratching or grinding noise.	Dirt or debris in the area around the turntable drive.	Clean the roller ring and the recess in the cooking compartment.
Microwave operation has been cancelled for no apparent reason.	The microwave has a fault.	If this fault occurs repeatedly, please call the after-sales service.
"M" appears in the display.	The appliance is in demo mode.	Press and hold the <b>start</b> button and the <b>stop</b> button for approx. 7 seconds. Demo mode is deactivated.

## After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

### E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate bearing these numbers can be found on the right-hand side when you open the appliance door. To save time, you can make a note of the number of your appliance and the telephone number of the after-sales service in the space below, should it be required.

**E no.** \_\_\_\_\_ **FD no.** \_\_\_\_\_

**After-sales service** ☎ \_\_\_\_\_

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

**GB** 0344 892 8999  
Calls charged at local or mobile rate.

**IE** 01450 2655  
0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

This appliance corresponds to the standards EN 55011 and CISPR 11. It is a Group 2, Class B product.

Group 2 means that microwaves are produced for the purpose of heating food. Class B states that the appliance is suitable for private households.

### Technical data

Input voltage	220-230 V, 50 Hz
Power consumption	1270 W
Maximum output power	900 W
Microwave frequency	2450 MHz
Fuse	16 A
Dimensions (HxWxD)	
- appliance	382 mm x 594 mm x 319 mm
- cooking compartment	221 mm x 308 mm x 298 mm
VDE approved	yes
CE mark	yes

### Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

# Automatic programmes

You can use the automatic programmes to defrost food with the greatest of ease and prepare dishes quickly and easily. You select the programme and enter the weight of your food. The automatic programme makes the optimum setting. You can select from 7 programmes.

## Setting a programme



Once you have selected a programme, make settings as follows:

1. Press the **P** button repeatedly until the required programme number appears.

The indicator light above the button lights up.


2. Press the **kg** button.

The indicator light above the button lights up and 1:00 min appears in the display.

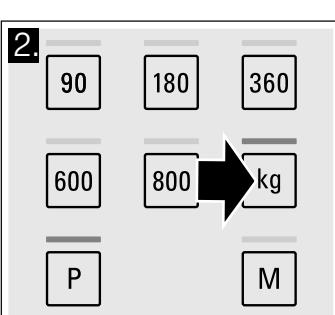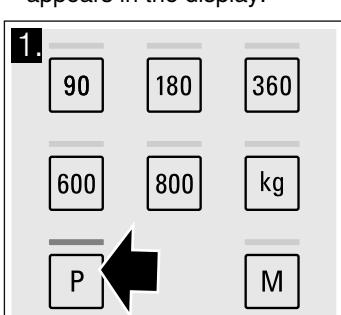

3. Turn the rotary selector to specify the weight of the dish.

4. Press the **start** button.

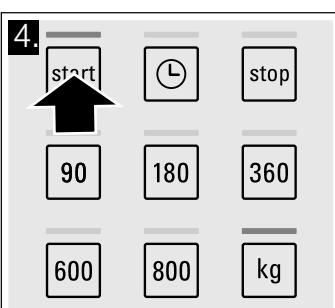

You will see the cooking time for the programme counting down.

### The cooking time has elapsed

An audible signal sounds. Open the appliance door or press **stop**.

The clock reappears.

### Correction

Press the **stop** button twice and reset.

### Pausing

Press the **stop** button once or open the appliance door. Operation is suspended. The display above the **start** button flashes. After closing the door, press the **start** button again.

### Cancelling operation

Press the **stop** button twice or open the door and press the **stop** button once.

### Notes

- For some programmes, an audible signal sounds after a certain time. Open the appliance door and stir the food or turn the meat or poultry. After closing the door, press the **start** button again.
- You can query the programme number and weight using **P** or **kg**. The queried value is shown for 3 seconds in the display.

## Defrosting using the automatic programmes

You can use the 4 defrosting programmes to defrost meat, poultry and bread.

### Notes

#### ■ Preparing food

Use food that has been frozen at -18 °C and stored in portion-sized quantities that are as thin as possible.

Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme.

- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.

#### ■ Ovenware

Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover.

#### ■ Resting time

The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand.

After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

#### ■ Signal

For some programmes, a signal sounds after a certain time. Open the appliance door and separate the food out or turn the meat or poultry. Close the door and press the Start button.

Programme no.	Weight range in kg		
Defrost			
P 01	Minced meat	0.20 - 1.00	
P 02	Pieces of meat	0.20 - 1.00	
P 03	Chicken, chicken pieces	0.40 - 1.80	
P 04	Bread	0.20 - 1.00	

## Cooking with the automatic programmes

With the 3 cooking programmes, you can cook rice, potatoes or vegetables.

### Notes

#### ■ Ovenware

The food must be cooked in microwaveable cookware with a lid. For rice, you should use a large, deep dish.

#### ■ Preparing food

Weigh out the food. You need to know the weight to set the programme.

##### Rice:

Do not use boil-in-the-bag rice. Add the required amount of water, as specified on the packaging. This is usually two or three times the quantity of rice.

##### Potatoes:

For boiled potatoes, cut the fresh potatoes into small, even-sized pieces. Add one tablespoon of water for each 100 g boiled potatoes, and a little salt.

##### Fresh vegetables:

Weigh out the fresh, trimmed vegetables. Cut the vegetables into small, even-sized pieces. Add a tbsp water for each 100 g vegetables.

#### ■ Signal

While the programme is running, a signal sounds after some time. Stir the food.

### ■ Resting time

Once the programme has finished, stir the food again. You should leave it to stand for another 5 to 10 minutes until it reaches an even temperature.

The cooking result will depend on the quality and consistency of the food.

Programme no.	Weight range in kg	
Cooking		
P 05	Rice	0.05 - 0.2
P 06	Potatoes	0.15 - 1.0
P 07	Vegetables	0.15 - 1.0

## Tested for you in our cooking studio

Here you will find a selection of recipes and the ideal settings for them. We show you which microwave power setting is best suited to your dish. There are also tips about ovenware and preparation methods.

### Information regarding the tables

The following tables provide you with numerous options and settings for the microwave.

The times specified in the tables are only guidelines. They may vary according to the ovenware used, the quality, temperature and consistency of the food.

Time ranges are often specified in the tables. Set the shortest time first and then extend the time if necessary.

It may be that you have different quantities from those specified in the tables. A rule of thumb can be applied:

Double the amount - almost twice the cooking time

Half the amount - half the cooking time.

Always place the ovenware on the turntable.

### Defrost

#### Notes

- Place the frozen food in an open container on the turntable.
- Delicate parts such as the legs and wings of chicken or fatty outer layers of roasts can be covered with small pieces of aluminium foil. The foil must not touch the oven walls. You can remove the foil half way through the defrosting time.
- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.
- Turn or stir the food once or twice during the defrosting time. Large pieces of food should be turned several times.
- Leave defrosted items to stand at room temperature for a further 10 to 20 minutes so that the temperature is even throughout. The giblets can be removed from poultry at this point. The meat can still be further prepared, even if it has a small frozen core.

Defrost	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Whole pieces of meat (beef, veal or pork - on the bone or boned)	800 g 1 kg 1.5 kg	180 W, 15 mins + 90 W, 10-20 mins 180 W, 20 mins + 90 W, 15-25 mins 180 W, 30 mins + 90 W, 20-30 mins	-
Meat in pieces or slices of beef, veal or pork	200 g 500 g 800 g	180 W, 2 mins + 90 W, 4-6 mins 180 W, 5 mins + 90 W, 5-10 mins 180 W, 8 mins + 90 W, 10-15 mins	Separate any defrosted parts when turning
Minced meat, mixed	200 g 500 g 800 g	90 W, 10 mins 180 W, 5 mins + 90 W, 10-15 mins 180 W, 8 mins + 90 W, 10-20 mins	Freeze food flat if possible Turn several times, remove any defrosted meat
Poultry or poultry portions	600 g 1.2 kg	180 W, 8 mins + 90 W, 10-15 mins 180 W, 15 mins + 90 W, 20-25 mins	-
Fish fillet, fish steak or slices	400 g	180 W, 5 mins + 90 W, 10-15 mins	Separate any defrosted parts
Vegetables, e.g. peas	300 g	180 W, 10-15 mins	-
Fruit, e.g. raspberries	300 g 500 g	180 W, 7-10 mins 180 W, 8 mins + 90 W, 5-10 mins	Stir carefully during defrosting and separate any defrosted parts
Butter, defrosting	125 g 250 g	180 W, 1 min. + 90 W, 2-3 mins 180 W, 1 min + 90 W, 3-4 mins	Remove all packaging
Loaf of bread	500 g 1 kg	180 W, 6 mins + 90 W, 5-10 mins 180 W, 12 mins + 90 W, 10-20 mins	-
Cakes, dry, e.g. sponge cake	500 g 750 g	90 W, 10-15 mins 180 W, 5 mins + 90 W, 10-15 mins	Only for cakes without icing, cream or crème pâtissière, separate the pieces of cake
Cakes, moist, e.g. fruit flan, cheese-cake	500 g 750 g	180 W, 5 mins + 90 W, 15-20 mins 180 W, 7 mins + 90 W, 15-20 mins	Only for cakes without icing, cream or gelatine

### Defrosting, heating up or cooking frozen food

#### Notes

- Take ready meals out of the packaging. They will heat up more

quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up.


- Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the ovenware. Different foodstuffs should not be placed in layers on top of one another.
- Always cover the food. If you do not have a suitable cover for your ovenware, use a plate or special microwave foil.
- Stir or turn the food 2 or 3 times during cooking.
- After heating, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.
- This will help the food retain its own distinct taste, so it will require less seasoning.

Defrosting, heating up or cooking frozen food	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Menu, plated meal, ready meal (2-3 components)	300-400 g	600 W, 8-11 mins	-
Soup	400 g	600 W, 8-10 mins	-
Stews	500 g	600 W, 10-13 mins	-
Slices or pieces of meat in sauce, e.g. goulash	500 g	600 W, 12-17 mins	Separate the pieces of meat when stirring
Fish, e.g. fillet steaks	400 g	600 W, 10-15 mins	Add water, lemon juice or wine as desired
Bakes, e.g. lasagne, cannelloni	450 g	600 W, 10-15 mins	-
Side dishes, e.g. rice, pasta	250 g	600 W, 2-5 mins	Add a little liquid
	500 g	600 W, 8-10 mins	
Vegetables, e.g. peas, broccoli, carrots	300 g	600 W, 8-10 mins	Pour water into the dish so that it covers the base
	600 g	600 W, 14-17 mins	
Creamed spinach	450 g	600 W, 11-16 mins	Cook without additional water

## Heating food

### ⚠ Risk of scalding!

There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only moves a little, the hot liquid can suddenly boil over and spatter. When heating liquids, always place a spoon in the container. This will prevent delayed boiling.

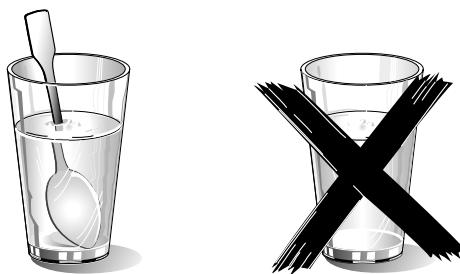

### Caution!

Metal - e.g. a spoon in a glass - must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.

### Notes

- Take ready meals out of the packaging. They will heat up more quickly and evenly in microwaveable ovenware. The different components of the meal may not require the same amount of time to heat up .
- Always cover the food. If you do not have a suitable cover for your container, use a plate or special microwave foil.
- Stir or turn the food several times during the heating time. Check the temperature.
- After heating, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.

Heating food	Weight	Microwave power setting in watts, cooking time in minutes	Notes
Menu, plated meal, ready meal (2-3 components)	350-500 g	600 W, 4-8 mins	-
Drinks	150 ml	800 W, 1-2 mins	Place a spoon in the glass; do not overheat alcoholic drinks; check during heating
	300 ml	800 W, 2-3 mins	
	500 ml	800 W, 3-4 mins	
Baby food, e.g. baby bottle	50 ml	360 W, approx. ½ min	No teats or lids. Always shake well after heating. You must check the temperature.
	100 ml	360 W, approx. 1 min.	
	200 ml	360 W, 1½ min	
Soup 1 cup	200 g	600 W, 2-3 mins	-
Soup, 2 cups	400 g	600 W, 4-5 mins	-
Meat in sauce	500 g	600 W, 8-11 mins	Separate the slices of meat
Stew	400 g	600 W, 6-8 mins	-
	800 g	600 W, 8-11 mins	-

<b>Heating food</b>	<b>Weight</b>	<b>Microwave power setting in watts, cooking time in minutes</b>	<b>Notes</b>
Vegetables, 1 portion	150 g	600 W, 2-3 mins	Add a little liquid
Vegetables, 2 portions	300 g	600 W, 3-5 mins	

## Cooking food

### Notes

■ Food which lies flat will cook more quickly than food which is piled high. You should therefore distribute the food so that it is as flat as possible in the ovenware. Different foodstuffs should not be placed in layers on top of one another.

- Cook the food in ovenware with a lid. If you do not have a suitable lid for your ovenware, use a plate or special microwave foil.
- This will help the food retain its own distinct taste, so it will require less seasoning.
- After cooking, allow the food to stand for a further 2 to 5 minutes so that it can achieve an even temperature.
- Always use an oven cloth or oven gloves when removing plates from the oven.

<b>Cooking food</b>	<b>Weight</b>	<b>Microwave power setting in watts, cooking time in minutes</b>	<b>Notes</b>
Meat loaf	750 g	600 W, 20-25 mins	Cook uncovered
Whole chicken, fresh, no giblets	1.2 kg	600 W, 25-30 mins	Turn halfway through the cooking time
Fresh vegetables	250 g	600 W, 5-10 mins	Cut vegetables into pieces of equal size.
	500 g	600 W, 10-15 mins	Add 1 to 2 tbsp water per 100 g of vegetables. Stir during cooking
Potatoes	250 g	600 W, 8-10 mins	Cut potatoes into pieces of equal size;
	500 g	600 W, 11-14 mins	Add 1 to 2 tbsp water for every 100 g.
	750 g	600 W, 15-22 mins	Stir during cooking
Rice	125 g	800 W, 5-7 mins + 180 W, 12-15 mins	Add double the quantity of liquid.
	250 g	800 W, 6-8 mins + 180 W, 15-18 mins	
Sweet foods, e.g. blancmange (instant)	500 ml	600 W, 6-8 mins	Stir the custard pudding thoroughly 2 to 3 times during cooking using an egg whisk.
Fruit, compote	500 g	600 W, 9-12 mins	-

## Microwave tips

You cannot find any information about the settings for the quantity of food you have prepared.

Increase or reduce the cooking times using the following rule of thumb:

Double the amount = almost double the cooking time

Half the amount = half the cooking time

The food has become too dry.

Next time, set a shorter cooking time or select a lower microwave power setting. Cover the food and add more liquid.

When the time has elapsed, the food is not defrosted, hot or cooked.

Set a longer time. Large quantities and food which is piled high require longer times.

When the time has elapsed, the food is overheated at the edge but not done in the middle.

Stir it during the cooking time and next time, select a lower microwave power setting and a longer cooking time.

After defrosting, the poultry or meat is defrosted on the outside but not defrosted in the middle.

Next time, select a lower microwave power setting. If you are defrosting a large quantity, turn it several times.

## Condensation

Condensation may appear on the door window, interior walls and floor. This is normal. This does not affect how the microwave operates. Wipe away the condensation after cooking.

# **Test dishes in accordance with EN 60705**

The quality and correct operation of microwave appliances are tested by testing institutes using these dishes.

In accordance with EN 60705, IEC 60705, DIN 44547 and EN 60350 (2009)

## **Cooking and defrosting with microwave**

### **Microwave cooking**

Dish	Microwave setting (watts) and cooking time in minutes	Notes
Custard, 565 g	180 watts, 25-30 mins + 90 watts, 20-25 mins	Place the 20 x 17 cm Pyrex dish on the turntable.
Sponge	600 watts, 8-10 mins	Place the Ø 22 cm Pyrex dish on the turntable.
Meatloaf	600 watts, 20-25 mins	Place the Pyrex dish on the turntable.

### **Microwave defrosting**

Dish	Microwave setting (watts) and cooking time in minutes	Note
Meat	180 watts, 5-7 mins + 90 watts, 10-15 mins	Place the Ø 22 cm Pyrex dish on the turntable.

重要安全資訊 .....	15	售後服務 .....	22
損壞原因 .....	17	產品編號及生產編號 .....	22
安裝和連線 .....	17	技術規格 .....	22
控制面板 .....	18	環保廢棄管理 .....	22
旋鈕 .....	18	自動程序 .....	22
配件 .....	18	設定程序 .....	22
首次使用前 .....	19	使用自動程序解凍 .....	23
設定時鐘 .....	19	使用自動程序烹調 .....	23
微波烹調 .....	19	建議的烹調時間 .....	23
關於器皿的說明 .....	19	關於表格的資訊 .....	23
微波功率設定 .....	19	解凍 .....	23
微波爐設定 .....	19	解凍、加熱或烹調冷凍食物 .....	24
散熱風扇 .....	19	加熱食物 .....	24
記憶功能 .....	20	烹調食物 .....	25
儲存記憶設定 .....	20	微波提示 .....	25
啟動記憶功能 .....	20	符合 EN 60705 規定的測試餐具 .....	26
變更訊號聲長度 .....	20	使用微波爐烹調及解凍 .....	26
護理和清潔 .....	20		
清潔劑 .....	21		
故障一覽表 .....	21		

更多關於產品、配件、更換零件和服務的資訊，請瀏覽：  
[www.siemens-home.bsh-group.com](http://www.siemens-home.bsh-group.com) 以及網上商店  
[www.siemens-home.bsh-group.com/eshops](http://www.siemens-home.bsh-group.com/eshops)

## ⚠ 重要安全資訊

請仔細閱讀本說明書中的指示，才可以安全並正確地使用本產品。請妥善保管說明手冊及安裝說明，以便您在日後或供下一位使用者查閱。

微波烤爐必須完整地安裝於廚房中。請遵照特定的安裝說明。

打開包裝後，請檢查微波烤爐有否損壞。如微波烤爐在運送過程中受損，請切勿安裝。

只有持牌的專業人員才可以不經插頭來連接電器。保養不包括因不當連接而造成的損壞。

本產品僅限於家居中使用。只限預備食物及飲料之用。操作時務必有人在場看管。僅供室內使用。

本爐具僅適用於最高海拔 4000 米以下地區。

8 歲以上兒童、身體、感官或心智能力欠佳者、或欠缺使用經驗與知識者，在使用本設備時，須由負責其安全並明瞭相關風險之人士從旁監督或指導，以安全地使用設備。

不可讓兒童將此設備當成玩具。除非有人監督，否則 8 歲以下兒童不可清潔本設備或進行一般修護工作。

8 歲以下的兒童應與設備和電源線保持安全的距離。

確定爐腔中的配件放置正確。請參閱說明手冊中的配件說明。

### 火災風險！

- 本電器會在使用時變得非常灼熱。如果電器安裝在帶有裝飾門的安裝櫥櫃中，當裝飾門關閉時熱能將會累積。僅可在裝飾門開啟時操作本電器。
- 存放在爐腔中的易燃物品，可能會引致火災。切勿在爐腔中存放易燃物品。如果爐內冒煙，切勿開啟設備機門。請關閉電器並拔下插頭，或關閉保險絲盒內的斷路器。
- 在預定用途範圍之外使用本微波烤爐十分危險，而且可能令設備損壞。  
禁止以下用途：烘乾食物或衣服，烘暖拖鞋、填充枕頭、海綿，濕潤衣物或類似物品。  
例如，即使已結束加熱數小時，暖腳拖鞋或填充枕頭仍有可能會起火。本電器只可用於預備食物及飲料。
- 食物可能會起火。切勿將食物連同保溫包裝一起加熱。  
加熱存放於塑膠、紙類或其他易燃材質容器的食物時，請勿離開。  
切勿選擇過高的微波功率或過長的時間設定。請遵從本使用說明書內提供的資訊。  
切勿利用微波功能抽去食物水分。

切勿以高微波功率或長時間解凍或加熱含水量低的食物（如麵包）。

- 食用油可能會起火。切勿使用微波爐單獨加熱食用油。

### 爆炸風險！

密封容器內的液體或其他食物可能會爆炸。切勿加熱密封容器內的液體或其他食物。

### 嚴重危害健康的風險！

- 不當地清潔或會損害電器表面。微波能量可能會外洩。定期清潔電器，並立即清除食物殘渣。經常保持爐腔、爐門密封條、爐門及門擋清潔；同時請參閱護理和清潔章節。
- 若爐腔門或爐門密封條受損，微波能量可能就會外洩。如果爐腔門或爐門密封條受損，切勿使用電器。請聯絡售後服務中心。
- 微波烤爐若無外殼保護，微波能量將會外洩。切勿移除外殼。若需維護或維修，請聯絡售後服務中心。

### 觸電風險！

- 不當維修會造成危險。只能由受過訓練的售後服務技術人員維修或更換受損的電線。如果設備出現問題，請拔掉設備的主電源，或關閉保險絲盒內的斷路器。請聯絡售後服務中心。請聯絡售後服務中心。
- 電器的電線絕緣部分會因接觸電器高溫部分而溶化。切勿讓電線接觸電器高溫的部分。
- 請勿使用任何高壓清潔器或蒸氣清洗機，以免觸電。
- 滲入的濕氣可能導致觸電。切勿將電器置於極度高溫或潮濕的環境中。僅供室內使用。
- 損壞的設備可能導致觸電。請勿開動損壞的電器。請拔掉設備插頭或關閉保險絲盒內的斷路器。請聯絡售後服務中心。請聯絡售後服務中心。
- 微波爐是高電壓電器。切勿移除外殼。
- 這項電器配有歐盟規格插頭。為了確保接在丹麥式插座的保險接地功能，這項電器必須要使用合適的轉接頭。這個轉接頭（容許之最大值 13 安培）可以在售後服務中取得（備用品號碼 623333）。

### 灼傷風險！

- 設備會在使用時變得非常灼熱。切勿觸碰爐腔內壁或加熱元件。請務必讓電器冷卻。請勿讓兒童走近此設備。
- 配件和烤爐器皿的溫度極高。務必戴上隔熱手套後，才可從爐腔取出配件或烤爐器皿。
- 在高溫的烹調空間內，氯化酒精可能會起火。切勿烹調含有大量高酒精濃度飲料的食

物。請僅使用含有少量高酒精濃度的飲料。請小心打開機門。

- 加熱期間或甚至在加熱後，需削皮或帶皮的食物可能會爆裂或爆開。切勿烹煮帶殼蛋類或重新加熱水煮蛋類。切勿烹煮貝類或甲殼類食物。請務必在烘烤或烹煮水波蛋時戳破蛋黃。需削皮或是帶皮的食物（例如蘋果、馬鈴薯和香腸）的皮可能會爆裂。請在加熱前先刺破果皮。
- 嬰兒食品中的熱度分佈並不均勻。切勿使用密封容器加熱嬰兒食品。必須除下蓋子或奶嘴。攪拌或搖晃已加熱的食品。檢查食物溫度後，才將食物交給孩童。
- 食物加熱後會散發熱氣。器皿可能變熱。戴上隔熱手套後，方可從爐腔取出配件或器皿。
- 真空包裝袋可能會在加熱過程中爆裂。請務必遵守包裝上的指示。戴上隔熱手套後，方可從爐腔取出菜餚。

### 灼傷風險！

- 開啟電器爐門時，熱氣可能會一下子竄出。請小心打開機門。請勿讓兒童走近此設備。
- 在高溫爐腔內的水分可能會轉化成高溫水蒸汽。切勿將水倒入高溫的爐腔中。
- 液體加熱時，可能會發生延遲沸騰的狀況。意思是，雖然液體已達到沸騰的溫度，但表面仍未有一般常見的的蒸汽氣泡。此時，即使容器稍微震動，都可能令滾燙的液體突然沸騰和飛濺。加熱時，請在容器中放入一隻湯匙。這可防止出現延遲沸騰的情況。

### 受傷風險！

- 爐門玻璃上的刮痕可能會變成裂痕。切勿使用玻璃刮刀、強效或腐蝕性的清潔用品或清潔劑。
- 不適合的器皿可能會出現龜裂。陶瓷器皿在手柄或蓋子上可能有些小孔洞。這些孔洞隱藏了洞下的空隙。濕氣如果穿透這些空隙，可能會令器皿龜裂。只可使用適合放入微波爐的器皿。
- 如電器僅使用微波模式，放置於內部由金屬製成的廚具和容器在電器運作時可能會產生火花。這會導致電器損壞。電器僅使用微波模式時切勿使用金屬容器。

## 損壞原因

### 注意！

- 非常骯髒的密封條：若密封條過分骯髒，運作期間就不能關緊爐門。相鄰機組的正面可能會受損。請務必保持密封條清潔。
- 切勿開動空置的微波爐：若未在爐腔中放入食物而開動微波爐，將令電器過度負荷。請務必在爐腔中放入食物後，才開啟電器電源。唯一例外情況是進行短時間的器皿測試（請參閱「微波烹調，適合的器皿」）。
- 微波烹調爆谷：切勿設定過高的微波功率。使用不高於 600 瓦的功率設定。請將爆谷袋放在玻璃盤上。如果過載，盤子可能會跳動。
- 切勿讓濺灑出來的液體透過轉盤驅動器進入電器內部。監控烹調過程。一開始先選擇較短的烹調時間，再按需要增加烹調時間。
- 切勿使用未安裝轉盤的微波爐。

- 產生火花：金屬（如玻璃杯中的湯匙）必須與爐壁和爐門內側保持至少 2 cm 的距離。火花可能會對爐門內側的玻璃造成無法修復的損害。
- 金屬箔紙容器：切勿在電器中使用金屬箔紙容器。產生的火花會損壞電器。
- 開啟爐門散熱。：請在爐門關閉的情況下讓爐腔散熱。切勿將物品夾在機門上。即使爐門只打開些微縫隙，與前方相鄰的組件在一段時間後仍可能會損壞。
- 爐腔內的凝結：爐門玻璃、內壁和底面可能出現凝結的水氣。這是正常現象，不會對微波運作產生不良的影響。每次烹調後擦拭凝結水氣，可以避免腐蝕。

## 安裝和連線

本產品僅限於家居中使用。

本電器只可安裝於廚房中。

請遵守特殊安裝說明。

本電器可裝在 60 cm 闊的牆櫃裏（最少 30 cm 深，並離地 85 cm）。


本電器使用插頭連接的插座，須已連接到適當接地。保險絲防護必須定為 10 安培（L 或 B 斷路器）。主電源電壓必須符合額定銘牌上指定的電壓。

插座必須裝好，電源線只可由合資格的電器人員更換。安裝後如無法碰觸到插頭，則安裝處必須要有一個全針斷開的裝置，接觸距離最少要有 3 mm。

切勿使用多插頭、插頭桿及延長線。過載或會引致火災。

# 控制面板

下圖是控制面板的總覽。詳細內容視乎電器型號不同。

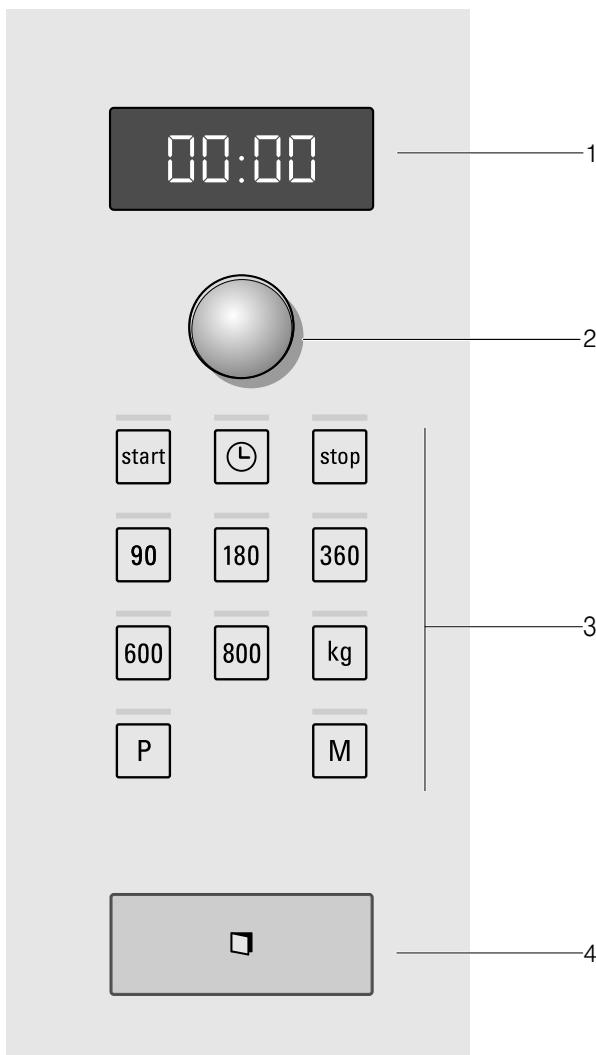

## 旋鈕

旋鈕用於變更預設值和設定值。

旋鈕本身也是按鈕。按下旋鈕以鎖定或解除鎖定。

## 配件


### 注意！

取出料理時，請注意不要移動到轉盤。確保轉盤仍保持鎖定。轉盤可以左右旋轉。

### 轉盤

#### 如何安裝轉盤：

1. 將轉環 **a** 置於爐腔內的凹陷處。
2. 將轉盤 **b** 插槽放在位於爐腔底部中央的驅動器 **c** 處。

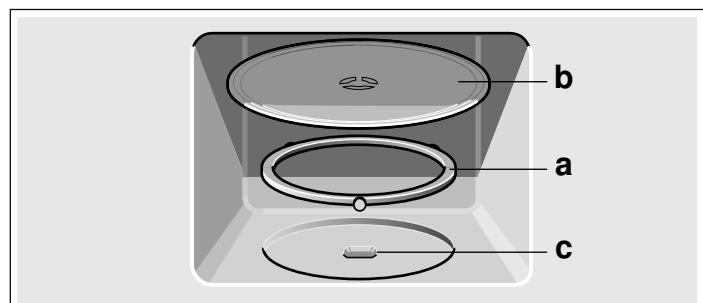

**提示：**轉盤未定位的話，切勿使用電器。確認轉盤已定位。轉盤可以順時針或逆時針的方向轉動。

## 特殊配件

可向售後服務中心或是專業零售商購買特殊配件。請指明 HZ 編號。我們的產品目錄和網上都有完整的產品系列。特殊配件是否可用或是否可在網上訂購，視乎所處國家 / 地區而定。若需詳細資訊，請查看產品目錄。

蒸鍋器皿

HZ 86 D 000

**1** 顯示屏  
用於顯示時鐘和烹調時間

**2** 旋鈕  
用於設定時鐘和烹調時間，或設定自動程序

**3** 按鈕

**4** 開啟爐門按鈕

### 按鈕

### 使用

[start] 啓動操作

[clock] 設定時鐘

[stop] 停止操作

90 選擇 90 瓦微波功率

180 選擇 180 瓦微波功率

360 選擇 360 瓦微波功率

600 選擇 600 瓦微波功率

800 選擇 800 瓦微波功率

[kg] 針對程序選擇公斤數

[P] 選擇自動程序

[M] 選擇記憶功能

# 首次使用前

此處提供你於首次使用微波爐製備食物時，所需進行事項的完整資訊。請先詳細閱讀重要安全資訊章節。

## 設定時鐘

首次連接電器電源或在斷電後恢復時，顯示面板會出現三個 0。

1. 按下 **(C)** 按鈕。

**12:00h** 顯示在顯示屏上，且 **(C)** 按鈕上的指示燈亮起。

2. 使用旋鈕設定時鐘。

3. 再次按下 **(C)** 按鈕。

時間已設定完成。

## 隱藏時鐘

依序按下 **(C)** 按鈕和 **stop** 按鈕。

顯示屏即變成空白。

## 重設時鐘

按下 **(C)** 按鈕。

然後時間 **12:00** 會顯示在顯示屏上。再按步驟 2 和 3 所述進行設定。

## 變更時鐘（例如從夏令時間變為冬令時間）

按步驟 1 到 3 所述進行設定。

# 微波烹調

微波在食品中轉換為熱能。此處將提供關於器皿及微波功率設定的資訊。

**提示：**在建議的烹調時間章節，可以找到使用微波爐解凍、加熱和烹調食物等有關的資訊。

立即試用微波爐。例如，你可以加熱泡茶用的水。

使用無金邊或銀邊裝飾的大型杯具，並放入一隻湯匙。將裝水的杯子放置在轉盤上。

1. 按下 800 瓦按鈕。

2. 使用旋鈕設定 **1:30** 分鐘。

3. 按下 **start** 按鈕。

1 分 30 秒後，訊號聲響起。泡茶水已加熱。

喝茶時，請花點時間詳讀使用說明書前面的安全注意事項。這些資訊非常重要。

## 關於器皿的說明

### 適用的器皿

適用於微波爐的餐碟耐熱，由玻璃、玻璃陶瓷、瓷、陶瓷或耐熱塑料所製。這些材料可以讓微波順利穿透。

也可以使用正式餐碟，以節省更換餐碟的時間。除非製造商保證，否則不要將有金、銀裝飾邊緣的器皿放入微波爐中使用。

### 不適用的器皿

不能使用金屬器皿。金屬無法讓微波穿透，無法加熱金屬容器內的食物。

### 注意！

產生火花：金屬（如玻璃杯中的湯匙）必須與爐壁和爐門內側保持至少 2 cm 的距離。火花可能會破壞爐門內側的玻璃。

### 器皿測試

爐內如無食物，切勿開啟微波爐電源。以下器皿測試是唯一的例外。

若不確定器皿是否適用於微波爐，請執行下列測試：

1. 以最強的功率加熱空器皿  $\frac{1}{2}$  分鐘到 1 分鐘。

2. 期間不時檢查溫度。

觸碰時，器皿應仍然是冷或微溫。

如果器皿變得極熱或產生火花，即表示不適用於微波爐。

## 微波功率設定

使用按鈕設定所要的微波功率。

**90 瓦** 適合解凍精緻食品

**180 瓦** 適合解凍和持續烹調食物

**360 瓦** 適合烹調肉類和加熱精緻食物

**600 瓦** 適合加熱和烹調食物

**800 瓦** 適合加熱液體

**提示：**你可將 800 瓦微波功率設定設為 30 分鐘、600 瓦為 1 小時，其餘的功率設定分別為 1 小時及 39 分鐘。


## 微波爐設定

範例：微波功率 600 瓦、5 分鐘

1. 按下所需的微波功率設定。

按鈕上方的指示燈亮起。

2. 利用旋鈕設定烹調時間。

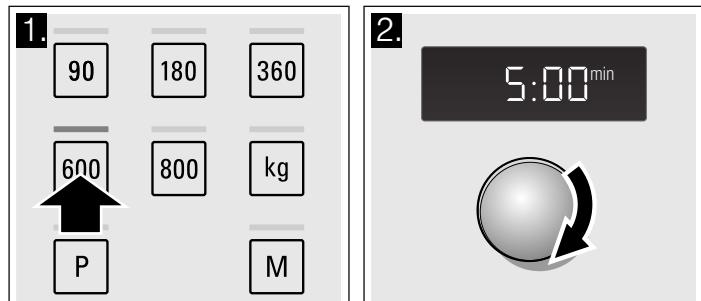

3. 按下 **start** 按鈕。

顯示屏會顯示剩餘的烹調時間。

### 烹調時間結束後

訊號聲響起。開啟電器機門或按下 **stop**。時鐘隨即重新顯示。

### 變更烹調時間

您可隨時變更烹調時間。請使用旋鈕變更烹調時間旋鈕。

### 暫停

按下 **stop** 按鈕或開啟電器機門。操作隨即暫停。**start** 按鈕上方的顯示屏會閃爍。關閉電器機門後，再次按下 **start** 按鈕。

### 取消操作

連按兩次 **stop** 按鈕，或開啟電器機門後，再按下 **stop** 按鈕。

**提示：**您亦可先調整烹調時間，再調整微波功率設定。

## 散熱風扇

本電器配備散熱風扇。即使已關閉微波爐電源，風扇可能仍會轉動。

## 提示

- 爐腔在微波運作期間維持冷卻。散熱風扇將持續開啟。即使微波運作已結束，風扇可能仍會轉動。
- 爐門玻璃、內壁和底面可能出現凝結的水氣。這是正常現象，不會對微波運作產生不良的影響。烹調後擦去凝結的水氣即可。

## 記憶功能

在記憶功能中儲存某一道料理的設定後，日後可隨時讀取重用。

如果經常要烹調某一道料理，記憶功能便十分有用。

### 儲存記憶設定

範例：360 瓦，25 分鐘


1. 按下 **M** 按鈕。

按鈕上方的指示燈亮起。

2. 按下所需的微波功率設定。

按鈕上方的指示燈亮起且顯示屏上顯示 1:00 分鐘。

3. 使用旋鈕以設定烹調時間。

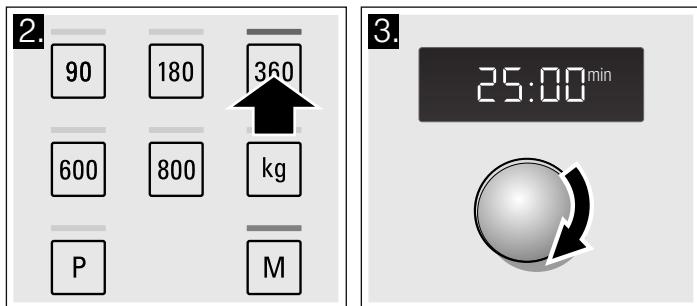

4. 按下 **M** 按鈕以確認。

時鐘隨即重新顯示。設定已儲存。

## 提示

- 您可以儲存記憶功能設定，並立即啟動電器。在完成時，請勿按下 **M**，而是按下 **start**。
- 不能連續儲存數個微波功率設定。
- 不能儲存自動程序。
- 在記憶功能中儲存新的設定：按下 **M** 按鈕。隨即顯示舊設定。如步驟 1 至 4 所示儲存新的程序。

### 啟動記憶功能

要啟動已儲存的程序，非常簡單。將食物放入。關閉機門。

1. 按下 **M** 按鈕。

隨即顯示已儲存的設定。

2. 按下 **start** 按鈕。

顯示屏會顯示剩餘的烹調時間。

### 烹調時間結束後

訊號聲響起。開啟電器機門或按下 **stop**。時鐘隨即重新顯示。

### 暫停

按下 **stop** 按鈕或開啟電器機門。操作隨即暫停。**start** 按鈕上方的顯示屏會閃爍。關閉電器機門後，再次按下 **start** 按鈕。

### 取消操作

連按兩次 **stop** 按鈕，或開啟電器機門後，再按下 **stop** 按鈕。

## 變更訊號聲長度

關閉電器的電源時，會聽到訊號聲。您可以變更訊號聲的持續時間。

如要設定，請按下 **start** 按鈕約 6 秒。

已採用新的訊號聲長度。

時鐘隨即重新顯示。

以下為可用設定：

短訊號聲持續時間 - 3 聲

長訊號聲持續時間 - 30 聲。

## 護理和清潔

小心護理與清潔，可令微波爐保持良好外觀。我們將解釋護理和清潔電器的正確方法。

### ⚠ 短路風險 !!

切勿使用高壓清潔器或蒸氣清潔器來清潔微波爐。

### ⚠ 燙傷風險 !

切勿在關閉電器電源後立刻清潔電器，請先讓電器降溫。

### ⚠ 觸電風險 !

切勿將本電器浸入水中或利用噴水清潔。

表面的材質各有不同，用了錯誤的清潔劑就會令表面受損。因此，請先查看下表資訊，以免發生此情況。

### 切勿使用

- 尖銳或具腐蝕性的清潔溶液、  
表面可能會受損。若本電器正面不慎接觸到此類物質，請立即用清水洗淨。
- 金屬或玻璃刮刀來清潔爐門的玻璃。
- 金屬或玻璃刮刀來清潔密封條。
- 硬質百潔布或清潔海棉。  
使用全新的海綿布前，請先將之徹底清洗。
- 含高濃度酒精的清潔劑

## 清潔劑

### 注意！

清潔前，請先從插座拔掉電器插頭，或關閉保險絲盒內的斷路器。請先用微濕的布和溫和的清潔劑擦拭電器外殼和爐腔，再用乾淨的布擦乾。以乾淨的布擦乾。

區域	清潔劑
電器正面	熱肥皂水 使用洗碗布清潔，再以軟布擦乾。切勿使用玻璃清潔劑或用金屬或玻璃刮刀清潔。
附有不鏽鋼的電器正面	熱肥皂水 使用洗碗布清潔，再以軟布擦乾。立即清除水垢、油脂、澱粉和蛋白所造成的斑點。這類殘留物會造成腐蝕。特殊的不鏽鋼清潔劑在客戶服務處或專賣店有售。切勿使用玻璃清潔劑或用金屬或玻璃刮刀清潔。

區域	清潔劑
不鏽鋼材質的爐腔	熱肥皂水或醋酸溶劑： 使用洗碗布清潔，再以軟布擦乾。 如果微波爐非常骯髒：請使用微波爐專用清潔劑（只限爐腔冷卻時使用）。最好使用不鏽鋼專用海棉。切勿使用微波爐噴劑，或使用其他侵蝕性的微波爐清潔劑或磨蝕性材料。百潔布、硬質海綿和平底鍋清潔劑亦不適用。這些物件都會刮傷表面。請務必徹底擦乾內部表面。
爐腔中的凹槽	濕布： 確定不會有水從轉盤驅動器滲入電器內部。
轉盤和轉環	熱肥皂水 確認將轉盤放回原位。
機門面板	玻璃清潔劑： 使用洗碗布清潔。切勿使用玻璃刮刀。
密封條	熱肥皂水 使用洗碗布清潔，切勿沖刷。切勿使用金屬或玻璃刮刀清潔。

## 故障一覽表

大多數故障都可以輕易地解決。聯絡客戶服務前，請先參閱故障表內容。

若料理的烹調結果未如預期，請參閱建議的烹調時間章節，查看大量烹飪的秘訣和技巧。

### ⚠ 觸電風險！

不當維修會造成危險。電器只可由我們受過訓練的售後服務技術工程師維修。

對於某些錯誤訊息，則可自行採取補救措施。

### 疑難排解

錯誤訊息	可能原因	解決方法 / 附註
抽油煙機無法運轉。	未插上插頭。 停電 斷路器故障 操作錯誤	插妥插頭 檢查廚房燈有否失靈。 查看保險絲盒中電器所使用的斷路器是否正常運作。 關閉保險絲盒內的斷路器。約 10 秒後再打開。
顯示屏上亮起三個 0。	停電	重設時間。
電器不能操作。顯示屏上顯示著烹調時間。	不小心觸動旋鈕。 設定後未按下 <b>start</b> 按鈕。	按下 <b>stop</b> 按鈕。 按下 <b>start</b> 按鈕或使用 <b>stop</b> 按鈕取消設定。
微波爐沒有運轉。	爐門未關妥。 未按下 <b>start</b> 按鈕。	檢查食物殘渣或碎片是否夾在門邊。 按下 <b>start</b> 按鈕。
食物加熱時間較平常久	微波功率等級設定過低。 放入了過多的食物，超出正常份量。 食物較平常冷。	選擇較高的微波功率設定。 雙倍份量 - 雙倍的烹調時間。 烹調時攪拌或翻動食物。
轉盤發出刮磨的噪音。	轉盤驅動器位置附近有灰塵或碎片。	清潔爐腔的轉環和凹槽。
因不明原因令微波爐中止運作。	微波爐故障。	若故障持續發生，請與售後服務中心聯絡。
顯示屏上顯示「M」。	電器在示範模式中。	按住 <b>start</b> 按鈕和 <b>stop</b> 按鈕約 7 秒。 示範模式隨即關閉。

# 售後服務

若電器需要維修，請聯絡我們的售後服務中心。我們會找出正確的解決方法，盡量避免工程師為瑣事上門打擾。

## 產品編號及生產編號

聯絡我們時，請提供產品編號（E no.）和生產編號（FD no.）以便提供正確的建議。開啟電器機門時，即可在右側找到印有這些編號的標牌。為節省時間，你可在下面空位中記下這些編號及售後服務中心電話，以備不時之需。

產品編號 (E no.)	生產編號 (FD no.)
售後服務 ☎	

請注意，即使是在保養期內，技術人員上門仍需收費。  
您可以在附件的客戶服務中心目錄內，找到所有國家的客戶服務中心聯絡詳細資料。

信賴生產商的專業水準。因此，您可確保設備由曾受訓的維修技術人員使用原廠配件來維修。

此電器符合 EN 55011 和 CISPR 11 標準，並屬於 Group 2, Class B 產品。  
Group 2 是指用於加熱食物的微波。Class B 表示該電器為家用產品。

## 技術規格


輸入電壓	220-230 伏特, 50 Hz
功率消耗	1270 瓦
最大輸出功率	900 瓦
微波頻率	2450 MHz
保險絲	16 安培

尺寸 (高 x 寬 x 深)	
- 電器	382 mm x 594 mm x 319 mm
- 爐腔	221 mm x 308 mm x 298 mm

VDE 核准	有
CE 標誌	有

## 環保廢棄管理

以環保方式處理包裝。

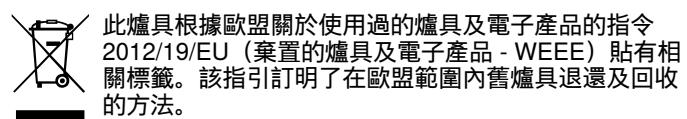

# 自動程序

您可利用自動程序，輕鬆地解凍食物，並快速容易地準備料理。請選擇程序並輸入食物的重量。自動程序將會選擇最佳的設定。共有 7 種程序可供選擇。

## 設定程序



選擇程序後，請進行下列設定：

1. 重複按下 **P** 按鈕，直到所需的程序編號出現。

按鈕上方的指示燈亮起。


2. 按下 **kg** 按鈕。

按鈕上方的指示燈亮起且顯示屏上顯示 1:00 分鐘。

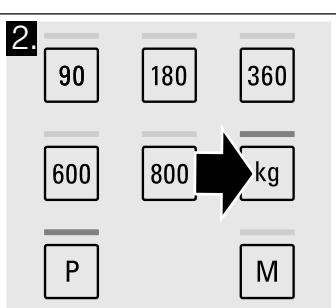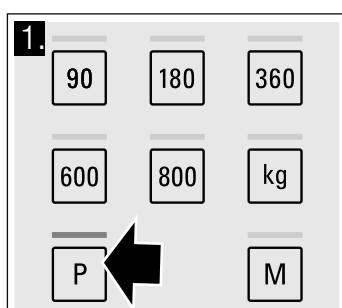

3. 旋轉旋鈕以指定料理的重量。

4. 按下 **start** 按鈕。

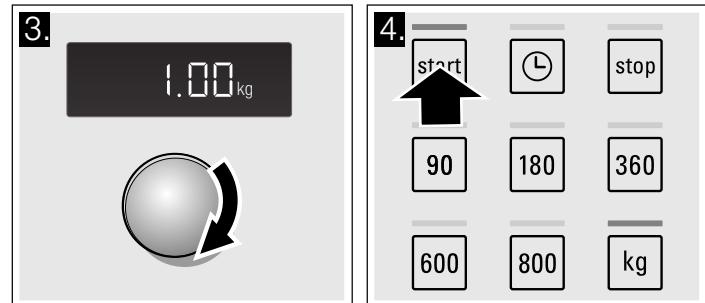

顯示屏上隨即顯示正在倒數的程序烹調時間。

### 烹調時間結束後

訊號聲響起。開啟電器機門或按下 **stop**。時鐘隨即重新顯示。

### 修改

連接兩次 **stop** 按鈕並重設。

### 暫停

按下 **stop** 按鈕或開啟電器機門。操作隨即暫停。**start** 按鈕上方的顯示屏會閃爍。關閉電器機門後，再次按下 **start** 按鈕。

### 取消操作

連接兩次 **stop** 按鈕，或開啟電器機門後，再按下 **stop** 按鈕。

### 提示

- 某些程序會在一定時間後響起訊號聲。打開爐門，攪拌食物，或翻動一下肉類或家禽肉類。關閉電器機門後，再次按下 **start** 按鈕。
- 您可以利用 **P** 或 **kg** 來查詢程序編號和重量。查詢的數值會在顯示屏內顯示 3 秒鐘。

## 使用自動程序解凍

您可以使用 4 種解凍程序，以解凍肉類、家禽肉類和麵包。

### 提示

#### ■ 準備食物

使用已在 -18 °C 冷凍並分裝儲存的食物（越薄越好）。拆除需解凍的食物的所有包裝並量重。您需知道食物的重量以設定程序。

■ 肉類或家禽肉類在解凍時會產生液體。翻轉肉類或家禽肉類時，順道倒掉這些液體。這些液體絕不可用於其他用途或接觸其他食物。

#### ■ 器皿

將食物放置於可用於微波爐的淺盤（如瓷盤或玻璃盤），但毋需覆蓋。

#### ■ 靜置時間

解凍的食物應額外靜置 10 至 30 分鐘，讓溫度變得均勻。與小塊的肉類相比，大塊肉類需較長的靜置時間。靜置前，請分開肉塊和碎肉。

之後，儘管厚肉塊中間可能仍然冰凍，您仍可繼續準備食物。此時，可先去除家禽的內臟。

#### ■ 訊號聲

某些程序會在特定時間後響起訊號聲。打開爐門，將食物分開，或翻動一下肉類或家禽肉。關門，然後按下 Start (啟動) 按鈕。

程序編號	重量範圍（單位為公斤）	
<b>解凍</b>		
P 01	碎肉	0.20 - 1.00
P 02	肉塊	0.20 - 1.00
P 03	雞肉、雞肉塊	0.40 - 1.80
P 04	麵包	0.20 - 1.00

## 使用自動程序烹調

3 種烹調程序，讓您烹煮米飯、馬鈴薯或蔬菜。

### 提示

#### ■ 器皿

食物必須用連蓋的微波爐相容食用具來烹調。米飯應使用大而深的盤子。

#### ■ 準備食物

量度食物的重量。您需知道食物的重量以設定程序。

米：

切勿使用袋內烹煮的米。依照包裝指示添加適量的水。水量通常是米量的兩到三倍。

馬鈴薯：

煮馬鈴薯時，請將新鮮的馬鈴薯切成大小相若的小塊。每 100 克的馬鈴薯加入一湯匙的水，以及少許的鹽。

新鮮蔬菜：

將新鮮，已洗淨的菜稱重。將蔬菜切成大小相若的小塊。每 100 克的蔬菜添加一湯匙的水。

#### ■ 訊號聲

程序運行後一段時間，會發出訊號聲。請攪拌食物。

#### ■ 靜置時間

程序完成後，請再次攪拌食物。食物應額外靜置 5 至 10 分鐘，讓溫度變得均勻。

烹調結果將取決於食物的特性和黏稠度。

程序編號	重量範圍（單位為公斤）	
<b>烹調</b>		
P 05	米	0.05 - 0.2
P 06	馬鈴薯	0.15 - 1.0
P 07	蔬菜	0.15 - 1.0

## 建議的烹調時間

您可在此處找到各種食譜及相關的合適設定，包括最適合料理的微波功率設定。此外，還有關於如何選擇耐熱器皿與食材處理的提示。

## 關於表格的資訊

下表提供多種的微波選項和設定。

表中時間只供參考。實際所需時間可能會因所用的器皿和食物的特性、溫度和黏稠度而不同。

表中一般會列出時間範圍，先設定較低的時間，如有需要，可延長時間。

料理的份量可能會與表中指定的數量不同。可以依照經驗法則：

份量加倍 - 將近雙倍的烹調時間

份量減半 - 一半的烹調時間。

務必將耐熱器皿放置在轉盤上。

解凍	重量	微波功率設定（單位為瓦），烹調時間 (單位為分鐘)	備註
整塊肉（牛肉、小牛肉或豬肉 - 帶骨 或去骨）	800 公克	180 瓦, 15 分鐘 + 90 瓦, 10-20 分鐘	-
	1 公斤	180 瓦, 20 分鐘 + 90 瓦, 15-25 分鐘	
	1.5 公斤	180 瓦, 30 分鐘 + 90 瓦, 20-30 分鐘	
肉塊或牛肉、小牛肉或豬肉片	200 公克	180 瓦, 2 分鐘 + 90 瓦, 4-6 分鐘	翻動時，將任何已解凍的部分分開
	500 公克	180 瓦, 5 分鐘 + 90 瓦, 5-10 分鐘	
	800 公克	180 瓦, 8 分鐘 + 90 瓦, 10-15 分鐘	

## 解凍

### 提示

■ 將冷凍食品放入開放的容器中，並放置在轉盤上。

■ 需要小心處理的部位（如雞腿和雞翼或烤肉外層脂肪）可使用小塊的錫紙覆蓋。錫紙絕對不可接觸爐壁。經過一半解凍時間後，即可移開錫紙。

■ 肉類或家禽肉類在解凍時會產生液體。翻轉肉類或家禽肉類時，順道倒掉這些液體。這些液體絕不可用於其他用途或接觸其他食物。

■ 解凍時，翻動或攪拌食物一或兩次。較大塊的食物應翻動幾次。

■ 讓解凍的食物在室溫下靜置 10 至 20 分鐘，使其達到均勻的溫度。此時，可先去除家禽的內臟。儘管中間可能仍然冰凍，您可繼續製備肉類。

解凍	重量	微波功率設定（單位為瓦），烹調時間 (單位為分鐘)	備註
碎肉，混合	200 公克	90 瓦，10 分鐘	冷凍食物時應盡量平放 翻動數次，去掉任何已解凍的肉
	500 公克	180 瓦，5 分鐘 + 90 瓦，10-15 分鐘	
	800 公克	180 瓦，8 分鐘 + 90 瓦，10-20 分鐘	
禽肉或禽肉塊	600 公克	180 瓦，8 分鐘 + 90 瓦，10-15 分鐘	-
	1.2 公斤	180 瓦，15 分鐘 + 90 瓦，20-25 分鐘	-
魚塊、魚柳或切片	400 公克	180 瓦，5 分鐘 + 90 瓦，10-15 分鐘	分開任何已解凍的部分
蔬菜，如豌豆	300 公克	180 瓦，10-15 分鐘	-
水果，如紅桑子	300 公克	180 瓦，7-10 分鐘	在解凍過程中，請仔細攪拌並分開任何 已解凍的部分
	500 公克	180 瓦，8 分鐘 + 90 瓦，5-10 分鐘	
牛油，解凍	125 公克	180 瓦，1 分鐘 + 90 瓦，2-3 分鐘	移除所有包裝
	250 公克	180 瓦，1 分鐘 + 90 瓦，3-4 分鐘	
麵包	500 公克	180 瓦，6 分鐘 + 90 瓦，5-10 分鐘	-
	1 公斤	180 瓦，12 分鐘 + 90 瓦，10-20 分鐘	-
蛋糕，乾身，如海綿蛋糕	500 公克	90 瓦，10-15 分鐘	只供沒有糖霜、忌廉或吉士忌廉的蛋 糕，分開蛋糕片
	750 公克	180 瓦，5 分鐘 + 90 瓦，10-15 分鐘	
蛋糕，濕潤，如雜果撻、芝士蛋糕	500 公克	180 瓦，5 分鐘 + 90 瓦，15-20 分鐘	只供沒有糖霜、忌廉或明膠的蛋糕
	750 公克	180 瓦，7 分鐘 + 90 瓦，15-20 分鐘	

## 解凍、加熱或烹調冷凍食物

### 提示

- 從包裝中取出餐點。在微波爐適用的器皿中，食物能更迅速而且均勻地加熱。餐點成分不同的話，加熱時間也可能不同。
- 食物放置平整時，其烹調速度會比堆疊起的食物快。因此，請盡可能將食物平整地分配在器皿上。不同的食物不應堆疊放置。

- 請務必將食物覆蓋。如果沒有合適的蓋子，請使用盤子或專用微波錫紙。
- 在烹調過程中，請攪拌或翻動食物 2~3 次。
- 加熱後，讓食物靜置 2 至 5 分鐘，讓溫度變得均勻。
- 從爐中取出器皿時，請務必使用隔熱布或手套。
- 這將有助於食品保持其獨特的味道，所需調味料會較少。

解凍、加熱或烹調冷凍食物	重量	微波功率設定（單位為瓦），烹調時間 (單位為分鐘)	備註
飯菜、盤裝菜、熟食 (2-3 個種類)	300-400 公克	600 瓦，8-11 分鐘	-
湯	400 公克	600 瓦，8-10 分鐘	-
燉菜	500 公克	600 瓦，10-13 分鐘	-
帶有醬汁的肉片或肉塊，如燉牛肉	500 公克	600 瓦，12-17 分鐘	攪拌時分開肉塊
魚，如魚塊、魚柳	400 公克	600 瓦，10-15 分鐘	按需要添加水、檸檬汁或酒
烘烤，例如烤寬麵條、義大利肉捲	450 公克	600 瓦，10-15 分鐘	-
配菜，如米飯、麵食	250 公克	600 瓦，2-5 分鐘	添加少量液體
	500 公克	600 瓦，8-10 分鐘	-
蔬菜，如豌豆、西蘭花、蘿蔔	300 公克	600 瓦，8-10 分鐘	將水倒入餐盤，使其覆蓋底部
	600 公克	600 瓦，14-17 分鐘	-
奶油菠菜	450 公克	600 瓦，11-16 分鐘	烹煮時不需加入額外的水

## 加熱食物

### △ 灼傷危險！

液體加熱時，可能會發生延遲沸騰的狀況。其意思是，雖然液體已達到沸騰的溫度，但表面仍未有一般常見的蒸汽氣泡。此時，即使容器稍微振動，都可能令滾燙的液體突然沸騰和飛濺。加熱時，請在容器中放入一隻湯匙。這可防止出現延遲沸騰的情況。

### 提示

- 從包裝中取出餐點。在微波爐適用的器皿中，食物能更迅速而且均勻地加熱。餐點成分不同的話，加熱時間也可能不同。
- 請務必將食物覆蓋。如果沒有合適的蓋子，請使用盤子或專用微波錫紙。
- 加熱期間，請攪拌或翻動食物數次。檢查溫度。
- 加熱後，讓食物靜置 2 至 5 分鐘，讓溫度變得均勻。
- 從爐中取出器皿時，請務必使用隔熱布或手套。

### 注意！

金屬（如玻璃杯中的湯匙）必須與爐壁和爐門內側保持至少 2 cm 的距離。火花可能會對爐門內側的玻璃造成無法修復的損害。

加熱食物	重量	微波功率設定（單位為瓦），烹調時間 (單位為分鐘)	備註
飯菜、盤裝菜、熟食 (2-3 個種類)	350-500 公克	600 瓦，4-8 分鐘	-

加熱食物	重量	微波功率設定 (單位為瓦), 烹調時間 (單位為分鐘)	備註
飲料	150 毫升	800 瓦, 1-2 分鐘	在玻璃杯中放一隻湯匙；不要過度加熱含酒精的飲料；在加熱過程中檢查
	300 毫升	800 瓦, 2-3 分鐘	
	500 毫升	800 瓦, 3-4 分鐘	
嬰兒食物, 如奶瓶	50 毫升	360 瓦, 約 1/2 分鐘	不要蓋上奶嘴或蓋子。加熱後務必搖勻。務必檢查溫度。
	100 毫升	360 瓦, 約 1 分鐘	
	200 毫升	360 瓦, 1½ 分鐘	
湯, 1 杯	200 公克	600 瓦, 2-3 分鐘	-
湯, 2 杯	400 公克	600 瓦, 4-5 分鐘	-
有醬汁的肉類	500 公克	600 瓦, 8-11 分鐘	將肉片平整放置
燉菜	400 公克	600 瓦, 6-8 分鐘	-
	800 公克	600 瓦, 8-11 分鐘	-
蔬菜, 1 份	150 公克	600 瓦, 2-3 分鐘	添加少量液體
蔬菜, 2 份	300 公克	600 瓦, 3-5 分鐘	

## 烹調食物

### 提示

- 食物放置平整時，其烹調速度會比堆疊起的食物快。因此，請盡可能將食物平整地分配在器皿上。不同的食物不應堆疊放置。
- 使用附蓋的器皿來煮熟食物。如果沒有合適的蓋子，請使用盤子或專用微波箔紙。
- 這將有助於食品保持其獨特的味道，所需調味料會較少。
- 加熱後，讓食物靜置 2 至 5 分鐘，讓溫度變得均勻。
- 從爐中取出器皿時，請務必使用隔熱布或手套。

烹調食物	重量	微波功率設定 (單位為瓦), 烹調時間 (單位為分鐘)	備註
肉塊	750 公克	600 瓦, 20-25 分鐘	未加蓋烹調
生全雞, 無內臟	1.2 公斤	600 瓦, 25-30 分鐘	經過烹調時間一半時翻動食物
新鮮蔬菜	250 公克	600 瓦, 5-10 分鐘	將蔬菜切成大小相若的片狀。
	500 公克	600 瓦, 10-15 分鐘	每 100 公克的蔬菜加入 1 至 2 湯匙的水。 在烹調過程中攪拌均勻
馬鈴薯	250 公克	600 瓦, 8-10 分鐘	將馬鈴薯切成大小相若的塊狀；
	500 公克	600 瓦, 11-14 分鐘	每 100 公克加入 1 至 2 湯匙的水。 在烹調過程中攪拌均勻
	750 公克	600 瓦, 15-22 分鐘	
米	125 公克	800 瓦, 5-7 分鐘 + 180 瓦, 12-15 分鐘	添加雙倍的水量。
	250 公克	800 瓦, 6-8 分鐘 + 180 瓦, 15-18 分鐘	
甜食, 例如奶凍 (即時)	500 毫升	600 瓦, 6-8 分鐘	烹調時, 用打蛋器徹底攪拌牛奶布甸 2 至 3 次。
水果, 糖煮	500 公克	600 瓦, 9-12 分鐘	-

## 微波提示

未有與您所預備的食物份量的相關資訊。

使用以下法則增加或減少烹調時間：

雙倍份量 = 將近雙倍的烹調時間

一半份量 = 一半的烹調時間

食物變得太乾。

下次請縮短烹調時間，或選擇較低的微波功率設定。覆蓋食物，並加入更多的水。

經過所設定的時間後，食物仍未解凍、加熱或煮熟。

設定較長的時間。大量和堆高的食物需要更長的時間。

經過所設定的時間後，食物的邊緣烤焦，但中心部分仍未熟透。

烹調時攪拌，並於下次選擇較低的微波功率設定和延長烹調時間。

解凍後，家禽或肉類的外層已解凍，但中心部分仍未解凍。

下次請選擇較低的微波功率設定。若解凍的食物量較大，請翻動數次。

## 冷凝

爐門玻璃、內壁和底面可能出現凝結的水氣。這是正常現象。並不會影響微波爐的運作。烹調後擦去凝結的水氣即可。

# 符合 EN 60705 規定的測試餐具

微波電器的品質和正確的操作方式，經由檢測機構使用這些餐具進行測試。

符合 EN 60705、IEC 60705、DIN 44547 和 EN 60350 (2009)

## 使用微波爐烹調及解凍

### 微波烹調

菜式	微波功率設定（單位為瓦），烹調時間（單位為分鐘）	備註
奶黃，565 公克	180 瓦，25-30 分鐘 + 90 瓦，20-25 分鐘	將直徑 20 x 17 cm 的耐熱盤放置在轉盤上。
海綿蛋糕	600 瓦，8-10 分鐘	將直徑 22 cm 的耐熱盤放在轉盤上。
肉餅	600 瓦，20-25 分鐘	將耐熱盤放置在轉盤上。

### 微波解凍

菜式	微波功率設定（單位為瓦），烹調時間（單位為分鐘）	備註
肉類	180 瓦，5-7 分鐘 + 90 瓦，10-15 分鐘	將直徑 22 cm 的耐熱盤放在轉盤上。





BSH Hausgeräte GmbH  
Carl-Wery-Straße 34  
81739 München  
GERMANY

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG  
由 BSH HOME APPLIANCES (中國) CO., LTD. 按 Siemens AG 商標使用授權製造



9000917872 (05) 961123