



SIEMENS



# Hob

ET6..FG17., ET6..FN17.

[siemens-home.bsh-group.com/welcome](https://siemens-home.bsh-group.com/welcome)

en Instruction manual

Register  
your  
product  
online

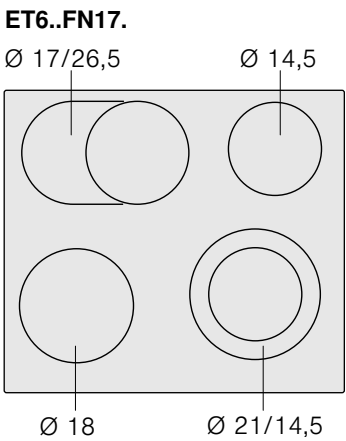
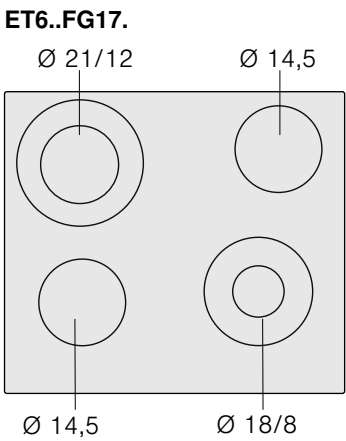


Table of contents

|                                                                                                                                |    |
|--------------------------------------------------------------------------------------------------------------------------------|----|
|  <b>Intended use</b> .....                     | 3  |
|  <b>Important safety information</b> .....     | 3  |
|  <b>Causes of damage</b> .....                | 4  |
| Overview .....                                                                                                                 | 4  |
|  <b>Environmental protection</b> .....       | 4  |
| Energy-saving tips .....                                                                                                       | 4  |
| Environmentally-friendly disposal .....                                                                                        | 4  |
|  <b>Getting to know your appliance</b> ..... | 5  |
| The control panel .....                                                                                                        | 5  |
| The hotplates .....                                                                                                            | 5  |
| Residual heat indicator .....                                                                                                  | 5  |
|  <b>Operating the appliance</b> .....        | 6  |
| Switching the hob on and off .....                                                                                             | 6  |
| Setting a hotplate .....                                                                                                       | 6  |
| Table of cooking times .....                                                                                                   | 6  |
|  <b>Electronic boil start control</b> .....  | 7  |
| Setting the electronic boil start control .....                                                                                | 7  |
| Table of cooking times for electronic boil start control .....                                                                 | 7  |
| Tips for the electronic boil start control .....                                                                               | 8  |
|  <b>Childproof lock</b> .....                | 8  |
| Switching the childproof lock on and off .....                                                                                 | 8  |
| Automatic childproof lock .....                                                                                                | 8  |
|  <b>Time-setting options</b> .....           | 8  |
| Automatic hotplate switch-off .....                                                                                            | 8  |
| Automatic timer .....                                                                                                          | 9  |
| Kitchen timer .....                                                                                                            | 9  |
|  <b>Automatic safety cut-out</b> .....        | 9  |
|  <b>Wipe protection</b> .....                 | 9  |
|  <b>Energy consumption indicator</b> .....   | 10 |
|  <b>Basic settings</b> .....                | 10 |
| Changing the basic settings .....                                                                                              | 11 |
|  <b>Cleaning</b> .....                      | 11 |
| Ceramic .....                                                                                                                  | 11 |
| Hob surround .....                                                                                                             | 11 |
|  <b>Trouble shooting</b> .....              | 12 |
| E-report in the displays .....                                                                                                 | 12 |
|  <b>Customer service</b> .....              | 13 |
| E number and FD number .....                                                                                                   | 13 |
|  <b>Test dishes</b> .....                   | 13 |

Additional information on products, accessories, replacement parts and services can be found at **www.siemens-home.bsh-group.com** and in the online shop **www.siemens-home.bsh-group.com/eshops**

## Intended use

Read these instructions carefully. Please keep the instruction and installation manual, as well as the appliance certificate, in a safe place for later use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for private domestic use and the household environment only. The appliance must only be used for the preparation of food and beverages. The cooking process must be supervised. A short cooking process must be supervised without interruption. Only use the appliance in enclosed spaces.

This appliance is intended for use up to a maximum height of 2000 metres above sea level.

Do not use covers. These can cause accidents, due to overheating, catching fire or materials shattering, for example.

Do not use inappropriate child safety shields or hob guards. These can cause accidents.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

## Important safety information

### **Warning – Risk of fire!**

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.
- The appliance gets hot. Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

### **Warning – Risk of burns!**

- The hotplates and surrounding area (particularly the hob surround, if fitted) become very hot. Never touch the hot surfaces. Keep children at a safe distance.
- The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

### **Warning – Risk of electric shock!**

- Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass ceramic may cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

**⚠ Warning – Risk of injury!**

Saucepans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.

**🔧 Causes of damage****Caution!**

- Rough pot and pan bases scratch the ceramic.
- Avoid boiling pots dry. This may cause damage.
- Never place hot pots or pans on the control panel, the display area or the surround. This may cause damage.
- Damage can occur if hard or pointed objects fall on the hob.
- Aluminium foil and plastic containers melt on hot hotplates. Oven protective foil is not suitable for your hob.

**Overview**

You will find the most frequently caused damage in the following table.

| Damage         | Cause                                        | Measure                                                       |
|----------------|----------------------------------------------|---------------------------------------------------------------|
| Stains         | Boiled over food                             | Remove boiled over food immediately with a glass scraper.     |
|                | Unsuitable cleaning agents                   | Only use cleaning agents that are suitable for glass ceramic. |
| Scratches      | Salt, sugar and sand                         | Do not use the hob as a work surface or storage space.        |
|                | Rough pot and pan bases scratch the ceramic. | Check your cookware.                                          |
| Discolouration | Unsuitable cleaning agents                   | Only use cleaning agents that are suitable for glass ceramic. |
|                | Pan abrasion (e.g. aluminium)                | Lift pots and pans when moving them.                          |
| Blisters       | Sugar, food with a high sugar content        | Remove boiled over food immediately with a glass scraper.     |

**Environmental protection**

In this section, you can find information about saving energy and disposing of the appliance.

**Energy-saving tips**

- Always place suitable lids on saucepans. When cooking without a lid, considerably more energy is required. A glass lid means that you can see inside without having to lift the lid.
- Use pots and pans with even bases. Uneven bases increase energy consumption.
- The diameter of pot and pan bases should be the same size as the hotplate. In particular, small saucepans on the hotplate cause energy losses. Please note: cookware manufacturers often indicate the upper diameter of the saucepan. This is usually bigger than the diameter of the base of the pan.
- Use a small saucepan for small quantities. A larger, less full saucepan requires a lot of energy.
- Cook with only a little water. This will save energy. Vitamins and minerals in vegetables are preserved.
- Always cover as large an area of the hotplate as possible with your saucepan.
- Switch to a lower heat setting in good time.
- Select a suitable ongoing cooking setting. You will waste energy by using an ongoing cooking setting which is too high.
- Use the residual heat of the hob. For longer cooking times, you can switch the hotplate off 5-10 minutes before the end of the cooking time.

**Environmentally-friendly disposal**

Dispose of packaging in an environmentally-friendly manner.




This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## Getting to know your appliance

The instruction manual is the same for various different hobs. You can find the hob dimensions in the overview of models. → Page 2

### The control panel

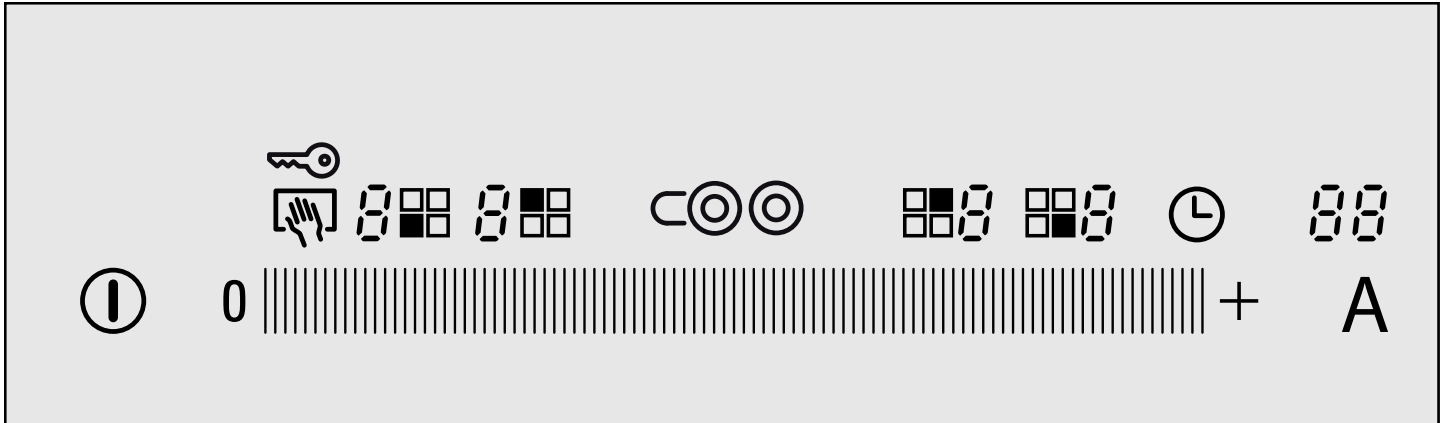

| Indicators |                               |
|------------|-------------------------------|
| <b>1-9</b> | Heat settings                 |
| <b>H/h</b> | Residual heat                 |
| <b>A</b>   | Electronic boil start control |
| <b>88</b>  | Timer                         |

| Touch controls                                                                                  |                               |
|-------------------------------------------------------------------------------------------------|-------------------------------|
| <b>I</b>                                                                                        | Main switch                   |
|               | Child safety lock             |
|               | Wipe protection               |
|               | Hotplate selection            |
| <b>0</b>                                                                                        | Control panel                 |
| <b>C</b> or  | Automatic zone control        |
|               | Timer                         |
| <b>A</b>                                                                                        | Electronic boil start control |

#### Notes

- When you touch a symbol, the respective function is activated.
- Always keep the controls dry. Moisture reduces their effectiveness.
- Do not pull pans close to the displays and sensors. The electronics could overheat.

### The hotplates

| Hotplate                                                                                                                                                    | Activating and deactivating                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
|  Single-circuit hotplate                                                 |                                                                                                                                     |
|  Dual-circuit hotplate                                                   | Select hotplate, touch the <b>C</b> or  symbol |
|  Extended cooking zone                                                   | Select the hotplate and touch the <b>C</b> symbol                                                                                   |
| When the hotplate is activated, the corresponding display lights up<br>When the hotplate is switched on, the previously set size is automatically selected. |                                                                                                                                     |

#### Notes

- Any dark areas in the glow pattern of the hotplate are due to technical reasons. The function of the hotplate is not affected.
- Hotplate temperature is regulated by the heat switching on and off. The heat may also switch on and off at the highest setting.
- With multi-circuit hotplates the heater elements of the inner filament circuits and the heater element of the activations may switch on and off at different times.

### Residual heat indicator

The hob has a two-stage residual heat indicator for each hotplate.

If **H** appears in the display the hob is still hot. It may be used, for example, to keep a small meal warm or to melt cooking chocolate. As the hotplate cools down further, the display changes to **h**. The display remains lit until the hotplate has cooled sufficiently.

## Operating the appliance

In this section, you can find out how to set the hotplates. The table shows heat settings and cooking times for various meals.

### Switching the hob on and off

The main switch is used to switch the hob on and off.

To switch on: touch the ① symbol. A signal sounds. The display light above the main switch and the  indicators light up. The hob is ready for use.

To switch off: Touch the ① symbol until the display light above the main switch and the displays go out. All hotplates are switched off. The residual heat indicator remains on until the hotplates have cooled down sufficiently.

#### Notes

- The hob switches off automatically if all hotplates have been switched off for more than 20 seconds.
- The settings remain stored for 4 seconds after the hob has been switched off. If you switch it on again during this time, the hob will operate using the previously stored settings.

### Setting a hotplate

Set the desired heat setting on the control panel.

Heat setting 1 = lowest setting


Heat setting 9 = highest setting

Every heat setting has an intermediate setting. This is identified by a dot.

#### Setting the heat setting

The hob must be switched on.

1. Touch the  symbol to select the hotplate.  lights up in the heat setting display,  lights up under the heat setting display.
2. Select the required heat setting on the control panel.

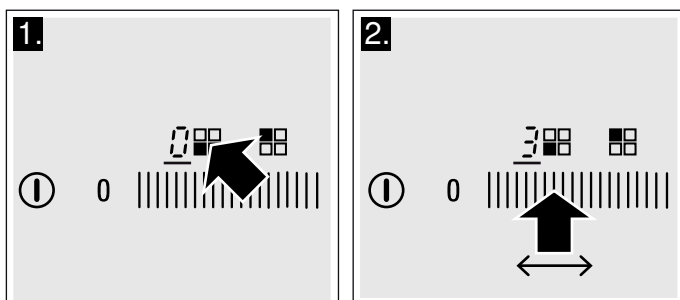

#### Changing the heat setting

Select the hotplate and set the desired heat setting in the control panel.

#### Switching off the hotplate

Use the  symbol to select the hotplate. Set the control panel to 0. After about 10 seconds, the residual heat indicator appears.

**Note:** The last selected hotplate remains activated. You can set the hotplate without selecting it again.

### Table of cooking times

The following table provides some examples.

Cooking times and heat settings may vary depending on the type of food, its weight and quality. Deviations are therefore possible.

For bringing liquids to the boil, use heat setting 9.

Stir thick liquids occasionally.

Food that needs to be seared quickly or food which loses a lot of liquid during initial frying is best seared in several small portions.

Tips for energy-saving cooking can be found in the Environmental protection section. → Page 4

|                                                   | Ongoing cooking setting | Ongoing cooking time in minutes |
|---------------------------------------------------|-------------------------|---------------------------------|
| <b>Melting</b>                                    |                         |                                 |
| Chocolate coating                                 | 1-1.                    | -                               |
| Butter, honey, gelatine                           | 1-2                     | -                               |
| <b>Heating and keeping warm</b>                   |                         |                                 |
| Stew (e.g. lentil stew)                           | 1-2                     | -                               |
| Milk**                                            | 1.-2.                   | -                               |
| Heating sausages in water**                       | 3-4                     | -                               |
| <b>Defrosting and heating</b>                     |                         |                                 |
| Frozen spinach                                    | 2.-3.                   | 10-20 min                       |
| Frozen goulash                                    | 2.-3.                   | 20-30 min                       |
| <b>Poaching, simmering</b>                        |                         |                                 |
| Dumplings                                         | 4.-5.*                  | 20-30 min                       |
| Fish                                              | 4-5*                    | 10-15 min                       |
| White sauces, e.g. béchamel sauce                 | 1-2                     | 3-6 min                         |
| Whisked sauces, e.g. sauce Béarnaise, hollandaise | 3-4                     | 8-12 min                        |
| <b>Boiling, steaming, braising</b>                |                         |                                 |
| Rice (with double the quantity of water)          | 2-3                     | 15-30 min                       |
| Rice pudding                                      | 1.-2.                   | 35-45 min                       |
| Unpeeled boiled potatoes                          | 4-5                     | 25-30 min                       |
| Boiled potatoes                                   | 4-5                     | 15-25 min                       |
| Pasta, noodles                                    | 6-7*                    | 6-10 min                        |
| Stew, soups                                       | 3.-4.                   | 15-60 min                       |
| Vegetables                                        | 2.-3.                   | 10-20 min                       |
| Frozen vegetables                                 | 3.-4.                   | 10-20 min                       |
| Cooking in a pressure cooker                      | 4-5                     | -                               |
| * Ongoing cooking without a lid                   |                         |                                 |
| ** Without lid                                    |                         |                                 |
| *** Turn frequently                               |                         |                                 |

|                                                                                 | Ongoing cooking setting | Ongoing cooking time in minutes |
|---------------------------------------------------------------------------------|-------------------------|---------------------------------|
| <b>Braising</b>                                                                 |                         |                                 |
| Roulades                                                                        | 4-5                     | 50-60 min                       |
| Pot roast                                                                       | 4-5                     | 60-100 min                      |
| Goulash                                                                         | 2-3.                    | 50-60 min                       |
| <b>Frying with little oil**</b>                                                 |                         |                                 |
| Escalope, plain or breaded                                                      | 6-7                     | 6-10 min                        |
| Escalope, frozen                                                                | 6-7                     | 8-12 min                        |
| Chop, plain or breaded***                                                       | 6-7                     | 8-12 min                        |
| Steak (3 cm thick)                                                              | 7-8                     | 8-12 min                        |
| Hamburger, rissoles (3 cm thick)***                                             | 4-5.                    | 30-40 min                       |
| Poultry breast (2 cm thick)***                                                  | 5-6                     | 10-20 min                       |
| Poultry breast, frozen***                                                       | 5-6                     | 10-30 min                       |
| Fish and fish fillet, plain                                                     | 5-6                     | 8-20 min                        |
| Fish and fish fillet, breaded                                                   | 6-7                     | 8-20 min                        |
| Fish and fish fillet, breaded and frozen, e.g. fish fingers                     | 6-7                     | 8-12 min                        |
| Scampi and prawns                                                               | 7-8                     | 4-10 min                        |
| Sautéing vegetables, fresh mushrooms                                            | 7-8                     | 10-20 min                       |
| Vegetables, meat in Asian-style strips                                          | 7-8.                    | 15-20 min                       |
| Stir fry, frozen                                                                | 6-7                     | 6-10 min                        |
| Pancakes                                                                        | 6-7                     | consecutively                   |
| Omelette                                                                        | 3-4.                    | consecutively                   |
| Fried eggs                                                                      | 5-6                     | 3-6 min                         |
| <b>Deep-fat frying (150-200 g per portion continuously in 1-2 litres oil**)</b> |                         |                                 |
| Frozen products, e.g. chips, chicken nuggets                                    | 8-9                     | -                               |
| Croquettes, frozen                                                              | 7-8                     | -                               |
| Meat, e.g. chicken portions                                                     | 6-7                     | -                               |
| Fish, breaded or battered                                                       | 5-6                     | -                               |
| Vegetables, mushrooms, breaded or battered, tempura                             | 5-6                     | -                               |
| Small baked items, e.g. ring doughnuts/jam-filled doughnuts, fruit in batter    | 4-5                     | -                               |
| * Ongoing cooking without a lid                                                 |                         |                                 |
| ** Without lid                                                                  |                         |                                 |
| *** Turn frequently                                                             |                         |                                 |



## Electronic boil start control

The electronic boil start control heats the hotplate using the highest heat setting and then switches down to the simmer setting you have selected.

The time taken for the hotplate to heat up depends on the simmer setting selected.

### Setting the electronic boil start control

The electronic boil start control can only be activated in the first 30 seconds after you have switched on the hotplate:

1. Set the desired ongoing cooking setting for the hotplate.
2. Touch the A symbol.

The electronic boil start control is activated. **A** and the ongoing cooking setting flash alternately.

After the food has been brought to the boil, only the ongoing cooking setting remains lit on the display.

### Table of cooking times for electronic boil start control

The table below shows which dishes electronic boil start control can be used for.

The smaller quantities indicated are for the smaller hotplates and the larger quantities are for the larger hotplates. The values given are guidelines.

Stir thick liquids occasionally.

| Dish with electronic boil start control | Amount         | Heat setting | Total cooking time in minutes |
|-----------------------------------------|----------------|--------------|-------------------------------|
| <b>Warming</b>                          |                |              |                               |
| Stock                                   | 500 ml-1 litre | A 7-8        | 4-7 min                       |
| Thick soups                             | 500 ml-1 litre | A 2-3        | 3-6 min                       |
| Milk**                                  | 200-400 ml     | A 1-2        | 4-7 min                       |
| <b>Heating and keeping warm</b>         |                |              |                               |
| Stew (e.g. lentil stew)                 | 400-800 g      | A 1-2        | -                             |
| <b>Defrosting and heating</b>           |                |              |                               |
| Frozen spinach                          | 300-600 g      | A 2.5-3.5    | 10-20 min                     |
| Frozen goulash                          | 500 g-1 kg     | A 2.5-3.5    | 20-30 min                     |
| <b>Poaching</b>                         |                |              |                               |
| Fish                                    | 300-600 g      | A 4-5*       | 20-25 min                     |
| * Ongoing cooking without a lid         |                |              |                               |
| ** Without lid                          |                |              |                               |

| Dish with electronic boil start control                     | Amount       | Heat setting | Total cooking time in minutes |
|-------------------------------------------------------------|--------------|--------------|-------------------------------|
| <b>Cooking</b>                                              |              |              |                               |
| Rice (with double the quantity of water)                    | 125-250 g    | A 2-3        | 20-25 min                     |
| Unpeeled boiled potatoes with 1-3 cups of water             | 750 g-1.5 kg | A 4-5        | 30-40 min                     |
| Boiled potatoes with 1-3 cups of water                      | 750 g-1.5 kg | A 4-5        | 20-30 min                     |
| Vegetables with 1-3 cups of water                           | 500 g-1 kg   | A 2.5-3.5    | 15-20 min                     |
| Frozen vegetables with 1-3 cups of water                    | 500 g-1 kg   | A 4.5-5.5    | 15-20 min                     |
| <b>Braising</b>                                             |              |              |                               |
| Roulades                                                    | x 4          | A 4-5        | 50-60 min                     |
| Pot roast                                                   | 1 kg         | A 4-5        | 80-100 min                    |
| <b>Frying**</b>                                             |              |              |                               |
| Escalope, plain or breaded                                  | 1-2          | A 6-7        | 8-12 min                      |
| Cutlet, plain or breaded                                    | 1-2          | A 6-7        | 8-12 min                      |
| Steak (3 cm thick)                                          | 1-2          | A 7-8        | 8-12 min                      |
| Fish and fish fillet breaded                                | 1-2          | A 6-7        | 8-12 min                      |
| Fish and fish fillet, breaded and frozen, e.g. fish fingers | 200-300 g    | A 6-7        | 8-12 min                      |
| Pancakes                                                    |              | A 6-7        | continuous frying             |
| * Ongoing cooking without a lid                             |              |              |                               |
| ** Without lid                                              |              |              |                               |

## Tips for the electronic boil start control

Electronic boil start control is designed to conserve food's nutritional value while using little water for cooking.

- Add only approximately 3 cups of water to the food for large hotplates and approximately 2 cups of water for small hotplates.
- Place a lid on the saucepan.
- Electronic boil start control is not suitable for food that is cooked in a large volume of water (e.g. pasta).

## Childproof lock

You can use the childproof lock to prevent children from switching on the hob.

### Switching the childproof lock on and off

The hob must be switched off.

To switch on: touch the  symbol for approx. 4 seconds. The display light above the  symbol lights up for 10 seconds. The hob is locked.

To switch off: touch the  symbol for approx. 4 seconds. The lock is released.

### Automatic childproof lock

This function automatically activates the childproof lock every time you switch the hob off.

### Switching on and off

Find out how to switch the automatic childproof lock on and off in the Basic settings section. → [Page 10](#)

## Time-setting options

There are 2 different time-setting options:


- A hotplate should switch off automatically
- Kitchen timer

### Automatic hotplate switch-off

Enter a cooking time for the relevant hotplate. When the cooking time has elapsed, the hotplate switches off automatically.

### Setting the cooking time

1. Setting the heat setting
2. Touch the  symbol. The  display for the required hotplate lights up.  lights up on the timer display.
3. Touch the desired presetting on the control panel. The possible presetting from left to right is 1, 2, 3..... to 10 minutes. Within 10 seconds, slide your finger along the control panel repeatedly until the desired cooking time is reached.

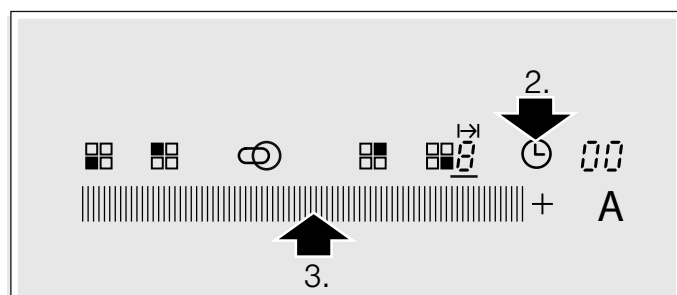

The cooking time counts down. If you have set a cooking time for more than one hotplate, the cooking time of the selected hotplate is always displayed.

### Automatic setting

If you touch settings range presets 1 to 5 for a longer time, the cooking time automatically counts back down to one minute.

If you touch settings range presets 6 to 10 for a longer time, the cooking time automatically counts up to 99 minutes.

### When the cooking time has elapsed

When the cooking time has elapsed, the hotplate switches off. You will hear a signal and  lights up in the display for 10 seconds. The  indicator lights up brightly. Touch the  symbol. The displays go out and the audible signal ceases.

### Changing or cancelling the cooking time

Select the hotplate and touch the  symbol. The  display lights up brightly. Change the cooking time or set to  in the settings range.

**Note:** You can set a cooking time of up to 99 minutes.

### Automatic timer

You can use this function to preselect a cooking time for all hotplates. Each time a hotplate is switched on, the pre-selected cooking time then counts down. When the cooking time has elapsed, the hotplate switches off automatically.

You can find out how to switch on the automatic timer in the Basic settings section. → *Page 10*

**Note:** You can change the cooking time for a hotplate or switch off the automatic timer for the hotplates. Select the hotplate and touch the  symbol. The desired  display lights up brightly. Change the cooking time or set to  in the settings range.

### Kitchen timer

You can use the kitchen timer to set a time of up to 99 minutes. It runs independently of all the other settings.

### Switching on the kitchen timer

You can switch the kitchen timer on in 2 different ways:

- If a hotplate has been selected, touch the  symbol twice within 10 seconds.
- If a hotplate has not been selected, touch the  symbol.

The  display lights up.

### Setting the kitchen timer

Set the desired time in the control panel.

### After the time has elapsed

After the time has elapsed, you will hear a beep.  lights up in the timer display. The  display for the kitchen timer lights up brightly. The display switches off after 10 seconds.

### Displaying the time

Use the  symbol to select the kitchen timer. The time is displayed for 10 seconds.

### Setting the correct time

Use the  symbol to select the kitchen timer and reset the time.

## Automatic safety cut-out

If a hotplate has been switched on for a long time without the setting being changed, the automatic time limit is activated.

The hotplate stops heating.  and the  residual heat indicator flash alternately on the hotplate display.

The display goes out when you touch any control. You can make new settings.

When the time limit is activated depends on the heat setting selected (1 to 10 hours).

## Wipe protection

If you wipe over the control panel while the hob is switched on, settings may be changed.

To prevent this from happening, your hob has a wipe protection function. Touch the symbol . A beep goes off. The display light above the  symbol lights up. The control panel is locked for 30 seconds. You can now wipe over the control panel without changing any settings.


**Note:** The primary switch is not affected by the wipe protection function. You can switch off the hob at any time.

## Energy consumption indicator

You can use this function to display the total energy consumption between switching the hob on and off.

Once switched off, the energy consumption is displayed in kilowatt hours (e.g. 1.08 kWh) for 10 seconds

The accuracy on the display depends on the voltage quality of the power supply, among other factors.

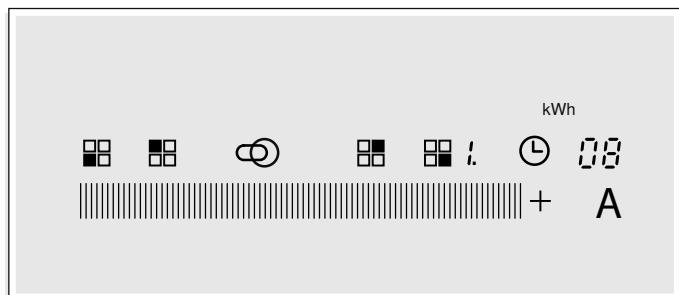

The display has not been activated. You can find out how to activate the display in the Basic settings section. → *Page 10*

## Basic settings

Your appliance has various basic settings. You can adjust these settings to meet your own needs.


| Display    | Function                                                                                                                                     |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>c 1</b> | <b>Automatic child safety lock</b>                                                                                                           |
| 0          | Switched off.*                                                                                                                               |
| 1          | Switched on.                                                                                                                                 |
| 2          | Manual and automatic child safety lock switched off.                                                                                         |
| <b>c 2</b> | <b>Beep</b>                                                                                                                                  |
| 0          | Confirmation signal and operation error signal are switched off (primary switch signal always remains).                                      |
| 1          | Only the operation error signal is switched on.                                                                                              |
| 2          | Only the confirmation signal is switched on.                                                                                                 |
| 3          | Confirmation signal and operation error signal switched on.*                                                                                 |
| <b>c 3</b> | <b>Energy consumption display (Ask your electric company what the mains voltage is)</b>                                                      |
| 0          | Consumption display switched off.*                                                                                                           |
| 1          | Consumption display with mains voltage at 230 V.                                                                                             |
| 2          | Consumption display with mains voltage at 400 V.                                                                                             |
| 3          | Consumption display with mains voltage at 220 V.                                                                                             |
| 4          | Consumption display with mains voltage at 240 V.                                                                                             |
| <b>c 5</b> | <b>Automatic timer</b>                                                                                                                       |
| 00         | Switched off.*                                                                                                                               |
| 0 1-99     | Cooking time after which the hotplates switch off.                                                                                           |
| <b>c 6</b> | <b>Duration of the timer end signal</b>                                                                                                      |
| 1          | 10 seconds.*                                                                                                                                 |
| 2          | 30 seconds                                                                                                                                   |
| 3          | 1 minute.                                                                                                                                    |
| <b>c 7</b> | <b>Activation of the heating elements</b>                                                                                                    |
| 0          | Switched off.                                                                                                                                |
| 1          | Switched on.                                                                                                                                 |
| 2          | Last setting before the hotplate was switched off.*                                                                                          |
| <b>c 9</b> | <b>Selected time for the hotplate</b>                                                                                                        |
| 0          | Unlimited: the most recently selected hotplate can always be adjusted without having to select it again.*                                    |
| 1          | Once you select a hotplate, you have 10 seconds to adjust it, after which you will have to select it again in order to be able to adjust it. |
| <b>c 0</b> | <b>Reset the basic settings</b>                                                                                                              |
| 0          | Switched off.*                                                                                                                               |
| 1          | Switched on.                                                                                                                                 |

\*Basic setting

## Changing the basic settings


The hob must be switched off.

1. Switch on the hob.
2. Within the next 10 seconds, touch the  symbol for 4 seconds

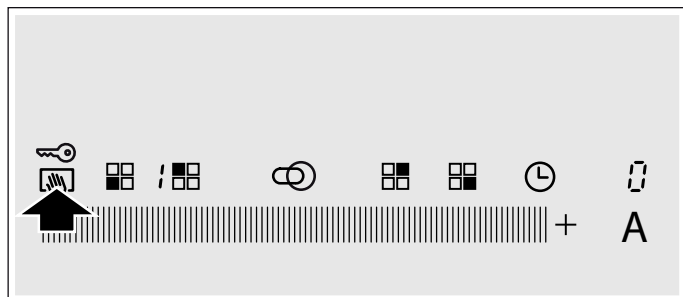

 and  flash alternately in the left-hand display;  lights up in the right-hand display.

3. Touch the  symbol repeatedly until the required setting appears in the left-hand display.
4. Set the required value on the control panel.

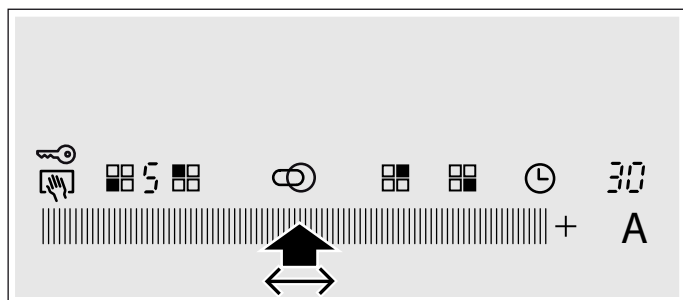

5. Touch the  symbol for 4 seconds. The setting is activated.

### Switching off

To exit the basic setting, switch off the hob with the main switch and make new settings.

## Cleaning

Suitable maintenance and cleaning products can be purchased from the after-sales service or in our e-Shop.

### Ceramic

Clean the hob after each use. This will prevent spills from burning onto the ceramic.

Only clean the hob when it has cooled down sufficiently.

Use only cleaning agents which are suitable for glass ceramic. Follow the cleaning instructions on the packaging.

Never use:

- Undiluted washing-up liquid
- Detergent intended for dishwashers
- Scouring agents
- Harsh cleaning agents such as oven spray or stain remover
- Abrasive sponges
- High-pressure cleaners or steam jet cleaners

Ground-in dirt can be best removed with a glass scraper, available from retailers. Please note the manufacturer's instructions.

You can also obtain a suitable glass scraper from our after-sales service or from the e-Shop.

Using special sponges to clean glass ceramic achieves great cleaning results.

### Hob surround

To prevent damage to the hob surround, observe the following instructions:

- Use only hot soapy water.
- Wash new sponge cloths thoroughly before use.
- Do not use any sharp or abrasive agents.
- Do not use the glass scraper.

## Trouble shooting

Faults often have simple explanations. Please read the notes in the table before calling the after-sales service. The electronics of your hob are underneath the control panel. For various reasons, the temperature in this area may rise sharply.

In order that the electronics do not overheat, the hotplates are switched off as and when necessary. The **F2**, **F4**, or **F5** display appears alternately with the **H** or **h** residual heat indicator.

| Display                                                                          | Fault                                                                                                                                            | Measure                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| None                                                                             | The power supply has been disconnected.                                                                                                          | Check the household fuse for the appliance. Check whether there is a power cut by trying other electronic appliances.                                                                                                                      |
| All displays flash                                                               | The touch control is wet or an object is resting on it.                                                                                          | Dry the control or remove the object.                                                                                                                                                                                                      |
| <b>F2</b>                                                                        | Several hotplates have been used over a prolonged period at high power settings. To protect the electronics, the hotplate has been switched off. | Wait a while. Touch any touch control. When <b>F2</b> goes out, the electronics have cooled down sufficiently. You can continue cooking.                                                                                                   |
| <b>F4</b>                                                                        | Despite the switch-off by <b>F2</b> , the electronics have become hot again. All hotplates have therefore been switched off.                     | Wait a while. Touch any touch control. When <b>F4</b> goes out, you can continue cooking.                                                                                                                                                  |
| <b>F5</b> and the heat setting flash alternately. An audible signal can be heard | Warning: There is a hot pan in the area of the control panel. There is a risk that the electronics will overheat.                                | Remove the pan. The fault display goes out shortly afterwards. You can continue cooking.                                                                                                                                                   |
| <b>F5</b> and audible signal                                                     | There is a hot pan in the area of the control panel. To protect the electronics, the hotplate has been switched off.                             | Remove the pan. Wait a while. Touch any control. When <b>F5</b> goes out, you can continue cooking.                                                                                                                                        |
| <b>F8</b>                                                                        | The hotplate was in operation for too long and has switched itself off.                                                                          | You can switch the hotplate back on again immediately.                                                                                                                                                                                     |
| <b>DE</b> The hotplates do not heat up                                           | Demo mode is switched on                                                                                                                         | Switching off the demo mode: Disconnect the appliance for 30 seconds from the power supply (switch off the household fuse or the circuit breaker in the fuse box). Touch any touch control after 3 minutes. The demo mode is switched off. |

### E-report in the displays

When an error message with "E" appears in the display, e.g. E0111, switch the appliance off and on again.

If it was a one-off error, the display goes out. If the error message appears again, call the after-sales service and quote the exact error message.

## Customer service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find an appropriate solution, also in order to avoid after-sales personnel having to make unnecessary visits.

### E number and FD number

Please quote the E-number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge in the event of misuse of the appliance, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

- GB** 0344 892 8999  
Calls charged at local or mobile rate.
- IE** 01450 2655  
0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

## Test dishes

This table has been produced for test institutes to facilitate the testing of our appliances.

The data in the table refers to our accessory cookware from Schulte Ufer (4-part induction pot set HZ 390042) with the following dimensions:

- Saucepan dia. 16 cm, 1.2 litres, for 14.5 cm dia. single-circuit hotplate
- Cooking pot dia. 16 cm, 1.7 litres, for 14.5 cm dia. single-circuit hotplate
- Cooking pot dia. 22 cm, 4.2 litres, for 18 cm dia. or 17 cm dia. hotplate
- Frying pan dia. 24 cm, for 18 cm dia. or 17 cm dia. hotplate

| Test dishes                                                                           | Heating up/bringing to boil |                                           | Ongoing cooking |                         |     |
|---------------------------------------------------------------------------------------|-----------------------------|-------------------------------------------|-----------------|-------------------------|-----|
|                                                                                       | Heat setting                | Cooking time (min:sec)                    | Lid             | Ongoing cooking setting | Lid |
| <b>Melting chocolate</b>                                                              |                             |                                           |                 |                         |     |
| Cookware: saucepan                                                                    |                             |                                           |                 |                         |     |
| Chocolate couverture (e.g. Dr. Oetker dark chocolate, 150 g) on 14.5 cm dia. hotplate | -                           | -                                         | -               | 1.                      | No  |
| <b>Heating and keeping lentil stew warm</b>                                           |                             |                                           |                 |                         |     |
| Cookware: cooking pot                                                                 |                             |                                           |                 |                         |     |
| <b><i>Lentil stew made to DIN 44550</i></b>                                           |                             |                                           |                 |                         |     |
| Initial temperature 20° C                                                             |                             |                                           |                 |                         |     |
| Amount: 450 g for 14.5 cm dia. hotplate                                               | 9                           | approx. 2:00 without stirring             | Yes             | 1.                      | Yes |
| Amount: 800 g for 18 cm dia. or 17 cm dia. hotplate                                   | 9                           | approx. 2:00 without stirring             | Yes             | 1.                      | Yes |
| <b><i>Lentil stew from the tin</i></b>                                                |                             |                                           |                 |                         |     |
| e.g lentils with Erasco sausages:                                                     |                             |                                           |                 |                         |     |
| Initial temperature 20° C                                                             |                             |                                           |                 |                         |     |
| Amount 500 g for 14.5 cm dia. hotplate                                                | 9                           | approx. 2:00<br>(Stir after approx. 1:30) | Yes             | 1.                      | Yes |
| Amount: 1000 g for 18 cm dia. or 17 cm dia. hotplate                                  | 9                           | approx. 2:30<br>(Stir after approx. 1:30) | Yes             | 1.                      | Yes |

| Test dishes                                                                                                                   | Heating up/bringing to boil |                                                                                                                                                                                                                         | Ongoing cooking |                                                                                                                                         |     |
|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------|-----|
|                                                                                                                               | Heat setting                | Cooking time (min:sec)                                                                                                                                                                                                  | Lid             | Ongoing cooking setting                                                                                                                 | Lid |
| Simmering Béchamel sauce                                                                                                      |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Cookware: saucepan                                                                                                            |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Milk temperature: 7° C                                                                                                        |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Recipe: 40 g butter, 40 g flour, 0.5 l milk (3.5% fat content) and one pinch of salt for 14.5 cm dia. hotplate                | 9 <sup>2</sup>              | approx. 5:20                                                                                                                                                                                                            | No              | 1 <sup>1, 3</sup>                                                                                                                       | No  |
|                                                                                                                               |                             |                                                                                                                                                                                                                         |                 | <sup>1</sup> Melt the butter, stir in the flour and salt, and keep cooking the roux for 3 minutes                                       |     |
|                                                                                                                               |                             | <sup>2</sup> Add the milk to the roux and bring to the boil, stirring continuously                                                                                                                                      |                 |                                                                                                                                         |     |
|                                                                                                                               |                             |                                                                                                                                                                                                                         |                 | <sup>3</sup> After the Béchamel sauce has come to the boil, keep cooking it at setting 1 for a further 2 minutes, stirring all the time |     |
| Cooking rice pudding - Ongoing cooking with lid                                                                               |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Cookware: cooking pot                                                                                                         |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Milk temperature: 7° C                                                                                                        |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Recipe: 190 g round grain rice, 90 g sugar, 750 ml milk (3.5% fat content) and 1 g salt for 14.5 cm dia. hotplate             | 9                           | approx. 6:45<br>Heat the milk until it starts to rise up. Switch down to the ongoing cooking setting and add the rice, sugar and salt to the milk<br><br>Total cooking time (incl. bringing to boil) approx. 45 minutes | No              | 2                                                                                                                                       | Yes |
|                                                                                                                               |                             |                                                                                                                                                                                                                         |                 | Stir the rice pudding after 10 minutes                                                                                                  |     |
| Recipe: 250 g round grain rice, 120 g sugar, 1 l milk (3.5% fat content) and 1.5 g salt for 18 cm dia. or 17 cm dia. hotplate | 9                           | approx. 7:20<br>Heat the milk until it starts to rise up. Switch down to the ongoing cooking setting and add the rice, sugar and salt to the milk<br><br>Total cooking time (incl. bringing to boil) approx. 45 minutes | No              | 2                                                                                                                                       | Yes |
|                                                                                                                               |                             |                                                                                                                                                                                                                         |                 | Stir the rice pudding after 10 minutes                                                                                                  |     |
| Cooking rice pudding - Ongoing cooking without lid                                                                            |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Cookware: cooking pot                                                                                                         |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Milk temperature: 7° C                                                                                                        |                             |                                                                                                                                                                                                                         |                 |                                                                                                                                         |     |
| Recipe: 190 g round grain rice, 90 g sugar, 750 ml milk (3.5% fat content) and 1 g salt for 14.5 cm dia. hotplate             | 9                           | approx. 7:30<br>Add rice, sugar and salt to the milk and heat the mixture up, stirring continuously. At a milk temperature of approx. 90°C switch down to the ongoing cooking setting. Simmer for approx. 50 minutes    | No              | 2                                                                                                                                       | No  |

| Test dishes                                                                                                                          | Heating up/bringing to boil |                                                                                                                                                                                                                         | Ongoing cooking |                                     |     |
|--------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-------------------------------------|-----|
|                                                                                                                                      | Heat setting                | Cooking time (min:sec)                                                                                                                                                                                                  | Lid             | Ongoing cooking setting             | Lid |
| Recipe: 250 g round grain rice, 120 g sugar, 1 l milk (3.5% fat content) and 1.5 g salt for 18 cm dia. or 17 cm dia. hotplate        | 9                           | approx. 8:00<br>Add rice, sugar and salt to the milk and heat the mixture up, stirring continuously. At a milk temperature of approx. 90°C switch down to the ongoing cooking setting.<br>Simmer for approx. 50 minutes | No              | 2                                   | No  |
| <b>Cooking rice</b>                                                                                                                  |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Cookware: cooking pot                                                                                                                |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Water temperature 20° C                                                                                                              |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Recipe acc. to DIN 44550:                                                                                                            |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| 125 g long grain rice, 300 g water and a pinch of salt for 14.5 cm dia. hotplate                                                     | 9                           | approx. 2:48                                                                                                                                                                                                            | Yes             | 2                                   | Yes |
| Recipe acc. to DIN 44550:                                                                                                            |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| 250 g long grain rice, 600 g water and a pinch of salt for 18 cm dia. or 17 cm dia. hotplate                                         | 9                           | approx. 3:15                                                                                                                                                                                                            | Yes             | 2.                                  | Yes |
| <b>Frying pork loin chops</b>                                                                                                        |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Cookware: frying pan                                                                                                                 |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Initial temperature loin chops: 7° C                                                                                                 |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Amount: 3 loin chops (total weight approx. 300 g, about 1 cm thick) 15 g sunflower oil for 18 cm dia. or 17 cm dia. hotplate         | 9                           | approx. 2:40                                                                                                                                                                                                            | No              | 7                                   | No  |
| <b>Frying pancakes</b>                                                                                                               |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Cookware: frying pan                                                                                                                 |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Recipe acc. to DIN EN 60350-2                                                                                                        |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Amount: 55 ml batter per pancake for 18 cm dia. or 17 cm dia. hotplate                                                               | 9                           | approx. 2:40                                                                                                                                                                                                            | No              | 6 or 6. depending on browning level | No  |
| <b>Deep-fat frying frozen chips</b>                                                                                                  |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Cookware: cooking pot                                                                                                                |                             |                                                                                                                                                                                                                         |                 |                                     |     |
| Amount: 1.8 kg sunflower oil, per portion: 200 g frozen chips (e.g. McCain 123 Original fries) for 18 cm dia. or 17 cm dia. hotplate | 9                           | Until oil temperature reaches 180 °C                                                                                                                                                                                    | No              | 9                                   | No  |

If the tests are carried out with an 18 cm dia. hotplate with a power rating of 1500 W, the boiling time is increased by approx. 20% and the ongoing cooking setting by one ongoing cooking setting.

BSH Hausgeräte GmbH  
Carl-Wery-Str. 34, 81739 München  
GERMANY

[siemens-home.bsh-group.com](http://siemens-home.bsh-group.com)

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG



9001242364  
970117