

*This page applies to single, upper or lower ovens*  
**Single Oven Model CM301 or Double Oven Model CM302**

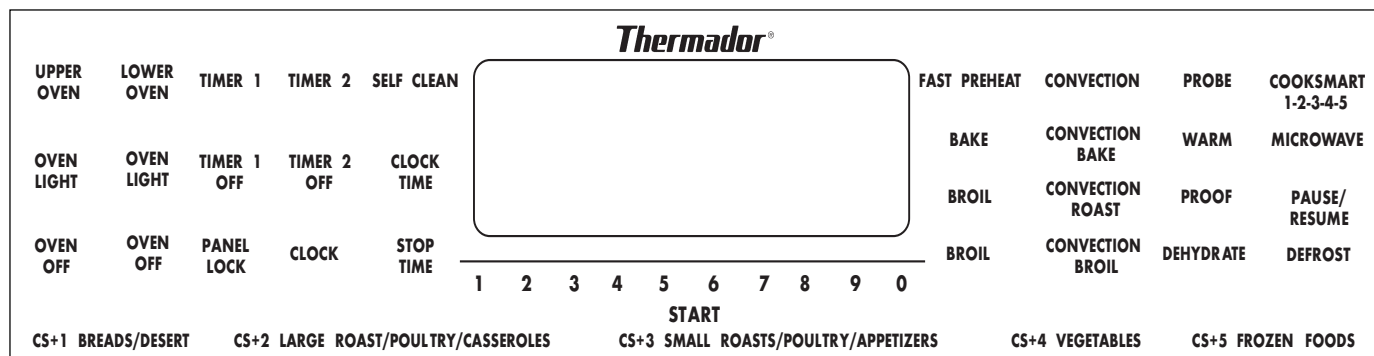


Illustration shows CM302 Control Panel.

- **For double ovens only, select oven before proceeding.**  
**To start any oven mode after selection, touch START.**
- **To cancel any operation, touch OVEN .  
OFF**

### To set Bake, Roast, Convection, Convection Roast, Convection Bake

1. Touch cooking mode.
2. Touch number pads only for temperature other than one displayed.
3. Touch START.

### To set Broil or Convection Broil

1. Touch BROIL or CONVECTION BROIL mode.
2. Touch number pads only for temperature other than one displayed.
3. Touch START.

**To set a cooking mode for an automatic timed function, be certain that the CLOCK is set for the correct Time of Day.**

### To set timed cooking - to start now and stop automatically

1. Select Upper or Lower oven.
2. Touch cooking mode for oven to be used.
3. Touch number pads only for temperature other than one displayed.
4. Touch COOK TIME.
5. Touch number pads for hours and minutes to cook.
6. Touch START.

Oven displays cook time and stop time.

### To set timed cooking - to delay start and stop

1. Touch cooking mode for oven to be used.
2. Touch number pads only for temperature other than one displayed.
3. Touch COOK TIME.
4. Touch number pads for hours and minutes to cook.
5. Touch STOP TIME.
6. Touch number pads for time of day you want oven to turn off.
7. Touch START.

Oven displays start time and cook time.

*This page applies ONLY to*  
**SINGLE OVEN Model CM301 or UPPER OVEN of Model CM302**

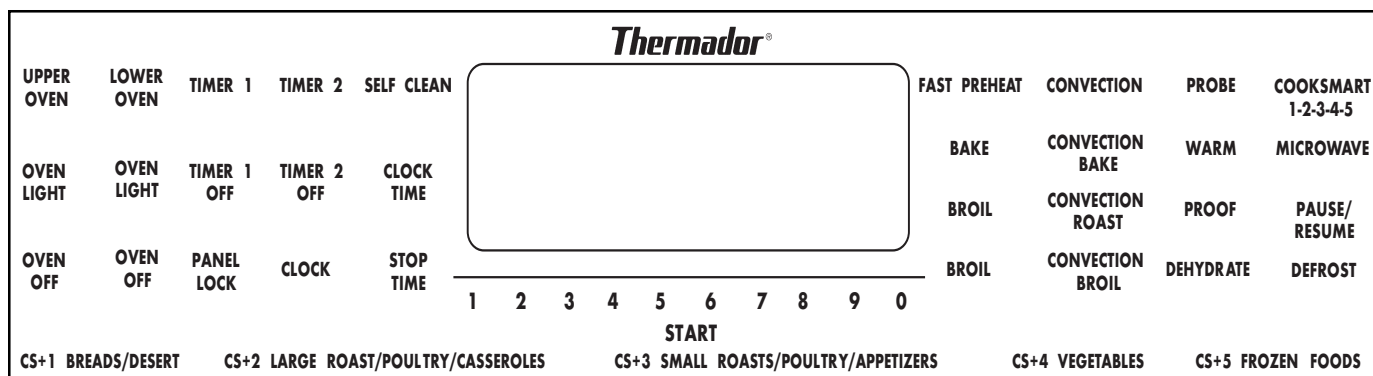


Illustration shows CM302 Control Panel.

**When using microwave modes, DO NOT operate the oven empty.**

### COOKSMART™

**COOKSMART** combines convection heat and microwave energy to cook food in approximately one-half the conventional cooking time.

Always preheat oven when using CookSmart modes. Refer to manual cooking charts for more information, including rack positions, (Pages 14 – 31).

#### To Use the CookSmart mode:

1. Touch **COOKSMART**.
2. Touch number pad (1, 2, 3 or 4) to enter the desired food category.
3. Touch **COOK TIME**.

4. Touch the number pads to enter the minimum conventional cooking time.

**NOTE: Set the time in hours and minutes.**

5. Touch **START** to begin preheating oven and to automatically reduce cooking time.
6. When preheat signal beeps, place food in center of oven and touch **START**.
7. To interrupt the mode to stir or check the doneness of the food, touch **PAUSE/RESUME**. To restart after interruption, touch **PAUSE/RESUME**.
8. To cancel before the cooking time ends, touch **OVEN OFF**.

#### • To set the Microwave mode,

1. Touch MICROWAVE pad, power level preset for HI.  
To change the power level (%), touch a number immediately before touching COOK TIME.

2. Touch COOK TIME pad and then the number pads for amount of time.

**Tip: Set the time in minutes and seconds.**

3. Touch START. To interrupt the mode to stir or check the doneness of the food, touch **PAUSE/RESUME**.

To restart after interruption, touch **PAUSE/RESUME**.

To end or cancel before the cooking time has expired, touch OVEN OFF.

#### • To set the Micro Broil mode,

**Tip: Do not preheat**

1. Select BROIL pad.
2. Touch START.
3. Select MICROWAVE pad.
4. To change power level (%), touch number immediately before touching COOK TIME.
5. Select COOK TIME.
6. Touch number pad to enter cook time. (set time in minutes and seconds).
7. Touch START.
8. After cooking ends, touch OVEN/OFF