


SIEMENS

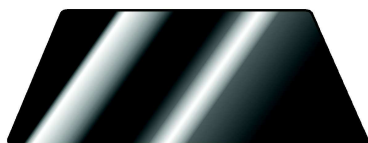

EN Instruction manual



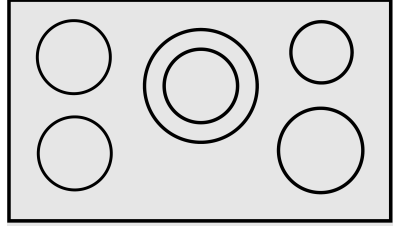
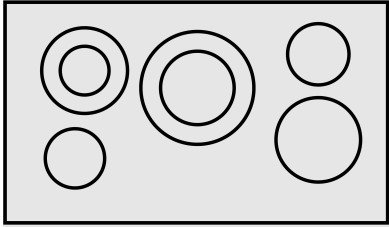


Table of contents

Important information	5
Before switching on your appliance	5
Safety precautions	5
Reasons for damage	7
Familiarising yourself with the appliance	10
The control panel	10
The Hotplates	11
Safety instructions. Residual heat	11
The cooking with Induction	12
What is induction cooking?	12
Suitable pans	12
Main switch with childproof lock	13
Main switch	13
Childproof lock	14
Cooking	15
Setting procedure	15
Table	16
Tips on saving energy	17
Keep warm function	18
Method of operation	18
Powerboost function	19
Using Powerboost function in hotplates 1, 2, 3, 5 and 6	19
Using Powerboost function in hotplate 4	20
Timer function	20
A hotplate is to switch off automatically	21

Table of contents

The alarm	21
Automatic time limiter	22
Switching off input confirmation	23
Control panel pause	23
Care and cleaning	24
Care	24
Cleaning glass ceramic	24
Cleaning the hob surround	25
Procedure in the event of a malfunction	26
Normal operating noises for the appliance	28
Packaging and old appliances	29
After-sales service	29
Acrylamide in foodstuffs	30

Important information

Read these instructions carefully. Only after reading these will you be able to operate the appliance correctly.

Please keep the use and installation instructions in a safe place. If the appliance is passed to another person, please enclose the instructions.

Before switching on your appliance

Transport damage

Check your appliance after removing the packaging. If it has suffered any damage during transport, do not connect the appliance but contact the Technical Services department.

Electrical connection or installation

Before using the appliance for the first time, you must ensure that the domestic electrical system is earthed and meets all the current safety regulations. An authorized electrician should install and connect your appliance.

Use of this appliance without an earth connection or incorrectly installed can cause serious injuries (injuries or electrocution), although this is very rare

The manufacturer does not accept any responsibility for any inappropriate use or for any injury caused by incorrect electrical installation.

Safety precautions

This appliance is intended only for domestic use. Only use the hob for food preparation.

This produkt is not intended for use by young children or infirm persons without supervision.

Cooking and heating food

During their cooking, food such as stews, soups, sauces or drinks may heat up too quickly without any indication, spilling out of the cookware.
It is therefore advisable to heat this type of food gently, selecting a suitable power level and stirring the contents before and during cooking.

Overheated oil and fat

Overheated oil or fat can ignite very quickly.
Risk of fire!
Never leave heating oil or fat unsupervised.
Should the oil ignite, do not try to put it out by pouring water on it.
Cover the pan with a lid or plate immediately.
Switch off the hotplate.
Leave the ovenware on the hotplate to cool down.

Hot hotplates

Do not touch hot hotplates. There is a risk of burning.
Children must be kept at a safe distance from the appliance. The residual heat indicator warns you that the hotplates are hot.

Never place combustible items on the hob.
Risk of fire!

You must not keep any combustible items or aerosol cans in a drawer located under the hob. Risk of fire!

The service cables from electrical appliances must not touch the hot hotplates. This could cause damage to the hob and the cable insulation.

Wet saucepan bases and hotplates

Steam pressure can be generated from the liquid between the base of the saucepan and the hotplate.
The steam pressure could cause the pan to jump suddenly. There is a risk of injury.
Always keep the hotplate and the bases of saucepans dry.

Cracks in the glass ceramic

If there are fractures, flaws or cracks in the glass ceramic, there is a risk of electric shock.
Switch off the appliance immediately.
Isolate the appliance from the power supply at the fuse box.
Call after-sales service.

The hotplate heats up, the indicator does not work

Switch off the hotplate if the hotplate heats up but the indicator is not working. There is a risk of burning.
Call after-sales service.

Do not place metal objects on the induction hob

Do not leave lids or other large metal objects on the hotplate. If the appliance is switched on by mistake, these objects will heat up very quickly and could cause burns.

Taking care of the cooling fan

This hob comes with a cooling fan mounted underneath. Be careful! If a drawer is fitted beneath the hob you must not keep small objects or paper in it as, if they are picked up, they could damage the cooling fan or affect the cooling system. Silver foil and flammable materials or liquids (for example sprays) must not be kept in the drawer or near the hob. There is a risk of explosion!

There should be a minimum distance of 2 cm between the drawer contents and the cooling fan.

Incorrect repairs

Incorrect repairs are dangerous. There is a risk of electrocution.

Repairs may only be carried out by one of our experienced after-sales engineers.

Power cable

Any adjustment to the appliance, including changing or installing the supply cable, should be carried out by the After-Sales Service.



This appliance complies with current safety regulations and electromagnetic compatibility regulations. Nevertheless, people with a **pacemaker** should not use this appliance. It is impossible to guarantee that all such devices found on the market comply with current safety regulations and electromagnetic compatibility regulations, and that dangerous interference will not occur. It is also possible that people with other types of device, such as a hearing aid, could experience some discomfort.

Reasons for damage

Saucepan and pan bases

Never use the hob instead of the kitchen unit worktop as a support or work surface.

Rough pan bases scratch the glass ceramic. Check your ovenware.

It is very important that cookware placed on an activated hob has liquid or food inside of it. Although your hob is equipped with an internal safety system, empty cookware can heat up so quickly that the "automatic OFF" function does not have time to react and may reach a very high temperature. The cookware base could also melt and damage the hob's glass surface. If this happens, do not touch the cookware and turn off the hob. If, after cooling, it does not work, please contact customer service".

Hot pans and saucepans

Never place hot pans or saucepans on the control panel, display area or the frame.
This could cause damage.

Salt, sugar and sand

Salt, sugar and sand cause scratches on the glass ceramic. Do not use the hob as a work surface or storage space.

Hard and pointed objects

Damage can occur if hard or pointed objects fall on the hob.
Do not store such objects above the hob.

Food spills


Sugar and food with a high sugar content damage the hob. Remove food spills immediately with a glass scraper.
Caution The glass scraper has a sharp blade.

Foil and plastic

Aluminium foil or plastic containers melt on hot hobs.
Oven protective foil is not suitable for your hob.


Examples of possible damage

The following damage does not affect the performance or strength of your hob.

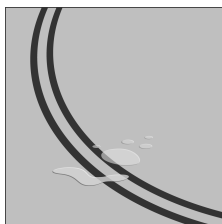


Presence of stains

Formed by spilled or melted sugar or food with a high sugar content.

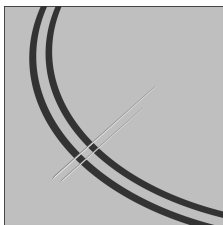


Scratches

Due to salt, sugar, grains of sand or irregularities in the base of the saucepans.

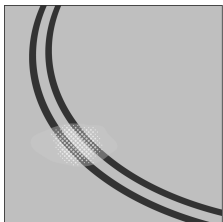

Colour loss

A colour change to a metallic shade due to wear by hobs or from the use of inappropriate cleaning products.

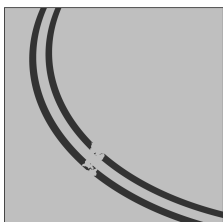

Decorative colour loss

Grinding decoration due to the use of inappropriate cleaning products.


The various types of damage mentioned above are caused by the incorrect use of the appliance, and therefore they are not covered by the warranty, as they are not technical problems relating to the appliance.

Familiarising yourself with the appliance

This section describes the control panels, hotplates and displays. They are shown by appliance model.

The instruction manual applies to various hobs. On page 2 you will find an overview of models with dimensions.

The control panel

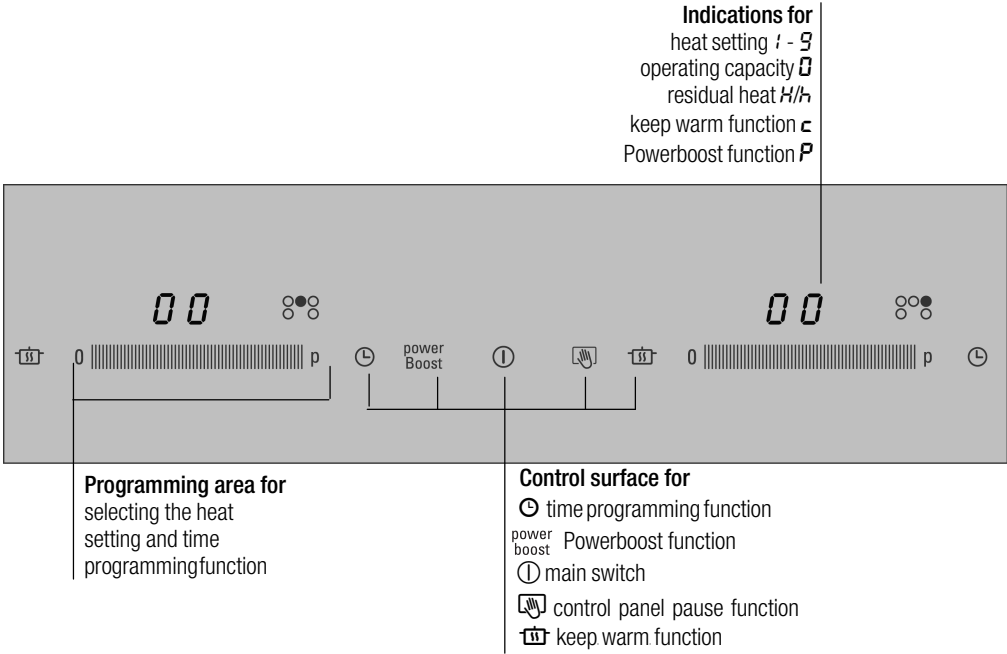

Control panels

When you touch a symbol, the respective function is activated.

Example: Touch the ① symbol.
The hob is switched on.


Note

The settings remain unchanged if several symbols are touched briefly. You can therefore easily mop up spills on the control panel.

Always keep the control panels clean and dry.
Moisture and dirt may impair function.

The Hotplates

Single cooking zone

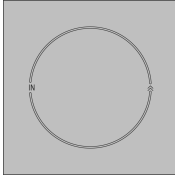


Select the appropriate hotplate.

The size of the pan should be the same as that of the hotplate.

In the “Suitable pans” section we recommend two types of pans for induction cooking.

Double hotplate

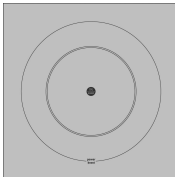


The size of these hotplates may be altered. The hotplate must be connected.

How the exterior zone operates:

Place a pan which has the same size base than the exterior zone. The exterior zone starts working automatically and the indicator light comes on ☉.

Safety instructions.

Residual heat

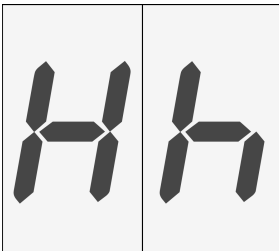

The hob has a residual heat indicator for each hotplate. It shows which hotplates are still hot.

You should, therefore, avoid touching the hotplate when this indicator is shown.

Although the hob is switched off, the indicator **h/H** will stay lit while the hotplate is hot.

If the pan has been removed but the hotplate has not been switched off, the indicator **h/H** will flash, showing the power level selected

The cooking with Induction

What is induction cooking?

Induction cooking constitutes a radical change in the traditional form of heating, given that the heat is generated directly in the pan, keeping the cooking surface cold. Therefore, it has a number of advantages over other cooking methods:

Greater speed in cooking and frying

As the pan is heated directly and not the glass, the efficiency is greater than in other systems because no heat is lost.

Economical

It has been proven that cooking with an induction is more economical than the other cooking methods.

Cooking control and safety

The hob supplies or cuts off the heat immediately the controls are operated. It stops supplying heat if the pan is removed without first switching off the power. If a cloth or other flammable object is left on the hob by mistake this will not catch fire, even with the hotplate switched on, because after the hob has been used, only the residual heat produced by the pan remains in the glass.

Cleaning

The glass is not heated, so food spilt on the hob surface will not burn. Furthermore, it is not necessary for the hob to cool down to allow cleaning. This provides maximum convenience and cleanliness.

Suitable pans

Always choose adequate sized pressure cookers and pans for the quantities of food that you are going to prepare. A large sized pressure cooker or pan that is only half full will use a lot of energy.

Only ferromagnetic pans are suitable for induction cooking. These can be of enamelled steel, cast iron or special stainless steel utensils for induction cooking. You must never use normal stainless steel, glass, ceramic, copper or aluminium pans. Check that your pans are attracted by a magnet to find out if they are suitable.

No pan.

If no pan is placed on the hotplate, or the pan is not made of a suitable material or it is not a suitable size, the number on the hotplate indicator, showing the power level, will flash. It will stop flashing once a suitable pan is placed on the hotplate.

If you take longer than ninety seconds to place a suitable pan on the hotplate, it will automatically turn itself off.

Main switch with childproof lock

Main switch

Switch on the electronics in the control panel using the main switch. Now the hob is ready for use.

Switching on

Touch the ① symbol until the – hotplate indicators light up.

If you have placed a pan on a hotplate before connecting the hob, a  will light up on its indicator.

Switching off

Touch the ① symbol until the – hotplate indicators go out. All hotplates are switched off. The residual heat indicator remains lit until the hotplates have cooled sufficiently.

Notes

The hob switches off automatically if all the hotplates have been switched off for more than 10 seconds.

If there is still residual heat available when the hob is switched back on, *H/h* and – flash alternately in the hotplate indicator.

Childproof lock

To prevent children from switching on the hotplates, you can secure the hob against being switched on inadvertently. The childproof lock remains permanently activated.

Activating the childproof lock

Switch on the hob using the ① main switch.

1. Set all hotplates to heat setting 2.
2. Switch off the hotplates, one by one, starting with the bottom right hotplate and anticlockwise.
3. Touch the main ① switch for at least 5 seconds, after which time a signal will sound.
The childproof lock is activated.

Operating the hob

To switch on, touch the ① main switch for more than 4 seconds. During this time the ② display flashes. As soon as the display goes out, the hob is switched on.

Deactivating the childproof lock

You can deactivate the childproof lock again. Proceed in the same manner as for activating the childproof lock.

Locking the hob once-off

You can lock the hob on a single occasion, if for example, small children are visiting:

The hob must be switched off.

Touch the ① main switch for more than 4 seconds. The hotplate indicators go out. The ② indicator lights up for 10 seconds and goes out. The hob is locked.

Unlocking once-off locking

Touch the ① main switch for more than 4 seconds. The hob is switched on. The hob is unlocked.

Important

The child-proof locks could be activated or deactivated unintentionally when the appliance is cleaned using water or as a result of spillages or objects covering the main switch ①.

Cooking

Control panel

This section informs you how to set the hotplates. The table shows heat settings and cooking times for various meals. The tips that follow help you to save energy.

Set the required heat setting in the control panel.

Heat setting 1 = lowest power level
Heat setting 9 = highest power level.


Every heat setting has an intermediate setting. This is identified by a dot.

Setting procedure

The hob must be switched on.


1. Select the cooking zone.

Touch the required cooking zone programming. A  will start to flash on its display acknowledgement.

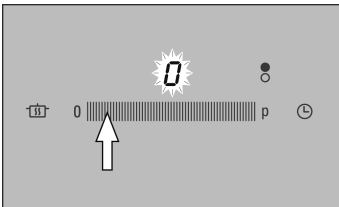

2. Within the next 5 seconds, slide your finger along the control panel until the desired heat setting appears in the hotplate display.

Heat setting 1 = lowest power level
Heat setting 9 = highest power level

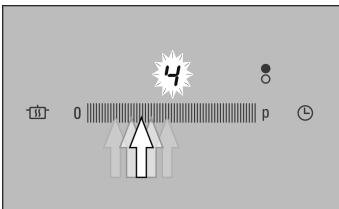

Alter the heat setting

Slide the finger over the programming zone until reaching the required heat setting.

Switching off the hotplate

Select the hotplate and set it to 0.

The hotplate is switched off, and the residual heat display appears after approximately 5 seconds.

Table

The following table provides a few examples.
The cooking time may vary depending on the type of food, its weight, and quality. Deviations are therefore possible.

	Amount	Heat setting 9	Ongoing cooking	Ongoing cooking time
Melting				
Chocolate, chocolate coating, butter, honey	100 g	-	1 - 2	-
Gelatine	1 pck.	-	1 - 2	-
Heating				
Canned vegetables	400 g - 800 g	1 - 3 mins	2 - 3	3 - 6 mins
Clear soup	500 ml - 1 ltr	2 - 3 mins	7 - 8	3 - 6 mins
Thick soup	500 ml - 1 ltr	1 - 3 mins	2 - 3	2 - 4 mins
Milk**	200 ml - 400 ml	1 - 3 mins	1 - 2	2 - 4 mins
Heating and keeping warm				
Stew (e.g. lentil stew)	400 g - 800 g	1 - 2 mins.	1 - 2	
Milk	500 ml - 1 ltr.	2 - 3 mins.	1 - 2	
Defrosting and heating				
Frozen spinach	300 g - 600 g	3 - 4 mins.	2 - 3	5 - 15 mins.
Frozen goulash	500 g - 1 kg	3 - 4 mins.	2 - 3	20 - 30 mins.
Simmering				
Dumplings, meatballs (1 - 2 ltr. water)	4 - 8 pieces	6 - 9 mins.	4 - 5*	20 - 30 mins.
Fish	300 g - 600 g	3 - 6 mins.	4 - 5*	10 - 15 mins.
Cooking				
Rice (with double the amount of water)	125 g - 250 g	2 - 4 mins	2 - 3.	15 - 30 mins
Rice pudding (500 ml - 1 litre milk)	125 g - 250 g	3 - 5 mins	2 - 3	25 - 35 mins
Potatoes boiled in their skins with 1 - 3 cups water	750 g - 1.5 kg	3 - 5 mins	4 - 5	30 - 35 mins
Boiled potatoes with 1 - 3 cups water	750 g - 1.5 kg	3 - 5 mins	4 - 5	15 - 25 mins
Fresh vegetables with 1 - 3 cups water	500 g - 1 kg	3 - 4 mins	4 - 5	10 - 20 mins
Pasta (1 - 2 litres water)	250 g - 500 g	6 - 9 mins	6 - 7*	6 - 10 mins

	Amount	Heat setting 9	Ongoing cooking	Ongoing cooking time
Roasting				
Roulade	4 pieces	4 - 6 mins	4 - 5	50 - 60 mins
Pot roast	1 kg	4 - 6 mins	4 - 5	60 - 100 mins
Goulash	500 g	4 - 8 mins	4 - 5	50 - 60 mins
Frying				
Pancakes (Flädle, Swabian pancakes)		1 - 2 mins	6 - 7	Constant frying
Cutlet, breaded	1 - 2 pieces	1 - 2 mins	6 - 7	6 - 10 mins
Steak	2 - 3 pieces	1 - 2 mins	7 - 8	8 - 12 mins
Fish fingers	10 pieces	1 - 2 mins	6 - 7	8 - 10 mins
Deep-fat frying (in 1-2 ltr. oil)				
Deep-frozen foods**				
	200 g per serving	8 - 13 mins	8 - 9*	constant deep-fat frying
Others**				
	400 g per serving	8 - 13 mins	4 - 5*	constant deep-fat frying

* ongoing cooking without lid

** without lid

Tips on saving energy

The correct saucepan size

Use saucepans and pots with thick, even bases. Uneven bases increase the cooking time.

Select the correct saucepan size for each hotplate. The diameter of the bases of the saucepans and pots should match the size of the hotplate.

Note: Ovenware manufacturers often give the diameter of the top of the saucepan. It is usually larger than the diameter of the base of the saucepan.

Use a small saucepan for small quantities. A larger, less full saucepan requires more energy.

Using a lid

Saucepans and pots should always be covered with a suitable lid. Cooking without a lid requires much more energy.

Cooking with small quantities of water

Cook with small quantities of water. This saves energy and helps vegetables to retain vitamins and minerals.

Lowering the heat setting

Switch down to a lower heat setting in good time.

Keep warm function

All induction hotplates have the keep warm function.

Method of operation

The keep warm function is suitable for melting chocolate or butter or keeping food warm. This only works with pots and pans suitable for use with induction hobs.

If the "keep warm" function is activated, the hotplate automatically changes to its minimum power setting to keep cookware warm.

The function is activated as follows

Follow these steps:

1. Select the heat setting.
2. Touch the symbol  on the required cooking zone. The letter **W** will come on. You have activated the function.

How to deactivate it


Follow these steps:

1. Touch the symbol  on the cooking zone required. The letter **W** will disappear. The function will be deactivated

Powerboost function

Use this function to heat up the contents of the pan faster than if you use the maximum power level (**9**). This function allows you to increase the maximum power level of the hotplate in use.

Using Powerboost function in hotplates 1, 2, 3, 5 and 6

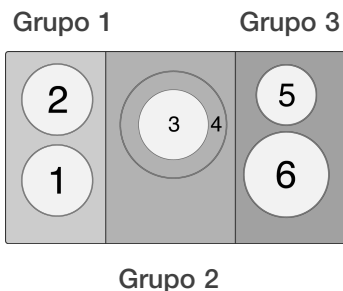

The Powerboost function will always be available when the other hotplate of the same group is not switched on. (See illustration)

For example, if you want to activate this function in hotplate 6, number 5 (situated behind it) should be switched off, and vice versa. If the zone referred to is not switched off, the letter **P** and the power level **9** in the hotplate indicator will flash; it will return to the maximum power level setting (**9**). The same applies to hotplates 1 and 2.

In hotplate number 3, the Powerboost function can be activated at any time, so long as the outer cooking zone (number 4) is not working (see picture).

This is how to activate it

Carry out the following steps:


1. Select the heat setting **9**.
2. Touch the programming zone situated over the symbol **P**. The letter **P** will light up on the cooking zone display acknowledgement.

This is how to activate it

Carry out the following steps:

1. Touch the programming zone situated over the symbol **P**. The **P** will no longer be displayed. The Powerboost function has been deactivated.

Using Powerboost function in hotplate 4

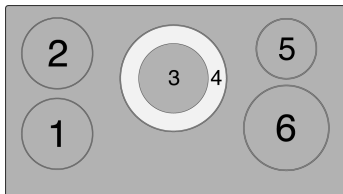

How to activate it

This function can only be activated when the outer zone is working and cooking zones 3 and 4 are not activated.

If cooking zone 3 or 4 is switched on when the Powerboost function is activated, the zone display will flash **P** and **9** alternately before returning to the maximum power level 9.

Follow the steps below:

1. Select any power level.
2. Touch the symbol . The letter **P** will appear on the display. The function will have been activated.

How to deactivate it

Follow the steps below:

1. Touch the symbol . The **P** will no longer be displayed. The Powerboost function will have been disconnected.



In certain circumstances, the Powerboost function may be deactivated automatically to protect the internal electronic components of the hob.



Timer function

This function can be used in two different ways:

- to switch a hotplate off automatically
- as a cooking timer

A hotplate is to switch off automatically

Setting procedure

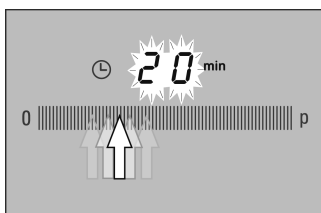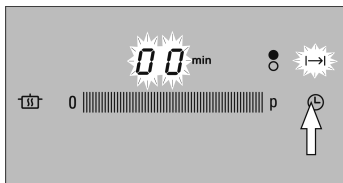

Enter a cooking time for the relevant hotplate. When the cooking time has elapsed, the hotplate switches off automatically.

The hotplate must be switched on.

- 1 Touch the symbol **I->I** on the cooking zone required. An 00 lights up on the display acknowledgement as well as the indication **I->I**.
2. Touch the preset you require in the control panel.

Cooking time has finished.

Once cooking time has finished, the cooking zone switches off. You will hear a signal. 00 and **I->I** will flash on the heat setting display acknowledgement.

Alter the time

Touch the symbol **j** on the required cooking zone. Make the setting again.

Cancel before time

Touch the symbol **I->I** on the required cooking zone. Put the cooking time to 00.

Notes

!The timer function is no longer active if there is a power cut.

The alarm

How to program

With the alarm it is possible to program a time of up to 99 minutes.

The cooking hob must be switched on.

Touch the symbol **j** on the required cooking zone. 00 will light up on the display acknowledgement.

Select the required duration time in the programming zone.

Once the clock has stopped

After a few seconds, the clock will start running.

A signal will sound at the end of the cooking time. 00 will flash on the display acknowledgement. Touch any control surface. The indication disappears and acoustic signal ends.

Change the time

Touch the symbol  on the required cooking zone. Reselect the duration time.

Suggestions and warnings

Although the cooking hob is switched off, the alarm continues to work until the previously established duration time has elapsed.

After selecting a heat setting, the alarm will change its functionality when working; the cooking zone automatically switches off.

Note

After a power cut, the alarm is deactivated.

Automatic time limiter

If a hotplate is in constant use for a long time without the setting being changed, the automatic time limiter will be activated.

The hotplate heating is interrupted.

An **F** and an **B** flash alternately in the hotplate indicator.

The indicator goes out when you touch any control panel. Now you can reset the hotplate.

The time at which the time restriction is activated depends on the heat setting (1 to 10 hours).

Switching off input confirmation

A short buzz confirms that a button has been touched. This buzzer can be turned off:

Switch on the hob using the main switch.

1. Set all hotplates to heat setting 3.
2. Switch off all the hotplates one by one from right to left.
3. Touch the main switch for at least 5 seconds, after which a confirmation signal sounds.

You may also switch the input confirmation on again. Proceed in the same manner as for switching off.

Control panel pause

If you wipe over the control panel while the hob is switched on, settings may be altered.

To prevent this, your hob has a control panel pause function. Touch the  symbol. The control panel is locked for 20 seconds. You can now wipe over the control panel without altering any settings.

A signal sounds after 20 seconds. The control panel pause function is switched off. The lock on the control panel is cancelled.

Note

When the electric hob is working, the blocker does not affect the symbol  or the main switch. The control panel pause function can be deactivated and the hob switched off when required.

If the cooking hob is switched off and the control panel pause function activated, the whole control panel will be blocked, including the main switch.

Care and cleaning

Do not use high pressure cleaners or steam jets.

Care

Clean your hob using a protective/care product for glass ceramic. It coats the cooking surface with a glossy, dirt-repellent film. Your hob will continue to look good for a long time. It makes cleaning easier.

Cleaning glass ceramic

Cleaning agents

Only use cleaning agents which are suitable for glass ceramic, e.g. CERA CLEAN, cera-fix, Sidol for ceran + steel.


Water marks can also be removed using lemon juice or vinegar.

Unsuitable cleaning agents

Do not use:

Abrasive sponges, scouring pads or aggressive cleaning agents, such as oven spray or stain remover.

Glass scraper

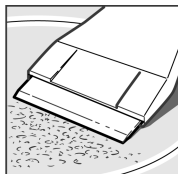

You can remove thick dirt best with a glass scraper.

Remove the protective cover from the glass scraper. Only use the blade to clean the glass ceramic surface. The casing may scratch the ceramic surface.



The blade is very sharp. There is a risk of injury. Cover the blade after cleaning.

Replace damaged blades immediately.

How to clean the glass ceramic cooking surface

Use the glass scraper to remove food residues and grease splashes.

Use a cleaning product and kitchen towel to clean the surface when it is luke warm. If the surface is still too hot it can become stained.

Wipe the surface and rub dry with a soft cloth.

Shimmering metallic discoloration

Discoloration is caused by pan abrasion or the use of unsuitable cleaning agents. This is very difficult to remove. Use Hob Clean or Sidol for ceran + steel. Our after-sales service can remove discoloration, but will charge for this service.

Control panels

Always keep the control panels clean and dry. Food residues and spills can impair the function of the control panels.

Cleaning the hob surround

Only use warm soapy water.

Do not use anything which is sharp or abrasive. The glass scraper is unsuitable. The hob surround could be damaged.

Neither lemon juice nor vinegar should be used for cleaning the hob surround.

This could result in matt patches.

Procedure in the event of a malfunction

Malfunctions often have simple explanations and may be easily rectified. Please read the following instructions before calling the after-sales service.

The circuit breaker in your household electrical circuit trips when you switch on the hob

Make sure that the power draw of all the appliances switched on does not exceed your maximum household electricity supply. Check whether the circuit breaker triggers when you switch on another hotplate.

E is flashing in all the hotplate displays and a signal is sounding

The control panel is very dirty, food has been spilt or an object has been placed on the work surface. Clean the control panel thoroughly or remove the object from the work surface. Press the control panel concerned. The flashing stops.

The hob has switched itself off

The main switch was touched inadvertently. Switch the hob back on. Adjust the settings again.

The display flashes (there is no power) when you place a saucepan on an induction hotplate

Check whether the saucepan is electromagnetic (attracts a magnet). Check whether the diameter of the saucepan is large enough.

Allow the saucepan to cool down in the event that it has become too hot when used.

If the display still does not light up when you switch the hotplate off and on again, disconnect the appliance from the mains. Wait 20 seconds and then reconnect it.

The powerboost function display flashes and then switches off

The powerboost function operates the hotplate with the most possible power. During long cooking times, it is possible that the function will switch the hotplate off to protect the hob from overheating. You can continue to use the hob if the display is not flashing.

Repairs

Repairs may only be carried out by trained customer service personnel.



Incorrect repairs to the appliance may expose the user to increased risks.

***E* and numbers**

If *E* and numbers appear in the display panels, there is a fault in the electronics. Disconnect the appliance from the mains and reconnect it. Consult the after-sales service if the display appears again.

***F* and numbers**

If *F* and a number flash alternately in the display, your appliance is indicating a fault. The following table contains measures for rectifying faults.

Visual indication	Fault	Measure
<i>EO</i>	An internal error was produced while the hob was working.	Disconnect the cooking hob from the mains. Wait a few seconds before connecting it again. If the symbol continues to appear contact the technical assistance service.
<i>F2</i>	The cooking hob is too hot and has turned off.	Remove the cookware from the front cooking zones. <i>F2</i> it is turned off by touching the control surface if the hob has cooled down sufficiently.
<i>F4</i>	The cooking hob is too hot and has turned off.	Check whether there is any hot cookware on the control panel. Remove the cookware from the control panel. Wait a few minutes until the control panel has cooled a little. If after connection <i>F4</i> appears again, call the technical assistance service.
<i>F8</i>	The cooking zone has been working at a high power and continuously for too long.	Automatic time limitation has been activated. To continue cooking touch any sensor.
<i>E1</i>	The power voltage is too low.	Deactivate the hob. Wait a few seconds before connecting it again. If the indication continues, contact your electricity supplier.
<i>E2/E3</i>	The cooking zone has overheated.	It has been automatically deactivated to protect your hob. Wait a few minutes for it to cool down and switch it back on again.
<i>U400</i>	The cooking hob is not well connected.	Disconnect the cooking hob from the mains. Check the connection and connect it again correctly. If the indication continues, notify the technical assistance service.

Normal operating noises for the appliance

Low humming like a transformer

Induction heating technology is based on the vibration resistance of certain metals when subjected to high-frequency waves. In some circumstances, these vibrations can cause a certain degree of noise, such as the following:

This occurs when cooking at a high power. The cause of this is the amount of energy which is transmitted from the hob to the cookware. This noise disappears or becomes quieter when the power is turned down.

Quiet whistling

This occurs when the cookware is empty. This noise disappears when water or food is added to the cookware.

Crackling

This noise occurs when cookware is used which consists of layers of different materials. The noise is caused by vibrations in the joint faces between the different layers. This noise is made by the cookware. It may change depending on the amount and type of food being cooked.

High-pitched whistle

This noise occurs principally in cookware which consists of layers of different materials when it is used at the highest heat setting and on two hotplates next to each other. This whistling disappears or becomes quieter when the power is turned down.

Fan noise

The electronics require a controlled temperature in order to function reliably. The hob is therefore fitted with a fan which runs at various speeds according to the temperature detected. The fan may also run on once the hob has been switched off if the temperature it detects is still too high.

The noises described are normal and part of the induction technology and do not indicate a fault.

Packaging and old appliances

Disposing in an environmentally-responsible manner



Unpack the appliance and dispose of the packaging in an environmentally-responsible manner.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

This guideline is the frame of a European-wide validity of return and recycling on Waste Electrical and Electronic Equipment.

After-sales service

E number and FD number

Our after-sales service is there for you if your hob should need to be repaired. You will find the address and telephone number of your nearest after-sales service centre in the phone book. The after-sales service centres listed will also be happy to advise you of a service point in your local area.

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found in the appliance booklet.

Acrylamide in foodstuffs

Experts are currently discussing how harmful acrylamide is in food. We have compiled this information for you, based on the results of current research.

Which foods are affected?

Acrylamide is mainly produced in grain and potato products heated at high temperatures, such as potato crisps, chips, toast, rolls, bread, baked goods made from shortcrust pastry (biscuits, gingerbread, cookies).

Tips for reducing acrylamide in food production

General	When roasting and deep frying, use potatoes that are as fresh as possible. They must not have sprouted or have any green parts. Do not store potatoes at temperatures below 8 °C. Cook meals until they are golden brown, not too dark. Keep roasting and deep-frying times to a minimum. Large, thick pieces of food contain less acrylamide.
Frying	Fat should not be hotter than 175 °C. Check the temperature with an external fat thermometer. The ratio of deep-fried food/fat should be between 1:10 and 1:15, e.g. 100 g chips in 1.5 l oil. Soak potatoes for one hour before deep frying.
Roasting in the pan	Boil potatoes before roasting them. For raw potatoes, use margarine instead of oil. A surface thermometer is useful for checking the surface temperature in the pan, (order number 0900.0519 from testo). We recommend: Heat the roasting pan at heat setting 9. Once the pan reaches 150 °C, turn the heat back down to the setting desired for the remaining cooking time.



www.siemens-international.com

9000257139 (1W06N0) 00 8705