



HB23.B..0., HV23.B..0.,  
HB43.S..1., HB23.B..0.

**Built-in oven**

**SIEMENS**

<b>Safety advice and information</b> .....	<b>2</b>	Fitting and removing the glass panels .....	11
Before installation .....	2	<b>Troubleshooting</b> .....	<b>12</b>
Safety advice and information .....	2	Troubleshooting table .....	12
Items that may damage the appliance .....	3	Changing the oven bulb .....	12
<b>Your new oven</b> .....	<b>4</b>	Protective glass panels .....	12
Control panel .....	4	<b>After-sales service</b> .....	<b>12</b>
Function control knob .....	4	E number and FD number .....	12
Control buttons and display panel .....	4	<b>Energy-saving and environmental protection tips</b> .....	<b>13</b>
Temperature control knob.....	5	Saving energy.....	13
Oven interior .....	5	Environmentally-friendly disposal of waste .....	13
Accessories .....	5	<b>Tested for you in our cooking studio</b> .....	<b>13</b>
<b>Before using the oven for the first time</b> .....	<b>6</b>	Cakes and pastries .....	13
Setting the time .....	6	Practical cooking tips and suggestions .....	14
Heating the oven.....	6	Meat, poultry, fish .....	15
Cleaning the accessories.....	6	Tips for roasting and grilling.....	16
<b>Programming the oven</b> .....	<b>6</b>	Gratins, soufflés, browned items .....	17
Type of heating and temperature .....	6	Ready-made products .....	17
Rapid heating .....	6	Special dishes.....	17
<b>Setting the time functions</b> .....	<b>7</b>	Defrosting.....	17
Timer .....	7	Drying.....	18
Cooking time .....	7	Jam making .....	18
End time.....	8	<b>Acrylamide in food</b> .....	<b>19</b>
Time.....	8	<b>Test dishes</b> .....	<b>19</b>
<b>Childproof lock</b> .....	<b>8</b>	Baking .....	19
<b>Changing the basic settings</b> .....	<b>9</b>	Grilling.....	20
<b>Care and cleaning</b> .....	<b>9</b>		
Cleaning products .....	9		
Light.....	10		
Removing the grill heating element.....	10		
Removing and refitting the wire shelves or left and right hand side rails .....	10		
Unhooking and hanging the oven door .....	10		

Additional information on products, accessories, replacement parts and services can be found at **www.siemens-home.com** and in the online shop **www.siemens-eshop.com**

## Safety advice and information

Read the instructions in this manual carefully. Keep the operation and installation instructions. The corresponding manual must be passed on to any subsequent owner.

This instruction manual is for use with both stand-alone ovens and oven-hob combinations. Read the instruction manual supplied with the hobs of oven-hob combinations to find out how their hob controls work.

### Before installation

#### Transport damage

Check the appliance after removing it from its packaging. If the appliance has been damaged in transit, do not connect it to the mains; contact the technical support service and note the damage in writing, otherwise you may lose your rights to compensation.

#### Electrical connection

Only an authorised technician may connect the appliance. The warranty is void if any damage is caused by incorrect connection.

Before using the appliance for the first time, ensure that your domestic electrical system is earthed and meets all the current safety regulations. An authorised technician should install and connect your appliance. Use of this appliance without an earth connection or incorrectly installed can cause serious injuries (personal injuries or electrocution), although this is very rare. The manufacturer accepts no responsibility for any malfunction or damage which is caused by improper electrical installations.

### Safety advice and information

This appliance has been designed exclusively for domestic use. Only use the appliance for preparing food.

Children and young adults should not use the appliance without supervision

- because they may suffer either physical or mentally injuries, or
- may not have the knowledge and experience to use it correctly

Never allow children to play with the appliance.

### Oven door.

The oven door must remain closed when the oven is switched on. For safety reasons, we recommend keeping the oven door closed, even when the oven is not being used.

Do not lean on, sit on or play with the oven door, even when it is closed.

### Hot oven interior

#### Risk of burns.!

- Never touch the oven's inner surfaces or heater elements when they are hot. Always carefully open the oven door. The oven may let out steam. Keep children away from the oven.
- Do not pour water into a hot oven. This can produce extremely hot water vapour.
- Do not use the oven to prepare dishes with large quantities of strong alcoholic liquor. Alcohol vapour can ignite inside the oven. Only use strong alcoholic liquors in small doses and take care opening the oven door.

#### Risk of fire!!

- Never put flammable objects into the oven. Never open the door if smoke is coming from the appliance. Turn it off. Remove the plug from the mains or disconnect the fuse/circuit breaker in the fuse box.
- Ensure that the greaseproof paper is securely fixed to the accessories when pre-heating the appliance. An air current occurs when the appliance door is opened. The greaseproof paper could touch the heating elements and burn. Always secure the greaseproof paper with a pan or baking tin. Only cover the required surface with greaseproof paper. The greaseproof paper must fit the accessory perfectly.

#### Danger of short-circuits!

Never put the electric cables of electric appliances around the door of the oven. The cable insulation could be damaged.

### Hot accessories and pans/dishes

#### Risk of burns.!

Never remove accessories or hot dishes from the oven without using grippers.

### Inappropriate repairs

#### Risk of electrical discharge and the resulting shock.!

Incorrect repairs can be dangerous. Repairs can only be carried out by qualified personnel from the Technical Assistance Service. If the appliance is faulty, unplug from the mains or remove the fuse/turn off the trip switch of the fuse box. Notify the Technical Assistance Service.

### Enhanced safety for the door

With certain recipes which require extended use of the oven at high temperatures, the oven door may become extremely hot. If you have small children at home, keep an eye on them while the oven is being used.

A safety device which prevents direct contact with the oven door is also available. This optional accessory (671383) may be obtained from our Technical Assistance Service.

## Items that may damage the appliance

### Caution!

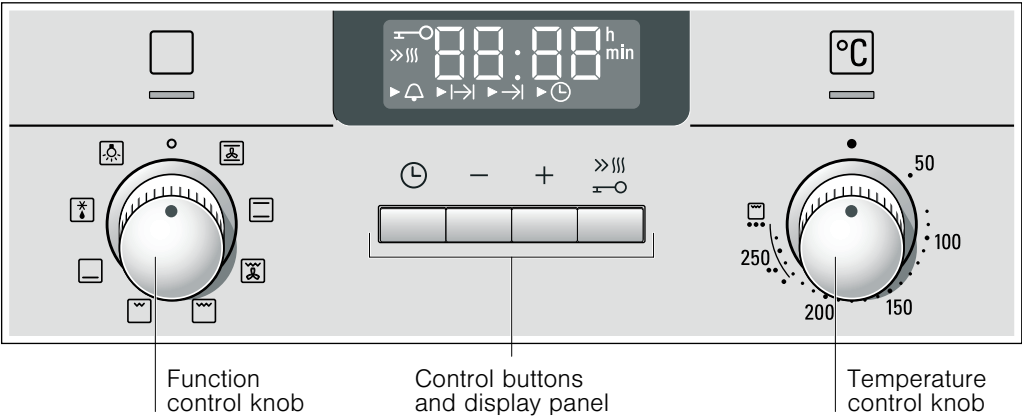
- Accessories, pans, film, greaseproof paper or aluminium foil on the oven floor: Do not place any accessory on the oven floor. Do not cover the oven floor with any type of film or paper. Do not place any cookware on the oven floor if the temperature is set at more than 50 °C. It will get too hot. Oven and cooking times will be inaccurate and the enamel will be damaged.
- Water in a hot oven Do not pour hot water into a hot oven. Steam will be produced. The resulting changes in temperature may damage the enamel and/or accessories.
- Liquid foods: Do not keep liquid foods for too long inside the oven with the door closed. This would damage the enamel.
- Fruit juices: Do not overfill the tray when baking pies containing juicy fruits. Fruit juice spilling from the tray will cause stains that will be impossible to remove. Use the deep enamel tray whenever possible.
- Leaving the door open when the oven is cooling down The oven must only be left to cool with the door closed. Even if the oven door is left only slightly open, the fronts of nearby kitchen units may be damaged over time.
- Dirty oven seal A very dirty oven seal will prevent the oven door from remaining properly closed during operation. The fronts of nearby kitchen units may be damaged. Keep the oven door seal clean at all times.
- The oven door as a support surface: Do not rest or sit on the oven door when it is open. Do not place any cookware or accessory on the oven door.
- Transporting the appliance: Do not use the door handle to move or secure the appliance. The handle cannot take the weight of the appliance and may break. The glass panel of the oven door might move, causing misalignment between the front panel and the glass panel.
- Grilling: When grilling, do not place the universal deep tray or the flat oven tray at a height of more than 3. Due to the extreme heat, it could be deformed and cause damage to the enamel when it is removed. Use level 4 and 5 only for direct grilling.

# Your new oven

We will now describe your new oven. This chapter explains the functions of the control panel and its individual elements. Information is also provided about the oven's accessories and internal components.

## Control panel

Below is a general overview of the control panel. The display panel cannot show all the symbols at the same time. Elements may vary according to the model.



### Retractable control knobs

In some ovens, the control knobs are retractable. The control knob is retracted or returned by pressing it when at the zero setting.

### Function control knob

The function control knob is used to select the type of heating.

Setting	Use
Zero setting	The oven is off.
Hot air*	For cakes and pastries. These can be baked on two levels. A fan located on the rear wall of the oven disperses the heat evenly.
Top and bottom heating*	For cakes, gratin dishes, and lean meat roasts, e.g. veal or game, on one level. The heat is provided by the bottom and top heating elements.
Grill with hot air	For roasting joints of meat, poultry and fish. The grill heating element and the fan switch on and off alternately. The fan circulates the heat generated by the grill around the food.
Large surface grill	For grilling steaks, sausages, fish and toasting bread. The entire surface below the grill heating element is heated.
Grill, small surface area	For grilling a small number of steaks or sausages or small amounts of fish, and toasting bread. Only the central area of the grill heating element heats up.
Bottom heating	Confits, baking and cooking au gratin. The heat comes from the bottom heating element.

\* Type of heating used to determine the appliance energy efficiency rating according to EN60350.

Setting	Use
Defrosting	Defrosting, e.g. meat, poultry, bread and cakes. The fan circulates the hot air around the food.
Light	For turning on the oven light.

\* Type of heating used to determine the appliance energy efficiency rating according to EN60350.

When a cooking method is selected the light inside the oven comes on and on some ovens the indicator light on the function control knob also comes on.

### Control buttons and display panel



The buttons are used to set different additional functions. The set values are shown on the display panel.



Button	Use
Time functions	Select the timer , the cooking time , the end time  and the actual time .
Minus	Reduces programmed values.
Plus	Increases programmed values.
Rapid heating	Heats the oven particularly quickly.
Childproof lock	Blocks and unblocks the control panel.

On the display panel, the arrow appears in front of the symbol for the time function that is active.

## Temperature control knob

The temperature control knob is used to select the temperature or the grill power level.

Setting		Meaning
●	Zero setting	The oven does not heat up.
50-270	Temperature range	The temperature inside the oven in °C.
•, ••, •••	Grill power	The power levels of the small surface grill  and large surface grill  . • = level 1, low •• = level 2, medium ••• = level 3, high

When the oven heats up, the indicator light for the temperature control knob comes on. This light goes off when heating is paused. The indicator lamp does not light with light function  or with the defrost function .

**Note:** If grilling for more than 15 minutes, turn the temperature control knob to the low setting.

## Oven interior

The oven includes a fan and light.


### Fan

The fan can be turned on and off as necessary. The hot air escapes through the top of the door. Warning! Do not cover the vent. The oven could overheat.

The fan remains on for a certain length of time after the oven has been switched off so that it can cool down more quickly.

### Light

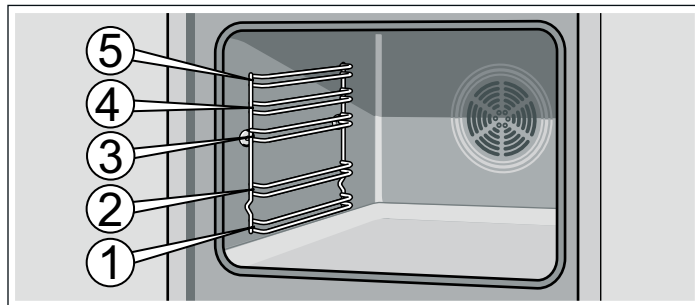
The oven light remains on while the oven is on.

However, the light can be turned on without the oven being on by setting the function control knob to .

## Accessories

Racks may be positioned in the oven at 5 different heights.

Up to 2/3 of a rack may be pulled out without it tipping over. This makes it easy to remove food.



Racks may deform as they heat up. Once they have cooled, the deformation disappears and their operation is unaffected.


Your oven is supplied with only some of the following accessories.

Accessories may be purchased from the Technical Assistance Service, from specialist retailers or on the Internet. Enter the HZ number.



### Shelf

For cookware, baking tins, roasts, grilled items and frozen meals.


Put the shelf in the oven so that the curved part is face down .



### Flat enamel oven tray

For cakes, pastries and biscuits.

Place the tray in the oven with its raised lip facing the door.



### Universal deep enamel tray

For juicy cakes, pastries, frozen meals and large joints for roasting. This can also be used as a tray to collect the fat when roasting directly on the shelf.

Place the tray in the oven with its raised lip facing the door.

## Special accessories

Accessories may be purchased from the Technical Assistance Service or from specialist retailers. There is a wide range of accessories available for the oven in our catalogues and on the Internet. Ordering online and the availability of special accessories changes from country to country. Consult your purchase documentation.

Not all of the special accessories are suitable for all appliances. When purchasing, always give the exact name (E-Nr.) of your appliance.

Special accessories	HZ number	Use
Flat enamel oven tray	HZ361000	For cakes and biscuits.
Universal deep enamel tray	HZ362000	For cakes with juices, pastries, frozen meals and large joints for roasting. This can also be used as a tray to collect the fat when roasting directly on the shelf.
Shelf	HZ364000	For kitchen pans, cookware, baking tins, roasts, items placed directly on a shelf and frozen meals.
Pizza tray	HZ317000	Ideal for pizza, frozen foods, or large round cakes. The pizza tray can be used instead of the universal deep tray. Place the tray on the shelf and follow the indications in the tables.
Metal pan	HZ26000	The casserole dish may be used on the roasting areas of the ceramic hob. It is ideal when using the cooking sensors for the automatic programme and for automatic roasting. The casserole dish is enamelled on the outside and has a non-stick internal coating.

Special accessories	HZ number	Use
Glass casserole dish	HZ915001	The glass casserole dish is ideal for preparing stews and foods that need browning in the oven. It is especially suitable for automatic programmes and automatic roasting.
Triple removable guide rails	HZ368300	The triple guide rails at levels 1, 2 and 3 ensure that accessories can be fully removed without them tipping over.

## Before using the oven for the first time

In this section, you can find out what you must do before using your oven to prepare food for the first time. First read the section on *Safety information*.

### Setting the time

Once the oven has been connected, the ⌚ symbol and three zeros are shown. Set the time.


1. Press the ⌚ button.


The display shows the time 12:00.

2. Adjust the time with the buttons + or -.

The programmed time is displayed after a few seconds.

### Heating the oven

To remove the "new" smell, heat the oven empty with the door closed. The most effective option is to heat the oven for one hour with the top and bottom heating elements  set at 240 °C. Check that no packaging has been left inside the oven.

1. Select top and bottom heating  using the function control knob.

2. Select 240 °C with the temperature control knob.

Turn the oven off after one hour. To do this, turn the function control knob to zero.

### Cleaning the accessories


Before using the accessories for the first time, clean them thoroughly using a cloth, hot water and a little soap.

## Programming the oven

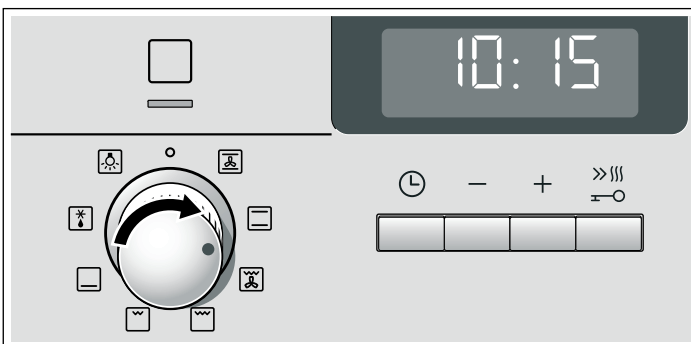
There are different ways to programme the oven. Programming the type of heating, temperature or grill power. The oven can be programmed with the cooking time (duration) and the end time for each dish. For more information, see the chapter *Setting the time functions*.

**Note:** We recommend preheating the oven before inserting the food in order to avoid condensation on the oven glass.

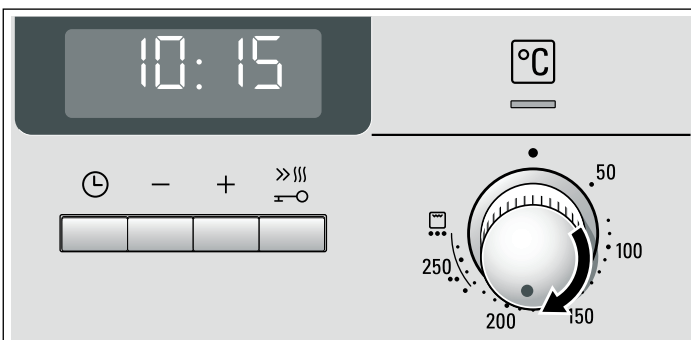
### Type of heating and temperature

Example in the picture: top and bottom heat  at 190 °C.

1. Select the type of heating using the function control knob.



2. Select the temperature or grill power level with the temperature control knob.



The oven will begin to heat up.

### Switching off the oven

Turn the function selector to the off position.




### Changing the settings

The type of heating and temperature or grill setting can be changed at any time using their respective selectors.


### Rapid heating


With the rapid heating function, the oven reaches the programmed temperature very quickly.

Rapid heating must be used for temperatures of more than 100 °C. Suitable types of heating:


- Hot air 
- Top and bottom heating 
- Bottom heating 

To ensure uniform cooking, the food must not be put into the oven until rapid heating has been completed.



1. Select the temperature and type of heating required.
2. Briefly press the  button.

The display panel shows the  symbol. The oven will begin to heat up.

### End of rapid heating






A beep will sound. The  symbol disappears from the display panel. Put the food in the oven.

### Cancelling rapid heating

Briefly press the  button. The  symbol disappears from the display panel.





# Setting the time functions



This oven has various time functions. Using the  button, the menu is displayed and you can step from one function to another. The time symbols remain lit up while settings are programmed. The arrow  shows the selected time function. Using the  or  buttons it is possible to change the time function that has already been set, as long as the time symbol is indicated by the arrow .


## Timer


The timer works independently of the oven. The timer has its own beep. This can be used to distinguish whether the time set for the timer or the automatic oven shut-off have finished (cooking time).


1. Press the  button once.

On the display, the time symbols light, the arrow  is in front of the .



2. Set the timer using the  or  buttons.

Value suggested for the  button = 10 minutes.



Value suggested for the  button = 5 minutes.

The programmed time is shown after a few seconds. The time set for the timer starts to count down. The  symbol lights up on the display panel and the time elapsed is displayed. The other time symbols switch off.



### The time set for the timer has elapsed

A beep will sound. The display panel will show . Switch off the timer using the .


### Changing the time on the timer.







Change the time set for the timer using the  or  buttons. The new time is shown after a few seconds.

### Cancelling the timer

Resetting the timer to  with the button . The new time is shown after a few seconds. The timer switches off.

### Viewing the time settings

If several time functions are programmed, the corresponding symbols light up on the display panel. The arrow  symbol is in front of the time function in the foreground.

To view the timer , the cooking time , the end time  or the actual time , press the button  repeatedly until the arrow  reaches the required symbol. The corresponding value will be shown for a few seconds on the display panel.




## Cooking time

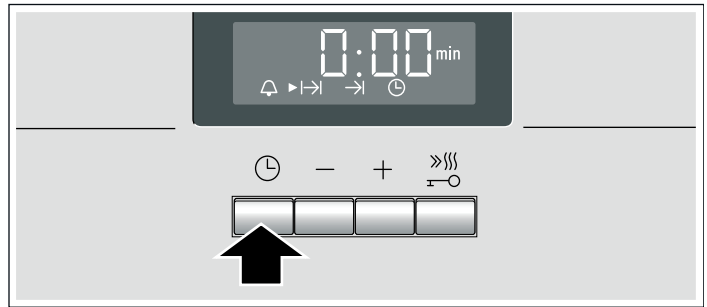
The oven allows you to set the cooking time for each type of food. The oven switches off automatically when the cooking time has finished. This avoids interrupting other tasks to switch the oven off or exceeding the cooking time by mistake.



Example in the picture: cooking time: 45 minutes.


1. Select the type of heating using the function control knob.
2. Select the temperature or grill power level with the temperature control knob.


3. Press the  button twice.

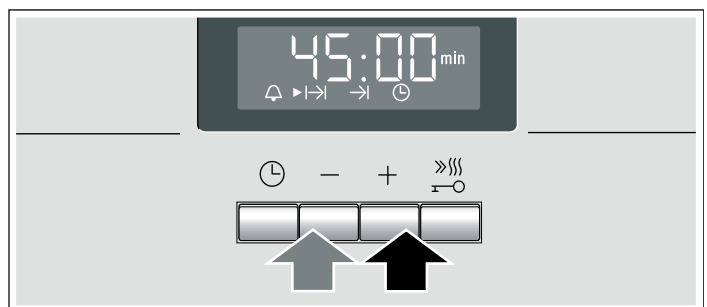
The display panel will show . The time symbols light up, the arrow  is situated in front of the .




4. Set the cooking time with the  or  buttons.






Value suggested for the  button = 30 minutes.

Value suggested for the  button = 10 minutes.






The oven will switch on after a few seconds. The display panel shows the cooking time elapsed and the  symbol is displayed. The other time symbols switch off.




### The cooking time has finished

A beep will sound. The oven will stop heating. The display panel will show . Press the  button. Programme a new cooking time with the  or  buttons. Or press the  button twice and turn the function control knob to the zero setting. The oven is off.


### Changing the cooking time







Change the cooking time with the  or  buttons. The new time is shown after a few seconds. If the timer has been programmed, first press the .

### Cancelling the cooking time

To reset the cooking time to  with the button . The new time is shown after a few seconds. The time has been cancelled. If the timer has been programmed, first press the  button.

### Viewing the time settings

If several time functions are programmed, the corresponding symbols light up on the display panel. The arrow  symbol is in front of the time function in the foreground.



To view the timer , the cooking time , the end time  or the actual time , press the button  repeatedly until the arrow  reaches the required symbol. The corresponding value will be shown for a few seconds on the display panel.



## End time

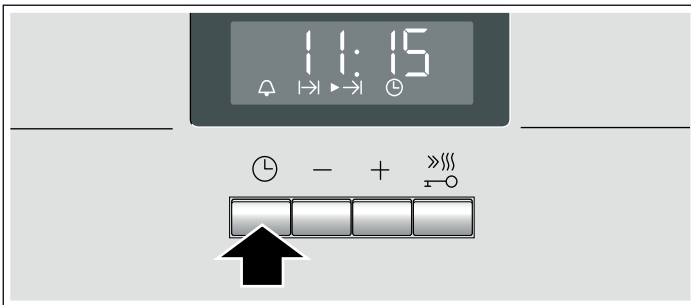
The oven allows you to set the time when you want the food ready. The oven switches on automatically and switches off at the set time. E.g. the food may be placed in the oven in the morning and the oven set so that it is ready at midday.

Please ensure that the food will not go off if it is in the oven for too long.

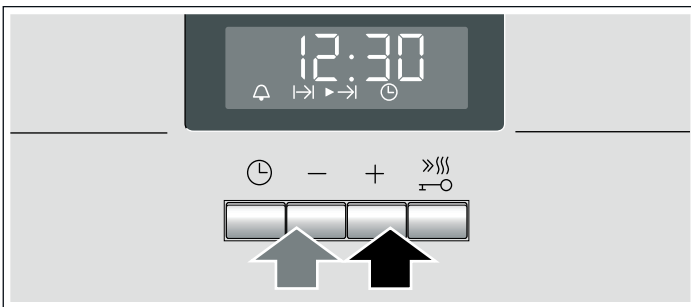
Example in the picture: It is now 10:30 AM, the cooking time is 45 minutes and the oven should switch off at midday.








1. Set the function control knob.
2. Set the temperature control knob.
3. Press the  button twice.
4. Set the cooking time with the **+** or **-** buttons.
5. Press the  button.

The arrow  is located in front of the . The time the dish will be ready is displayed.






6. Delay the end time using the buttons **+** or **-**.




The oven displays the programmed time after a few seconds and is set to standby. The time when the dish will be ready is displayed and the arrow  is shown in front of the  symbol. The symbols  and  turn off. When the oven is turned on, the cooking time progress is displayed and the arrow  is in front of the symbol . The symbol  switches off.


## The cooking time has finished

A beep will sound. The oven will stop heating. The display panel will show . Press the  button. Programme a new cooking time with the **+** or **-** buttons. Or press the  button twice and turn the function control knob to the zero setting. The oven is off.


## Changing the end time







Change the end time using the buttons **+** or **-**. The new time is shown after a few seconds. If the timer has been programmed, first press the  button twice. Do not change the end time if the cooking time has already started to count down. The final result may not be the same.

## Cancelling the end time


Reset the end time to the current time by pressing **-**. The new time is shown after a few seconds. The oven switches on. If the timer has been programmed, first press the  button twice.



## Viewing the time settings

If several time functions are programmed, the corresponding symbols light up on the display panel. The arrow  symbol is in front of the time function in the foreground.

To view the timer , the cooking time , the end time  or the actual time , press the button  repeatedly until the arrow  reaches the required symbol. The corresponding value will be shown for a few seconds on the display panel.




## Time

Once the oven has been connected or after a power cut, the symbol  and three zeros are shown on the display panel. Set the time.

1. Press the  button.  
The display panel displays the time .
2. Adjust the time with the buttons **+** or **-**.  
The programmed time is displayed after a few seconds.

## Changing the time

No other time function can be programmed.

1. Press the  button four times.  
On the display, the time symbols light up, the arrow  is in front of the .
2. Adjust the time with the buttons **+** or **-**.  
The programmed time is displayed after a few seconds.

## Hiding the clock

You can hide the clock. For more information, please refer to the section *Changing the basic settings*.

## Childproof lock

The oven includes a childproof lock to prevent it being turned on accidentally.


The oven does not react to any setting. The timer and time can be programmed when the childproof lock is on.

When the heating type and temperature or grill level are programmed, the childproof lock turns off the heating.


## Activating the childproof lock


No cooking time or end time should already be set.

Press the  button for approximately four seconds.

The display panel shows the  symbol. The childproof lock is now activated.

## Turning off the childproof lock

Press the  button for approximately four seconds.

The  symbol on the display panel goes off. The childproof lock is now deactivated.



# Changing the basic settings

This oven has different basic settings. The settings can be adapted to the user's own needs.

Basic settings	Selection 1	Selection 2	Selection 3
Time indicator	always*	only with the button	-
Duration of signal after the cooking time or the time set on the timer has elapsed	approx. 10 sec	approx. 2 min.*	approx. 5 min
Time until a setting is applied	approx. 2 sec	approx. 5 sec.*	approx. 10 sec.

\* Default setting

No other time function can be programmed.

1. Press the button for approximately 4 seconds.  
The display panel will show the current basic setting for the time, e.g. for the Selection 1.
2. Set the basic setting using the buttons **+** or **-**.
3. Confirm with the button.  
The display panel shows the following basic setting. Using the button select the levels and using the buttons **+** or **-** make the setting.
4. Press the button for approximately 4 seconds.

All basic settings have been applied.

The basic settings can be changed again at any time.

## Care and cleaning

If cleaned and properly cared for, your oven will keep its bright appearance and operating performance for many years to come. Advice on how to care for and clean your oven is provided below.

### Notes

- Different colours may be seen in your front panel due to the various materials used in its manufacture, such as glass, plastic and metal.
- Dark patches in the door's glass panel may seem to be dirt but they are in fact reflections from the oven light.
- Enamel burns at very high temperatures. This may cause slight discolouration. This is normal and does not affect the oven's operation. The edges of thin baking trays may not be completely enamelled. They may therefore feel slightly rough, although their corrosive protection will be unaffected.

### Cleaning products

Follow the indications provided in the table to avoid damaging the various oven surfaces by using unsuitable cleaning products. Do not use

- abrasive or acidic cleaning products
- strong products containing alcohol
- scourers or hard sponges
- high-pressure or steam cleaners


Wash new dishcloths thoroughly before use.

Zone	Cleaning products
Front panel	Hot water and a little soap: Clean with a dishcloth and dry with a soft cloth. Do not use a glass cleaning product or a glass scraper.
Stainless steel	Hot water and a little soap: Clean with a dishcloth and dry with a soft cloth. Immediately remove any water marks, grease, cornflower or egg white stains since corrosion could occur underneath these marks or stains.  Special products for the care of stainless steel and which are suitable for hot surfaces may be obtained from Technical Assistance Service centres and specialist retail outlets. Use a very fine soft cloth to apply the cleaning product.
Glass panel	Glass cleaning products: Clean using a soft cloth. Do not use a glass scraper.
Display	Glass cleaning products: Clean using a soft cloth. Do not use alcohol, vinegar or other abrasive or acidic cleaning products.
Glass panels on oven door	Glass cleaning products: Clean using a soft cloth. Do not use a glass scraper.
Glass cover for the oven light	Hot water and a little soap: Clean with a dishcloth.
The seal Do not remove!	Hot water and a little soap: Clean with a dishcloth. Do not rub.
Wire shelves or rails	Hot water and a little soap: Soak and clean using a dishcloth or brush.
Sliding guides	Hot water and a little soap: Clean with a dishcloth or a brush. Do not leave this to soak or wash in a dishwasher.
Accessories	Hot water and a little soap: Soak and clean using a dishcloth or brush.

### Cleaning the self cleaning surfaces in the oven interior

The inside rear and side walls and ceiling of some ovens may be lined with a highly porous ceramic lining. This lining absorbs splashes produced during baking and roasting, dissolving them while the oven is on. This cleaning will be most effective at higher temperatures and during longer cooking times.

Carry out the following steps if the oven is still dirty after being used several times:

1. Thoroughly clean the bottom and any walls that do not have this lining.
2. Programming the hot air function .
3. Empty the oven and then leave it on with the door closed for approximately 2 hours at maximum temperature.

The ceramic lining will regenerate. Once the oven has cooled down, remove any brown and white stains with water and a soft sponge.

Slight discolouration of the lining does not affect its self-cleaning performance.

### Caution!

- Do not use abrasive cleaning products. These would scratch and impair the highly porous lining.
- Never use oven cleaning products on ceramics. If oven cleaner is spilled on this accidentally, immediately remove it using lots of water and a sponge.

### Cleaning the oven's enamelled bottom and walls


Use a cleaning cloth and hot water with a little soap or vinegar.

If very dirty, use a fine steel scourer or a special oven cleaning product. These must only be used when the oven interior is cold. Do not use metal scourers or special oven cleaning products on self-cleaning surfaces.

### Light

The oven light can be turned on manually to facilitate cleaning.

### Turning on the oven light

Turn the function control knob to the  setting.

The light will come on. The temperature control knob must be turned off.

### Turning the oven light off

Turn the function control knob to the 0 position.

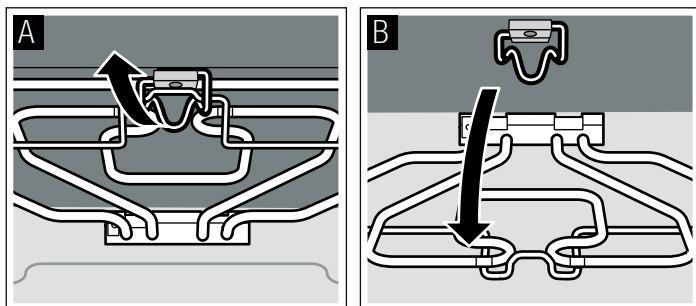
### Removing the grill heating element

The grill heating element can be removed in some ovens to facilitate cleaning.

### Risk of burns.!

The oven must be cold.

1. Pull the grill element handle towards you and push it upwards until you hear it click into position (figure A).
2. At the same time, hold the grill element and swing it down (figure B).



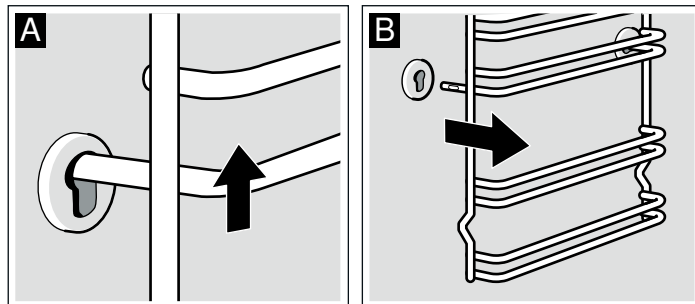
After cleaning, push the grill heating element up again. Push the locking handle down and secure the grill element.

### Removing and refitting the wire shelves or left and right hand side rails

The wire shelves or left and right hand side rails can be removed for cleaning. The oven must be cold.

### Removing the wire shelves or rails

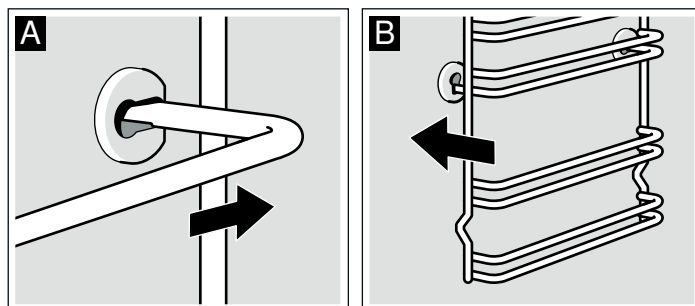
1. Lift the wire shelf or rail from the front
2. and release it (figure A).
3. Then pull the wire shelf or rail completely out and remove it (figure B).



Clean the wire shelves or rails with washing-up liquid and a sponge. The use of a brush is recommended for stubborn stains.

### Install the wire shelves or rails

1. First insert the shelf or the rail in the rear groove by pushing it back slightly (figure A)
2. then insert it in the front groove (figure B).

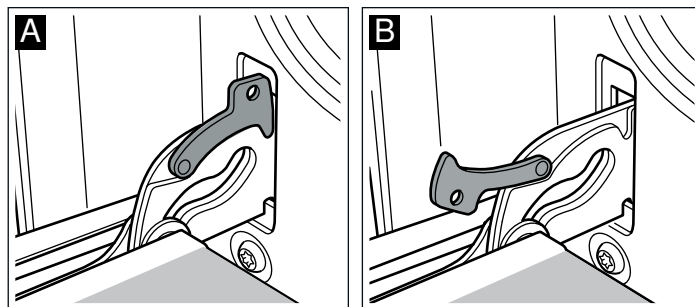


Wire shelves or rails can be adjusted on the left and right hand side. Their curvature should always be face down.

### Unhooking and hanging the oven door

The front panel can be unhooked to help remove the oven door and clean the glass panels.

The oven door hinges are fitted with a locking lever. The door cannot be unhooked if the locking lever is closed (figure A). Once the locking lever has been opened to unhook the door (figure B), the hinges will be locked in position. This prevents the door from suddenly closing.

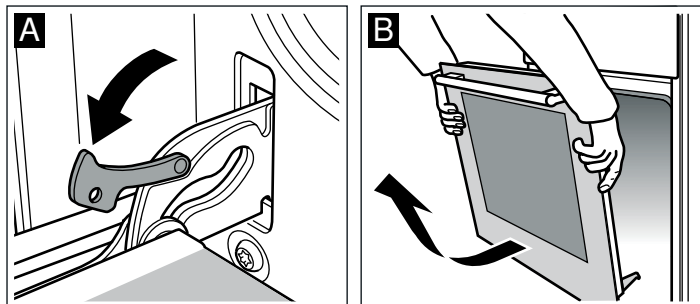


### Risk of injuries.!

The hinges may close suddenly if they are not locked in position by the lever. Note that the locking levers are always closed, apart from when unhooking the door, when the levers must be open.

## Unhooking the door

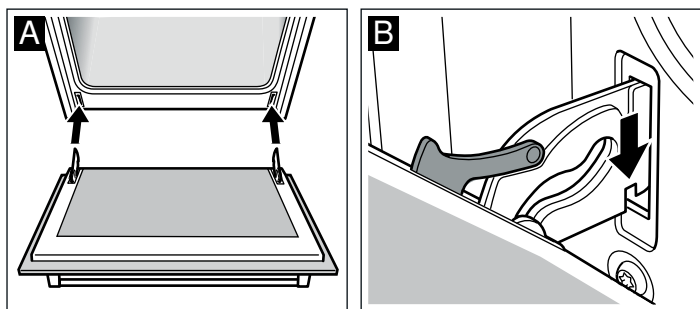
1. Fully open the oven door.
2. Remove both locking levers located on the right and left hand sides (figure A).
3. Fully close the oven door as far as possible (figure B). Grip the left and right hand sides of the door with both hands. Close the door slightly more and remove it.



## Hanging the door

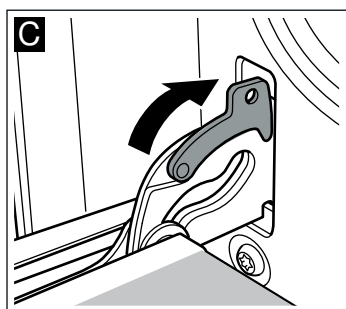
Rehang the door by following the same steps but in reverse order.

1. When refitting the door, check that both hinges are positioned exactly inside their respective openings (picture A).
2. The bottom groove of the hinges must fit snugly on both sides.



The door may be left crooked if the hinges are not mounted properly.

3. Reclose the attachment levers (picture C). Close the oven door.



## **⚠ Risk of injuries.!**

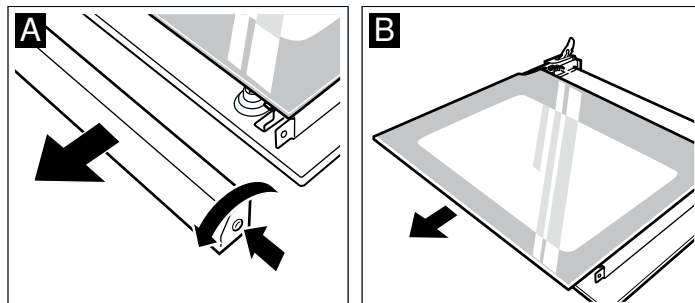
Do not touch the hinges; the door might accidentally fall or a hinge might suddenly close. Notify the Technical Assistance Service.

## Fitting and removing the glass panels

The glass panels of the oven door can be removed to make cleaning easier.

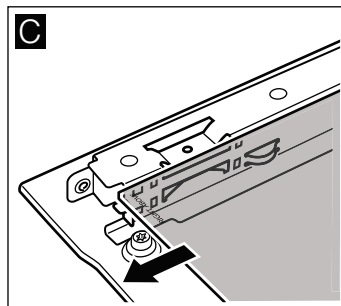
### Dismantling

1. Unhook the oven door and position it on a cloth with its handle pointing downwards.
2. Unscrew the upper cover from the door cover. To do this, unscrew the right and left-hand side screws (figure A).
3. Lift and remove the top glass panel (figure B).



In doors with three glass panels, the following step will also be necessary:

4. Remove the lower glass (figure C).



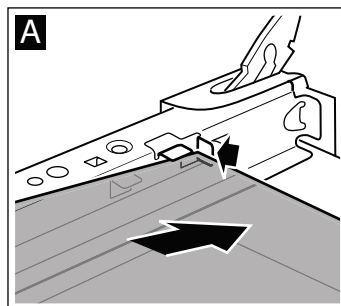
Clean the glass panels using a glass cleaning product and a soft cloth.

Do not use abrasive or corrosive cleaning products, glass scrapers, or hard metal scourers as these could damage the glass.

### Installing

Follow steps 2 to 4 with doors that have two glass panels.

1. Insert the lower glass panel by tilting it backwards (figure A). When fitting the glass, ensure that the marking "right above" at the bottom left-hand side is upside down.



2. Insert the upper glass panel backwards by tilting it with the smooth surface facing outwards.
3. Fit and tighten the cover.
4. Hang the oven door.

**Once the glass panels have been correctly fitted, the oven is ready to use.**

# Troubleshooting

Quite often, when there is a malfunction, it is usually a small irregularity which is easy to rectify. Before contacting the Technical Assistance Service, try to determine the cause of the fault using the following table.

## Troubleshooting table

Fault	Possible cause	Solution/advice
The oven does not work.	The fuse has blown.	Check the condition of the fuse in the fuse box.
	Power cut.	Check that the light in the kitchen and other household appliances are working.
⌚ lights up on the display with some zeros.	Power cut.	Set the time once again.
The oven does not heat up.	There is dust in the contacts.	Turn the control knobs several times in both directions.

## Error messages

When the display panel shows an error message with **E**, press the ⌚ button. The message will disappear. The set time function will be deleted. If the error message does not disappear, call the Technical Assistance Service.

The following error messages can be solved by the user.

Error message	Possible cause	Solution/advice
<b>E011</b>	A button has been pressed for too long or has got stuck.	Press all of the buttons one by one. Check if any button is stuck, covered or dirty.

## ⚠ Risk of electric shock.!

Incorrect repairs can be dangerous. Repairs may only be carried out by qualified personnel from the Technical Assistance Service.

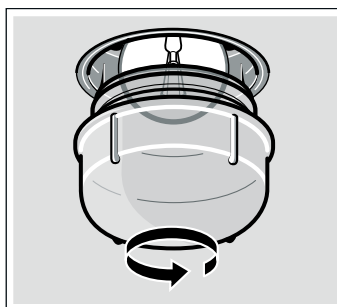
## Changing the oven bulb

If the oven light is damaged it must be replaced. Special heat resistant bulbs can be obtained from the Technical Assistance Service or in specialist shops. Only use this type of bulb.

## ⚠ Risk of electrical discharge and the resulting shock.!

Disconnect the appliance from the mains. Ensure that this is turned off.

1. Place a dishcloth into the cold oven to avoid damage.
2. Remove the glass protection by unscrewing it to the left.



3. Replace the bulb with a similar bulb.
4. Screw the protection glass back into place.
5. Remove the dishcloth and switch the oven back on at the mains.

## Protective glass panels

Damaged protective glass panels must be replaced. Protective glass panels can be obtained from the Technical Assistance Service. Please quote your appliance's product number and production number.

# After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

## E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate containing these numbers can be found on the right-hand side of the oven door. You can make a note of the numbers of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

E no.	FD no.
<hr/>	
<hr/>	
After-sales service ☎	
<hr/>	

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

## To book an engineer visit and product advice

- GB** 0844 8928999  
Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.
- IE** 01450 2655

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

# Energy-saving and environmental protection tips

In this chapter we offer you some advice about how to save energy when baking or roasting and how to properly dispose of the appliance.

## Saving energy

- Preheat the oven only if this is required by a recipe or is indicated in the tables.
- Use dark, lacquered or black enamel baking tins. These are more efficient at absorbing heat.
- Keep the oven door closed during cooking, baking and roasting cycles.

- When baking several cakes, these should be preferably baked one after the other. The oven will still be hot, thereby reducing the cooking time for the second cake. Two rectangular baking tins can be placed side-by-side.
- For long cooking times, the oven may be turned off 10 minutes prior to the specified time, allowing the item to continue to cook but taking advantage of the oven's residual heat.

## Environmentally-friendly disposal of waste

Dispose of packaging with the environment in mind.



This appliance is identified according to the Waste Electrical and Electronic Equipment Directive WEEE 2002/96/EC. This directive defines the framework for the recycling and reuse of appliances used in EU territory.

# Tested for you in our cooking studio


Here you will find a selection of dishes and the ideal settings for them. We will show you which type of heating and which temperature are best suited for your dish. You can find information about suitable accessories and the height at which they should be inserted. There are also tips about cookware and preparation methods.


## Notes

- The values in the table always apply to dishes placed into the cooking compartment when it is cold and empty. Only preheat the appliance if the table specifies that you should do so. Do not line the accessories with greaseproof paper until after they have been preheated.
- The times specified in the tables are guidelines only. They will depend on the quality and composition of the food.
- Use the accessories supplied. Additional accessories may be obtained as special accessories from specialist retailers or from the after-sales service. Before using the oven, remove any unnecessary accessories and ovenware from the cooking compartment.
- Always use oven gloves when taking hot accessories or ovenware out of the cooking compartment.

## Cakes and pastries


### Baking on one level

The best results are obtained with the upper and lower heat  when baking cakes.

When baking using the hot air function , the following levels are recommended for the accessories:

- Cakes in moulds: level 2
- Cakes on the tray: level 3

### Baking at different levels

Using the hot air mode .

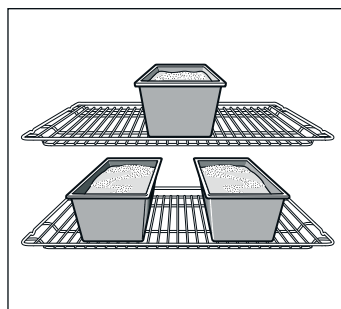
Baking on two levels:

- Enamel baking tray: level 3
- Aluminium tray: level 1

Trays put in the oven at the same time are not necessarily ready at the same time.

The tables contain a number of tips for each dish.

If 3 rectangular moulds are used at the same time, place on the shelf as shown in the picture.



## Baking tins

It is best to use dark-coloured metal baking tins.

Baking times are increased when light-coloured baking tins made of thin metal or glass dishes are used, and cakes do not brown so evenly.

If you wish to use silicone baking tins, use the information and recipes provided by the manufacturer as a guide. Silicone baking tins are often smaller than normal tins. The amount of mixture and recipe instructions may differ.

## Tables





The table shows the optimum heating methods for each type of cake or dessert. The temperature and cooking time will depend on the amount and the consistency of the dough. For this reason the cooking tables always provide approximate cooking times. Always begin by trying the lowest value. The items will be more evenly browned at a lower temperature. If necessary, this can be increased next time.

If the oven is preheated, cooking times are reduced by 5 to 10 minutes.







*Additional information is provided in the Tips for baking section as an appendix to the tables.*

To bake a cake only on one level, place the mould on the enamel tray.




When baking several cakes at the same time, the moulds can be placed together on the wire shelf.

Cakes in tins	Baking tin placed directly on the shelf	Level	Type of heating	Temperature in °C	Cooking time, minutes
Cake	Corrugated tart baking tin, Ø 31 cm.	1		220-240	40-50
		1+3		190-200	35-45
Quiche	Corrugated tart baking tin, Ø 31 cm.	1		220-230	40-50
Cakes*	Corrugated cake baking tin, Ø 28m.	2		180-200	50-60









\* To bake more than one cake at a time, place several cake tins on the shelf.

Cakes baked on a tray		Level	Type of heating	Temperature in °C	Cooking time, minutes
Pizzas	Oven tray	2		200-220	25-35
	Aluminium tray + flat oven tray	1+3		170-180	30-40
	Aluminium tray + universal deep tray	1+3		170-180	30-40
Puff pastry	Oven tray	3		170-190	20-30
	Aluminium tray + flat oven tray	1+3		170-190	30-45
	Aluminium tray + universal deep tray	1+3		170-190	30-45

Additional baking trays can be obtained from a specialist retail outlet or from the Technical Assistance Service.

Bread and rolls		Level	Type of heating	Temperature in °C	Cooking time, minutes
Yeast bread made using 1.2 kg of flour* (with preheating)	Enamel baking tray	2		270	8
				200	35-45
Bread made from yeast-containing dough containing 1.2 kg of flour* (with preheating)	Enamel baking tray	2		270	8
				200	40-50
Rolls (e.g. made from rye)	Enamel baking tray	3		200-220	20-20

\* Never pour water directly into a hot oven.



Pastries		Level	Type of heating	Temperature in °C	Cooking time, minutes
Pastries and biscuits	Enamel baking tray	3		150-160	20-30
	Aluminium tray + flat oven tray	1+3		140-150	25-30
	Aluminium tray + universal deep tray	1+3		140-150	25-30
Meringues	Enamel baking tray	3		80-90	180-210
Empty puffs	Enamel baking tray	2		190-210	30-40
Macaroons	Enamel baking tray	3		110-130	30-40
	Aluminium tray + flat oven tray	1+3		100-120	35-45
	Aluminium tray + universal deep tray	1+3		100-120	35-45

Extra baking trays may be obtained as optional accessories from specialist retail outlets.

## Practical cooking tips and suggestions

If you want to use your own recipe.	You can use a similar product to the one listed in the cooking table.
How to check whether your sponge cake is ready.	Ten minutes before the end of the cooking time indicated in the recipe, test the thickest part of the cake with a thin wooden skewer. The cake is ready when the skewer comes out clean, with no traces of cake mix left on the skewer.
The cake is too flat.	Next time, try using less liquid or reduce the oven temperature by 10 degrees. Ensure you mix the batter according to the times given in the recipe.
The cake has a peaked centre, but the edges have shrunk.	Do not grease the tin. Once the cake is ready, use a knife to carefully remove it from the tin.
If the cake is too brown on top.	Position the cake lower in the oven, reduce the oven temperature and bake it for longer.
The cake is too dry.	Use a skewer to make small holes in the finished cake. Pour a few drops of fruit juice or alcohol over the cake. Next time, increase the oven temperature by 10 degrees and reduce the cooking time.



The bread or cake (fruit cake, for example) looks fine on the outside but still has soft (soggy) areas inside.	Next time, use less liquid and leave the product for a little longer in the oven, at a lower temperature. The bases of cakes with juicy toppings should be baked first on their own. Then sprinkle chopped almonds or breadcrumbs on the base before adding the topping. Follow the recipe and observe the cooking times.
Biscuits are not evenly browned.	Select a lower temperature; the biscuits will be browned more uniformly. Bake more delicate pastries with top and bottom heating  on one level. Overhanging grease-proof paper may also affect air circulation. Always trim it to fit the baking tray.
Fruit cake is uncooked at the bottom.	Next time, put the cake on a lower level.
Juice from the fruit oozes out.	Next time, use the universal tray if available.
Small pastries made with yeast may stick together during baking.	Leave a space of about 2 cm between them. Then they will have enough space to rise and brown on all sides.
Products have been baked on different levels. Biscuits on the upper tray are darker than those on the lower tray.	Always use the hot air function  when baking products on different levels. Although several baking trays may be placed in the oven at the same time, this does not mean that they will necessarily all be ready at the same time.
Baking moist cakes produces condensation.	Condensation may form when baking. Some of this moisture may evaporate via the door handle, and drops of condensation may form on the control panel or on the front of nearby kitchen units. The oven is physically designed with this in mind.

## Meat, poultry, fish

### Cookware

Any heatproof cookware can be used. For large roasts, the enamel tray can also be used.

It is best to use glass containers. Check that the lid of the cookware will fit and close properly.

If using enamel containers, add more liquid.

When using stainless steel pans, the meat does not brown well and may even be left rare. If so, lengthen the cooking time.

Data shown in tables:

Uncovered cookware = open

Covered cookware = closed

Always place cookware in the centre of the wire shelf.

Hot glass cookware should be placed on a dry dishcloth. The glass could shatter if rested on a wet or cold surface.

### Roasting

Add in a little liquid if the meat is lean. Cover the base of the ovenware with approx. ½ cm of liquid.

Add liquid generously for pot roasts. Cover the base of the ovenware with approx. 1 - 2 cm of liquid.

The amount of liquid depends on the type of meat and the material the ovenware is made of. If preparing meat in an enamelled roasting dish, it will need a little more liquid than if cooked in glass ovenware.

Roasting dishes made from stainless steel are not ideal. The meat cooks more slowly and browns less fully. Use a higher temperature and/or a longer cooking time.

### Grilling

Always use the grill with the oven closed.

For grilling, preheat the oven for about 3 minutes before the food is placed inside the oven.

Place the pieces directly on the wire shelf. If only one piece is prepared, it is best if placed in the centre of the wire shelf.

Place the enamel tray at level 1. The tray will help keep the oven clean by catching any meat juices.

Do not place the baking tray or universal tray at level 4 or 5. Due to the extreme heat, it could be deformed and cause damage to the oven interior when it is removed.

In so far as it is possible, use pieces of the same thickness. This will help them brown evenly and remain juicy. Salt the fillets after grilling.

Turn the pieces after ⅔ the time has elapsed.

The grill resistance switches on and off automatically. This is normal. The frequency depends on the chosen power level.













### Meat










Turn pieces of meat halfway through the cooking time.

When the roast is ready, turn off the oven and allow it to rest for an additional 10 minutes. This allows better distribution of the meat juices.

After cooking, wrap sirloin in aluminium foil and leave it to rest for 10 minutes in the oven.

For roast pork with a rind, score the rind in a crossways pattern, then lay the roast in the dish with the rind at the bottom.

Meat	Weight	Cookware	Level	Type of heating	Temperature at °C, grill power	Cooking time, minutes
Ox stew (e.g. ribs)	1.0 kg	covered	2		220-240	90
	1.5 kg		2		210-230	110
	2.0 kg		2		200-220	130
Beef loin	1.0 kg	uncovered	2		210-230	70
	1.5 kg		2		200-220	80
	2.0 kg		2		190-210	90
Rare roast beef	1.0 kg	uncovered	1		210-230	40
Steaks, well done		Shelf	5		3	20
Steaks, rare			5		3	15
Pork without rind (e.g. neck)	1.0 kg	uncovered	1		190-210	100
	1.5 kg		1		180-200	140
	2.0 kg		1		170-190	160

Meat	Weight	Cookware	Level	Type of heating	Temperature at °C, grill power	Cooking time, minutes
Pork with rind (e.g. shoulder, leg)	1.0 kg	uncovered	1		180-200	120
	1.5 kg		1		170-190	150
	2.0 kg		1		160-180	180
Smoked pork ribs, on the bone	1.0 kg	covered	2		210-230	70
Mince meat casserole	750 g of meat	uncovered	1		170-190	70
Sausages	approx. 750 g	Shelf	4		3	15
Roast veal	1.0 kg	uncovered	2		190-210	100
	2.0 kg		2		170-190	120
Boned leg of lamb	1.5 kg	uncovered	1		150-170	110

## Poultry

The weights of the table are for unstuffed birds ready to roast.








Place whole birds on the wire shelf initially with the breast side down. Turn once after  $\frac{2}{3}$  the estimated time.

Turn pieces of meat such as turkey pieces or turkey breasts over after half the cooking time has elapsed. Turn the pieces of poultry after  $\frac{2}{3}$  the time has elapsed.

If cooking duck or goose, prick the skin below the wings to release the fat.

The birds can be made brown and crunchy if they are smeared with butter, brine or orange juice more or less at the end of cooking time.

If grilling directly on the shelf, place the enamel tray on level 1.

Poultry	Weight	Cookware	Level	Type of heating	Temperature in °C	Cooking time, minutes
Chicken halves, 1 to 4 portions	400 g each	Shelf	2		200-220	40-50
Chicken pieces	250 g each	Shelf	2		200-220	30-40
Chicken, whole 1 to 4 birds	1.0 kg each	Shelf	2		190-210	50-80
Duck	1.7 kg	Shelf	2		180-200	90-100
Goose	3.0 kg	Shelf	2		170-190	110-130
Young turkey	3.0 kg	Shelf	2		180-200	80-100
2 turkey legs	800 g each	Shelf	2		190-210	90-110





## Fish

Turn the fish pieces after  $\frac{2}{3}$  the time has elapsed.

Whole fish do not need to be turned over. Bake whole fish in swimming position with the dorsal fin up. So that the fish remains stable, place a cut potato or a small container suitable for baking into the abdomen of the fish.

To cook fish fillets, add a few tablespoons of liquid when cooking.

If grilling directly on the shelf, place the enamel tray on level 1.

Fish	Weight	Cookware	Level	Type of heating	Temperature at °C, grill power	Cooking time, minutes
Grilled fish	300 g	Shelf	3		2	20-25
	1.0 kg		2		180-200	45-50
	1.5 kg		2		170-190	50-60
Fish slices	300 g each	Shelf	4		2	20-25

## Tips for roasting and grilling








The table does not contain information for the weight of the joint.	Select the next lowest weight from the instructions and extend the time.
How to tell when the roast is ready.	Use a meat thermometer (available from specialist shops) or carry out a "spoon test". Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer.
The roast is too dark and the crackling is partly burnt.	Check the shelf height and temperature.
The roast looks good but the juices are burnt.	Next time, use a smaller roasting dish or add more liquid.
The roast looks good but the juices are too clear and watery.	Next time, use a larger roasting dish and use less liquid.
Steam rises from the roast when basted.	This is normal and due to the laws of physics. The majority of the steam escapes through the steam outlet. It may settle and form condensation on the cooler switch panel or on the fronts of adjacent units.

Gratins, soufflés, browned items

Place the cookware on the wire shelf.

To roast directly on the wire shelf without containers, insert the enameled tray at height 1. This will keep the oven cleaner.

The result of a gratin depends on the size of the dish and gratin height. The data shown in the table are only given as a guide.

Food	Cookware	Level	Type of heating	Temperature at °C, grill power	Cooking time, minutes
Sweet soufflés (e.g. cheese soufflé with fruit)	Soufflé dish	2		180-200	40-50
Gratins seasoned with cooked ingredients (e.g. pasta with a browned topping)	Soufflé dish or enamel tray	3		210-230	30-40
		3		210-230	20-30
Gratins seasoned with raw ingredients* (e.g. dauphinoise potatoes)	Browning dish or enamel tray	2		160-180	50-70
		2		160-180	50-70
Brown toast	Shelf	5		3	4-5
Grill toast	Shelf	3+1		170-180	8-12




\* The browning must not be more than 2 cm thick.

Ready-made products

Read and note the manufacturer's instructions on the packaging.

When covering accessories with baking paper, ensure that the paper is suitable for high temperatures. Cut the paper to the size of dish to be prepared.

The result depends directly on the type of food. There may be irregularities and colour differences in the raw products.

Food	Accessories	Level	Type of heating	Temperature in °C	Time in minutes
Chips	Shelf or enamel tray	3		190-210	20-30
Pizza	Shelf	2		200-220	15-20
Pizza-baguette	Enamel baking tray	3		190-200	20-25

**Note:** The baking tray may deform when frozen foods are being defrosted. This is due to the accessories being subjected to different temperatures. The deformation will disappear while baking.

Special dishes

At low temperatures, a good creamy yoghurt and a spongy yeast dough can be obtained.

First remove accessories and wire shelves or left and right-hand side rails from inside the oven.



Making yoghurt

- 1. Boil 1 litre of milk (3.5 % fat) and allow it to cool to about 40 °C.
- 2. Mix 150 g of yoghurt (at fridge temperature).
- 3. Pour the mixture into jars or bowls and cover them with transparent film.

- 4. Preheat the oven as instructed.
- 5. Now, place the bowls or jars on the bottom of the oven and prepare as follows.

Leaving yeast dough to rise

- 1. Prepare the yeast dough as usual. Pour the dough into a heat-resistant ceramic baking dish and cover it.
- 2. Preheat the oven as instructed.
- 3. Turn off the appliance and allow the dough to rise inside the oven.

Food	Cookware	Level	Type of heating	Temperature	Time
Yoghurt	Place the bowls or jars	at the bottom of the oven		Preheat to 50 °C 50 °C	5 min. 8 h
Allow the yeast dough to rise	Place a heat-resistant baking dish	at the bottom of the oven		Preheat to 50 °C Turn off the appliance and place the dough inside the oven	5-10 min. 20-30 min.

Defrosting

Defrosting time depends on the type and quantity of food.

Read and note the manufacturer's instructions on the packaging.

Remove frozen food from the container and place in appropriate cookware on the wire shelf.

Place the bird on a dish with the breast facing down.

Frozen products	Accessories	Level	Type of heating	Temperature
For example, cream cakes, buttercream tarts, chocolate or sugar-coated cakes, fruit, chicken, sausages and meat, bread, rolls, pies and other pastries	Shelf	1		The temperature control knob remains off.





## Drying

Use only quality fruit and vegetables and wash thoroughly.  
Allow to drain and dry completely.

Cover the enamel tray and the wire shelf with special baking parchment or greaseproof paper.

Turn the fruit or vegetables from time to time.

When they are golden, dry them and remove from the paper.

Food	Level	Type of heating	Temperature in °C	Cooking time, hours
600 g of sliced apples	1+3		80	approximately 5 h
800 g of pears cut into chunks	1+3		80	approximately 8 h
1.5 kg of cherries	1+3		80	approximately 8-10 h
200 g of cleaned, fresh herbs	1+3		80	approximately 1½ h

## Jam making

For cooking, the jars and the elastic bands must be clean and in perfect condition. Whenever possible, use jars of equal sizes. The values in the tables are given for round 1-Litre jars.

### Caution!

Do not use larger or taller jars. Their lids could explode.

Only use fruit and vegetables that are in good condition. Clean them well.

The times given in tables are only given as an indication. These can vary according to the outside temperature, number of jars, quantity and temperature of the jar content. Before turning off the appliance, ensure the jars have begun to bubble.


### Preparation

1. Tip the fruit or vegetable into the jars but do not fill them to the brim.
2. Clean the edges of the jars; these must be clean.
3. Place a cover and wet elastic band on each jar.

4. Close the jars with clamps.

Do not place more than six jars in the oven at the same time.

### Setting

1. Place the enamel tray at level 2. Place the jars on the tray so that they do not touch each other.
2. Pour half a litre of hot water (approx. 80 °C) on the flat oven tray.
3. Close the oven door.
4. Position the control knob to bottom heat position .
5. Set the temperature between 170 and 180 °C.

### Jam making

After approximately 40 - 50 minutes, bubbles begin to form rapidly. Switch the oven off

Take the jars out of the oven after approximately 25 - 35 minutes (the residual heat is used in this time). If these are allowed to cool in the oven for more time, this could promote the formation of germs making the jam acidic.

Fruit in 1 L jars	from when bubbles start to appear	Residual heat
Apples, gooseberries, strawberries	To switch off	approx. 25 minutes
Cherries, apricots, peaches, gooseberries	To switch off	approx. 30 minutes
Apple, pear or cherry puree	To switch off	approx. 35 minutes

### Cooking vegetables

When small bubbles begin to form in the jars, adjust the temperature to approximately 120 - 140 °C. About 35 - 70 minutes, depending on the type of vegetables. After this time, turn off the oven to use the residual heat.

Cold cooking vegetables in 1 L jars	When bubbles start to appear 120-140 °C	Residual heat
Peppers	-	approx. 35 minutes
Beetroot	approx. 35 minutes	approx. 30 minutes
Brussels sprouts	approx. 45 minutes	approx. 30 minutes
Beans, kohlrabi, red cabbage	approx. 60 minutes	approx. 30 minutes
Peas	approx. 70 minutes	approx. 30 minutes

### Remove the jars from the oven

Remove the jars from inside the oven when cooking is finished.

### Caution!

Do not place hot jars on a cold or wet surface. They could explode.

# Acrylamide in food

Acrylamide is produced especially in cereal and potato products prepared at high temperatures, e. g., chips, toast, rolls, bread and bakery products (biscuits, spicy biscuits, Christmas biscuits).

## Tips for preparing food with a low content in acrylamide

<b>General</b>	<ul style="list-style-type: none"> <li>■ Keep cooking time to a minimum.</li> <li>■ Brown food without toasting it too much.</li> <li>■ Large, thick food products contain little acrylamide.</li> </ul>
<b>Baking</b>	With top and bottom heat max. 200 °C With hot air max. 180 °C.
Pastries and biscuits	With top and bottom heat max. 190 °C. With hot air max. 170 °C. Egg or egg yolk reduces acrylamide formation.
Oven chips	Spread in a single layer uniformly on the tray. Bake at least 400 g. per tray so that the potatoes do not dry up

## Test dishes

These tables have been produced for test institutes to facilitate the inspection and testing of the various appliances.

In accordance with EN 50304/EN 60350 (2009) and IEC 60350.

### Baking

Baking on 2 levels:

Always place the universal deep tray on the upper level and the aluminum pan on the lower level.

Butter cookies:

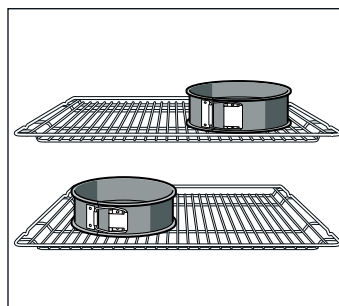
Trays put in the oven at the same time are not necessarily ready at the same time.

Covered apple tart on level 1:

Place dark spring moulds with some space between them.

Covered apple tart on 2 levels:

Place dark spring moulds on top of one another.



Corrugated cake spring moulds:

Bake using upper and lower heating ☐ on level 1. Use the enamel tray instead of the wire shelf and place spring moulds.

Food	Accessories, advice and warnings	Level	Type of heating	Temperature in °C	Time in minutes
Butter cookies (preheating*)	Flat oven tray	2	☐	160-170	20-30
	Universal deep tray	3	☐	150-160	20-30
	Aluminium tray + flat oven tray	1+3	☐	140-160	20-30
	Aluminium tray + universal deep tray	1+3	☐	140-160	20-30
20 small cakes	Enamel baking tray	3	☐	150-170	20-30
20 small cakes on one tray (preheating)	Aluminium tray + flat oven tray	1+3	☐	140-150	30-40
	Aluminium tray + universal deep tray	1+3	☐	140-150	30-40
Sponge cake (preheating*)	Spring tin	1	☐	170-180	30-40
Pastry case	Enamel baking tray	3	☐	160-180	30-40
	Aluminium tray + flat oven tray	1+3	☐	150-160	30-45
	Aluminium tray + universal deep tray	1+3	☐	150-160	30-40

\* Do not use rapid heating to preheat the oven.

Shelves and baking trays may be obtained as special accessories from specialist retail outlets.

Food	Accessories, advice and warnings	Level	Type of heating	Temperature in °C	Time in minutes
Apple pie	2 wire shelves + 2 corrugated Ø 20 cm detachable spring tins.	1+3		170-180	60-70
	Enamel tray + 2 corrugated Ø 20 cm spring baking tins.	1		190-210	70-90

\* Do not use rapid heating to preheat the oven.

Shelves and baking trays may be obtained as special accessories from specialist retail outlets.

## Grilling

If food is placed directly on the wire shelf, place the enamel tray at level 1. The tray will help keep the oven clean by catching any meat juices.

Food	Accessories	Level	Type of heating	Grill power	Time in minutes
Brown toast (preheat for 10 min.)	Shelf	5		3	1½-2
12 beefburgers* (no pre-heating)	Grill + enamel tray	5+1		3	25-30

\* Turn once after time ⅔.









Siemens-Electrogeräte GmbH  
Carl-Wery-Straße 34  
81739 München  
Germany



9000342514 01 910715