

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical energy consumption. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

For further information and a selection of our products go to our web site: www.siemens-home.com or contact our customer service centres

Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European Directive 2002/96/EG on Waste Electrical and Electronic Equipment (WEEE).

The Directive specifies the framework for an EU-wide valid return and recycling of waste appliances.

Contents

Page

| | |
|----------------------------------|-----|
| Intended use | 1 |
| Programmes | 1 |
| Setting programme | 3 |
| Washing | 3/4 |
| After washing | 4 |
| Individual settings | 5 |
| Important information | 6 |
| Overview of programmes | 7 |
| Safety instructions | 8 |
| Consumption values | 8 |
| Care | 9 |
| Information on the display panel | 9 |
| Maintenance | 10 |
| What to do if... | 11 |

Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- Do not leave children unattended near the washing machine!
- Keep pets away from the washing machine!



Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European Directive 2002/96/EG on Waste Electrical and Electronic Equipment (WEEE).

The Directive specifies the framework for an EU-wide valid return and recycling of waste appliances.

Programmes

For detailed overview of programmes → Page 7.
Spin speed can be selected individually.

| | |
|-------------------|---|
| Cottons/Coloureds | hard-wearing textiles |
| Stains | hard-wearing textiles |
| Mixed Fabrics | different types of washing |
| Easy-Care | easy-care textiles |
| Delicates | delicate washable textiles |
| Wool/Handwash | hand/machine-washable textiles |
| Empty | the rinsing water if Ø occurs |
| Spin | washing washed by hand |
| Rinse | with subsequent spin cycle; for hand-washed items, starching or "fresher up" items, → Page 6. |

Preparation

Correct installation according to separate installation instructions.

Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!

Turn on the tap

Insert mains plug

With dry hands only!
Take hold of the plug only!

Dispenser I: Detergent for prewash
Dispenser Ø: Fabric softener, starch
Dispenser II: Detergent for main wash, fabric softener, bleaching agent, stain remover

i Dilute viscous fabric softener and fabric conditioner with water. Prevents blockage of the overflow.

Set and adjust programme

For additional functions and option buttons see individual settings, → page 5.

Programme selector

Indicator lights / Spin speed*

Additional functions*

Start/ Pause

Blind mode*
ON-OFF

Direct

Long signal function or
Short signal function off

Button signals

Information signals

Rinse Hold
(without final spin)

1

Before washing for the first time, wash once without any washing. See page 6

Sorting and inserting the washing

Follow manufacturer's care information! According to the information on the care labels. The maximum selectable spin speed depends on the model and the set programme. According to type, colour, soiling and temperature. Do not exceed maximum load → page 7.

Follow important instructions! → page 6!

Intensive wash

Excessive washing time for intensive washing of highly soiled washing or 7 kg of cottons and coloureds.

Prewash

For heavily soiled, hard-wearing washing, e.g. made of cotton.

Less Ironing

Special spin sequence with subsequent rinsing. Gentle final spin – residual water in the washing increases slightly.

Extra Rinse

Additional rinsing and extended washing time. For areas with very soft water or for the improvement of the rinsing result.

Add detergent and care product

Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

i Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

Set and adjust programme

1. Activate setting mode for signal volume.

2. Set volume for ...

3. ... or terminate

Select Start

All buttons are sensitive, they only need to be touched gently!
If the Option buttons are touched for longer, the setting options will automatically run!

2. Set volume for ...

3. ... or terminate

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

1. ... or terminate

2. ... or terminate

3. ... or terminate

4. ... or terminate

5. ... or terminate

6. ... or terminate

7. ... or terminate

8. ... or terminate

Wash

Open washing machine door and remove washing. Remove any foreign objects – risk of rusting.

Leave door and detergent drawer open so that residual water can evaporate.

Turn off the tap

Not required for Aqua-Stop models.

Switch off

Set programme selector to **Off**.

Start

For starting or terminating the programme.

Signal

1. Activate setting mode for signal volume.

2. Set volume for ...

3. ... or terminate

Select Start

All buttons are sensitive, they only need to be touched gently!
If the Option buttons are touched for longer, the setting options will automatically run!

2. Set volume for ...

3. ... or terminate

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

1. ... or terminate

2. ... or terminate

3. ... or terminate

4. ... or terminate

5. ... or terminate

6. ... or terminate

7. ... or terminate

8. ... or terminate

9. ... or terminate

10. ... or terminate

11. ... or terminate

12. ... or terminate

13. ... or terminate

14. ... or terminate

Removing washing

Open washing machine door and remove washing. Remove any foreign objects – risk of rusting.

Leave door and detergent drawer open so that residual water can evaporate.

Turn off the tap

Not required for Aqua-Stop models.

Switch off

Set programme selector to **Off**.

Start

For starting or terminating the programme.

Signal

1. Activate setting mode for signal volume.

2. Set volume for ...

3. ... or terminate

Select Start

All buttons are sensitive, they only need to be touched gently!
If the Option buttons are touched for longer, the setting options will automatically run!

2. Set volume for ...

3. ... or terminate

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

1. ... or terminate

2. ... or terminate

3. ... or terminate

4. ... or terminate

5. ... or terminate

6. ... or terminate

7. ... or terminate

8. ... or terminate

9. ... or terminate

10. ... or terminate

11. ... or terminate

12. ... or terminate

13. ... or terminate

14. ... or terminate

Individual settings

Spin Ø

The spin speed Ø (without final spin) can be set before and while the selected programme is running.

Effects dependent on the programme progress.

The maximum selectable spin speed depends on the model and the set programme.

According to type, colour, soiling and temperature.

Do not exceed maximum load → page 7.

Additional functions* *see also programme overview (* depending on model)*

Intensive wash

Excessive washing time for intensive washing of highly soiled washing or 7 kg of cottons and coloureds.

Less Ironing

Special spin sequence with subsequent rinsing. Gentle final spin – residual water in the washing increases slightly.

Extra Rinse

Additional rinsing and extended washing time. For areas with very soft water or for the improvement of the rinsing result.

Turn off the tap

Not required for Aqua-Stop models.

Switch off

Set programme selector to **Off**.

Start

Programme overview

→ Pay attention to the Consumption values table on page 8 and the information on page 6.

Additional functions (depending on model):

| Programmes | Programme | max. temperature | max. type of washing | Additional function | Load | Current ** | Water ** | Programme duration ** |
|-------------------|-------------------|-------------------|----------------------|--|------|------------|----------|-----------------------|
| Cottons/Coloureds | Cottons/Coloureds | 30, 40, 60, 90 °C | 7 kg | Intensive Wash, Prewash, Less Ironing, Extra Rinse | 7 kg | 0.65 kWh | 60 l | 2:30 h |
| Stains | Stains | 80 °C | 7 kg | Easy-care textiles made of cotton or linen, synthetic fibres or blended fabrics | 7 kg | 1.19 kWh | 49 l | 2:36 h |
| Easy-Care | Easy-Care | 30, 40, 60 °C | 3 kg | For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains) | 7 kg | 2.00 kWh | 75 l | 2:33 h |
| Mixed Fabrics | Mixed Fabrics | 30 °C | 2 kg | For delicate, washable textiles, e.g. made of cotton and easy-care fabrics | 3 kg | 0.55 kWh | 50 l | 1:24 h |
| Delicates | Delicates | 30 °C | 2 kg | Especially gentle wash programme to prevent shrinkage, no spin cycle between the rinse cycles | 3 kg | 0.54 kWh | 40 l | 0:55 h |
| Wool/Handwash | Wool/Handwash | cold, 30 °C | 2 kg | Hand or machine-washable wool or rich-wool textiles | 3 kg | 0.32 kWh | 35 l | 0:44 h |

Additional programmes

Additional programmes

When washing the maximum load for programmes marked with * , always select the **Intensive Wash** option. **Easy-Care 40 °C** with maximum spin speed is the best short programme for the job. Programmes without prewash – pour detergent into dispenser II – divide detergent between dispensers I and II.

Safety instructions

Additional information

| | |
|----------------------------|--------------------|
| 9000 376 488 | 0110 |
| WM14E162GB... | |
| Siemens Electrogeräte GmbH | Carl-Voray-Str. 34 |
| 81739 München / Germany | |

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.
- Risk of electric shock**
 - Never pull out the mains plug by tugging the power cord!
 - Never insert/pull out the mains plug with damp hands.
 - Washing machine door may become very hot.
 - Caution when draining hot detergent solution.
 - Do not climb on the washing machine.
 - Do not lean on the open washing machine door.
 - Do not touch the drum in case it is still spinning.
 - Caution when opening the detergent drawer while washing machine is running!
 - Keep detergents and care products out of the reach of children.
 - Keep packaging, plastic film and packaging parts out of the reach of children.
 - On redundant appliances:
 - Pull out the mains plug.
 - Sever the power cord and discard together with the plug.
 - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.
 - Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Beforehand thoroughly rinse items of washing by hand.
- Risk of explosion**
 - For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)
 - Hand or machine-washable wool or rich-wool textiles

Rinse, Spin, Empty

Rinse

Spin

Empty

Intensive Wash, Prewash, Less Ironing, Extra Rinse

Intensive Wash, Prewash, Extra Rinse

Intensive Wash, Prewash, Less Ironing, Extra Rinse

Intensive Wash, Prewash, Extra Rinse

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

For further information and a selection of our products go to our web site:
www.siemens-home.com or contact our customer service centres

Environmental disposal

Dispose of packaging in an environmentally friendly manner.

This appliance has been identified in accordance with the European Directive 2002/96/EG on Waste Electrical and Electronic Equipment (WEEE).

The Directive specifies the framework for an EU-wide valid return and recycling of waste appliances.



Contents

Page

| | |
|--|-----|
| Intended use | 1 |
| Programmes | 1 |
| Setting programme | 3 |
| Washing | 3/4 |
| After washing | 4 |
| Individual settings | 5 |
| Important information | 6 |
| Overview of programmes | 7 |
| Safety instructions | 8 |
| Consumption values | 8 |
| Care | 9 |
| Information on the display panel | 9 |
| Maintenance | 10 |
| What to do if | 11 |

Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

! – Do not leave children unattended near the washing machine!
– Keep pets away from the washing machine!

Preparation

! Correct installation according to separate installation instructions.

Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!

Turn on the tap

Insert mains plug

! With dry hands only!
Take hold of the plug only!



D
P

Programmes

For detailed overview of programmes -> Page 7.

Spin speed can be selected individually.

Cottons/Coloureds hard-wearing textiles
Stains hard-wearing textiles
Mixed Fabrics different types of washing
Easy-Care easy-care textiles
Delicates delicate washable textiles
Wool/Handwash hand/machine-washable textiles
Empty the rinsing water if occurs
Spin washing washed by hand
Rinse with subsequent spin cycle; for hand-washed items, starching or "freshen up" items, -> Page 6.

* depending on model

| Programme selector | Indicator lights / Spin speed* | Ad fun | | | | | | | | | | | | | | |
|--|---|--------|----------------------------|-----|----------------------------|------|---------------------------|-------|---------------------------|------|-----------------------|----------------|-----------------------|----------|-----------------------|--|
| Easy-Care Off Cottons/Coloureds °C Delicates Wool Handwash cold 30 40 60 90 30 Mixed Fabrics Empty Spin Rinse | <table><tr><td>Status</td><td><input type="radio"/> 1400</td></tr><tr><td>End</td><td><input type="radio"/> 1200</td></tr><tr><td>Spin</td><td><input type="radio"/> 800</td></tr><tr><td>Rinse</td><td><input type="radio"/> 600</td></tr><tr><td>Wash</td><td><input type="radio"/> </td></tr></table> <table><tr><td>Intensive wash</td><td><input type="radio"/></td></tr><tr><td>Pro wash</td><td><input type="radio"/></td></tr></table> | Status | <input type="radio"/> 1400 | End | <input type="radio"/> 1200 | Spin | <input type="radio"/> 800 | Rinse | <input type="radio"/> 600 | Wash | <input type="radio"/> | Intensive wash | <input type="radio"/> | Pro wash | <input type="radio"/> | |
| Status | <input type="radio"/> 1400 | | | | | | | | | | | | | | | |
| End | <input type="radio"/> 1200 | | | | | | | | | | | | | | | |
| Spin | <input type="radio"/> 800 | | | | | | | | | | | | | | | |
| Rinse | <input type="radio"/> 600 | | | | | | | | | | | | | | | |
| Wash | <input type="radio"/> | | | | | | | | | | | | | | | |
| Intensive wash | <input type="radio"/> | | | | | | | | | | | | | | | |
| Pro wash | <input type="radio"/> | | | | | | | | | | | | | | | |

Symbols:

Rinse Hold
(without final spin)

Before washing for the first time,
wash once without any washing. See page 6

Sorting and inserting the washing

Follow manufacturer's care information!
According to the information on the care labels.
According to type, colour, soiling and temperature.
Do not exceed maximum load -> page 7.



Follow important instructions! -> page 6!
Insert large and small items of washing! Close the washing machine door. Take care not to trap any items of clothing between the loading door and rubber seal.

Add detergent and care product

Meter accordingly:
Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

Dispenser I: Detergent for prewash

Dispenser II: Fabric softener, starch

Dispenser III: Detergent for main wash, fabric softener, bleaching agent, stain remover

Dilute viscous fabric softener and fabric conditioner with water. Prevents blockage of the overflow.

Set and adjust programme

For additional functions and option buttons see individual settings, -> page 5.




All buttons are sensitive, they only need to be touched gently! If the Option buttons are touched for longer, the setting options will automatically run!


Select Start



Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

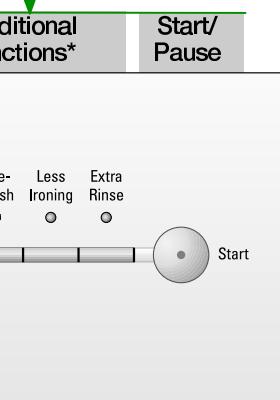

Wash

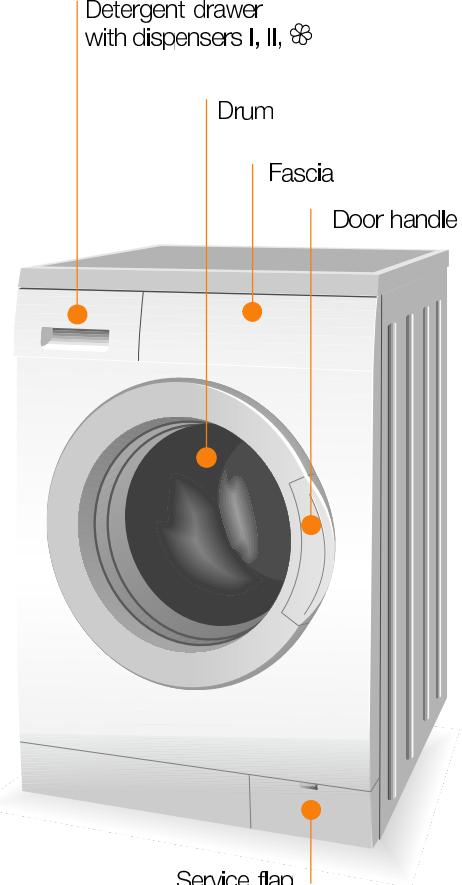

1

2

Wash

3



Removing washing

Open washing machine door and remove washing. Remove any foreign objects – risk of rusting. Leave door and detergent drawer open so that residual water can evaporate.

Turn off the tap

Not required for Aqua-Stop models.

Switch off

Set programme selector to **Off**.

End of programme when ...

... Start flashes and End is lit on the indicator light. If **Off** (without final spin) active: Set programme selector to **Empty** or select spin speed. Select **Start**.

Change programme ...

If you have mistakenly selected a wrong programme:

- Reselect programme.
- Select **Start**.

... or terminate

Programmes with high temperature, first:

- Cool washing: Select **Rinse**. Washing machine door remains locked.
- Select **Off**.
- Select **Spin** or **Empty**.
- Select **Start**.

Programme overview

→ Pay attention to the Consumption values table on page 8 and the information on page 6.

| Programmes | °C | max. washing | Type of washing | Additional functions (depending on model); information |
|-------------------|-------------------|--------------|--|--|
| Cottons/Coloureds | 30, 40, 60, 90 °C | 7 kg* | Hard-wearing textiles, heat-resistant textiles made of cotton or linen | Intensive Wash, Prewash, Less Ironing, Extra Rinse |
| Stains | 60 °C | 7 kg* | Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics | Intensive Wash, Prewash, Less Ironing, Extra Rinse; also suitable as Short programme Different types of washing can be washed together |
| Easy-Care | 30, 40, 60 °C | 3 kg* | Textiles made of cotton and easy-care textiles | Intensive Wash, Prewash, Less Ironing, Extra Rinse; no spin cycle between the rinse cycles |
| Mixed Fabrics | 30 °C | | For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains) | Intensive Wash, Prewash, Less Ironing, Extra Rinse; especially gentle wash programme to prevent shrinkage, prolonged programme pauses (textiles rest in the detergent solution). |
| Delicates | 30 °C | 2 kg | Hand or machine-washable wool or rich-wool textiles | Rinse, Spin, Empty |
| Wool/Handwash | cold, 30 °C | | | |

Additional programmes

I The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or select additional functions, e.g. **Intensive Wash**.
When washing the maximum load for programmes marked with *, always select the Intensive Wash option.
Regardless of the type of washing, Easy-Care 40 °C with maximum spin speed is the best short programme for the job.
Programmes without prewash – pour detergent into dispenser I, programmes with prewash – divide detergent between dispensers I and II.



Safety instructions

!

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.
- Risk of electric shock**
 - Never pull out the mains plug by tugging the power cord!
 - Never insert/pull out the mains plug with damp hands.
 - Washing machine door may become very hot.
 - Caution when draining hot detergent solution.
 - Do not climb on the washing machine.
 - Do not lean on the open washing machine door.
 - Do not touch the drum in case it is still spinning.
 - Caution when opening the detergent drawer while washing machine is running!
 - Keep detergents and care products out of the reach of children.
 - Keep packaging, plastic film and packaging parts out of the reach of children.
- Risk of injury**
 - On redundant appliances:
 - Pull out the mains plug.
 - Sever the power cord and discard together with the plug.
 - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.
 - Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Beforehand thoroughly rinse items of washing by hand.
- Risk of positioning**
- Risk of suffocation**
- Danger to life**
- Risk of explosion**

Consumption values

| Programme | Additional function | Load | Current ** | Water ** | Programme duration ** |
|---|---------------------|------|------------|----------|-----------------------|
| Cottons/Coloureds 40 °C * | Intensive Wash | 7 kg | 0.65 kWh | 60 l | 2:30 h |
| Stains 60 °C* | Intensive Wash | 7 kg | 1.19 kWh | 49 l | 2:36 h |
| Cottons/Coloureds 90 °C | Intensive Wash | 7 kg | 2.00 kWh | 75 l | 2:33 h |
| Easy-Care 40 °C * | Intensive Wash | 3 kg | 0.55 kWh | 50 l | 1:24 h |
| Easy-Care 40 °C * (also suitable as Short programme) | – | 3 kg | 0.54 kWh | 40 l | 0:55 h |
| Mixed Fabrics 30 °C | – | 3 kg | 0.32 kWh | 35 l | 0:44 h |
| Delicates 30 °C | – | 2 kg | 0.25 kWh | 38 l | 0:32 h |
| Wool/Handwash 30 °C * | – | 2 kg | 0.15 kWh | 34 l | 0:40 h |

* Programme setting to be tested in accordance with European standard 60 456.
Note on comparative tests: test the test programme with maximum load, **Intensive Wash** option selected, maximum spin speed.

A **short programme** which can be used for coloured items is **Easy-Care 40 °C**, without the **Intensive Wash** option selected and set to maximum spin speed.

** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.

Care



- Risk of electric shock!
Pull out the mains plug!
- Risk of explosion! No solvents!


Machine housing, control panel

- Wipe with a soft, damp cloth.
- Do not use any abrasive cloths, sponges or cleaning agents (stainless-steel cleaner).
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.



Clean the detergent drawer ...

- ... if it contains detergent or fabric softener residue.
- 1. Pull out, depress insert, completely remove.
- 2. Open the cover.
- 3. Clean with water and dry.
- 4. Close and lock the cover (place cylinder on guide pin).
- 5. Insert detergent drawer.

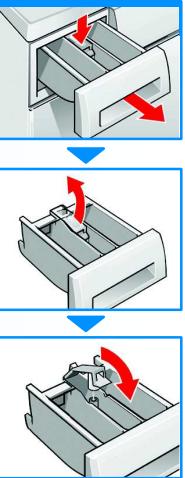

i

Leave detergent drawer open so that residual water can evaporate.

i

Leave washing machine door open so that the drum can dry out.

Rust stains – use chlorine-free cleaning agent, not steel wool.

i

Descaling No washing in the machine!

Descale according to the instructions of the descaling agent-manufacturer, not required for correct detergent dosage.

Information on the display panel depending on model

A signal sounds and indicator lights for the spin speed flash:

Close the washing machine door properly; washing may be caught.

Detergent solution pump blocked; Clean the detergent solution pump > page 10.

Turn the tap on fully, supply hose kinked/ jammed; clean filter > page 10, water pressure too low.

Motor fault! Call customer service!

Water in the base pan, appliance leaking. Call customer service!

Maintenance




- Risk of scalding!
Allow detergent solution to cool down!
- Turn off the tap!

Detergent-solution pump

Set programme selector to Off, pull out the mains plug.

1. Open and remove service flap.

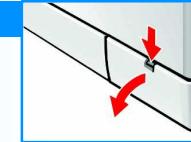


For models with drainage hose:

2. Take drainage hose out of the holder and pull out of the housing. Remove sealing cap, allow detergent solution to flow out. Press on sealing cap and insert drainage hose into the holder.




For models without drainage hose:

- 2*. Carefully unscrew pump cover until the detergent solution begins to run out. When the service flap is half full, screw back the pump cover and empty the service flap. Repeat steps until all the detergent solution has run out.

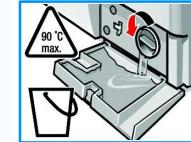

3. Carefully unscrew the pump cover (residual water).

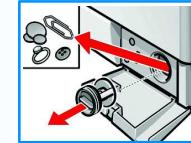

4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).

5. Reinsert and screw on pump cover.

6. Insert and close service flap.

To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and select the **Empty** programme.

Drainage hose at the siphon

Set the programme selector to Off, disconnect the mains plug.




1. Loosen the hose clamp, carefully remove the drainage hose (residual water).
2. Clean the drainage hose and siphon connecting piece.
3. Reattach the drainage hose and secure the connection with the hose clamp.

Filters in the water supply

Risk of electric shock! Do not immerse Aqua-Stop safety device in water (contains electric valve).


Release water pressure in the supply hose:

1. Turn off the tap!
2. Select any programme (except **Spin/Empty**).
3. Press **Start**. Leave programme for approx. 40 seconds.
4. Set programme selector to Off.
5. Remove hose from tap.
6. Clean filter with small brush.
7. Depending on the model, remove hose from the rear of the appliance and clean the filter.
8. Connect the hose and check for leaks.

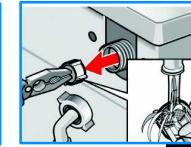

| | |
|--|--|
| Water is running out. | <ul style="list-style-type: none"> – Correctly attach/replace drainage hose. – Tighten screw-fitting on the supply hose. |
| Water not flowing in. Detergent not washed in. | <ul style="list-style-type: none"> – Start not selected? – Tap not open? – Filter blocked? Clean filter → page 10. – Supply hose kinked or jammed? |
| Washing machine door cannot be opened. | <ul style="list-style-type: none"> – Safety function active, wait for approx. 2 minutes. – Ø (without final spin) selected? |
| Programme does not start. | <ul style="list-style-type: none"> – Start selected? – Door closed? |
| Detergent solution is not drained. | <ul style="list-style-type: none"> – Clean detergent-solution pump → page 10. – Clean outlet pipe and/or drainage hose. |
| Washing not spun correctly. | <ul style="list-style-type: none"> – Distribute small and large items of washing in the drum. |
| Spin cycle actuated several times. | <ul style="list-style-type: none"> – Not a fault – unbalanced load detection system adjusts imbalance. |
| Water not visible in the drum. | <ul style="list-style-type: none"> – Not a fault – water below the visible area. |
| Residual water in the dispenser for care product. | <ul style="list-style-type: none"> – Not a fault – effect of the care product not impaired. |
| Odour formation in the washing machine. | <ul style="list-style-type: none"> – Run Cottons/Coloureds 90 °C programme without washing. Use standard detergent. |
| Foam is coming out of the detergent drawer. | <ul style="list-style-type: none"> – Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II (not with outdoor fabrics!). – Reduce detergent dosage for the next wash cycle. |
| Vibrations during spin cycle. | <ul style="list-style-type: none"> – Appliance feet fixed? Secure appliance feet (<i>Installation instructions</i>). – Transportation safety devices removed? Remove transportation safety devices (<i>Installation instructions</i>). |
| Spin result not satisfactory. | <ul style="list-style-type: none"> – Less Ironing* selected? → page 5 (* depending on model) |
| Display panel/indicator lights do not function while the appliance is running. | <ul style="list-style-type: none"> – Power failure? – Fuse tripped? Switch on/replace fuse. – If the fault occurs repeatedly, call customer service. |
| Programme progress longer than usual. | <ul style="list-style-type: none"> – Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing. – Not a fault – Foam detection system active – a rinse cycle is started. |
| Detergent residue on the washing. | <ul style="list-style-type: none"> – Occasionally phosphate-free detergents contain water-insoluble residue. – Select Rinse or brush the laundry after washing. |
| If a fault cannot be rectified or a repair is required: | <ul style="list-style-type: none"> – Set programme selector to Off and pull out the mains plug. – Turn off the tap and call customer service (<i>Installation instructions</i>). |

Operating instructions

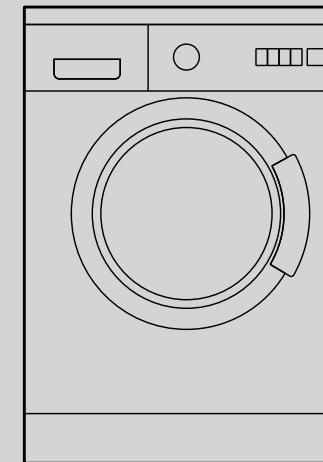

Washing machine

Read these instructions before switching on the washing machine!
Also follow the separate *Installation instructions*.
Follow the safety instructions on page 8!

