




EH8..MM2..

Hob

SIEMENS

EH8..MM2..

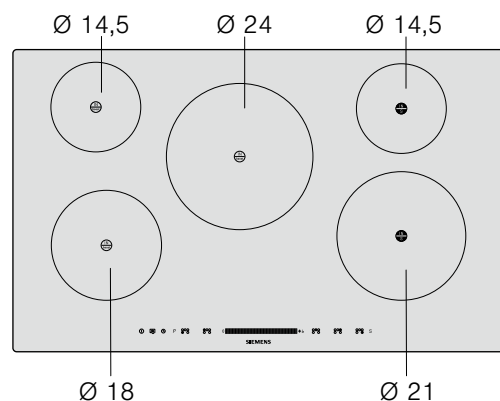

en Table of contents

Safety precautions	2	Powerboost function	11
Elements that may damage the appliance.....	4	Restrictions when using	11
Protecting the environment	5	To activate.....	11
Environmentally-friendly disposal of waste products	5	To turn off.....	11
Energy-saving advice.....	5	Time programming function	12
Induction cooking	5	Turning off a hotplate automatically.....	12
Advantages of induction cooking.....	5	Automatic timer	12
Suitable pans.....	5	The timer	12
Familiarise yourself with the appliance	6	Automatic time limitation	12
The control panel.....	6	Cleaning lock function	13
The hotplates	7	Basic settings	13
Residual heat indicator	7	Accessing the basic settings.....	14
Programming the hob	7	Care and cleaning	14
Switching the hob on and off	7	Hob	14
Setting the hotplate	7	Hob frame	14
Cooking guidelines table.....	8	Fixing malfunctions	15
Deep-frying function	9	Normal noise while the appliance is working	15
Pans to use with the frying function	9	After-sales service	16
Temperature settings	9		
How to program	9		
Table.....	10		
Frying programs.....	11		
Childproof lock	11		
Activating and deactivating the childproof lock.....	11		
Activating and deactivating the childproof lock.....	11		

Additional information on products, accessories, replacement parts and services can be found at www.siemens-home.com and in the online shop www.siemens-eshop.com

⚠ Safety precautions

Please read this manual carefully.
Please keep the instruction and installation manual as well as the appliance certificate in a safe place for later use or for subsequent owners.

Check the appliance after removing it from the packaging. If it has suffered any damage in transport,

do not connect the appliance, contact the Technical Assistance Service and provide written notification of the damage caused, otherwise you will lose your right to any type of compensation.

This appliance must be installed in accordance with the installation instructions.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance is not intended for operation with an external clock timer or a remote control.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Risk of fire!

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.

- The appliance gets hot. Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- The hob switches off automatically and can no longer be operated. It may switch on unintentionally at a later point. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Risk of burning!

- The hotplates and the area around them get very hot. Never touch the hot surfaces. Keep children away.
- The hotplate heats up but the display does not work. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Metal objects on the hob quickly become very hot. Never place metal objects (such as knives, forks, spoons and lids) on the hob.
- After each use, always turn off the hob at the main switch. Do not wait until the hob turns off automatically after the pan is removed.

Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

- Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass ceramic may cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.

Electromagnetic hazards!

This appliance complies with safety and electromagnetic compatibility standards. However, people with pacemakers or insulin pumps must refrain from using this appliance. It is impossible to ensure that all of these devices available on the market comply with current electromagnetic compatibility standards, and that interference which may prevent the device from working correctly will not occur. It is also possible that people with other types of devices, such as a hearing aids, could experience some discomfort.

Malfunction risk!

The hob is equipped with a fan in the lower section. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

There should be a minimum of 2 cm between the contents of the drawer and fan intake.

Risk of injury!

- When cooking in a bain marie, the hob and cooking container could shatter due to overheating. The cooking container in the bain marie must not directly touch the bottom of the water-filled pot. Only use heat-resistant cookware.
- Saucepans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.

Elements that may damage the appliance

Caution!

- Rough pan bases may scratch the hob.
- Avoid leaving empty pots and pans on the hotplate. Doing so may cause damage.
- Do not place hot pans on the control panel, the indicator area, or the hob frame. Doing so may cause damage.
- Hard or pointed objects dropped on the hob may damage it.
- Aluminium foil and plastic containers will melt if placed on the hotplate while it is hot. The use of laminated sheeting is not recommended on the hob.

Overview

The following table presents the most common damage caused:

Damage	Cause	Measure
Stains	Food spillage	Immediately remove spilt food using a glass scraper.
	Unsuitable cleaning products	Only use cleaning products specifically designed for glass-ceramic hobs.
Scratches	Salt, sugar and sand	Do not use the hob as a tray or working surface.
	Pans with rough bottoms may scratch the glass ceramic	Check pans.
Fading	Unsuitable cleaning products	Only use cleaning products specifically produced for glass-ceramic hobs.
	Contact with pans	Lift pots and pans before moving them around.
Chips	Sugar, substances with a high sugar content	Immediately remove spilt food using a glass scraper.

Protecting the environment

Unpack the appliance and dispose of its packaging in such a way that no damage is caused to the environment.

Environmentally-friendly disposal of waste products



This appliance conforms to the Waste Electrical and Electronic Equipment Directive WEEE 2002/96/EC. This directive defines the framework for recycling used appliances within European territory

Energy-saving advice

- Always place the correct lid on cookware. Cooking with an uncovered pan will result in a four-fold increase in energy use. Use a glass lid to provide visibility and avoid having to lift the lid.
- Use cookware equipped with a solid, flat bottom. Curved pan bases increase energy consumption.
- The diameter of the pan base must match the size of the hotplate. If not, energy may be wasted. Note: The manufacturer normally indicates the pan's upper diameter. This is normally greater than the diameter of the pan's base.
- Choose cookware of a size suited to the amount of food you are going to cook. A large pan that is only half full will use a lot of energy.
- Use a small amount of water when cooking. This saves energy, and vegetables retain their vitamins and minerals.
- Select a lower power level.

Induction cooking

Advantages of induction cooking

Induction cooking represents a radical change from the traditional method of heating; the heat is generated directly in the pan. It therefore offers a number of advantages:

- Time savings for cooking and frying; since the pan is heated directly.
- Energy is saved.
- Care and cleaning are simpler. Foods that have spilt do not burn as quickly.
- Heat and safety control; the hob supplies or cuts off power immediately when the control knob is turned on. The induction hotplate stops supplying heat if the pan is removed without having previously switched it off.

Suitable pans

Ferromagnetic pans


Only ferromagnetic pans are suitable for induction cooking, these may be made from:

- enamelled steel
- cast iron
- special cutlery for stainless steel induction pan


To determine whether a pan is suitable, check to see if a magnet will stick to it.

Other suitable cookware for induction


There are other types of cookware especially made for induction whose base is not entirely ferromagnetic.



When using large cookware on a smaller ferromagnetic zone, only the ferromagnetic zone heats up, so heat might not be uniformly distributed.

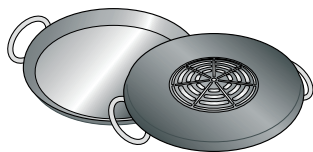

Cookware with aluminium on the base reduce the ferromagnetic zone, so less heat may be supplied or be difficult to detect.

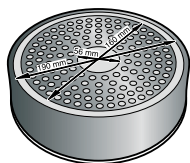

For good cooking results, the diameter of the cookware's ferromagnetic area should match the size of the hotplate. If cookware is not detected on a hotplate, try it on the next smaller hotplate down.

Unsuitable pans

Never use pans made from:

- common thin steel
- glass
- earthenware
- copper
- aluminium

Characteristics of the pan base

The characteristics of the pan base may affect the uniformity of the cooking results. Pans made from materials which help diffuse heat, such as stainless steel sandwich pans, distribute heat uniformly, saving time and energy.

Absence of pan or unsuitable size

If no pan is placed on the selected hotplate, or if it is made of unsuitable material or is not the correct size, the power level displayed on the hotplate indicator will flash. Place a suitable pan on the hotplate to stop the flashing. If this takes more than 90 seconds, the hotplate will switch off automatically.

Empty pans or those with a thin base

Do not heat empty pans, nor use pans with a thin base. The hob is equipped with an internal safety system. However, an empty pan may heat up so quickly that the "automatic switch off" function may not have time to react and the pan may reach very high temperatures. The base of the pan could melt and damage the glass on the hob. In this case, do not touch the pan and switch the hotplate off. If it fails to work after it has cooled down, please contact the Technical Assistance Service.


Pan detection

Each hotplate has a minimum limit for detecting pans, which varies depending on the material of the pan being used. You should therefore use the hotplate that is most suitable for the diameter of your pan.

Familiarise yourself with the appliance

These instructions for use are applicable to other hobs. On page 2 an overview of the models is provided, along with information on measurements.

The control panel

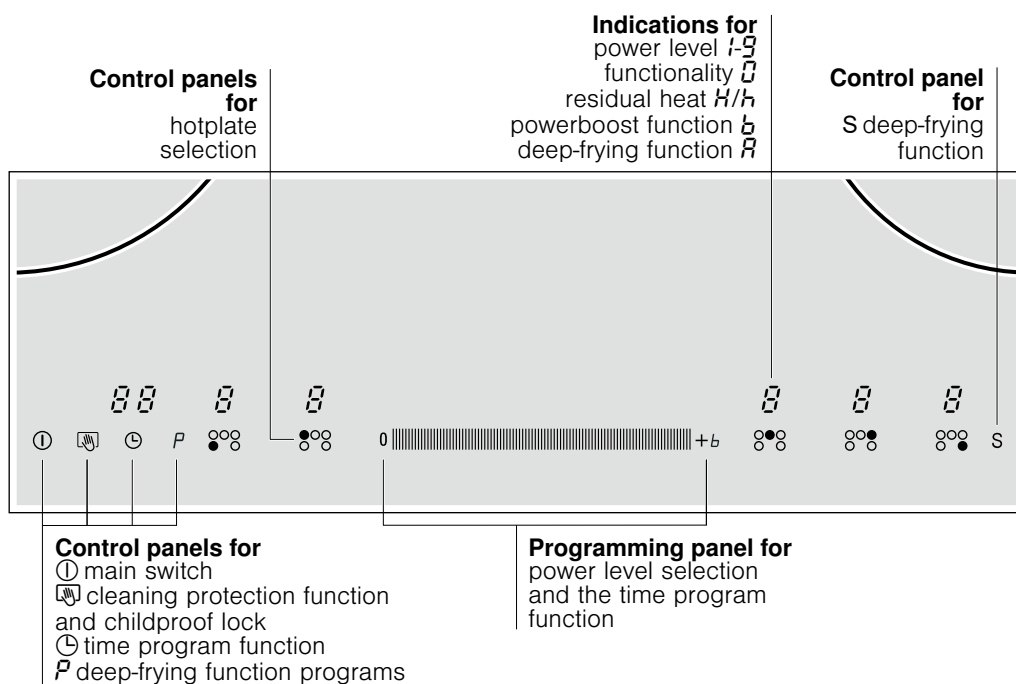

Control surfaces

Pressing a symbol activates its corresponding function.

Notes

- The settings will not change if several symbols are pressed at the same time. This enables the programming zone to be cleaned when food is spilt.
- Always keep the control surfaces dry. Moisture can affect proper functioning.

The hotplates

Hotplate	Turning on and off
○ Single hotplate	Always use cookware of a suitable size.
Use only cookware suitable for induction cooking; see the section on suitable cookware.	

Residual heat indicator

The hob has a residual heat indicator for each hotplate to show those which are still hot. Avoid touching a hotplate that displays this.

Even when switched off, the **h/H** light will remain on as long as the hotplate remains hot.

If the pan is removed before the hotplate is turned off the **h/H** indicators and the selected power level will appear alternately.

Programming the hob

This section will show you how to program the hotplates. The table contains power levels and cooking times for several dishes.

Switching the hob on and off

The hob is turned on and off with the main switch.

To switch on: press the ① symbol. The indicator above the main switch lights up. The hob is ready for use.

To switch off: press the ① symbol until the indicator above the main switch disappears. All hotplates are off. The residual heat indicator stays on until the hotplates have cooled down completely.

Note: The hob switches off automatically when all the hotplates are switched off for more than 20 seconds.

Setting the hotplate

The desired power level is set in the programming panel.

Power level 1 = minimum power.


Power level 9 = maximum power.

Each power level has an intermediate setting. This is marked with a dot.

Selecting the power level

The hob must be switched on.

1. Press the symbol for the required hotplate. The and symbols light up on the display.
2. Within the next 10 seconds, slide a finger over the programming panel until the required power level lights up.

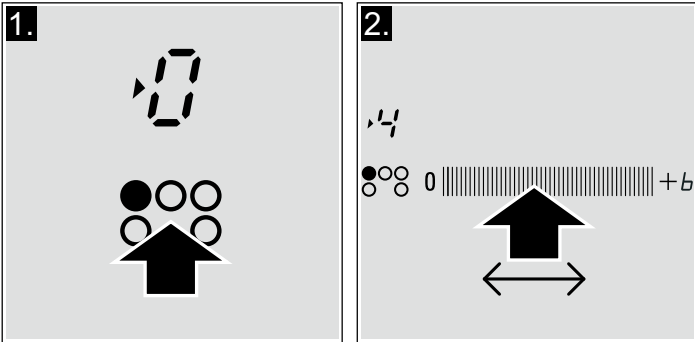

3. To change the power level: select the hotplate and set the desired level using the programming panel.

Switch off the hotplate

Select the hotplate and set it to in the programming panel. The hotplate turns off and the residual heat indicator appears.

Notes

- Upon selecting a hotplate the symbol is displayed. It may then proceed to be adjusted.
- If no pan has been placed on the induction hotplate, the selected power level flashes. After a certain time has elapsed, the hotplate switches off.

Cooking guidelines table

The table below contains some examples.

Cooking times depend on the power level, type, weight and quality of the food. As such they are approximate.

Power levels affect cooking results.

When heating purées, creams and thick sauces, stir occasionally.

Use power level 9 to begin cooking.

	Power level	Cooking time (minutes)
Melt		
Chocolate, chocolate coating, butter, honey	1-1.	-
Gelatine	1-1.	-
Heating and keeping warm		
Stew (e.g., lentils)	1-2	-
Milk**	1.-2.	-
Sausages heated in water**	3-4	-
Defrosting and heating		
Frozen spinach	2.-3.	5-15 min
Frozen goulash	2.-3.	20-30 min
Slow cooking, simmering		
Potato dumplings	4.-5.*	20-30 min
Fish	4-5*	10-15 min
White sauces (e.g., bechamel)	1-2	3-6 min
Whipped sauces (e.g., Bearnaise, Hollandaise)	3-4	8-12 min
Boiling, steaming, sautéing		
Rice (with a double amount of water)	2-3	15-30 min
Rice pudding	2-3	25-35 min
Unpeeled potatoes	4-5	25-30 min
Peeled potatoes with salt	4-5	15-25 min
Pasta	6-7*	6-10 min
Soups	3.-4.	15-60 min
Vegetables	2.-3.	10-20 min
Greens, frozen foods	3.-4.	7-20 min
Cooked in a pressure cooker	4.-5.	-
Stewing		
Meat roll	4-5	50-60 min
Stew	4-5	60-100 min
Goulash	3.-4.	50-60 min
Bake / Fry with a little oil**		
Steaks, plain or breaded	6-7	6-10 min
Frozen steaks	6-7	8-12 min
Chops, plain or breaded	6-7	8-12 min
Beefsteak (3 cm thick)	7-8	8-12 min
Chicken breast (2 cm thick)	5-6	10-20 min
Frozen chicken breast	5-6	10-30 min
Plain fish and fish fillet	5-6	8-20 min
Breaded fish and fish fillet	6-7	8-20 min
Frozen breaded fish (e.g., fish fingers)	6-7	8-12 min
Prawns and shrimps	7-8	4-10 min
Frozen meals (e.g., stir-fries)	6-7	6-10 min
Pancakes	6-7	fry individually
Omelette	3.-4.	fry individually
Fried eggs	5-6	3-6 min

* Uncovered cooking

** Uncovered

	Power level	Cooking time (minutes)
Frying** (150-200 g per serving with 1-2 l. of oil)		
Frozen foods (e.g., French fries, chicken nuggets)	8-9	fry one portion at a time
Frozen croquettes	7-8	
Meatballs	7-8	
Meat (e.g., chicken pieces)	6-7	
Fish, in breadcrumbs or batter	6-7	
Greens, mushrooms, in breadcrumbs or batter (e.g., baby mushrooms)	6-7	
Confectionary products (e.g., fritters, fruit in batter)	4-5	
* Uncovered cooking		
** Uncovered		

Deep-frying function

This function is used for frying on the two side hotplates on the right-hand side, regulating the temperature of the pan.

Deep-frying features

The hotplate only heats when necessary. This way energy is saved. The oil and fat do not overheat.

Notes

- Never leave oil or fat cooking unattended.
- Place the pan at the centre of the hotplate. Ensure that the base of the pan is the right diameter.
- Do not cover the pan with a lid. Doing so will cause the automatic regulation not to function. A protective screen may be used without affecting the automatic regulation
- Only use oil which is suitable for frying. If using butter, margarine, olive oil or pork lard, select the **min** temperature setting.

Pans to use with the frying function

There are pans suited to this function which may be purchased later as optional accessories, in specialised stores, or through our Technical Assistance Service. Always indicate the related reference code.

- **HZ390210** small pan (15 cm in diameter).
- **HZ390220** medium pan (19 cm)
- **HZ390230** large pan (21 cm)

The pans are non-stick. Food may also be fried in a small amount of oil.

The temperature settings shown below have been specially adjusted for these types of pans.

Note. If a different type of pan is used, try it first at the lowest temperature, adjusting it as required. The pans may overheat.

Temperature settings


Power level	Temperature	Suitable for
max	high	e.g., potato pancakes, sautéed potatoes, and rare beefsteak.
med	medium-high	e.g., thin fried foods like frozen pies, escalopes, ragu, vegetables
low	medium-low	e.g. thick fried food such as hamburgers and sausages, fish.
min	low	e.g. omelettes, using butter, olive oil or margarine

How to program


Select the suitable temperature setting from the table. Put a pan on the hotplate.

The hob must be switched on.

- Press the **S** symbol. The **A** indicator lights up on the hotplate display. The possible temperature settings are displayed on the programming panel.

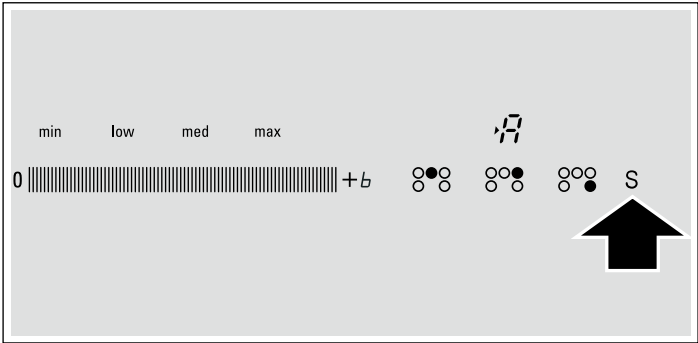

- Within the next 10 seconds, select the desired temperature level on the programming panel. The Frying function has been activated.

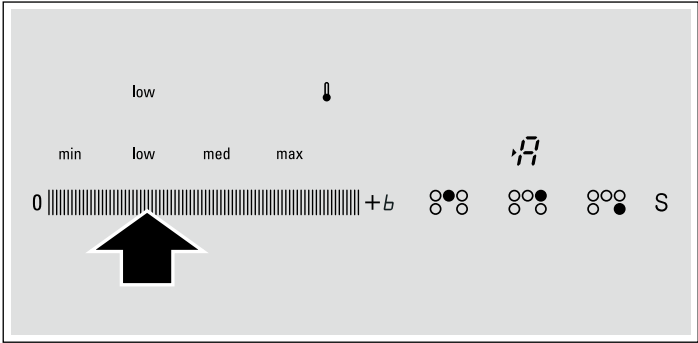

The temperature symbol stays lit until the frying temperature is reached. Then the signal sounds and the temperature symbol turns off.

- Add oil or butter to the pan and then the food. As usual, turn the food over to avoid burning.

Turning off the deep-frying function

Set to 0 in the programming panel.

Table

The table shows which temperature setting is suitable for each type of food. The cooking time may vary according to the type, weight, thickness and quality of the food.

The heat setting selected depends on the type of pan used.

		Temperature setting	Total cooking time after audible signal sounds
Meat	Escalope with or without breading	med	6-10 min
	Beef	med	6-10 min
	Chops	low	10-17 min
	Cordon bleu	low	15-20 min
	Beefsteak rare (3 cm thick)	max	6-8 min
	Beefsteak medium or well done (3 cm thick).	med	8-12 min
	Chicken breast (2 cm thick)	low	10-20 min
	Sausages, cooked or raw	low	8-20 min
	Hamburgers / Russian fillets	low	6-30 min
	Leberkäse	min	6-9 min
	Ragu, gyros	med	7-12 min
	Ground beef	med	6-10 min
	Bacon	min	5-8 min
Fish	Fried fish	low	10-20 min
	Fish fillet, plain or breaded	low / med	10-20 min
	Prawns and shrimps	med	4-8 min
Egg-based dishes	Crepes	med	fry individually
	Omelettes	min	fry individually
	Fried eggs	min / med	2-6 min
	Scrambled eggs	min	2-4 min
	Kaiserschmarrn (pancakes with raisins)	low	10-15 min
	Sweet fried bread / french toast	low	fry individually
Potatoes	Sautéed potatoes prepared with boiled unpeeled potatoes	max	6-12 min
	Sautéed potatoes prepared with raw potatoes*	low	15-25 min
	Potato pancakes	max	fry individually
	Glazed potatoes	med	10-15 min
Vegetables	Garlic, onion	min	2-10 min
	Courgette, aubergine	low	4-12 min
	Pepper, green asparagus	low	4-15 min
	Mushrooms	med	10-15 min
	Glazed vegetables	med	6-10 min
Frozen products	Escalope	med	15-20 min
	Cordon bleu	low	10-30 min
	Chicken breast	min	10-30 min
	Nuggets	med	10-15 min
	“Gyros“, “Kebab“	med	10-15 min
	Fish fillet, plain or breaded	low	10-20 min
	Fish fingers	med	8-12 min
	French fries	med / max	4-6 min
	Pan-fried vegetables and other ingredients	min	8-15 min
	Spring rolls	low	10-30 min
	Camembert / cheese	low	10-15 min
Others	Camembert / cheese	low	7-10 min
	Pre-cooked dishes prepared by boiling in water (e.g., pasta)	min	4-6 min
	Sweet fried bread	low	6-10 min
	Almonds/nuts/pine nuts*	min	3-7 min

* In a cold pan.

Frying programs

These programmes should only be used with pans recommended for the frying function.

The following food can be prepared using these programmes:

Programme	Dish
P1	Escalope
P2	Breast meat (poultry), cordon bleu
P3	Rare steak
P4	Medium or well-cooked steak
P5	Fish
P6	Pan-fried frozen vegetables and other ingredients
P7	Oven-style - potato chips (frozen)
P8	Pancakes
P9	Omelette, eggs

Selecting the desired program

- Select the hotplate:
1. Press the **P** symbol. **P** lights up in the hotplate display. **P** lights up in the time program function display.
 2. Slide your finger along the programming panel until the required programme is displayed.
- The program is now selected.
- The temperature symbol stays lit until the set temperature is reached. Then the signal sounds and the temperature symbol light goes out.
- Add oil or butter to the pan and then the food. As usual, turn the food in order to prevent it from burning.




Switching off the program

Set to 0 in the programming panel.

Childproof lock

The hob can be protected against being accidentally turned on, to ensure that children do not switch on the hotplates.

Activating and deactivating the childproof lock.

- The range must be turned off.
- To activate: press and hold the  symbol for approx. 4 seconds. The  symbol lights up for 10 seconds. The range is locked.
- To deactivate: press and hold the  symbol for approx. 4 seconds. The lock is now deactivated.

Activating and deactivating the childproof lock

With this function, the childproof lock automatically activates when a hob is switched off.

Activating and deactivating


See the "Basic Settings" section.

Powerboost function

The Powerboost function can be used to heat large amounts of water more quickly than the power level **9**.

Restrictions when using

This function is available on all hotplates, provided that no other hotplate in the same group is operating, (see diagram). Otherwise, the **b** and **9** symbols will flash on the display of the selected hotplate; then the power level **9** is automatically set.

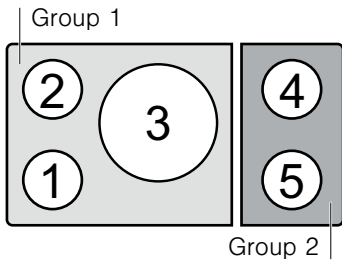

To activate

1. Select the power level **9**.
2. Press the programming panel located above the **+b** symbol. The function has been activated.

To turn off

Press the programming panel located above the **+b** symbol. The Powerboost function has been deactivated.

Note: In certain circumstances, the Powerboost function may turn off automatically in order to protect the electronic components inside the hob.

Time programming function

This function may be used in two different ways:


- to automatically switch off a hotplate.
- as a timer.

Turning off a hotplate automatically

Enter the cooking time for the required hotplate. The hotplate turns off automatically once the time has elapsed.

How to program

1. Select the required power level.
2. Press the ⏸ symbol. The I→I indicator on the hotplate lights up. 00 is displayed on the time program function display. To select another hotplate, press the ⏸ symbol several times until the I→I indicator for the desired hotplate lights up.
3. Select the required cooking time in the programming panel. The possible previous setting is, from left to right 1, 2, 3, etc., up to 10 minutes. Within the next 10 seconds, continue passing through the options on the programming panel until reaching the desired time.

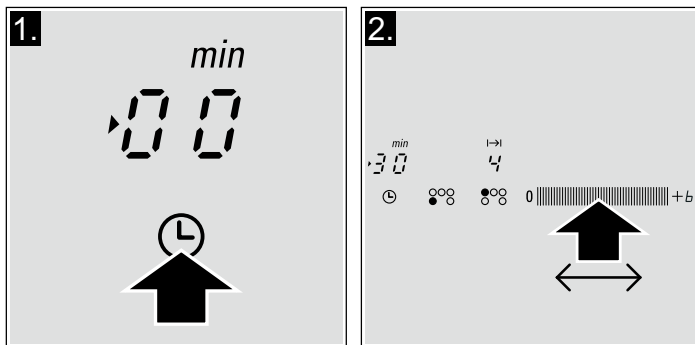

After a few seconds, the cooking time begins to count down.

Automatic programming

If the previous setting from 1 to 5 is pressed in the programming panel, the cooking time is reduced by one minute, if it is held down the time is automatically reduced to one minute.

If the previous setting from 6 to 10 is pressed in the programming panel, the cooking time is increased by one minute, if it is held down the time is automatically increased to 99 minutes.

Once the time has elapsed

The hotplate switches off. An audible signal sounds and 00 appears in the time program function display for 10 seconds. The I→I indicator lights up. Pressing the ⏸ symbol turns off the indicators and stops the signal.

Changing or cancelling the time

Press the ⏸ symbol several times until the desired I→I indicator lights up. Change the cooking time in the programming panel, or set to 00.

Automatically switch off a hotplate with the deep-frying function

When cooking using the deep-frying function, the programmed cooking time begins to count down once the selected hotplate reaches the desired temperature.

Notes

- If a cooking time has been programmed in several zones, it can be set to display all time values. To do this, press the ⏸ symbol several times until the I→I indicator for the required hotplate lights up.
- Cooking times of up to 99 minutes can be programmed.

Automatic timer

With this function you may select a cooking time for all hotplates. Once a hotplate is switched on, the selected time will begin to count down. The hotplate will automatically switch off when the cooking time has elapsed.

Instructions on activating the timer are found in the chapter entitled "Basic settings".

Note: The cooking time of a zone may be cancelled or changed:

Press the ⏸ symbol several times until the required I→I indicator lights up. Change the cooking time in the programming panel, or set to 00.

The timer

The timer can be set for periods of up to 99 minutes. It is independent of the other settings. This function does not automatically switch off a hotplate.

Programming

1. Press the ⏸ symbol several times until the ⏸ indicator lights up. 00 lights up in the time program function display.
 2. Select the desired time in the programming panel.
- The timer starts to count down after a few seconds.

Once the time has elapsed

A warning beep sounds. In the time program function display 00 is shown, and the ⏸ indicator comes on. After 10 seconds the indicators turn off.

Pressing the ⏸ symbol turns off the indicators and stops the beep.

Changing or cancelling the time

Press the ⏸ symbol several times until the ⏸ indicator lights up. Change the cooking time in the programming panel, or set to 00.

Automatic time limitation

If the hotplate remains in use for a long time and no changes are made in the settings, the automatic time limitation function is triggered.


The hotplate stops heating. On the hotplate display, F and B flash alternately.

The indicator goes out when any symbol is pressed. The hotplate can now be reset.

When the automatic time function is used, it is governed by the selected power level (from 1 to 10 hours).

Cleaning lock function




























Cleaning the control panel while the hob is on may change the settings.

In order to avoid this, the hob has a cleaning lock function. Press the  symbol. A signal sounds. The control panel is locked for 35 seconds. The surface of the control panel can now be cleaned without risk of changing the settings.

Note: The lock does not affect the main switch. The hob may be switched off when desired.

Basic settings

The device has several basic settings. These settings may be adapted to the user's individual needs.


Indicator	Function
	Childproof lock  Deactivated.*  Activated.
	Sound signals  Confirmation beep and error signal deactivated.  Only confirmation beep deactivated.  All signals activated.*
	Automatic timer  Switched off.*  Automatic shut-off time.
	Duration of the time program function warning signal  10 seconds*.  30 seconds.  1 minute.
	Power-Management function  = Deactivated.*  = 1,000 W. minimum power.  = 1,500 W.  = 2,000 W. etc.  or  = maximum power of the hob.
	Hotplate time selection  Unlimited: the last hotplate programmed remains selected.*  Limited: The hotplate will only remain selected for 10 seconds.
	Return to basic settings  Personal settings.*  Return to factory settings.

*Factory settings

Accessing the basic settings

The hob should be turned off.


1. Turn on the hob with the main switch.
2. Within the next 10 seconds, press the ⌚ symbol for 4 seconds.

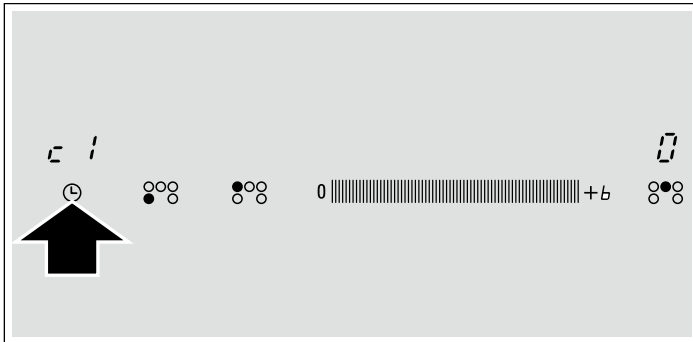

'C I' is displayed on the left of the screen and 'U' on the right.

3. Press the ⌚ symbol several times until the indicator for the desired function appears on the left of the screen.

4. Then select the required setting using the programming panel.

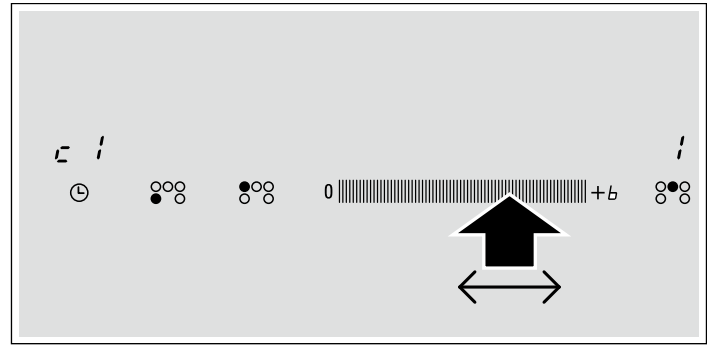

5. Press the ⌚ symbol again for more than 4 seconds. The settings will have been correctly saved.

Quit

To leave the basic settings, turn off the hob at the main switch.

Care and cleaning

The advice and warnings contained in this section aim to guide you in cleaning and maintaining the hob, so that it is kept in the best possible condition

Hob

Cleaning

Clean the hob after each use. This prevents food remains left on the surface from burning. Wait until the hob is cold enough before attempting to clean it.

Only use cleaning products specifically designed for glass-ceramic hobs. Follow the instructions provided on the packaging.

Do not use:

- Abrasive products
- heavy-duty cleaners, like oven sprays and stain removers
- Pads that may scratch
- High-pressure or steam cleaners

Glass scraper

Remove dried-on food remains using a glass scraper.

1. Release the scraper safety catch
2. Use the blade to clean the hob surface

Do not attempt to clean the hob surface with the base of the scraper. This could result in scratching.

⚠ Risk of injury!!

The blade is extremely sharp. Risk of cuts. Protect the blade when not in use. Replace the blade immediately when any imperfections are found.

Care of the appliance

Apply an additive to protect and preserve the hob. Follow the advice and warnings provided with the product.

Hob frame

In order to avoid damage to the hob frame, follow the indications below:

- Use only slightly soapy hot water
- Do not use sharp or abrasive products
- Do not use a glass scraper

Fixing malfunctions

Malfunctions are generally caused by minor faults. Before contacting the Technical Assistance Service, make sure you have read the following recommendations and warnings.

Indicator	Malfunction	Measure
none	The electric power supply has been interrupted. The appliance has not been correctly connected following the connection diagram. Electronic system malfunction.	Use other electrical appliances to check if there has been a power cut. Make sure that the appliance has been connected correctly. If in the above checks, the malfunction is not resolved, contact the Technical Assistance Service.
\mathcal{E} flashing	The control panel is wet or an object is resting on it.	Dry the control panel area or remove the object.
$\mathcal{E}r$ + number / d + number / \mathcal{E} + number	Electronic system malfunction.	Disconnect the hob from the mains. Wait 30 seconds or so, then connect it again.*
$F0 / F9$	There is an internal error in the system.	Disconnect the hob from the mains. Wait 30 seconds or so, then connect it again.*
$F2$	The electronic system has overheated and the corresponding hotplate has been switched off.	Wait until the electronic system has cooled down completely. Then press any symbol on the hob.*
$F4$	The electronic system has overheated and all hotplates have been switched off.	
$U1$	Supply voltage outside normal operating limits.	Please contact the local electricity board.
$U2 / U3$	The hotplate has overheated and switched off to protect its working surface.	Wait until the electronic system has cooled down sufficiently before switching it back on.

* If the warning persists call the Technical Assistance Service.

Do not place hot pans on the control panel.

Normal noise while the appliance is working

Induction heating technology is based on the creation of electromagnetic fields that generate heat directly at the base of the pan. Depending on how the pan has been manufactured, certain noises or vibrations may be produced such as those described below:

A deep humming sound as in a transformer

This noise is produced when cooking on a high power level. It is caused by the amount of energy transferred from the hob to the pan. The noise disappears or becomes faint when the power level is lowered.

A low whistling sound

This noise is produced when the pan is empty. It disappears when water or food is added to the pan.

A crackling sound

This noise occurs in pans which are made from different materials superimposed on one another. It is caused by the vibrations that occur in the adjoining surfaces of the different superimposed materials. The noise comes from the pan. The amount of food and cooking method can vary.

A high-pitched whistling sound

This noise is produced mainly in pans made from different materials superimposed on one another, and it occurs when such pans are heated at maximum power on two hotplates at the same time. The whistling disappears or becomes fainter as soon as the power level is lowered.

Noise from the fan

For proper use of the electronic system, the temperature of the hob must be controlled. For this purpose, the hob has a fan that starts working when it detects excess temperatures at different power levels. The fan may also work by inertia after the hob has been switched off, if the temperature detected is still too high.

Rhythmic sounds similar to the hands of a clock

This noise is only produced when the 3 or more left hotplates are working and disappears or is reduced when one of the hotplates is switched off.

The noises described are normal, they are part of induction heating technology and not a sign of malfunction.

After-sales service

Our after-sales service is there for you if your appliance should need to be repaired. We are committed to find the best solution also in order to avoid an unnecessary call-out.

E number and FD number:

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

To book an engineer visit and product advice

GB 0844 8928999

Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.

IE 01450 2655

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.



Siemens-Electrogeräte GmbH
Carl-Wery-Straße 34
81739 München
Germany



9000691067 00 911019