

Your washing machine

Congratulations - You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical water- and energy consumption. Each machine that leaves our factory has been inspected thoroughly to ensure that it functions properly and is in perfect condition.

Further information: www.siemens-home.com

Environmentally friendly waste disposal

All packaging must be disposed of in accordance with environmental guidelines. This appliance is certified in accordance with European Directive 2002/96/EEC on waste electrical and electronic equipment (WEEE). This directive provides the framework for the EU-wide collection and reuse of used appliances.

Contents

	Page
■ Intended use	1
■ Programmes	1
■ Setting and adjusting the programme	3
■ Washing	3/4
■ After washing	4
■ Individual settings	5/6
■ Important information	6
■ Overview of programmes	7
■ Safety instructions	8
■ Consumption values	8
■ Care	9
■ Information on the display panel	9
■ Maintenance	10
■ What to do if... ..	11

Protection of the environment/Conservation tips

- Always fill the washing machine with a maximum amount of laundry for the relevant programme.
- Wash normally soiled laundry without a pre-wash.
- Instead of **Cottons 90 °C**, choose the programme **Cottons 60 °C** with the additional function **ecoPerfect**. Comparable cleaning result with significantly lower energy consumption.
- Measure the detergent according to the manufacturer's instructions and water hardness.
- If the laundry is then dried in the tumble dryer, select the spin speed according to the instructions of the dryer manufacturer.

Intended use

- for domestic use only,
- for washing machine-washable fabrics and hand-washable wool in detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- ! Do not leave children unattended near the washing machine.
- The washing machine is not to be used by children or persons not familiar with the operating instructions.
- Keep pets away from the washing machine.

Programmes

Detailed overview of programmes -> [page 7](#). Spin speed can be selected individually, irrespective of the selected programme and programme progress.

	Cottons	Hard-wearing fabrics
	+ Prewash	Hard-wearing fabrics, prewash at 30 °C
	Mix	Different types of laundry
	Super 15'	Short programme
	Rinse/Spin	Laundry washed by hand, (Aqua Plus) button activated; if only using the spin cycle, deactivate the button
	Empty	Drain rinsing water for 0 (without final spin)
	Wool	Hand/machine-washable wool
	Delicate/Silk	Delicate washable fabrics
	Easy-Care	Easy-care fabrics

Preparation

Correct installation according to the separate Installation instructions.

Checking the machine
- Never use a damaged machine.
- Inform customer service.

Connecting the mains plug
! Make sure your hands are dry. Take hold of the plug only.

Turning the tap on

Sorting and loading laundry

Follow the manufacturer's care information. According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed the maximum load -> [page 7](#).

Observe the important information -> [page 6](#). Insert large and small items of laundry. Do not trap items of laundry between the washing machine door and the rubber seal.

Add detergent and care products
Measure accordingly: Amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

Compartment II: Detergent for the main wash, water softener, bleach, stain remover
Compartment I: Detergent for pre-wash
Compartment : Fabric softener, starch

Setting and adjusting programmes**

** If the symbol flashes in the display panel, the childproof lock is active -> deactivate, [page 5](#).

Additional functions, the options button and spin speeds -> Individual settings, [page 5](#).

Start/Reload
All buttons are sensitive and need only to be touched lightly. Press and hold the options and spin speed buttons to run through the setting options automatically.

Start/Reload
Programme sequence displays: Childproof lock, washing, rinsing, spinning
Programme end after

Start/Reload
1 - 24h
h : min (Finished in)

Start/Reload
1 - 24h
h : min (Finished in)

Start/Reload
1 - 24h
h : min (Finished in)

Start/Reload
1 - 24h
h : min (Finished in)

Start/Reload
1 - 24h
h : min (Finished in)

Start/Reload
1 - 24h
h : min (Finished in)

Start/Reload
1 - 24h
h : min (Finished in)

Washing

Before washing for the first time
Wash once without any laundry -> [page 9](#).

Turning the tap off
Not required for Aqua-Stop models -> [Refer to installation instructions](#)

Switching off
Turn the programme selector to **Off**.

End of programme when ...
... Start/Reload flashes and **-0-** appears on the display panel.

Interrupting the programme
Programmes at high temperatures:
- Cool washing: Select **Rinse/Spin**.
- Press **Start/Reload**.
Programmes at lower temperatures:
- Choose **Rinse/Spin** (deactivate (Aqua Plus) or select **Empty**.
- Press **Start/Reload**.

Changing the programme, if ...
... you have selected the wrong programme by mistake:
- Reselect the programme.
- Press **Start/Reload**. The new programme starts from the beginning.

Reloading laundry, if ... -> [page 5](#)
... **Start/Reload** is selected and then **YES** is lit in the display panel. If **NO** is lit, the washing machine door cannot be opened.
- Press **Start/Reload**.

Childproof lock and reloading
 Childproof lock/ Appliance lock
You can lock the washing machine to prevent the functions you have set from being changed inadvertently.
ON/OFF: Press and hold the **Start/Reload** button for approx. 5 seconds after the start/end of the programme. Note: The childproof lock can remain activated until you wish to start the next programme, even after switching off the machine. Then you can deactivate the childproof lock before the start of the programme and activate it again as necessary once the programme has started.

YES Reload
If you want to add additional items of laundry after the programme has started, choose **Start/Reload**. The machine checks whether reloading is possible.
YES is lit: Reloading is possible.
NO flashes: wait until **YES** lights up.
Note: do not open the door until **YES** is lit.
NO: It is not possible to reload.
Note: For safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the **Start/Reload** button.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Removing the washing

Open the washing machine door and remove the washing. If (without final spin) is active: Turn the programme selector to **Empty** or select the spin speed. Press **Start/Reload**.

Turning the tap off
Not required for Aqua-Stop models -> [Refer to installation instructions](#)

Switching off
Turn the programme selector to **Off**.

End of programme when ...
... Start/Reload flashes and **-0-** appears on the display panel.

Interrupting the programme
Programmes at high temperatures:
- Cool washing: Select **Rinse/Spin**.
- Press **Start/Reload**.
Programmes at lower temperatures:
- Choose **Rinse/Spin** (deactivate (Aqua Plus) or select **Empty**.
- Press **Start/Reload**.

Changing the programme, if ...
... you have selected the wrong programme by mistake:
- Reselect the programme.
- Press **Start/Reload**. The new programme starts from the beginning.

Reloading laundry, if ... -> [page 5](#)
... **Start/Reload** is selected and then **YES** is lit in the display panel. If **NO** is lit, the washing machine door cannot be opened.
- Press **Start/Reload**.

Childproof lock and reloading
 Childproof lock/ Appliance lock
You can lock the washing machine to prevent the functions you have set from being changed inadvertently.
ON/OFF: Press and hold the **Start/Reload** button for approx. 5 seconds after the start/end of the programme. Note: The childproof lock can remain activated until you wish to start the next programme, even after switching off the machine. Then you can deactivate the childproof lock before the start of the programme and activate it again as necessary once the programme has started.

YES Reload
If you want to add additional items of laundry after the programme has started, choose **Start/Reload**. The machine checks whether reloading is possible.
YES is lit: Reloading is possible.
NO flashes: wait until **YES** lights up.
Note: do not open the door until **YES** is lit.
NO: It is not possible to reload.
Note: For safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the **Start/Reload** button.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Individual settings

h : min (Finished in)
When you select the programme, the relevant programme duration is displayed. You can delay the start of the programme before it begins. The (Finished in) time can be set in increments of one hour up to a maximum of 24 hours. Press the (Finished in) button repeatedly until the required number of hours is displayed (h = hour). Choose Press **Start/Reload**. It is not possible to make adjustments once the programme has started.

(Spin speed in rpm/without final spin)
Before and while the selected programme is running, you can set the spin speed or (without final spin, laundry soaks in the last rinsing water, display panel --). The effects depend on the programme progress. The maximum selectable spin speed depends on the model and on which programme is currently selected.

Additional functions-> and overview of programmes, see [page 7](#)

speedPerfect
For washing in a shorter time with a washing outcome comparable to that of the standard programme. Maximum load -> Overview of programmes, [page 7](#).

ecoPerfect
For saving energy with a washing performance comparable to that of the standard programme.

(Easy-iron)
Special spin sequence with subsequent fluffing. More gentle final spin - residual moisture in the laundry slightly increased.

(Aqua Plus)
Increased water level and additional rinse cycle, extended washing time. For areas with very soft water or for further enhancing the spin result.

Childproof lock and reloading
 Childproof lock/ Appliance lock
You can lock the washing machine to prevent the functions you have set from being changed inadvertently.
ON/OFF: Press and hold the **Start/Reload** button for approx. 5 seconds after the start/end of the programme. Note: The childproof lock can remain activated until you wish to start the next programme, even after switching off the machine. Then you can deactivate the childproof lock before the start of the programme and activate it again as necessary once the programme has started.

YES Reload
If you want to add additional items of laundry after the programme has started, choose **Start/Reload**. The machine checks whether reloading is possible.
YES is lit: Reloading is possible.
NO flashes: wait until **YES** lights up.
Note: do not open the door until **YES** is lit.
NO: It is not possible to reload.
Note: For safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning. To continue the programme, press the **Start/Reload** button.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Individual settings

Signal
1. Activating the mode for setting the signal volume
Set to 1 step, the display panel lights up
press and hold + 1 step, release

2. Setting the volume for ...
0 1 2 3 4
* you may need to select the function several times.

Important information
Protecting the laundry and the machine
- Empty pockets.
- Look out for metal items (paperclips, etc.).
- Wash delicates in a laundry bag (tights, curtains, underwired bras).
- Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in the laundry bag.

Laundry with varying degrees of soiling
light
intense

Soaking Load laundry of the same colour
Pour soaking agent/detergent into compartment **II** in accordance with the manufacturer's instructions. Turn the programme selector to **Cottons cold** and press **Start/Reload**. After approx. 10 minutes, press **Start/Reload** to pause the programme. Once the required soaking time has elapsed, press **Start/Reload** again to continue the programme, or select a different programme.

Starching Laundry must not be treated with fabric softener
Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment (rinse first if necessary).

Dyeing/bleaching
Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions! Do **not** use the washing machine for bleaching clothes!

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Start/Reload
To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Programmes	°C	max.	Type of laundry	Additional functions; information
Cottons + Prewash	cold, 40, 60, 90 °C 40 °C	7 kg/ 4 kg*	Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	speedPerfect *, ecoPerfect , AquaPlus
Easy-Care	cold, 40, 60 °C	3 kg	Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect , ecoPerfect , AquaPlus
Mix	40 °C		Fabrics made of cotton or easy-care fabrics	speedPerfect , ecoPerfect , AquaPlus
Delicate/Silk	cold		For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	speedPerfect , ecoPerfect , AquaPlus
Wool	cold, 30 °C	2 kg	Hand- or machine-washable fabrics made of wool or containing wool	No spin between rinse cycles Particularly gentle wash programme to prevent shrinkage of laundry dry, Longer programme breaks (fabrics rest in the detergent solution)
Super 15	30 °C		Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	Short programme, approx. 15 minutes, suitable for lightly soiled laundry
Additional programmes				Rinse , Spin , Empty

* Reduced load for additional **speedPerfect** function.

† Programmes without prewash - add detergent to compartment **II**, programmes with prewash - distribute the detergent between compartments **I** and **II**.

Siemens-Elektrogeräte GmbH Carl-Wery-Str. 34 81739 München / Germany	WM09E361HK WM08E361HK...	9000 697 724 0811
--	-----------------------------	----------------------

Safety instructions

- Read the instruction manual and installation instructions and all other information enclosed with the washing machine and act accordingly.
- Retain the documents for subsequent use.

Risk of electric shock

- Never pull the cable to disconnect the mains plug.
- Never insert/disconnect the mains plug with damp hands.

Danger to life

For worn-out appliances:

- Disconnect the mains plug.
- Sever the mains cable and discard along with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives.

Danger of suffocation

- Keep packaging, film and packaging parts out of the reach of children.

Risk of poisoning

Risk of explosion

- Keep detergents and care products out of the reach of children.
- Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover / cleaning solvent may lead to an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

Risk of injury

- The washing machine door can become very hot.
- Be careful when draining hot detergent solution.
- Do not climb onto the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum if it is still rotating.
- Be careful when opening the detergent drawer while the machine is in operation.

Programme	Additional function	Load	Electricity consumption**	Water**	Programme duration**
Cottons 40 °C		7 kg	0.69 kWh	60 l	2:36 h
Cottons 60 °C		7 kg	1.33 kWh	60 l	2:39 h
Cottons 60 °C	ecoPerfect *	7 kg	1.05 kWh	51 l	3:08 h
Cottons 90 °C		7 kg	2.00 kWh	64 l	2:47 h
Easy-Care 40 °C		3 kg	0.55 kWh	55 l	1:37 h
Mix 40 °C		3 kg	0.48 kWh	32 l	1:03 h
Wool, cold		2 kg	0.10 kWh	39 l	0:40 h
Wool 30 °C		2 kg	0.19 kWh	39 l	0:40 h

* Programme setting with maximum spin speed for testing according to or in accordance with IEC60456.

** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions.

Care

Before washing for the first time

Do not load any laundry into the machine. Turn on the tap.

Add the following to compartment **II**:

- approx. 1 litre water
- detergent (dosage according to the manufacturer's instructions for light soiling and the appropriate degree of water hardness)

Set the programme selector to **Easy-Care 60 °C** and select **Start/Reload**. At the end of the programme, turn the programme selector to **Off**.

Machine housing, control panel

- Wipe with a soft, damp cloth.
- Do not use any abrasive cloths, scourers or cleaning agents (stainless steel cleaners).
- Remove detergent and cleaning agent residue immediately.
- Do not clean with a jet of water.

Cleaning the detergent drawer ...

... if it contains detergent or fabric softener residues.

1. Pull out, press insert down, remove draw completely.
2. To remove the insert: press the insert upwards from below with your finger.
3. Clean the detergent dispenser tray and insert with water and a brush and dry it.
4. Attach the insert and engage (connect the cylinder to the guide pin).
5. Push in the detergent drawer.

Leave the detergent drawer open so that any residual water can evaporate.

Drum

Leave the washing machine door open so that the drum can dry out.

Rust stains - use chlorine-free cleaning agent, not steel wool.

Descaling

Descal the appliance according to the descaler manufacturer's instructions. This should not be necessary if the correct dosage of detergent is used.

Ensure there is no laundry in the machine

Emergency release, e.g. in the event of a power cut

The programme continues to run when the power has been restored. However, if the laundry has to be removed, the washing machine door can be opened as follows:

Risk of scalding.

The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not reach into the drum if it is still rotating. Do not open the washing machine door if water can be seen through the glass.

1. Turn the programme selector to **Off** and disconnect the mains plug.
2. Drain the detergent solution -> *page 10*.
3. Pull the emergency release downwards with a tool and release. Washing machine door can then be opened.

Information on the display panel	
F: 16	Close the washing machine door properly; laundry may be caught.
F: 17	Open the tap completely, supply hose kinked or trapped; Clean the filter -> <i>page 10</i> , Water pressure too low.
F: 18	Detergent solution pump blocked; Clean the detergent solution pump -> <i>page 10</i> . Drainage hose / waste pipe blocked; Clean the drainage hose at the siphon -> <i>page 10</i> .
F: 21	Motor fault. Call customer services.
F: 23	Water in the base tub, appliance leaking. Call customer services.

Maintenance

Detergent solution pump

Turn the programme selector to **Off** and disconnect the mains plug.

1. Open and remove the service flap.
2. **For models with a drainage hose:** Remove the drainage hose from the retainer and pull it from the housing. Remove the container. Remove the sealing cap, allow the detergent solution to flow out. Replace the sealing cap and place the drainage hose in the retainer.
- 2* **For models without a drainage hose:** Carefully unscrew the pump cover until the detergent solution begins to flow out. When the service flap is half full, close the pump cover and empty the service flap. Repeat the above steps until all the detergent solution has completely drained out.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must rotate).
5. Replace the pump cover and screw it tightly.
6. Place the service flap back on and close.

Drainage hose at the siphon

Turn the programme selector to **Off** and disconnect the mains plug.

1. Loosen the hose clamp, carefully remove the drainage hose (residual water).
2. Clean the drainage hose and siphon connecting piece.
3. Reattach the drainage hose and secure the connection with the hose clamp.

Filter in the water supply

Risk of electric shock.

Do not immerse the **HydraSafe** safety device in water (contains an electric valve).

Reduce the water pressure in the supply hose:

1. Turn off the tap.
2. Select any programme (except for **Rinse**/ **Spin**/ **Empty**).
3. **Start/Reload**. Let the programme run for approximately 40 seconds.
4. Turn the programme selector to **Off**. Disconnect the mains plug.
5. Clean the filter: Disconnect the hose from the tap. Clean the filter using a small brush.

and/or for Standard and Aqua-Secure models:

Remove the hose on the rear of the appliance, Remove the filter with pliers and clean.

6. Connect the hose and check for leaks.

What to do if ...

Water is leaking out.

- Attach/replace the drainage hose correctly.
- Tighten the screw connection of the supply hose.

No water supply. Detergent not dispensed.

- **Start/Reload** not selected?
- Tap not turned on?
- Filter blocked? Clean the filter -> *page 10*.
- Supply hose kinked or trapped?

Washing machine door cannot be opened.

- Safety function active. Programme stopped? -> *page 4*.
- (without final spin) selected? -> *page 3, 4*.
- Can be opened by emergency release only? -> *page 9*.

Programme does not start.

- **Start/Reload** or (Finished in) time selected?
- Washing machine door closed?
- Childproof lock active? Deactivate -> *page 5*.

Detergent solution is not drained.

- (without final spin) selected? -> *page 3, 4*.
- Clean the detergent solution pump -> *page 10*.
- Clean the waste pipe and/or drainage hose.

Water not visible in the drum.

- Not a fault - water below the visible area.

Unsatisfactory spin result. Laundry wet/too damp.

- Not a fault - the unbalanced-load detection system has cancelled the spin cycle because of uneven distribution of the laundry. Distribute small and large items of laundry evenly inside the drum.
- (Easy-iron) selected? -> *page 5*.
- Selected speed too low? -> *page 5*.

The programme duration changes during the wash cycle.

- Not a fault – the programme sequence is optimised for the particular wash process. This may result in changes to the programme duration in the display field.

Spin cycle performed several times.

- Not a fault - unbalanced load detection system adjusts the imbalance.

Residual water in the compartment for care products.

- Not a fault - the action of the care product is not affected.
- Clean the insert if necessary -> *page 9*.

Odour formation in the washing machine.

- Run programme **Cottons 90 °C** without laundry. Use standard detergent.

Status display flashes. Foam may be coming out of the detergent drawer.

- Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser **II** (not for outdoor and down-filled textiles!).
- Reduce the detergent dosage for the next wash cycle.

Intense noise formation, vibrations and “wandering” during the spin cycle.

- Are the appliance feet fixed? Secure the appliance feet -> *Installation instructions*.
- Transportation safety devices removed? Remove the transportation safety devices -> *Installation instructions*.

Noises during spin and drain cycles.

- Clean detergent-solution pump -> *page 10*.

Display panel/indicator lamps do not function during operation.

- Power cut?
- Fuses triggered? Reset/change the fuse.
- If the fault occurs repeatedly, call customer services.

Programme sequence longer than usual.

- Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry.
- Not a fault - foam detection system active - adds an additional rinse cycle.

Detergent residues on the laundry.

- Occasionally, phosphate-free detergents contain water-insoluble residues.
- **Use the** **Rinse**/ **Spin cycle** or brush out the laundry after washing.

Observe the safety instructions on page 8.


Washing machine

Instruction manual

Read these instructions and the separate installation instructions before operating the washing machine.

en

SIEMENS

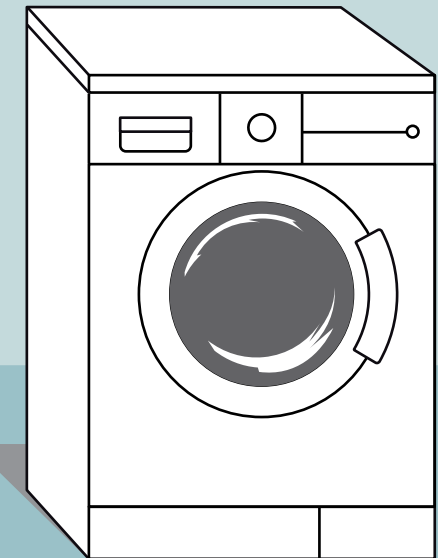

Your washing machine

Congratulations - You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical water- and energy consumption. Each machine that leaves our factory has been inspected thoroughly to ensure that it functions properly and is in perfect condition.

Further information: www.siemens-home.com

Environmentally friendly waste disposal



All packaging must be disposed of in accordance with environmental guidelines. This appliance is certified in accordance with European Directive 2002/96/EEC on waste electrical and electronic equipment (WEEE). This directive provides the framework for the EU-wide collection and reuse of used appliances.

Contents

	Page
Intended use	1
Programmes	1
Setting and adjusting the programme	3
Washing	3/4
After washing	4
Individual settings	5/6
Important information	6
Overview of programmes	7
Safety instructions	8
Consumption values	8
Care	9
Information on the display panel	9
Maintenance	10
What to do if...	11



Protection of the environment/Conservation tips

- Always fill the washing machine with a maximum amount of laundry for the relevant programme.
- Wash normally soiled laundry without a pre-wash.
- Instead of **Cottons 90 °C**, choose the programme **Cottons 60 °C** with the additional function **ecoPerfect**. Comparable cleaning result with significantly lower energy consumption.
- Measure the detergent according to the manufacturer's instructions and water hardness.
- If the laundry is then dried in the tumble dryer, select the spin speed according to the instructions of the dryer manufacturer.

Intended use

- for domestic use only,
- for washing machine-washable fabrics and hand-washable wool in detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.



- Do not leave children unattended near the washing machine.
- The washing machine is not to be used by children or persons not familiar with the operating instructions.
- Keep pets away from the washing machine.

Preparation



Correct installation according to the separate Installation instructions.



Checking the machine

- Never use a damaged machine.
- Inform customer service.





Connecting the mains plug



Make sure your hands are dry. Take hold of the plug only.



Turning the tap on

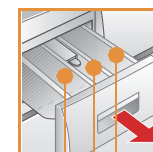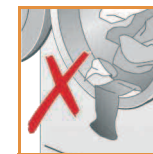

Compartment II: Detergent for the main wash, water softener, bleach, stain remover

Compartment ⌘: Fabric softener, starch


Compartment I: Detergent for pre-wash

Programmes

Detailed overview of programmes → page 7.
Spin speed can be selected individually, irrespective of the selected programme and programme progress.


Cottons	Hard-wearing fabrics
+ Prewash	Hard-wearing fabrics, prewash at 30 °C
Mix	Different types of laundry
Super 15'	Short programme
Rinse/Spin	Laundry washed by hand, (Aqua Plus) button activated; if only using the spin cycle, deactivate the button
Empty	Drain rinsing water for ⌘ (without final spin)
Wool	Hand/machine-washable wool
Delicate/Silk	Delicate washable fabrics
Easy-Care	Easy-care fabrics

Programme selector

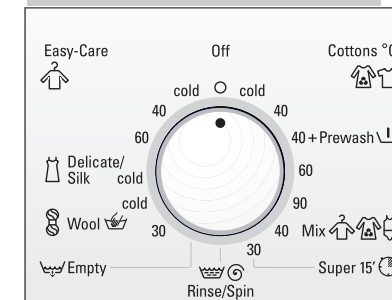

i Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction.

Display panel / Options button

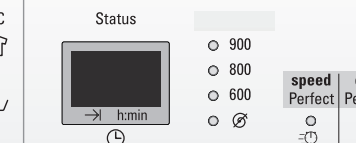

Status displays
1 - 24h
⌚ → h : min
(Finished in)

Programme
Childproof lock
Programme

Before washing for the first time
Wash once without any laundry -> page 9.

Sorting and loading laundry

Follow the manufacturer's care information. According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed the maximum load -> page 7.

Observe the important information -> page 6.

Insert large and small items of laundry.

Close the washing machine door. Take care not to trap items of laundry between the washing machine door and the rubber seal.

Add detergent and care products

Measure accordingly:

Amount of laundry, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Pour liquid detergent into the appropriate dispenser and place in the drum.

i Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages.

Setting** and adjusting programmes

Additional functions


Start/Reload



sequence displays:

lock, washing, rinsing, spinning

end after


i ** If the  symbol flashes in the display panel, the childproof lock is active -> deactivate, page 5.

Additional functions, the options button and spin speeds -> Individual settings, page 5.

 **Start/Reload**

i All buttons are sensitive and need only to be touched lightly. Press and hold the options and spin speed buttons to run through the setting options automatically.

Washing

Detergent drawer with compartments I, II, 

Drum




Control panel

Washing machine door

Service flap

Washing

Removing the washing

Open the washing machine door and remove the washing. If  (without final spin) is active: Turn the programme selector to  **Empty** or select the spin speed. Press  **Start/Reload**.



- Remove any foreign objects - risk of rusting.
- Leave the washing machine door and detergent drawer open so that any residual water can evaporate.


Turning the tap off

Not required for Aqua-Stop models -> Refer to installation instructions

Switching off



Turn the programme selector to **Off**.

End of programme when ...





...  Start/Reload flashes and **-0-** appears on the display panel.

Interrupting the programme


Programmes at high temperatures:

- Cool washing: Select  **Rinse/Spin**.
- Press  **Start/Reload**.



Programmes at lower temperatures:

- Choose  **Rinse/Spin** (deactivate  (Aqua Plus) or select  **Empty**.
- Press  **Start/Reload**.

Changing the programme, if ...

- ... you have selected the wrong programme by mistake:
 - Reselect the programme.
 - Press  **Start/Reload**. The new programme starts from the beginning.

Reloading laundry, if ... -> page 5

- ...  **Start/Reload** is selected and then **YES** is lit in the display panel. If **NO** is lit, the washing machine door cannot be opened.
- Press  **Start/Reload**.

Individual settings

- **h : min (Finished in)**

When you select the programme, the relevant programme duration is displayed. You can delay the start of the programme before it begins. The (Finished in) time can be set in increments of one hour up to a maximum of 24 hours. Press the (Finished in) button repeatedly until the required number of hours is displayed (h = hour). Choose Press **Start/Reload**. It is not possible to make adjustments once the programme has started.
- (Spin speed in rpm/without final spin)**

Before and while the selected programme is running, you can set the spin speed or (without final spin, laundry soaks in the last rinsing water, display panel --). The effects depend on the programme progress.
The maximum selectable spin speed depends on the model and on which programme is currently selected.
- Additional functions**→ and overview of programmes, see *page 7*

	speedPerfect	For washing in a shorter time with a washing outcome comparable to that of the standard programme. Maximum load → Overview of programmes, <i>page 7</i> .
	ecoPerfect	For saving energy with a washing performance comparable to that of the standard programme.
	(Easy-iron)	Special spin sequence with subsequent fluffing. More gentle final spin - residual moisture in the laundry slightly increased.
	(Aqua Plus)	Increased water level and additional rinse cycle, extended washing time. For areas with very soft water or for further enhancing the spin result.
- Childproof lock/ Appliance lock**

You can lock the washing machine to prevent the functions you have set from being changed inadvertently.
ON/OFF: Press and hold the **Start/Reload** button for approx. 5 seconds after the start/end of the programme.
Note: The childproof lock can remain activated until you wish to start the next programme, even after switching off the machine.
Then you can deactivate the childproof lock before the start of the programme and activate it again as necessary once the programme has started.
- YES Reload**

If you want to add additional items of laundry after the programme has started, choose **Start/Reload**. The machine checks whether reloading is possible.
YES is lit: Reloading is possible.
NO flashes: wait until **YES** lights up.
Note: do not open the door until **YES** is lit.
NO: It is not possible to reload.
Note: For safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or during spinning.
To continue the programme, press the **Start/Reload** button.
- Start/Reload**

To start the programme or to subsequently load additional laundry, and to activate/deactivate the childproof lock.

Individual settings

- Signal**

1. Activating the mode for setting the signal volume

Set to 0 1 step, the display panel lights up press and hold + 1 step, release 2

2. Setting the volume for ...

Button signals Information signals

Setting the volume* 1 step Setting the volume* Set to 0

* you may need to select the function several times.
- Important information**

Protecting the laundry and the machine

 - Empty pockets.
 - Look out for metal items (paperclips, etc.).
 - Wash delicates in a laundry bag (tights, curtains, underwired bras).
 - Fasten zips, do up any buttons.
 - Brush sand out of pockets and collars.
 - Remove curtain fittings or place in the laundry bag.
- Laundry with varying degrees of soiling**

light		Wash new items of clothing separately. Do not pre-wash. If required, choose the additional function speedPerfect .
intense		Pre-treat any stains as necessary. Do not load as much laundry. Choose the programme with Prewash.
- Soaking** Load laundry of the same colour

Pour soaking agent/detergent into compartment **II** in accordance with the manufacturer's instructions. Turn the programme selector to **Cottons cold** and press **Start/Reload**. After approx. 10 minutes, press **Start/Reload** to pause the programme. Once the required soaking time has elapsed, press **Start/Reload** again to continue the programme, or select a different programme.
- Starching** Laundry must not be treated with fabric softener

Starching is possible in all wash programmes if liquid starch is used. Pour the starch in accordance with the manufacturer's instructions into fabric softener compartment (rinse first if necessary).
- Dyeing/bleaching**

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions! Do **not** use the washing machine for bleaching clothes!

Overview of programmes

-> Refer to the table of consumption values on page 8 and notes on page 6.

Programmes	°C	max.	Type of laundry	Additional functions; information
Cottons + Prewash	cold, 40, 60, 90 °C 40 °C	7 kg/ 4 kg*	Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	speedPerfect *, ecoPerfect , (EasyIron), (Aqua Plus)
Easy-Care	cold, 40, 60 °C	3 kg	Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect , ecoPerfect , (EasyIron), (Aqua Plus)
Mix	40 °C		Fabrics made of cotton or easy-care fabrics	speedPerfect , ecoPerfect , (EasyIron), (Aqua Plus); different types of laundry can be washed together
Delicate/Silk	cold		For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	speedPerfect , ecoPerfect , (EasyIron), (Aqua Plus); No spin between rinse cycles
Wool	cold, 30 °C	2 kg	Hand- or machine-washable fabrics made of wool or containing wool	Particularly gentle wash programme to prevent shrinkage of laundry. Longer programme breaks (fabrics rest in the detergent solution)
Super 15	30 °C		Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	Short programme, approx. 15 minutes, suitable for lightly soiled laundry
Additional programmes			Rinse , Spin , Empty	

* Reduced load for additional **speedPerfect** function.

i Programmes without prewash - add detergent to compartment **II**, programmes with prewash - distribute the detergent between compartments **I** and **II**.

Siemens-Electrogeräte GmbH Carl-Wery-Str. 34 81739 München / Germany	WM09E361HK WM08E361HK...	9000 697 724 0811
--	-----------------------------	----------------------



Safety instructions

- Read the instruction manual and installation instructions and all other information enclosed with the washing machine and act accordingly.
- Retain the documents for subsequent use.

Risk of electric shock

- Never pull the cable to disconnect the mains plug.
- Never insert/disconnect the mains plug with damp hands.

Danger to life

- For worn-out appliances:
- Disconnect the mains plug.
 - Sever the mains cable and discard along with the plug.
 - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives.

Danger of suffocation

- Keep packaging, film and packaging parts out of the reach of children.

Risk of poisoning

Risk of explosion

- Keep detergents and care products out of the reach of children.
- Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover / cleaning solvent may lead to an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

Risk of injury

- The washing machine door can become very hot.
- Be careful when draining hot detergent solution.
- Do not climb onto the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum if it is still rotating.
- Be careful when opening the detergent drawer while the machine is in operation.

Consumption values

Programme	Additional function	Load	Electricity consumption**	Water**	Programme duration**
Cottons 40 °C		7 kg	0.69 kWh	60 l	2:36 h
Cottons 60 °C		7 kg	1.33 kWh	60 l	2:39 h
Cottons 60 °C	ecoPerfect *	7 kg	1.05 kWh	51 l	3:08 h
Cottons 90 °C		7 kg	2.00 kWh	64 l	2:47 h
Easy-Care 40 °C		3 kg	0.55 kWh	55 l	1:37 h
Mix 40 °C		3 kg	0.48 kWh	32 l	1:03 h
Wool, cold		2 kg	0.10 kWh	39 l	0:40 h
Wool 30 °C		2 kg	0.19 kWh	39 l	0:40 h

* Programme setting with maximum spin speed for testing according to or in accordance with IEC60456.

** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions.

Care



- Risk of electric shock. Disconnect the mains plug.
- Risk of explosion. No solvents.



Before washing for the first time

Do not load any laundry into the machine. Turn on the tap.

Add the following to compartment **II**:

- approx. 1 litre water
- detergent (dosage according to the manufacturer's instructions for light soiling and the appropriate degree of water hardness)

Set the programme selector to **Easy-Care 60 °C** and select **Start/Reload**. At the end of the programme, turn the programme selector to **Off**.



Machine housing, control panel



- Wipe with a soft, damp cloth.
- Do not use any abrasive cloths, scourers or cleaning agents (stainless steel cleaners).
- Remove detergent and cleaning agent residue immediately.
- Do not clean with a jet of water.



Cleaning the detergent drawer ...

... if it contains detergent or fabric softener residues.

1. Pull out, press insert down, remove draw completely.
2. To remove the insert: press the insert upwards from below with your finger.
3. Clean the detergent dispenser tray and insert with water and a brush and dry it.
4. Attach the insert and engage (connect the cylinder to the guide pin).
5. Push in the detergent drawer.

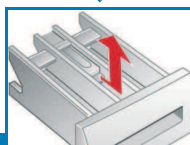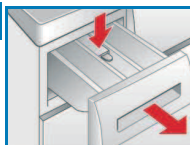

Leave the detergent drawer open so that any residual water can evaporate.



Drum

Leave the washing machine door open so that the drum can dry out.

Rust stains - use chlorine-free cleaning agent, not steel wool.



Descaling

Ensure there is no laundry in the machine

Descale the appliance according to the descaler manufacturer's instructions. This should not be necessary if the correct dosage of detergent is used.



Emergency release, e.g. in the event of a power cut

The programme continues to run when the power has been restored. However, if the laundry has to be removed, the washing machine door can be opened as follows:




Risk of scalding.

The detergent solution and laundry may be hot. If possible, leave it to cool down.

Do not reach into the drum if it is still rotating.

Do not open the washing machine door if water can be seen through the glass.

1. Turn the programme selector to **Off** and disconnect the mains plug.
2. Drain the detergent solution → page 10.
3. Pull the emergency release downwards with a tool and release. Washing machine door can then be opened.

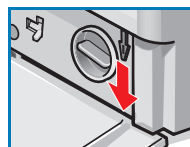

Information on the display panel depending on model

F: 16	Close the washing machine door properly; laundry may be caught.
F: 17	Open the tap completely, supply hose kinked or trapped; Clean the filter → page 10, Water pressure too low.
F: 18	Detergent solution pump blocked; Clean the detergent solution pump → page 10. Drainage hose / waste pipe blocked; Clean the drainage hose at the siphon → page 10.
F: 21	Motor fault. Call customer services.
F: 23	Water in the base tub, appliance leaking. Call customer services.

Maintenance





- Risk of scalding. Allow the detergent solution to cool down.
- Turn off the tap.



Detergent solution pump

Turn the programme selector to **Off** and disconnect the mains plug.

1. Open and remove the service flap.
2. **For models with a drainage hose:** Remove the drainage hose from the retainer and pull it from the housing. Remove the container. Remove the sealing cap, allow the detergent solution to flow out. Replace the sealing cap and place the drainage hose in the retainer.
- 2* **For models without a drainage hose:** Carefully unscrew the pump cover until the detergent solution begins to flow out. When the service flap is half full, close the pump cover and empty the service flap. Repeat the above steps until all the detergent solution has completely drained out.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must rotate).
5. Replace the pump cover and screw it tightly.
6. Place the service flap back on and close.

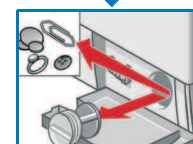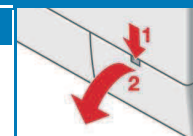

To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment **II** and start the **Empty** programme.



Drainage hose at the siphon

Turn the programme selector to **Off** and disconnect the mains plug.

1. Loosen the hose clamp, carefully remove the drainage hose (residual water).
2. Clean the drainage hose and siphon connecting piece.
3. Reattach the drainage hose and secure the connection with the hose clamp.



Filter in the water supply




Risk of electric shock.

Do not immerse the HydroSafe safety device in water (contains an electric valve).



Reduce the water pressure in the supply hose:

1. Turn off the tap.
2. Select any programme (except for **Rinse** / **Spin** / **Empty**).
3. **Start/Reload**. Let the programme run for approximately 40 seconds.
4. Turn the programme selector to **Off**. Disconnect the mains plug.
5. Clean the filter:
Disconnect the hose from the tap.
Clean the filter using a small brush.

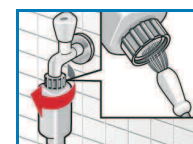

and/or for Standard and Aqua-Secure models:

- Remove the hose on the rear of the appliance,
Remove the filter with pliers and clean.
6. Connect the hose and check for leaks.

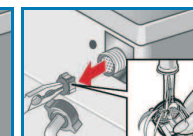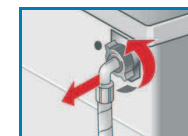

What to do if ...


Water is leaking out.	<ul style="list-style-type: none"> – Attach/replace the drainage hose correctly. – Tighten the screw connection of the supply hose.
No water supply. Detergent not dispensed.	<ul style="list-style-type: none"> – Start/Reload not selected? – Tap not turned on? – Filter blocked? Clean the filter → <i>page 10</i>. – Supply hose kinked or trapped?
Washing machine door cannot be opened.	<ul style="list-style-type: none"> – Safety function active. Programme stopped? → <i>page 4</i>. – Ø (without final spin) selected? → <i>page 3, 4</i>. – Can be opened by emergency release only? → <i>page 9</i>.
Programme does not start.	<ul style="list-style-type: none"> – Start/Reload or ⏸ (Finished in) time selected? – Washing machine door closed? – Childproof lock active? Deactivate → <i>page 5</i>.
Detergent solution is not drained.	<ul style="list-style-type: none"> – Ø (without final spin) selected? → <i>page 3, 4</i>. – Clean the detergent solution pump → <i>page 10</i>. – Clean the waste pipe and/or drainage hose.
Water not visible in the drum.	<ul style="list-style-type: none"> – Not a fault - water below the visible area.
Unsatisfactory spin result. Laundry wet/too damp.	<ul style="list-style-type: none"> – Not a fault - the unbalanced-load detection system has cancelled the spin cycle because of uneven distribution of the laundry. Distribute small and large items of laundry evenly inside the drum. – ⌘ (Easy-iron) selected? → <i>page 5</i>. – Selected speed too low? → <i>page 5</i>.
The programme duration changes during the wash cycle.	<ul style="list-style-type: none"> – Not a fault – the programme sequence is optimised for the particular wash process. This may result in changes to the programme duration in the display field.
Spin cycle performed several times.	<ul style="list-style-type: none"> – Not a fault - unbalanced load detection system adjusts the imbalance.
Residual water in the compartment for care products.	<ul style="list-style-type: none"> – Not a fault - the action of the care product is not affected. – Clean the insert if necessary → <i>page 9</i>.
Odour formation in the washing machine.	<ul style="list-style-type: none"> – Run programme ⌘ Cottons 90 °C without laundry. Use standard detergent.
Status display ⚠ flashes. Foam may be coming out of the detergent drawer.	<ul style="list-style-type: none"> – Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser II (<i>not for outdoor and down-filled textiles!</i>). – Reduce the detergent dosage for the next wash cycle.
Intense noise formation, vibrations and “wandering” during the spin cycle.	<ul style="list-style-type: none"> – Are the appliance feet fixed? Secure the appliance feet → <i>Installation instructions</i>. – Transportation safety devices removed? Remove the transportation safety devices → <i>Installation instructions</i>.
Noises during spin and drain cycles.	<ul style="list-style-type: none"> – Clean detergent-solution pump → <i>page 10</i>.
Display panel/indicator lamps do not function during operation.	<ul style="list-style-type: none"> – Power cut? – Fuses triggered? Reset/change the fuse. – If the fault occurs repeatedly, call customer services.
Programme sequence longer than usual.	<ul style="list-style-type: none"> – Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the laundry. – Not a fault - foam detection system active - adds an additional rinse cycle.
Detergent residues on the laundry.	<ul style="list-style-type: none"> – Occasionally, phosphate-free detergents contain water-insoluble residues. – Use the ⌘ Rinse/Spin cycle or brush out the laundry after washing.

If you cannot correct a fault yourself (switching on/off) or a repair is required:

- Turn the programme selector to **Off** and remove the mains plug from the socket.
- Turn off the water supply and call customer services → *Installation instructions*.



Observe the safety instructions on *page 8*.

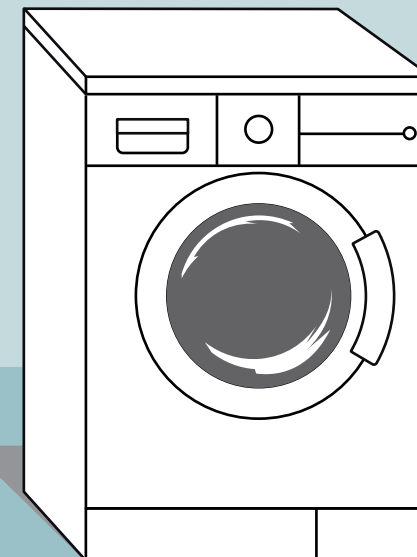

Washing machine

Instruction manual

en



Read these instructions and the separate installation instructions before operating the washing machine.

SIEMENS