



HB76...

**Built-in oven**

**SIEMENS**

<b>Important safety information .....</b>	<b>3</b>	<b>Energy and environment tips .....</b>	<b>20</b>
Causes of damage .....	4	Environmentally-friendly disposal of waste .....	20
<b>Your new oven .....</b>	<b>5</b>	Saving energy .....	20
Control panel .....	5	Eco hot air function .....	20
Buttons .....	5	<b>Automatic programme.....</b>	<b>22</b>
Knob .....	5	Ovenware .....	22
Display panel .....	5	Preparing the dish .....	22
Temperature control .....	6	Programmes .....	22
Inside the oven .....	6	Selecting and setting a programme.....	25
<b>Your accessories .....</b>	<b>6</b>	Advice on using the automatic program .....	25
inserting the accessories .....	6	<b>Tested for you in our cooking studio .....</b>	<b>26</b>
Special accessories .....	7	Cakes and pastries .....	26
<b>Before the first use .....</b>	<b>7</b>	Suggestions and practical advice for baking .....	28
Setting the time .....	7	Meat, poultry, fish.....	29
Heating the oven.....	7	Tips for roasting and grilling .....	31
Cleaning the accessories.....	7	Slow cooking .....	31
<b>Switch the oven on and off .....</b>	<b>8</b>	Tips for slow cooking .....	32
Switching on .....	8	Au gratin, soufflés, toast.....	32
Switching off.....	8	Ready-made products.....	33
<b>Setting the oven .....</b>	<b>8</b>	Special dishes .....	33
Types of heating.....	8	Defrosting.....	34
Selecting the temperature and type of heating required .....	9	Drying .....	34
Setting the rapid heating function.....	9	Jam making .....	34
<b>Time functions .....</b>	<b>10</b>	<b>Acrylamide in food.....</b>	<b>35</b>
Setting the time-setting options - in brief.....	10	<b>Test dishes .....</b>	<b>35</b>
Programming the timer.....	10	Baking .....	35
Setting the cooking time.....	10	Grilling .....	36
Delaying the end time .....	11		
Setting the clock .....	11		
<b>Memory .....</b>	<b>12</b>		
Saving configurations to memory.....	12		
Using the memory .....	12		
<b>Sabbath mode .....</b>	<b>12</b>		
Starting the Sabbath mode .....	12		
<b>Childproof lock.....</b>	<b>12</b>		
<b>Basic settings.....</b>	<b>13</b>		
Changing the basic settings .....	14		
<b>Automatic shut off .....</b>	<b>14</b>		
<b>Self-cleaning.....</b>	<b>14</b>		
Important notes .....	14		
Before using the self-clean function .....	15		
Setting the cleaning level .....	15		
After using the self-clean function .....	15		
<b>Care and cleaning .....</b>	<b>15</b>		
Cleaning products .....	15		
Removing and refitting the wire shelves or left and right hand side rails .....	16		
Unhooking and hanging the oven door .....	16		
Removing the door covering .....	17		
Removing and installing the door panels .....	17		
<b>Troubleshooting.....</b>	<b>19</b>		
Troubleshooting table .....	19		
Changing the oven bulb.....	19		
Protective glass panels.....	19		
<b>After-sales service .....</b>	<b>20</b>		
E number and FD number .....	20		

Additional information on products, accessories, replacement parts and services can be found at **www.siemens-home.com** and in the online shop **www.siemens-eshop.com**

## Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

This appliance is only intended to be fully fitted in a kitchen. Observe the special installation instructions.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always slide accessories into the cooking compartment correctly. See *"Description of accessories"* in the instruction manual.

### **Risk of fire!**

- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.

- A draught is created when the appliance door is opened. Greaseproof paper may come into contact with the heating element and catch fire. Do not place greaseproof paper loosely over accessories during preheating. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. Greaseproof paper must not protrude over the accessories.

### **Risk of burns!**

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.

### **Risk of scalding!**

- The accessible parts become hot during operation. Never touch the hot parts. Keep children at a safe distance.
- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.

### **Risk of injury!**

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.


## Risk of electric shock!

- Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.
- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.

## Risk of fire!

- Loose food residues, grease and meat juices may catch fire during the Self-cleaning cycle. Remove coarse dirt from the cooking compartment and from the accessories before every Self-cleaning cycle.
- The appliance will become very hot on the outside during the Self-cleaning cycle. Never hang combustible objects, e.g. tea towels, on the door handle. Do not place anything against the front of the oven. Keep children at a safe distance.

## Risk of burns!

- The cooking compartment will become very hot during the Self-cleaning cycle. Never open the appliance door or move the locking latch by hand. Allow the appliance to cool down. Keep children at a safe distance.
-  The appliance will become very hot on the outside during the Self-cleaning cycle. Never touch the appliance door. Allow the appliance to cool down. Keep children at a safe distance.

## Risk of serious damage to health!

The appliance will become very hot during the Self-cleaning cycle. The non-stick coating on baking trays and tins is destroyed and noxious gases are released. Never let non-stick baking trays and tins go through the Self-cleaning cycle. Only enamelled accessories may be cleaned at the same time.

## Causes of damage

### Caution!


- Accessories, foil, greaseproof paper or ovenware on the cooking compartment floor: do not place accessories on the cooking compartment floor. Do not cover the cooking compartment floor with any sort of foil or greaseproof paper. Do not place ovenware on the cooking compartment floor if a temperature of over 50 °C has been set. This will cause heat to accumulate. The baking and roasting times will no longer be correct and the enamel will be damaged.
- Water in a hot cooking compartment: do not pour water into the cooking compartment when it is hot. This will cause steam. The temperature change can cause damage to the enamel.
- Moist food: do not store moist food in the cooking compartment when it is closed for prolonged periods. This will damage the enamel.
- Fruit juice: when baking particularly juicy fruit pies, do not pack the baking tray too generously. Fruit juice dripping from the baking tray leaves stains that cannot be removed. If possible, use the deeper universal pan.
- Cooling with the appliance door open: only allow the cooking compartment to cool when it is closed. Even if the appliance door is only open a little, front panels of adjacent units could be damaged over time.
- Very dirty door seal: If the door seal is very dirty, the appliance door will no longer close properly when the appliance is in use. The fronts of adjacent units could be damaged. Always keep the door seal clean.
- Appliance door as a seat, shelf or worktop: Do not sit on the appliance door, or place or hang anything on it. Do not place any cookware or accessories on the appliance door.
- Inserting accessories: depending on the appliance model, accessories can scratch the door panel when closing the appliance door. Always insert the accessories into the cooking compartment as far as they will go.
- Carrying the appliance: do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.

# Your new oven

We will now describe your new oven. This chapter explains the functions of the control panel and its individual elements. Information is also provided about the oven's accessories and internal components.

## Control panel

Below is a general overview of the control panel. The display panel cannot show all the symbols at the same time. Elements may vary according to the model.

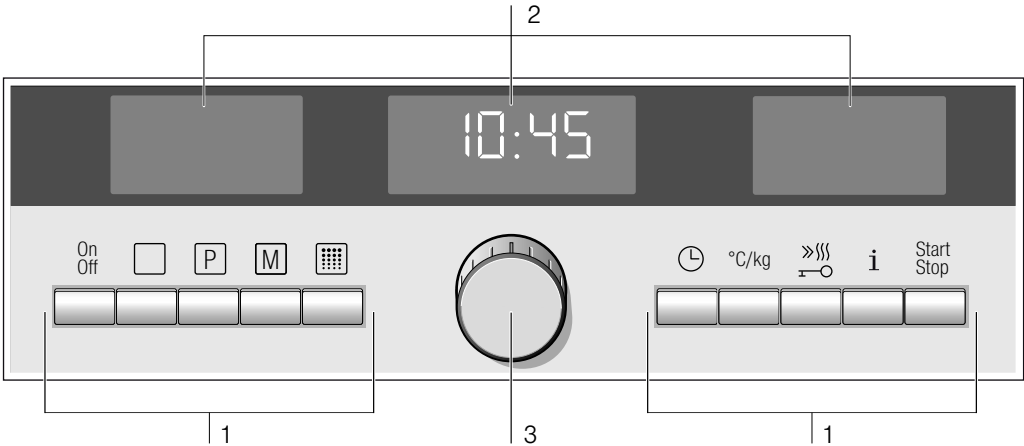

	Use
1	Buttons
2	Display panel
3	Knob

## Buttons

Symbol	Button function
	Switching the oven on and off
	Select the type of heating
	Select the automatic program
	Short push = select memory Long push = store in memory
	Select the self-cleaning function
	Open and close the time function menu
	Select the temperature and weight
	Short push = rapid heating
	Long push = Childproof lock
	Short push = check temperature Long push = open or close the basic settings menu
	Short push = begin/pause working Long push = stop working

## Knob


Using the knob it is possible to change all the recommended and configured values. The control knob symbol shows the value that can be changed.

The control knob is retractable. The rotary control knob is retracted and returned by pressing the control.

## Display panel

The display panel shows the recommended values that can be changed using the control knob as necessary.

The screen is divided into three indicators.

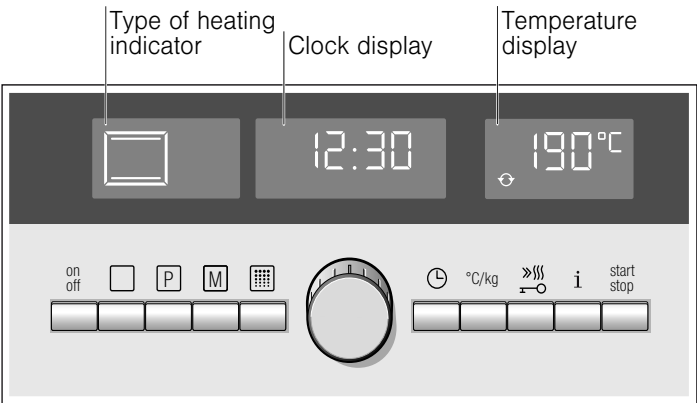

- **Cooking method indicator**  
Displays the type of heating or operation selected.
- **Time indicator**  
Displays the time, timer, duration and the cooking end time as well as the weight for the automatic program.
- **Temperature indicator**  
Displays the temperature, grill or cleaning levels and the program number.

## Rotation symbol

The symbol indicates which value you can change with the rotary selector.



## Temperature control

The bars on the temperature control indicate the heating phases or the residual heat inside the oven.

### Heating control

The heating control shows the temperature rise in the oven. When all of the bars are full is the best time to put the food in the oven.



The bars are not displayed in the grill power and self-cleaning levels.

The temperature reached may be displayed during heating by pressing on the **i** button. The temperature indicated may vary slightly from the actual temperature inside the oven as a result of thermal inertia.

### Residual heat

After switching off the appliance, the temperature control will indicate the residual heat inside the oven. If all of the bars are full, it means that the oven has reached a temperature of approx. 270 °C. The display turns off when the temperature falls below approximately 60 °C.

### Inside the oven

There is a light inside the oven. A fan prevents the oven from overheating.

### Light

The oven light remains on while the oven is working. The light switches off at set temperatures of less than 60°C and during the clean function. This ensures optimum precision control.

### Fan

The fan can be turned on and off as necessary. The hot air escapes through the top of the door. Warning! Do not cover the vent. The oven could overheat.

The fan remains on for a certain length of time after the oven has been switched off so that it can cool down more quickly.


## Your accessories

The accessories supplied with your appliance are suitable for making many meals. Ensure that you always insert the accessories into the cooking compartment the right way round.

There is also a selection of optional accessories, with which you can improve on some of your favourite dishes, or simply to make working with your oven more convenient.


### inserting the accessories

The accessories can be placed inside the oven on 5 different levels. Always insert them as far as possible so that the accessories do not touch the door glass.

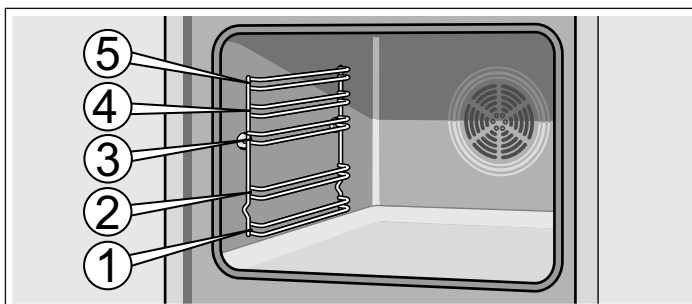

The accessories can be removed halfway until they are secured. This makes it easy to remove food.

When inserting an accessory in the oven, make sure the curvature is at the rear. This is the only way to ensure it fits perfectly.

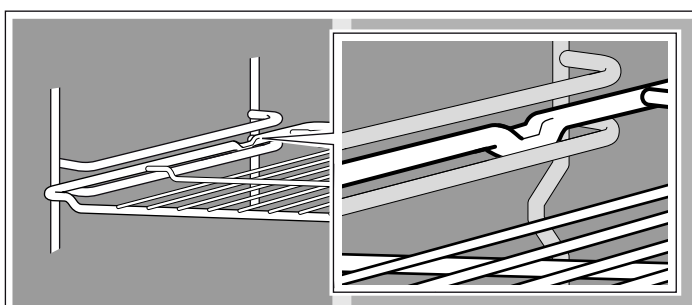

Depending on the equipment, if the appliance has guide rails, these will interlock slightly when fully removed. This means the accessory can be easily inserted. To unlock, reinsert the guide rails in the oven exerting slight pressure.

**Note:** Accessories may deform as they heat up. This deformation will disappear when they cool. This does not affect the normal operation.


Your oven is supplied with only some of the following accessories.

Accessories may be purchased from the Technical Assistance Service, from specialist retailers or on the Internet. Enter the HZ number.



#### Wire shelf

For cookware, baking tins, roasts, grilled items and frozen meals.

Insert the wire shelf with the open end facing the oven door and the curvature downwards .



#### Flat enamel oven tray

For cakes, pastries and biscuits.


Place the tray in the oven with its raised lip facing the door.



#### Universal deep enamel tray

For juicy cakes, pastries, frozen meals and large joints for roasting. This can also be used as a tray to collect the fat when roasting directly on the wire shelf.

Place the tray in the oven with its raised lip facing the door.



#### Accessory support

The universal deep tray or the flat oven tray can also be cleaned during the self-clean function.

Insert the accessory to the right and left.

## Special accessories

Accessories may be purchased from the Technical Assistance Service or from specialist retailers. There is a wide range of accessories available for the oven in our catalogues and on the Internet. Ordering online and the availability of special accessories changes from country to country. Consult your purchase documentation.

Not all of the special accessories are suitable for all appliances. When purchasing, always give the exact name (E-Nr.) of your appliance.

Special accessories	HZ number	Use
Flat enamel oven tray	HZ361000	For cakes, pastries and biscuits.
Universal deep enamel tray	HZ362000	For juicy pies, pastries, frozen meals and large joints for roasting. This can also be used as a tray to collect the fat when roasting directly on the wire shelf.
Wire shelf	HZ364000	For cookware, baking tins, roasts, items placed directly on a wire shelf and frozen meals.
Pizza tray	HZ317000	Ideal for pizza, frozen foods, or large round cakes. The pizza tray can be used instead of the universal deep tray. Place the tray on the wire shelf and follow the indications in the tables.
Glass casserole dish	HZ915001	The glass casserole dish is ideal for preparing stews and foods that need browning in the oven. It is especially suitable for automatic programmes and automatic roasting.
Triple removable guide rails	HZ368300	The triple guide rails at heights 1, 2 and 3 ensure that accessories can be fully removed without them tipping over.




## Before the first use

This chapter indicates the steps that must be followed before using your oven for the first time.

- Setting the time
- Heating the oven
- Cleaning accessories
- Read safety tips and warnings listed at the beginning of the instructions. These are very important.


### Setting the time









When the appliance is turned on the display panel shows **0:00**. Set the current time.

1. Press the  button.  
The time symbol of this indicator has an arrow to the left-hand side . This proposes **12:00**.
  2. To set the time using the control knob .
  3. To confirm time with the  button.
- The programmed time is displayed after a few seconds.

**Note:** See the *Time functions* chapter to change the time.

### Heating the oven

To remove the "new" smell, heat the oven empty with the door closed. The most effective option is to heat the oven for one hour with the top and bottom heating elements  set at 240 °C. Check that no packaging has been left inside the oven.

1. Press the  button.  
It is recommended that you use the 3D  hot air heating method and a temperature of 160 °C. The  control knob symbol is to the right of the type of heating.
2. Set the type of heating to top and bottom heating using the control knob .
3. Press the °C/kg button.  
The control knob symbol  shows the temperature indicator.
4. Turn the temperature knob to 240 °C.
5. Briefly press the  button.  
The oven comes on. The  button lights up.
6. After 60 minutes, turn the oven off using the button .

The bars on the temperature control indicate the residual heat inside the oven.


### Cleaning the accessories


Before using the accessories for the first time, clean them thoroughly using a cloth, hot water and a little soap.


# Switch the oven on and off

You can switch the oven on and off with the  button.




## Switching on

Press the  button.

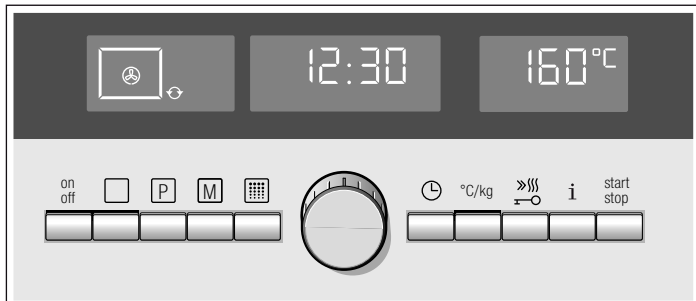The 3D  hot air heating symbol and 160 °C temperature are shown on the display as recommended values.



This configuration can be started directly or it is possible

- to program a different type of heating and temperature
- to select an automatic program with the button 
- to begin a configuration stored in memory by pressing the button 
- to select the self-cleaning function with the  button.

See individual chapters for more information on how to program the appliance.

## Switching off

Press the  button. The oven switches off.






# Setting the oven

In this section, you will find information about







- which types of heating are available in your oven
- how you set a type of heating and a temperature
- and how you set rapid heating

## Types of heating

This oven has a large range of types of heating. Therefore the most appropriate preparation method can be selected for each food type.

Type of heating and temperature range		Use
	3D hot air 30-270 °C	For cakes and pastries. These can be baked on three levels. A fan located on the rear wall of the oven disperses the heat evenly.
	Eco hot air function* 30-270 °C	To prepare cakes, confectionery, deep frozen products, roasts and fish on one level and when pre-heating is not required. The fan distributes air evenly inside the oven to optimise energy use.
	Top and bottom heating 30-270 °C	For cakes, gratin dishes, and lean meat roasts, e. g., veal or game, on one level. The heat is provided by the bottom and top heating elements.
	Pizza function 30-270 °C	For rapid preparation of frozen foods without pre-heating, e.g., pizza, chips or puff pastries. The heat comes from the bottom element and the fan on the rear wall.
	Bottom heating 30-270 °C	For confits, baking and cooking au gratin. The heat comes from the bottom heating element.


\* Type of heating used to determine the appliance's energy efficiency rating according to EN60350.


Type of heating and temperature range		Use
	Grill with hot air 30-270 °C	For roasting joints of meat, poultry and fish. The grill heating element and the fan switch on and off alternately. The fan circulates the heat generated by the grill around the food.
	Large surface grill Grill power 1, 2 or 3	For grilling steaks, sausages, fish and toasting bread. The entire surface below the grill element is heated.
	Grill, small surface area Grill power 1, 2 or 3	For grilling a small number of steaks or sausages or small amounts of fish, and toasting bread. Only the central area of the grill heating element heats up.
	Defrosting 30-60 °C	For defrosting, e.g., meat, poultry, bread and cakes. The fan circulates the hot air around the food.
	Keep warm 60-100 °C	For keeping cooked dishes warm.
	Sabbath mode 85-140 °C	Keeps food warm inside the oven for a cooking time of between 24 and 73 hours. The heat is provided by the bottom and top heating elements. See the <i>Sabbath mode chapter</i> .


\* Type of heating used to determine the appliance's energy efficiency rating according to EN60350.




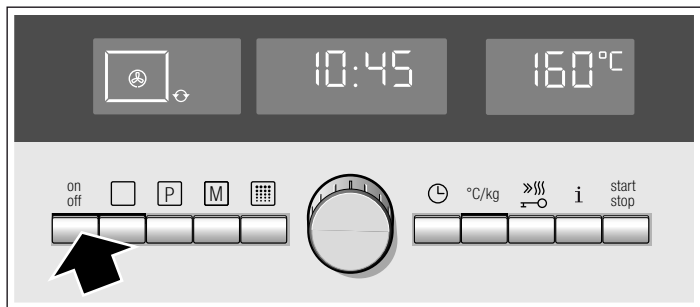
## Selecting the temperature and type of heating required

Example in the picture: top and bottom heat  at 180 °C.

Switch on the oven using the  button.

The 3D  hot air symbol and 160 °C are shown on the display.


The time is displayed on the time indicator. The control knob symbol  next to the type of heating shows that this value can be modified with the control knob.




This configuration can be started directly with the button .

To program another type of heating and a different temperature, proceed as follows:


1. Select the desired type of heating using the control knob.

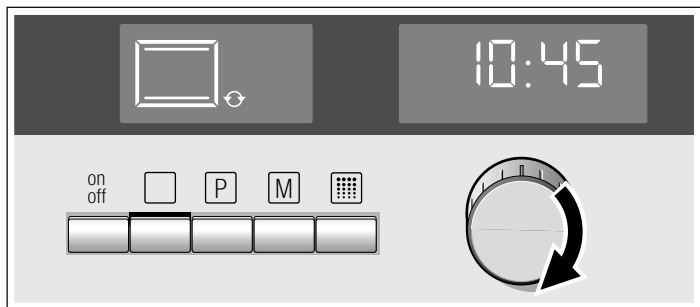


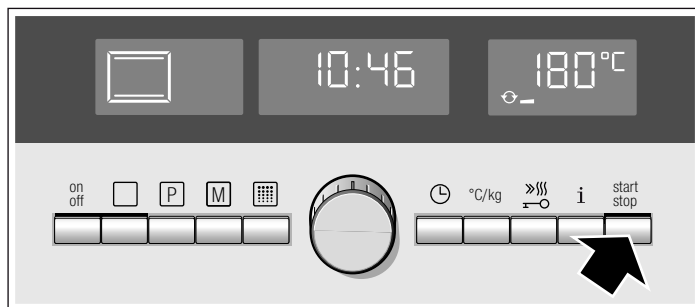
2. Press the °C/kg button.  
The  symbol switches to temperature.

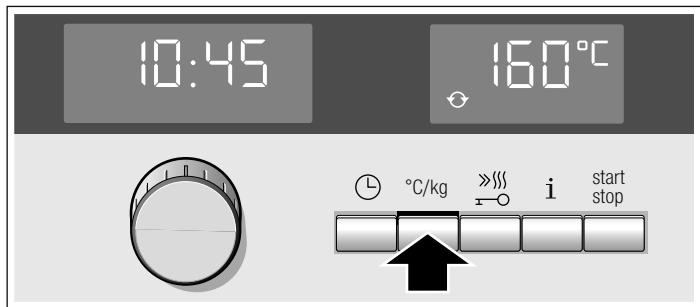


3. Change the recommended temperature using the control knob.

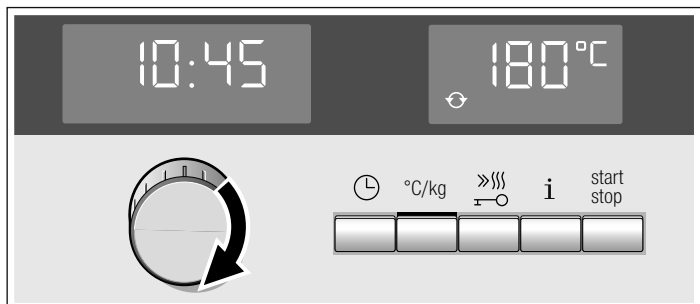

4. Press the  button.  
The oven comes on.




5. When the dish is ready, switch off the oven using the  button.





## Changing the temperature or grill setting

This can be done at any time. Turn the rotary selector to change the temperature or grill setting.



## Calling up the heating temperature

Press the  button briefly. The current heating temperature in the cooking compartment is displayed for several seconds.

## Pausing operation

Press the  button briefly. The oven is paused. The  button flashes. To resume, press the  button again. The  button lights up. The programme will then continue.

## Cancelling operation

Press and hold the  button until the  symbol for 3D hot air and 160 °C appear. You can make new settings.

## Setting the cooking time

See section *Time-setting options*, setting the cooking time.




## Setting a later end time

See the section entitled *Time-setting options*, Setting a later end time.

## Setting the rapid heating function

The rapid heating is not compatible with all types of heating.

### Compatible types of heating



-  3D hot air
-  Top and bottom heating
-  Pizza function


When the programmed heating type is not compatible with the rapid heating, a warning signal is given.

### Suitable temperatures

The rapid heating does not work when the set temperature is below 100 °C. If the oven temperature is slightly less than the set temperature, rapid heating is not necessary. Not turned on.


## Setting the rapid heating function

Press the button  for rapid heating. The symbol  is displayed beside the temperature. Start the rapid heating function. The temperature control bars fill.

The rapid heating function has ended when all the bars are lit. A brief sound is given and the symbol  switches off. Put the food in the oven.

### Notes


- Rapid heating is cancelled by adjusting the type of heating.
- The duration of the programmed cooking time begins to run, regardless of the rapid heating.

- The oven temperature reached may be displayed during heating by pressing on the button .
- To ensure uniform cooking, the food must not be put into the oven until rapid heating has been completed.



## Cancelling rapid heating

Press the  button. The symbol goes out.




# Time functions

The time functions menu is accessed using the button . The following functions are available:





When the oven is off:

-  = set the timer
-  = set the time

When the oven is on:

-  = set the timer
-  = set the cooking time
-  = delay the end time

## Setting the time-setting options - in brief

1. Press the  button repeatedly until the arrow is next to the required symbol, e.g. set cooking time function = .
2. Set the desired value with the rotary selector.
3. Press the  button repeatedly until the  rotary symbol disappears from the clock display.

A detailed description of how to adjust each individual function is provided below.




### Short audible signal



If you cannot change or set a value, you will hear a short audible signal.

## Programming the timer

The timer works independently of the oven. It can be used as a kitchen timer and programmed at any time.



1. Press the  button.

The time function menu opens. The arrow  is located to the left of the symbol . The control knob symbol  on the two points indicates that the time can be programmed using the control knob.





2. Set the time for the timer using the control knob.
3. Press the  button repeatedly until the control knob symbol  disappears from the time indicator.

The time indicator shows the time elapsed from the set time.




### When the time has elapsed

A signal sounds. The time on the timer has reached . Press the  button. The display goes out.

### Cancelling the timer time

Press the  button to open the menu. Turn the timer time back to . Press the  button repeatedly until the  rotary symbol disappears from the clock display.


## Changing the timer time




Open the menu with the  button and use the rotary selector to change the time. Press the  button repeatedly until the  rotary symbol disappears from the clock display. The menu is exited. The new time counts down.


## Setting the cooking time

When a cooking time is programmed for a dish, the oven stops automatically when this time has elapsed. The oven will stop heating.


Prerequisite: a heating type and temperature must be set.




Example in the picture: top and bottom heat configuration , 180 °C, cooking time 45 minutes

1. Press the  button twice.  
The arrow is located in front of the cooking time symbol . The control knob symbol  on the two points indicates that the time can be programmed using the control knob.


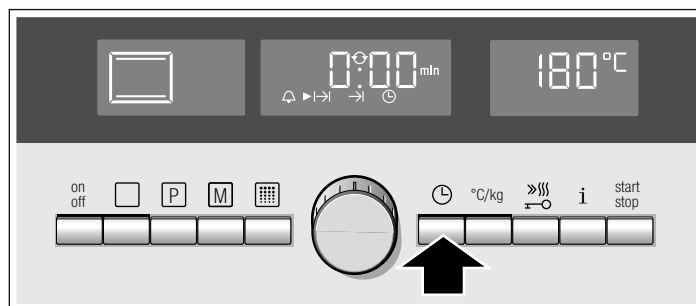


2. To set the time using the control knob.


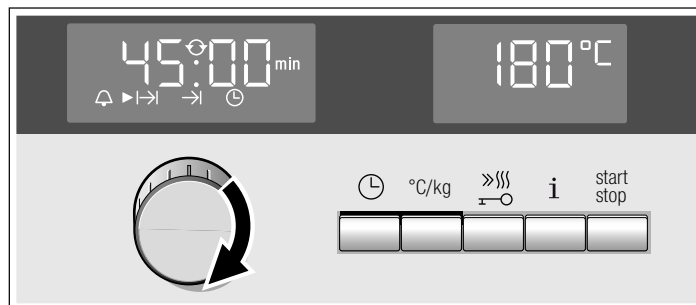




3. Press the  button repeatedly until the control knob symbol  disappears from the time indicator.  
The configuration is applied.
4. If the oven has not been started, press the  button.  
The time indicator shows the time elapsed of the set time.





### The cooking time has elapsed

A signal sounds. The oven stops heating.  is shown on the clock display. You can cancel the audible signal earlier by pressing the  button.

### To cancel a cooking time

Using the button , adjust the cooking time . To reset the cooking time to **0:00** using the control knob. Press the  button repeatedly until the control knob symbol  disappears from the time indicator.

### Adjusting the cooking time

Using the  button, adjust the cooking time . Change the cooking time using the control knob. Press the  button repeatedly until the control knob  symbol disappears from the time indicator. The time elapsed of the changed time is displayed.

### Calling up the clock, cooking time and end time

You can call up all the functions with the  clock button.

### Delaying the end time

The end time can be delayed by:

- for all types of heating,
- many programs,
- self-cleaning.

Example: the dish is put in the oven at 9:30 a.m. 45 minutes of cooking are required; so, it will be ready at 10:15 a.m. However, you would like it to be ready at 12:45 p.m.



Change the end cooking time from 10:15 a.m. to 12:45 p.m. The oven will begin working at 12:00 p.m. and finish working at 12:45 p.m.


This function is also compatible with self-cleaning. Cleaning can be programmed at night so the oven is available during the day.

Perishable food should not be left for too long in the oven.


### Delaying the end of the cooking time



Prerequisite: a cooking time must have already been programmed. The oven must not be working.

1. Using the  button, select the end cooking time . The end time will be displayed. The dish will be ready at this time

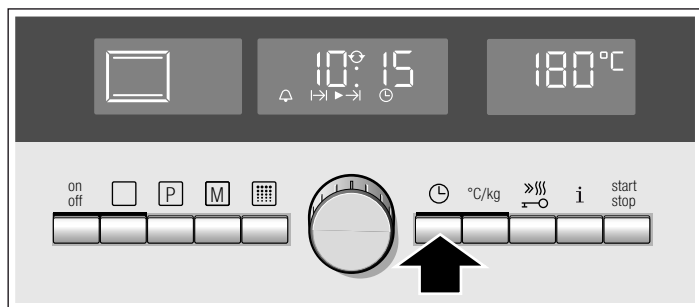


2. Change the end time using the control knob.

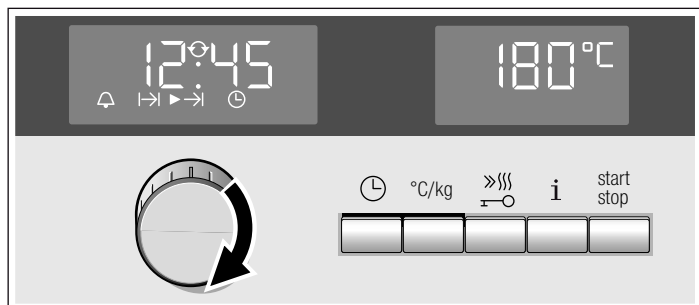


3. Press the  button repeatedly until the control knob symbol  disappears from the time indicator.





4. Press the  button.

The oven is set to standby. The  button lights up. The set time is displayed in the time indicator. When the oven starts working, the time elapsed is displayed.

### The cooking time has elapsed

A signal sounds. The oven stops heating. **0:00** is shown on the clock display. You can stop the audible signal by pressing the  button.


### Correcting the end time




This is only possible as long as the oven is in standby. Use the  button to select the  end time. Adjust the end time using the rotary selector. Press the  button repeatedly until the  rotary symbol disappears from the clock display. The new end time is applied.

### Setting the clock



The oven must be switched off before you can set or change the clock.

### Following a power cut

After a power cut the display panel shows **0:00** and the symbol . Set the current time.

1. Press the  button.  
The arrow is in front of the hour symbol . **12:00** is shown on the display panel.
2. Set the current time using the control knob.
3. Press the  button.  
The menu closes. The actual time is displayed on the display panel.

### Changing the clock

If you wish to change the time from summer to winter time, for example, press the  button twice. The arrow is next to the  symbol for the clock. Then proceed as described in points 2 and 3.

### Hiding the clock

You can hide the clock. Then it will only appear when the oven is switched on. For more information, refer to the *Basic settings* section.

---


# Memory

The memory can be used to save custom settings for a recipe and access them at any time.

The memory function is especially useful when preparing the same recipe frequently.

## Saving configurations to memory

The "self-cleaning" function cannot be saved.

1. Set the type of heating, temperature and even the specific cooking time for different foods. Do not start yet. To store a cooking program, select the program and adjust the weight. Do not start yet.
2. Press the  button until the signal sounds and the button lights up.



The configuration is saved and can begin at any time.

## Saving another setting

Enter and save the new setting. The old settings are overwritten.

## Using the memory

The settings saved for a specific food can be used at any time.

1. Briefly press the  button.  
The saved settings are displayed.
2. Press the  button.  
The memory configuration starts.

## Changing the settings

This can be done at any time. The setting you originally saved appears the next time you start the memory.

---





# Sabbath mode






With this setting, the oven maintains upper and lower heat at a temperature of between 85 °C and 140 °C. This can be programmed for between 24 and 73 hours.

During this time, keep food hot inside the oven without turning it on or off.

## Starting the Sabbath mode

Prerequisite: check the basic settings for "Sabbath mode, yes". See the *Basic settings* chapter.

1. Switch on the oven using the  button.  
The 3D  hot air symbol and 160 °C are shown on the display.
2. Select Sabbath  mode using the control knob.
3. Switch to temperature using the button  and program this using the control knob.

4. Press the  button twice. The arrow is located in front of the symbol for the duration .  
27:00 hours is displayed.
5. Set the cooking time using the control knob.
6. Press the button  repeatedly until the control knob symbol  disappears from the time indicator.
7. Press the  button.  
Sabbath mode starts.



## The cooking time has elapsed

The oven stops heating.

## Setting a later end time

It is not possible to set a later end time.

## Cancelling Sabbath mode



Press and hold the  button until 3D hot air , 160 °C appears. You can make new settings.

---

# Childproof lock


The oven is equipped with a childproof lock to prevent it being turned on or reset accidentally.

## Activating the childproof lock



Press the  button until the  symbol is displayed. Wait approximately 4 seconds.



The settings can no longer be changed. The control panel is locked.

## Locking the oven door

The basic settings can be changed to also lock the oven door. Refer to chapter *Basic settings*. The oven door locks when the internal temperature reaches 50 °C. The  symbol comes on. The oven door locks directly with the oven switched off if the childproof lock is activated.

## Switching the locking system off

Press the  button until the  symbol appears. You can now reprogram.

**Note:** Even when the childproof lock is activated the oven may be turned off using the  button or by pressing the  button, and the timer may also be adjusted or the warning beep turned off.

# Basic settings

This oven has different basic settings that can be adapted at any time to your needs.

**Note:** The table specifies all the basic settings and selection options. The screen only displays the basic settings compatible with the appliance according to its equipment.

Function	Basic setting	Options
<b>c 1</b> Duration of signal after the cooking time or the time set on the timer has elapsed	<b>2</b> = 2 minutes	<b>1</b> = 10 seconds <b>2</b> = 2 minutes <b>3</b> = 5 minutes
<b>c 2</b> Button confirmation sound	<b>0</b> = off	<b>0</b> = off* <b>1</b> = on
<b>c 3</b> Display brightness	<b>2</b> = medium	<b>1</b> = night-time <b>2</b> = medium <b>3</b> = daytime
<b>c 4</b> Time indicator when the oven is switched off	<b>1</b> = on	<b>0</b> = off* * The time is displayed while the residual heat is displayed. <b>1</b> = on
<b>c 5</b> Oven light on	<b>1</b> = activated	<b>0</b> = deactivated <b>1</b> = activated
<b>c 6</b> Resume operation after closing the oven door	<b>1</b> = function deactivated	<b>0</b> = function deactivated <b>1</b> = function deactivated
<b>c 7</b> Locking of additional door with childproof lock	<b>0</b> = no	<b>0</b> = no <b>1</b> = yes
<b>c 8</b> Time that the fan runs	<b>2</b> = medium	<b>1</b> = short <b>2</b> = medium <b>3</b> = long <b>4</b> = very long
<b>c 10</b> The shelf support rails have been refitted	<b>0</b> = yes	<b>0</b> = no <b>1</b> = yes
<b>c 11</b> Undo all changes and reset the basic settings	<b>0</b> = no	<b>0</b> = no <b>1</b> = yes
<b>c 12</b> Sabbath mode	<b>0</b> = no	<b>0</b> = no <b>1</b> = yes




## Changing the basic settings

Prerequisite: the oven must be switched off.


Read the basic settings table to understand each setting.

Example in the picture: modifying the basic settings of the operation of the short half-fan.


1. Press the **i** button for approx. 4 seconds until **c 1** is displayed for the first basic setting and the number **2** corresponding to the preset value.

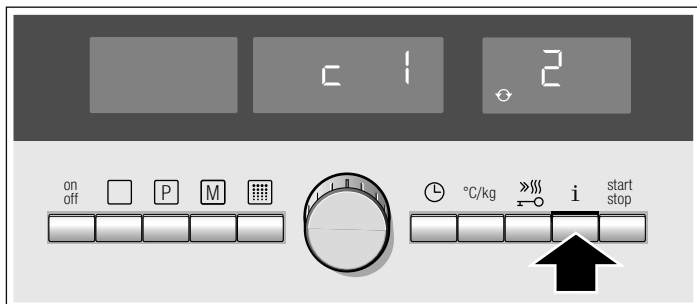

2. Repeatedly press the **i** button to get to the required basic settings.

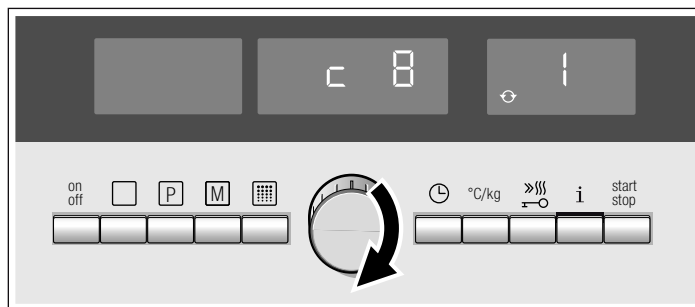

3. Change the basic setting using the control knob.

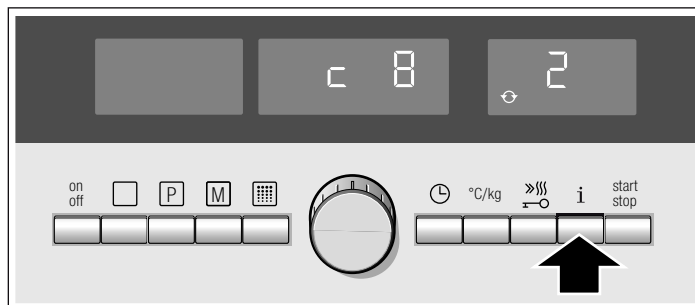

4. Now, other basic settings can be changed as described in points 2 and 3.
5. Press the **i** button until the indicator turns off. Wait for approximately four seconds. All changes are saved.

### Cancelling

Press the **on off** button. The changes are not applied.

## Automatic shut off

This oven has an automatic shut-off function. This function is activated when no cooking time has been specified and the configuration has not changed for a long time. This depends on the temperature or grill power selected.

### Automatic shut-off activated

The display panel turns on **BF**. The oven will pause operation.

Press any key to turn off the indicator. You can now begin programming again.

**Note:** If a cooking time has been set, the oven stops heating when this time has elapsed. The automatic shut-off is not required.

## Self-cleaning

During the self-cleaning function, the oven heats to about 500 °C. In this way, baking and cooking remains are burned and only ash remains have to be cleaned from the oven.

There are three cleaning levels available.

Level	Cleaning level	Duration
1	mild	approx. 1 hour, 15 minutes
2	medium	approx. 1 hour, 30 minutes
3	intense	approx. 2 hours

The more intense and old the dirt, the higher the self cleaning level used. The inside of the oven only has to be cleaned once every two or three months. Complete cleaning requires approximately 2.5 - 4.7 kilowatt-hours.

### Important notes

For your safety, the oven door locks automatically. The oven door cannot be opened again until the cooking compartment has cooled slightly and the padlock symbol for the locking mechanism disappears.

The oven light in the cooking compartment does not come on during Self-cleaning.

#### ⚠ Risk of burns!


- The cooking compartment will become very hot during the Self-cleaning cycle. Never open the appliance door or move the locking latch by hand. Allow the appliance to cool down. Keep children at a safe distance.
- The appliance will become very hot on the outside during the Self-cleaning cycle. Never touch the appliance door. Allow the appliance to cool down. Keep children at a safe distance.

#### ⚠ Risk of fire!

The appliance will become very hot on the outside during the Self-cleaning cycle. Never hang flammable objects, e.g. tea towels, on the door handle. Do not place anything against the front of the appliance.

## Before using the self-clean function

The oven must be empty. Remove accessories, pans, guides or left and right hand side rails. See the *Cleaning and Care* chapter to release the guides or left and right hand side rails.

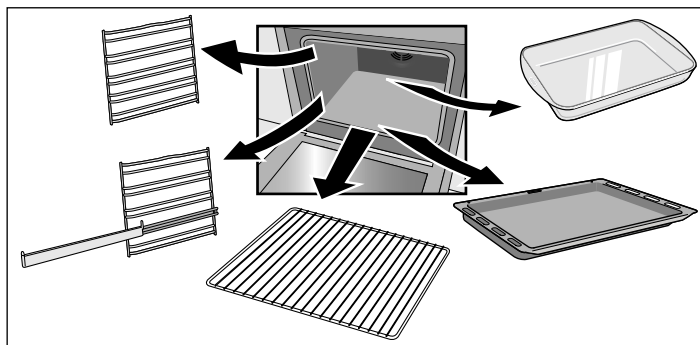

Clean the oven door and the side surfaces inside the oven around the area with seals.

### Risk of fire!!

The remains of food and grease as well as roasting juices can catch fire. Use a damp cloth to clean the inside of the oven and the accessories that will be cleaned inside the oven.

### Cleaning of the accessories


The wire shelves or left and right hand side rails are not suitable for self cleaning. Remove these from the oven.

For optimum cleaning of the oven interior, it is recommended that the self-clean function is not used with the trays. However, with the accessory support, the universal deep enamel tray or the flat enamel oven tray can also be cleaned using the self-clean function. Only clean one accessory at a time.

The shelf should not be cleaned using the self-clean function.

If your oven does not have this support, it can be purchased from the Technical Assistance Service or over the Internet by quoting part number 466546.

The accessory support is inserted to the right and left.

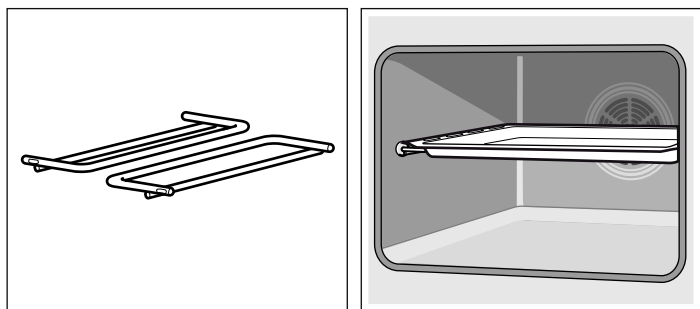

Use water to clean food remains, oil and roasting juices from the accessories.

Place the universal deep tray or the flat oven tray on the support.


### Significant health risks!

Do not place non-stick baking tins or trays in the oven during self-cleaning. The intense heat removes the non-stick surface and creates toxic gases.

## Setting the cleaning level

Once the cleaning level has been selected, set the oven.


1. Press the  button.

The cleaning level 3 is displayed. Self-cleaning can be started directly with the  button.

If you wish to change the cleaning level:

2. Select the cleaning level with the control knob.



3. Start with the  button.

The oven door is locked after starting. The  lock symbol lights up. The oven door cannot be opened until the symbol is no longer displayed.

### Once cleaning has finished

The oven stops heating.  is shown on the clock display.

### Cancelling cleaning

Switch the oven off with the  button. Do not open the oven door until the  symbol disappears.

### Adjusting the cleaning level

Once cleaning starts, the cleaning level can no longer be changed.

### Cleaning must take place at night

Cleaning can be programmed at night so the oven is available during the day. See the *Time functions* chapter, delay cooking time.

## After using the self-clean function

Once the inside of the oven has cooled, clean the ash remains using a damp cloth.

## Care and cleaning

If cleaned and properly cared for, your oven will keep its bright appearance and operating performance for many years to come. Advice on how to care for and clean your oven is provided below.

### Notes

- Different colours may be seen in your front panel due to the various materials used in its manufacture, such as glass, plastic and metal.
- Dark patches in the door's glass panel may seem to be dirt but they are in fact reflections from the oven light.
- Enamel burns at very high temperatures. This may cause slight discolouration. This is normal and does not affect the oven's operation. The edges of thin baking trays may not be completely enamelled. They may therefore feel slightly rough, although their corrosive protection will be unaffected.

## Cleaning products

Follow the indications provided in the table to avoid damaging the various oven surfaces by using unsuitable cleaning products. Do not use

- abrasive or acidic cleaning products
- strong products containing alcohol
- scourers or hard sponges
- high-pressure or steam cleaners.

Wash new dishcloths thoroughly before use.


Zone	Cleaning products
Front panel	Hot water and a little soap: Clean with a dishcloth and dry with a soft cloth. Do not use a glass cleaning product or a glass scraper.
Stainless steel	Hot water and a little soap: Clean with a dishcloth and dry with a soft cloth. Immediately remove any water marks, grease, cornflower or egg white stains since corrosion could occur underneath these marks or stains.  Special products for the care of stainless steel which are suitable for hot surfaces may be obtained from Technical Assistance Service centres and specialist retail outlets. Use a very fine soft cloth to apply the cleaning product.
Glass panel	Glass cleaning products: Clean with a soft cloth. Do not use a glass scraper.
Display	Glass cleaning products: Clean with a soft cloth. Do not use alcohol, vinegar or other abrasive or acidic cleaning products.
Glass panels on oven door	Glass cleaning products: Clean with a soft cloth. Do not use a glass scraper.
Door covering	Only use products specially for cleaning stainless steel (these can be obtained from the Technical Assistance Service or from specialist shops). Follow the manufacturer's instructions.
Inside the oven	Hot water with a little soap or water and vinegar: Clean with a dishcloth.  If very dirty, use a stainless steel scourer or special oven cleaning products. These must only be used when the oven interior is cold.  Whenever possible, use the self-cleaning function. See the chapter on the <i>Self-cleaning</i> function.
Glass cover for the oven light	Hot water and a little soap: Clean with a dishcloth.
Guides or rails	Hot water and a little soap: Soak and clean using a dishcloth or brush.
Sliding guides	Hot water and a little soap: Clean with a dishcloth or a brush. Do not leave this to soak or wash in a dishwasher.
Accessories	Hot water and a little soap: Soak and clean using a dishcloth or brush.

## Removing and refitting the wire shelves or left and right hand side rails

The wire shelves or left and right hand side rails can be removed for cleaning. The oven must be cold.

### Release the guides or rails


1. Lift the front of the guide or rail and release it (figure A).
2. Then pull the guide or rail forwards completely and remove it (figure B).

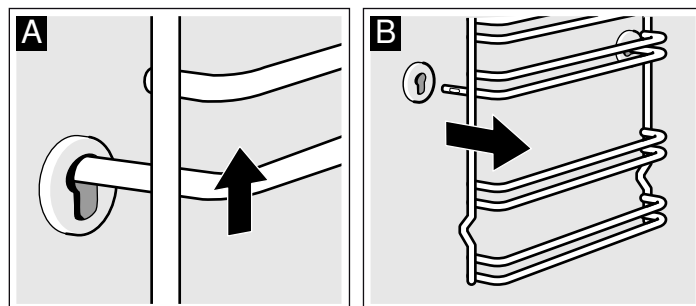

Clean the guides or rails with detergents and a sponge. The use of a brush is recommended for stubborn stains.

### Install the wire shelves or rails

1. First insert the shelf or the rail in the rear groove by pushing it back slightly (figure A)
2. then insert it in the front groove (figure B).

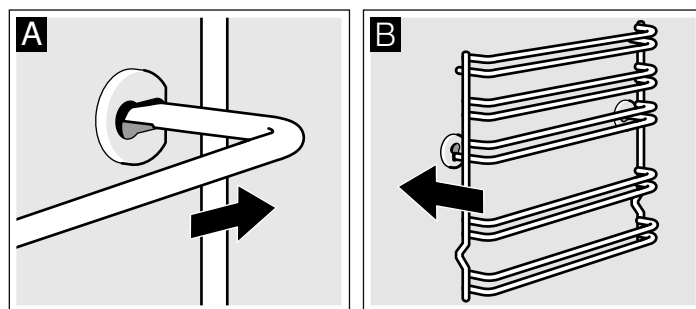


Wire shelves or rails can be adjusted on the left and right hand side. Their curvature should always be face down.

## Unhooking and hanging the oven door

The front panel can be unhooked to help remove the oven door and clean the glass panels.

The oven door hinges are fitted with a locking lever. The door cannot be unhooked if the locking lever is closed (figure A). Once the locking lever has been opened to unhook the door (figure B), the hinges will be locked in position. This prevents the door from suddenly closing.

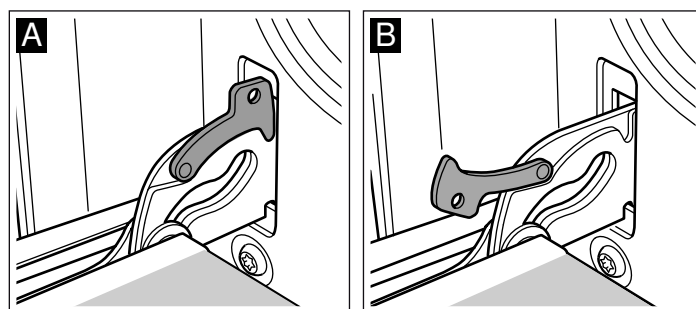


### ⚠ Risk of injuries.!

The hinges may close suddenly if they are not locked in position by the lever. Note that the locking levers are always closed, apart from when unhooking the door, when the levers must be open.

### Unhooking the door


1. Fully open the oven door.
2. Remove both locking levers located on the right and left hand sides (figure A).
3. Fully close the oven door as far as possible (figure B). Grip the left and right hand sides of the door with both hands. Close the door slightly more and remove it.

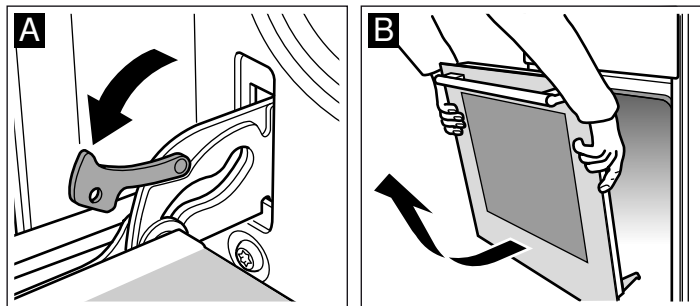

### Hanging the door


Rehang the door by following the same steps but in reverse order.

1. When refitting the door, check that both hinges are positioned exactly inside their respective openings (picture A).
2. The bottom groove of the hinges must fit snugly on both sides.

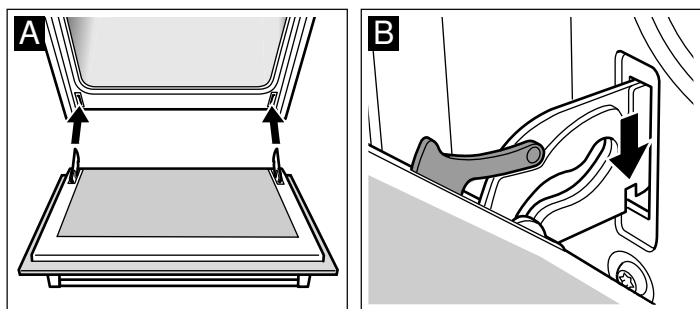

The door may be left crooked if the hinges are not mounted properly.

3. Reclose the attachment levers (picture C). Close the oven door.

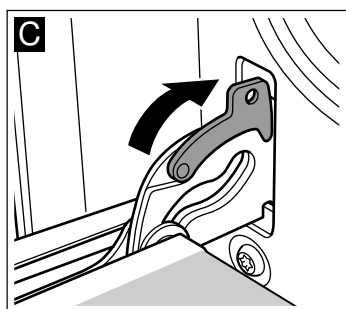


### Risk of injuries.!

Do not touch the hinges; the door might accidentally fall or a hinge might suddenly close. Notify the Technical Assistance Service.

### Removing the door covering

The oven door cover can change colour with time. For better cleaning, we recommend removing the cover.

1. Fully open the oven door.
2. Unscrew the oven door cover. To do this, unscrew the right and left hand side bolts (figure A).
3. Remove the cover (figure B).

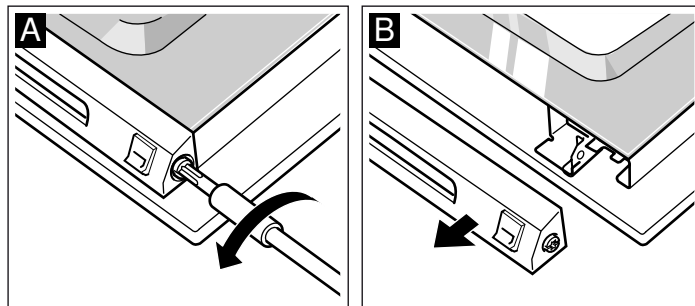

Ensure that the oven door does not close when the cover is not in place. The inside glass may damage.

Clean the surface using a product specifically for cleaning stainless steel.

4. Refit and secure it.
5. Close the oven door.


### Removing and installing the door panels

To facilitate cleaning, you can remove the glass panels from the oven door.

When removing the inner panels, pay attention to the sequence in which the panels are removed. In order to reassemble the panels in the correct sequence, use the numbers that appear on each panel.


#### Removal

1. Detach the oven door and lay it on a cloth with the handle facing down.
2. Unscrew the cover at the top of the oven door. To do this, unscrew the left and right screws (fig. A).
3. Lift the top panel up and pull it out and remove the two small seals (fig. B).

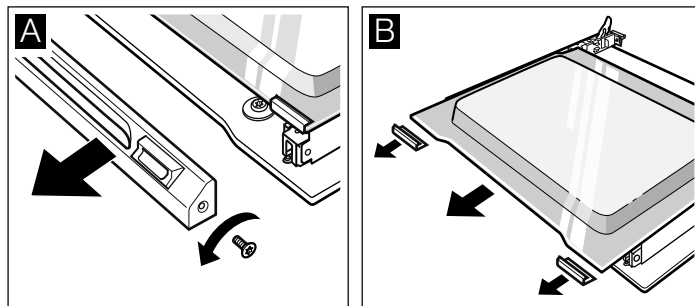


4. Unscrew the retaining clips on the right and left. Lift the panel and remove the clips from the panel (fig. C).

5. Remove the seal from the bottom of the panel (fig. D). Pull the seal and remove it up and out. Pull out the panel.

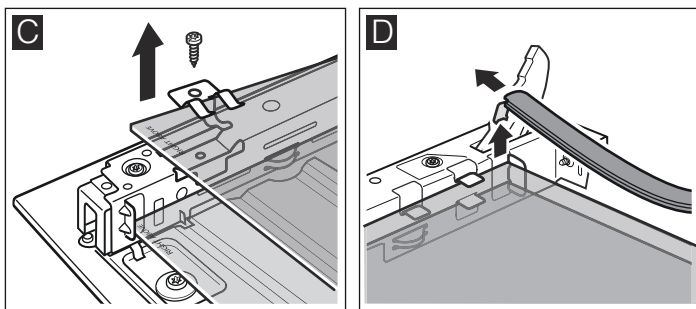

6. Pull the lower panel at an angle, upwards and out.  
7. Do NOT unscrew the left and right-hand screws from the sheet metal part (fig. E).

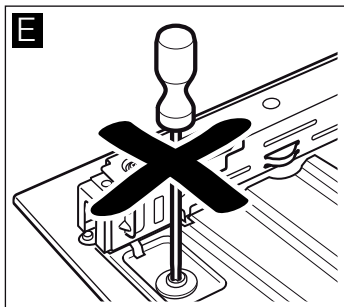

Clean the panels with glass cleaner and a soft cloth.


#### **⚠ Risk of injury!**

Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

#### **Installation**


During installation, make sure that the lettering "top right" is upside down at the bottom left of both panels.

1. Insert the lower panel at an angle towards the back (fig. A).  
2. Slide in the middle panel (fig. B).

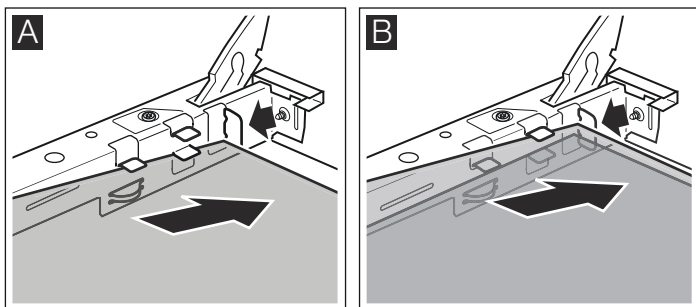


3. Stick the retaining clips onto the right and left-hand side of the panel, aligning them so that the retaining carriers are over the screw holes, and then screw into place (fig. C).

4. Hook the seal in to the bottom of the panel again (fig. D).

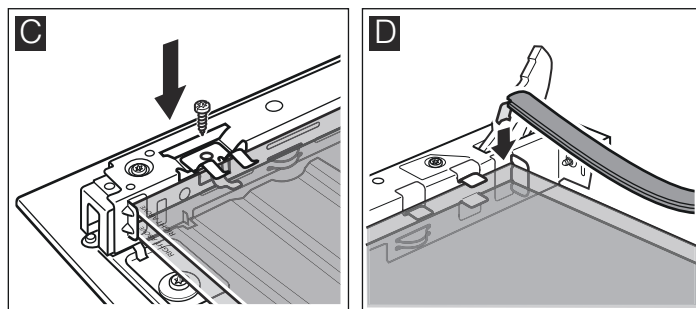

5. Insert the uppermost panel at an angle to the back into the brackets. Take care not to push the seal to the back (fig. E).  
6. Insert the two small seals on the left and right of the panel again (fig. F).

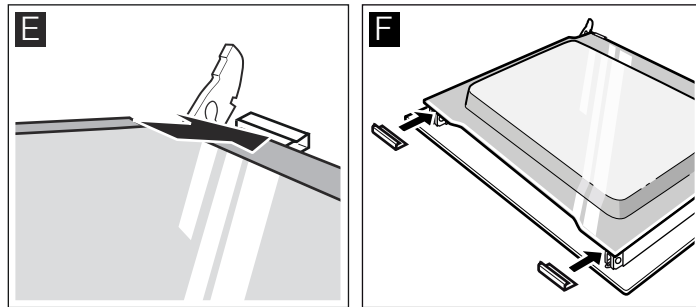

7. Put the cover back in place and screw it on.  
8. Attach the oven door.




**Do not use the oven again until the panels have been correctly installed.**




# Troubleshooting

Quite often, when there is a malfunction, it is usually a small irregularity which is easy to rectify. Before contacting the Technical Assistance Service, try to determine the cause of the fault using the following table.




## Troubleshooting table

Fault	Possible cause	Solution/advice
The oven does not work.	The fuse has blown.	Check the condition of the fuse in the fuse box.
The display panel shows <b>0:00</b>	Power cut.	Set the time once more.
The oven door does not open. The display panel shows <b>0:00</b> and the symbol  .	Power cut during self-cleaning.	Set the time once more. Wait until the  symbol turns off. The oven door can be reopened.
The oven fails to heat or it is not possible to set the selected type of heating.	The heating type is not recognised	Reprogram.
The oven fails to heat up. The temperature display shows a small square.	The oven is in demo mode.	Disconnect the fuse in the fuse box and connect it again after at least 20 seconds. Within the next 2 minutes, press the  button for 4 seconds until the indicator no longer displays the square.
The display shows <b>FB</b> .	The automatic shut off function is activated. The oven will stop heating.	Press any button.

## Error messages with **E**

If the display panel shows an error message with **E**, press the  button. This will eliminate the error message. The time may need to be reset. Contact the Technical Assistance Service if the error reoccurs.

If any of the following messages appear, the user can resolve them unaided.

Error message	Possible cause	Indication/solution
<b>E011</b>	A button has been pressed for too long or has got stuck.	Press all of the buttons one by one. Check that the buttons are clean.
<b>E106</b>	The door lock has been activated with the door open.	Press the  button and then turn the control to the left and right. If the error message does not disappear the control panel might be locked; press the  button for 4 seconds and turn the control to the left and right. You can now reprogram.
<b>E115</b>	The cooking compartment temperature is too high.	The oven door is locked. Wait until the cooking compartment has cooled. The  button deletes the error message.

## Risk of electric shock.!

Incorrect repairs can be dangerous. Repairs may only be carried out by qualified personnel from the Technical Support Service.

## Changing the oven bulb


If the oven light bulb is damaged it must be replaced. Special 25 W, E14, 220 V-240 V heat-resistant light bulbs (to 300 °C temperature) can be obtained from the Technical Support Service or in specialist shops. Only use this type of bulb.

## Risk of electrical discharge and the resulting shock.!

Disconnect the appliance from the mains. Ensure that this is turned off.

1. Place a dishcloth into the cold oven to avoid damage.

2. Remove the glass protection by unscrewing it to the left.

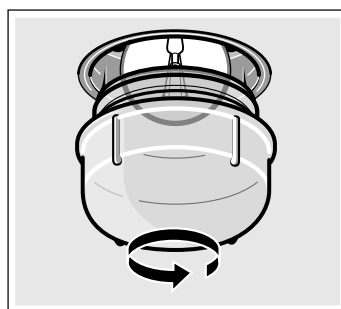

3. Replace the bulb with a similar bulb.

4. Screw the protection glass back into place.

5. Remove the dishcloth and switch the oven back on at the mains.

## Protective glass panels

Damaged protective glass panels must be replaced. Protective glass panels can be obtained from the Technical Assistance Service. Please quote your appliance's product number and production number.

## After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

### E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate containing these numbers can be found on the right-hand side of the oven door. You can make a note of the numbers of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

E no. FD no.

After-sales service ☎

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

- GB** 0844 8928999  
Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.
- IE** 01450 2655  
0.03 € per minute at peak. Off peak 0.0088 € per minute.

Rely on the professionalism of the manufacturer. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts for your appliances.

## Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

### Environmentally-friendly disposal of waste

Dispose of packaging with the environment in mind.




This appliance is identified according to the Waste Electrical and Electronic Equipment Directive WEEE 2002/96/EC. This directive defines the framework for the recycling and reuse of appliances used in EU territory.

### Saving energy

- Preheat the oven only if this is required by a recipe or is indicated in the tables.
- Use dark, lacquered or black enamel baking tins. These are more efficient at absorbing heat.
- Keep the oven door closed during cooking, baking and roasting cycles.
- When baking several cakes, these should be preferably baked one after the other. The oven will still be hot, thereby reducing the cooking time for the second cake. Two rectangular baking tins can be placed side-by-side.

- For long cooking times, the oven may be turned off 10 minutes prior to the specified time, allowing the item to continue to cook but taking advantage of the oven's residual heat.

### Eco hot air function

Using the eco  hot air function, significant energy savings can be made cooking dishes on one level. The cooking, baking and roasting cycles do not require preheating.


#### Notes

- So that the energy-saving function works efficiently, the dish should be placed in a cold and empty oven.
- During the roasting cycle, the oven door should only be opened whenever really necessary, for example, to turn food over. In the chapter "Tables and suggestions", there are advice and suggestions on baking and roasting.

#### Table

The following table shows the selection of dishes suitable for the energy-saving function. The table gives details of suitable temperature settings, accessories and heights for each dish.

The temperature and the cooking time can change depending on quantity, condition and the quality of food. Thus, the values given in the table are approximate. We recommend beginning with the lowest value. Items will be more evenly browned at a lower temperature. If the result is not as expected, use a higher temperature setting next time.

Type of heating =  Hot air eco

	Accessory	Level	Temperature in °C	Cooking time, minutes
<b>Cakes and confectionery</b>				
Easy sponge cake	wire shelf + rectangular baking tin	2	170-180	55-65
Butter sponge cake	wire shelf + rectangular baking tin	2	150-160	75-85
Tart base	flat oven tray	3	180-200	30-45
Fruit tart, ( ex. cherry)	metal springform tin, Ø 26 cm	2	160-180	50-60
Flat yeast cake	flat oven tray	3	160-170	30-40
Marble cake	wire shelf + rectangular baking tin	2	160-170	100-110
Savoy cake	wire shelf + baking tin	2	150-160	85-95

	Accessory	Level	Temperature in °C	Cooking time, minutes
Water sponge cake	wire shelf + black enamel baking tin	2	165-175	35-45
Traditional Spanish sponge cake, 3 eggs	wire shelf + black enamel baking tin	1	160-170	45-55
Apple tart	universal deep tray	3	170-180	65-75
Pastries and biscuits	flat oven tray	3	130-140	20-30
Nut triangles	flat oven tray	3	185-195	35-45
Butter buns (12 buns)	flat oven tray	3	170-180	20-25
Swiss roll	flat oven tray	3	160-170	15-20
Fairy cakes	flat oven tray	3	150-160	30-40
Apple tart, in circular tin	metal tin, Ø 31 cm	3	230-250	30-40
Quiche	metal tin, Ø 31 cm	3	200-220	55-65
French sponge cake with fruit	rectangular tin	2	180-200	50-60
Apricot puff pastries	flat oven tray	3	190-200	30-40
Chocolate chip cookies	flat oven tray	3	140-150	35-45
Butter cookies	flat oven tray	3	140-150	30-45
Cream-filled pastries	universal deep tray	3	210-220	40-50
Puff pastry twists	flat oven tray	3	210-230	35-45
Bread (1 kg)	flat oven tray	3	200-210	55-65
<b>Meat</b>				
Roast veal (1.5 kg of veal)	wire shelf + closed pan	2	200-210	110-120
Roast pork (1 kg)	wire shelf + open pan	2	180-190	110-120
Veal sirloin / roast beef, rare (1 kg)	wire shelf + open pan	2	240-250	35-45
Veal sirloin / roast beef, medium (1 kg)	wire shelf + open pan	2	250-260	45-55
<b>Fish</b>				
Baked gilthead bream / sea bass (2 pieces, 350 g each)	universal deep tray	2	180-190	30-40
Gilthead bream in a salt crust (2 pieces, 450 g each)	flat oven tray	3	180-190	40-50
Hake (1 piece, 1 kg)	flat oven tray	2	180-190	50-60
Trout (2 pieces, 300 g each)	flat oven tray	2	180-190	25-35
Monkfish (2 pieces, 400 g each)	flat oven tray	2	180-190	30-40
<b>Frozen ready-meal</b>				
Thin base frozen pizza	wire shelf	2	210-220	15-20
Thick base pizza	wire shelf	2	180-190	25-35
Chips for baking	flat oven tray	3	210-220	20-30
Chicken wings	flat oven tray	3	200-210	15-25
Fish fingers	flat oven tray	3	210-220	20-30
Pre-cooked bread	universal deep tray	3	180-200	10-20
Mini filled puff pastries	flat oven tray	3	180-190	15-25
Frozen lasagne (450 g)	wire shelf	2	210-230	45-55
Lasagne (2 pieces, 450 g each)	wire shelf	2	210-230	45-55
Mozzarella sticks	flat oven tray	2	230-240	15-25
Jalapeno peppers	flat oven tray	3	200-210	15-25
<b>Other</b>				
Potatoes au gratin	wire shelf + open pan	2	155-165	75-85
Fresh lasagne	wire shelf + open pan	2	175-180	50-60

# Automatic programme

The automatic program is perfect for easily cooking special recipes, refined stews and juicy roasts. There is no need to turn and add water to meat and this also keeps the oven clean.

The result of cooking depends on the quality of the meat and the size of the cookware. Use oven gloves to remove the dish from the oven when it is ready. The cookware will be very hot. When opening the cookware, hot vapour escapes.

## Ovenware

For the recipes, note the ovenware information given in the enclosed recipe booklet. For all other programmes, use a closed dish with a tightly fitting lid. Also observe the information from the ovenware manufacturer. You will find information on the other programmes in the following.

### Suitable cookware

We recommend heat-resistant cookware (up to 300 °C) made from glass or glass ceramic. Roasting dishes made from stainless steel are not ideal. Their shiny surface reflects a high proportion of the thermal radiation. The food will not brown as much and the meat will be less well cooked. If you use a stainless-steel roasting dish, remove the lid once the programme has finished. Grill the meat at grill setting 3 for 8 to 10 minutes more. The dish browns more quickly if you use a roasting dish made of enamelled steel, cast iron or diecast aluminium. Add a little more liquid.

### Unsuitable pans

Bake ware made from clay, aluminium foil, clear containers, without enamel and made from plastic or with plastic handles.

## Size of the ovenware

The meat should cover about two thirds of the ovenware base. This will ensure that you get good meat juices.

The distance between the meat and the lid must be at least 3 cm. The meat may expand during the roasting process.

## Preparing the dish

Prepare the recipes according to the information in the recipe booklet. For all other programmes, use fresh or frozen meat. We recommend fresh chilled meat.

Select a suitable roasting dish.

Weigh the fresh or frozen meat, poultry or fish. You will find detailed information in the corresponding tables. You need the weight in order to make the setting.

Season the meat. Season frozen meat in the same way as fresh meat.

Many dishes require the addition of liquid. If this is the case, add enough liquid so that there is approx. ½ cm covering the base of the dish. If the table specifies "a little" liquid, 2-3 tablespoons are usually sufficient. If it specifies "a generous amount" of liquid, add more by all means. Observe the instructions given before and in the tables.

Cover the ovenware with a lid. Place it on the wire rack at level 2.

For some dishes, it is not possible to set a later end time. These dishes are marked with an asterisk \*.

Always place the ovenware into the cooking compartment without preheating it.

## Programmes

### Recipes

There is a recipe booklet for the first 14 programmes. This gives precise instructions on each dish.

Programmes	Programme number	Weight range in kg	Weight setting
<b>Recipes</b>			
Aubergine gratin	P1*	0.2-0.8	Weight of vegetables
Escalivada	P2*	0.8-1.6	Weight of vegetables
Baked tomatoes with egg	P3*	0.7-2.0	Weight of vegetables
Seabream	P4*	0.5-2.1	Weight of fish
Salted gilthead seabream	P5*	0.3-1.1	Weight of fish
Hake	P6*	0.5-2.0	Weight of fish
Spare ribs	P7*	0.8-2.0	Weight of meat
Chicken with vegetables	P8*	1.0-2.0	Weight of meat
Pork loin in pastry	P9*	0.3-1.5	Weight of meat
Empanada	P10*	0.3-1.0	Weight of dough
Pizza	P11*	0.1-0.4	Weight of dough
Sponge flan	P12*	0.6-1.2	Weight of dough
Egg flan	P13*	0.3-1.3	Weight of liquids
Cheesecake	P14*	0.8-1.4	Weight of liquids

## Poultry

Place poultry in the roasting dish, breast side up. The programme is not suitable for stuffed poultry.

When cooking several drumsticks, set the weight of the heaviest drumstick. The drumsticks must be approximately the same weight.

Example: For 3 chicken drumsticks of 300 g, 320 g and 400 g, set 400 g.

Just as with drumsticks, if you want to prepare two chickens of similar size in one roasting dish, make settings according to the weight of the heavier chicken.

When cooking turkey breast, add plenty of water to make sure that the meat does not dry out.

Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Poultry</b>				
Chicken, fresh	P15*	0.7-2.0	No	Weight of meat
Duck, fresh	P16*	1.6-2.7	No	Weight of meat
Small turkey, fresh	P17*	2.5-3.5	No	Weight of meat
Turkey breast, fresh	P18*	0.5-2.5	A generous amount	Weight of meat
Drumsticks, fresh e. g. chicken, duck, goose, turkey drumsticks	P19*	0.3-1.5	No	Weight of heaviest drumstick

## Meat

Pour the specified amount of liquid into the ovenware.

### Beef

When cooking pot roasts, ensure that sufficient liquid is added. You can also use the marinade. Cook sirloin fatty-side up.

Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Beef</b>				
Pot roast, fresh e g. prime rib, boned shoulder, shoulder, marinated beef	P20	0.5-3.0	Yes	Weight of meat
Sirloin, fresh, medium e. g. loin	P21	0.5-2.5	No	Weight of meat
Sirloin, fresh, rare e. g. loin	P22	0.5-2.5	No	Weight of meat

### Veal

To make osso buco, place generous quantities of vegetables (celery, tomatoes, carrots) into the dish and spread out the leg cuts on top. If necessary, add liquid (stock).

Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Veal</b>				
Joint, fresh, lean e. g. topside, flank	P23	0.5-3.0	Yes	Weight of meat
Joint, fresh, marbled e. g. neck, scrag end	P24	0.5-3.0	A little	Weight of meat
Osso buco e. g. veal leg slices with vegetables	P25	0.5-3.5	Yes	Weight of meat



## Pork

Joints with a crust should be placed in the dish with the crust side up. Before cooking, score the rind in a criss-cross pattern, without damaging the meat.

Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Pork</b>				
Neck joint, fresh, boned	P26	0.5-3.0	Yes	Weight of meat
Roast loin, fresh	P27	0.5-2.5	Yes	Weight of meat
Rolled roasting joint, fresh	P28	0.5-3.0	Yes	Total weight
Joint with crust, fresh e. g. belly	P29	0.5-3.0	No	Weight of meat
Joint with crust, fresh e. g. shoulder	P30	0.5-3.0	No	Weight of meat

## Lamb

When roasting joints of meat and drumsticks, set the weight of the meat. When roasting meat loaf, set the total weight.

Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Lamb</b>				
Leg, fresh, boned, well-done	P31	0.5-2.5	A little	Weight of meat
Leg, fresh, boned, medium	P32	0.5-2.5	No	Weight of meat
Leg, fresh, on the bone, well-done	P33	0.5-2.5	A little	Weight of meat

## Game

Game can be covered with bacon, which keeps the meat more succulent, but means that it will not brown as much. To create a more delicate taste, you can marinate the game overnight in the fridge in buttermilk, wine or vinegar, before cooking.

When cooking more than one haunch of hare, set the weight of the heaviest haunch.

Rabbit can also be cooked pre-cut into portions. Set the total weight.

Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Game</b>				
Haunch of hare, on the bone, fresh	P34	0.3-0.6	Yes	Weight of meat
Wild boar joint, fresh e. g. shoulder, breast	P35	0.5-3.0	Yes	Weight of meat
Rabbit, fresh	P36	0.5-3.0	Yes	Weight of meat

## Fish

Prepare the fish, then add vinegar, lemon juice or white wine and salt as usual.

For braised fish: Pour some liquid (e.g. wine or lemon juice) into the cookware, ½ cm deep.

For baked fish: Turn the fish in flour and brush with melted butter.

Whole fish turns out particularly well if it is placed in the dish in a swimming position. In other words, the dorsal fin is pointing upwards. To ensure that the fish remains in position, place half a potato or a small, ovenproof container into the stomach cavity.

When cooking more than one fish, set the total weight. However, the fish must be roughly the same size or the same weight. Example: For two trout of 0.6 kg and 0.5 kg, set 1.1 kg.


Programmes	Programme number	Weight range in kg	Add liquid	Weight setting
<b>Fish</b>				
Trout, fresh, braise	P37*	0.3-1.5	Yes	Total weight
Trout, fresh, bake	P38*	0.3-1.5	No	Total weight
Cod, fresh, braise	P39*	0.5-2.0	Yes	Total weight
Cod, fresh, bake	P40*	0.5-2.0	No	Total weight

Selecting and setting a programme


First choose a suitable programme from the programme table.

Example in the diagram: setting for pot-roasted beef, fresh, programme 20, weight of meat 1.3 kg.


1. Press the **P** button.  
The first programme number and the rotary symbol

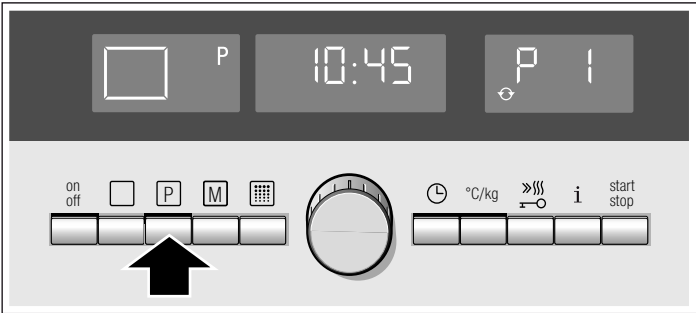


1. appear on the temperature display.  
2. Select the desired programme number using the rotary selector.

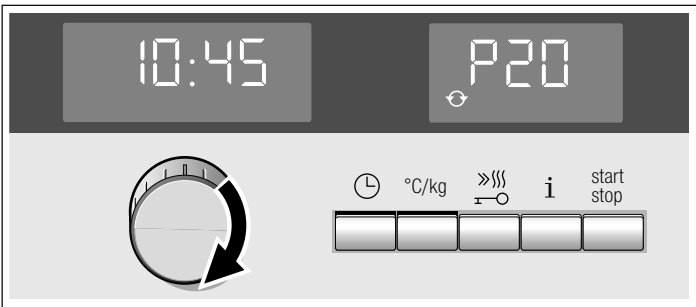

3. Press the **°C/kg** button.  
A suggested weight appears on the clock display.

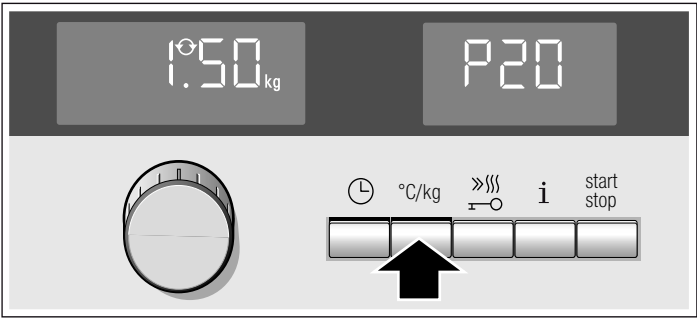

4. Turn the rotary selector to change the weight.

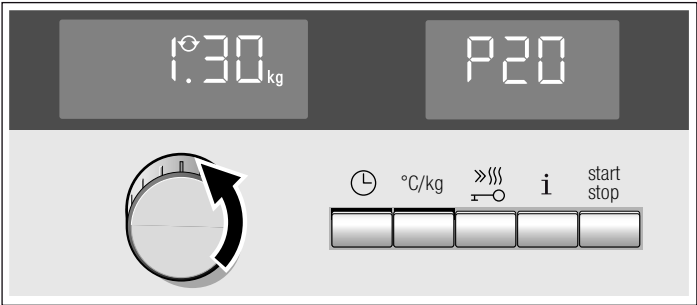

5. Press the **start stop** button.  
The programme starts. You will see the cooking time counting down on the clock display.

The programme has ended

A signal sounds. The oven stops heating. You can cancel the signal earlier by pressing the **start stop** button.

Changing the duration of the program

The cooking time cannot be changed

Changing the programme

Once a programme has been started, it can no longer be changed.

Pausing operation

Press the **start stop** button briefly. The oven is paused. The **start stop** button flashes. To unpause, press the **start stop** button again. The **start stop** button lights up. The programme will then continue.

Cancelling the programme

Press and hold button **start stop** until the **3D** symbol for 3D hot air and 160 °C appear. You can make new settings.

Setting a later end time

See the section entitled *Time-setting options - Setting a later end time.*

Advice on using the automatic program

The weight of the roast or bird is above the indicated weight range.	The weight range is limited for specific reasons. Often, there are no pans of sufficient size for large roasts. Prepare large pieces using top and bottom heat <b>□</b> or the grill with hot air <b>☼</b> .
The roast is good, but the sauce is too dark.	Use a smaller container or use more liquid.
The roast is good, but the sauce is watery.	Use a larger container or use less liquid.
The roast has become too dry on top.	Use bakeware with tight fitting lids. Very lean meat is more juicy if covered with strips of streaky bacon.
During roasting there is a burning smell, but the roast looks good.	The lid of the pan does not close properly or the meat has increased in thickness and has lifted the lid. Always use a suitable cover. Ensure a minimum distance of 3 cm between the meat and the cover.
To prepare frozen meat.	Season the frozen meat just as you would fresh meat. Please note: the preparation of frozen meat can not delay the completion time. The meat will be thawed in waiting time and be ruined.

# Tested for you in our cooking studio


Here you will find a selection of dishes and the ideal settings for them. We will show you which type of heating and which temperature are best suited for your dish. You can find information about suitable accessories and the height at which they should be inserted. There are also tips about cookware and preparation methods.

## Notes

- The values in the table always apply to dishes placed into the cooking compartment when it is cold and empty.  
Only preheat the appliance if the table specifies that you should do so. Do not line the accessories with greaseproof paper until after they have been preheated.
- The times specified in the tables are guidelines only. They will depend on the quality and composition of the food.
- Use the accessories supplied. Additional accessories may be obtained as special accessories from specialist retailers or from the after-sales service.  
Before using the oven, remove any unnecessary accessories and ovenware from the cooking compartment.
- Always use oven gloves when taking hot accessories or ovenware out of the cooking compartment.

## Cakes and pastries

### Baking on one level

The best method for baking a cake is to place it on one level with top and bottom heating .

When baking using the 3D  Hot air function, the following levels are recommended for the accessories:

- Cakes in tins: level 2
- Cakes on the tray: level 3

### Baking at different levels

Using the 3D  Hot air mode.

Baking on two levels:

- Universal tray: level 3.
- Oven tray: level 1.


Baking on three levels:

- Universal tray: level 5.
- Oven tray: level 3.
- Oven tray: level 1.

Trays put in the oven at the same time are not necessarily ready at the same time.

In these tables you will find numerous tips for your dishes.

If 3 rectangular cake tins are used at the same time, place on the wire shelf as shown in the diagram.

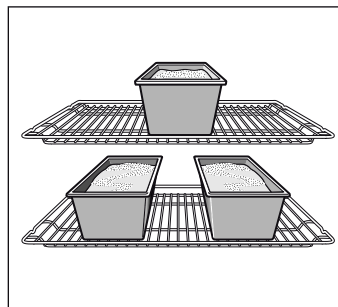

### Baking tins

It is best to use dark-coloured metal baking tins.

Baking times are increased when light-coloured baking tins made of thin metal or glass dishes are used, and cakes do not brown so evenly.

If you wish to use silicone baking tins, use the information and recipes provided by the manufacturer as a guide. Silicone baking tins are often smaller than normal tins. The amount of mixture and recipe instructions may differ.

### Tables














The table shows the optimum heating methods for each type of cake or dessert. The temperature and cooking time will depend on the amount and the consistency of the dough. For this reason the cooking tables always provide approximate cooking times. Always begin by trying the lowest value. The items will be more evenly browned at a lower temperature. If necessary, this can be increased next time.

If the oven is preheated, cooking times are reduced by 5 to 10 minutes.





















*Additional information is provided in the Tips for baking section as an appendix to the tables.*




















To bake a cake only on one level, place the mould on the enamel tray.

When baking several cakes at the same time, the moulds can be placed together on the wire shelf.

Cakes in tins	Cake tin	Level	Heating type	Temperature in °C	Time in minutes
Easy sponge cake	Crown-shaped/rectangular cake tin	2		160-180	60-75
	3 rectangular cake tins	3+1		140-160	70-90
Batter dough cakes, fine	Crown-shaped/rectangular cake tin	2		150-170	60-70
Tart base, sponge cake dough	Tart tin	3		160-180	20-30
Fine fruitcake, sponge cake dough	Round/springform tin	2		160-180	50-60
Sponge cake base, 2 eggs (preheat)	Tart tin	2		150-170	20-30
Sponge cake base, 6 eggs (preheat)	Springform tin	2		150-170	40-50
Shortcrust pastry base with edge	Springform tin	1		180-200	25-35
Cheese cake or fruit tart, shortcrust pastry base*	Springform tin	1		160-180	70-90
Quiche	Pizza tray	1		220-240	35-45
Sponge in concentric cake tin	Concentric cake tin	2		150-170	60-70
Pizza, thin base with light topping (preheat)	Pizza tray	1		270	10-20
Savoury cake*	Springform tin	1		170-190	45-55

\* Let the cake cool for 20 minutes with the oven switched off and closed.







Cakes prepared on the tray	Accessories	Level	Heating type	Temperature in °C	Time in minutes
Dry layer sponge cake	Universal tray	2		170-190	20-30
	Universal tray + oven tray	3+1		160-170	30-40
Fruit or liquid layer sponge cake	Universal tray	2		170-190	25-35
	Universal tray + oven tray	3+1		140-160	40-50
Dry layer yeast dough	Universal tray	3		170-180	25-35
	Universal tray + oven tray	3+1		150-170	35-45
Fruit or liquid layer yeast dough	Universal tray	3		160-180	40-50
	Universal tray + oven tray	3+1		150-160	50-60
Lattice-topped shortcrust tart with dry layer	Universal tray	1		180-200	20-30
Lattice-topped shortcrust tart with fruit or liquid layer	Universal tray	2		160-180	60-70
Quiche	Universal tray	1		210-230	40-50
Swiss roll (preheating)	Universal tray	2		170-190	15-20
Plaited loaf made with 500 g of flour	Universal tray	2		170-190	25-35
Bread roll made with 500 g of flour	Universal tray	3		160-180	60-70
Bread roll made with 1 kg of flour	Universal tray	3		150-170	90-100
Puff pastry, sweet	Universal tray	2		190-210	55-65
Pizza	Universal tray	2		200-220	25-35
	Universal tray + oven tray	3+1		180-200	40-50
Flambéed tart (preheating)	Universal tray	2		270	15-20
Börek	Universal tray	2		190-200	40-55

Small pastries	Accessories	Level	Heating type	Temperature in °C	Time in minutes
Pastries and biscuits	Universal tray	3		140-160	15-25
	Universal tray + oven tray	3+1		130-150	25-35
	2 oven trays + universal tray	5+3+1		130-150	25-40
Tea biscuits (preheating)	Universal tray	3		140-150	30-40
	Universal tray	3		140-150	20-30
	Universal tray + oven tray	3+1		140-150	25-35
	2 oven trays + universal tray	5+3+1		140-150	25-35
Macaroons	Universal tray	2		110-130	30-40
	Universal tray + oven tray	3+1		110-120	35-45
	2 oven trays + universal tray	5+3+1		110-120	35-45
Meringues	Universal tray	3		80-100	100-150
Tartlets	Wire shelf and tartlet tin	3		180-200	20-25
	2 wire shelves and tartlet tin	3+1		160-180	25-30
Ensaimada	Universal tray	2		210-230	30-40
Puff pastry	Universal tray	3		190-200	25-35
	Universal tray + oven tray	3+1		190-200	30-40
	2 oven trays + universal tray	5+3+1		170-180	35-45
Yeast dough pastry	Universal tray	2		190-210	20-30
	Universal tray + oven tray	3+1		160-180	25-35



## Bread and rolls

Preheat the oven for bread making unless otherwise instructed.

Do not spill water directly into the oven when it is hot.

Bread and rolls	Accessories	Level	Heating	Temperature in °C	Time in minutes
Yeast bread made using 1.2 kg of flour	Universal tray	2		270	8
				200	35-45
Fermented dough bread made using 1.2 kg of flour	Universal tray	2		270	8
				200	40-50
Bread pudding	Universal tray	2		270	15-20
Bread rolls (no preheating)	Universal tray	3		200	20-30
Sweet yeast dough bread rolls	Universal tray	3		180-200	15-20
	Universal tray + oven tray	3+1		150-170	20-30

## Suggestions and practical advice for baking

If you want to use your own recipe.	You can use a similar product to the one listed in the cooking table as a guide.
How to check whether your sponge cake is ready.	10 minutes before the end of the cooking time indicated in the recipe, test the thickest part of the cake with a thin wooden skewer. The cake is ready when the skewer comes out clean, with no traces of cake mix.
The cake is too flat.	Next time, try using less liquid or reduce the oven temperature by 10 degrees. Ensure you mix the dough according to the times given in the recipe.
The cake has a peaked centre, but the edges are lower.	Do not grease the cake tin. Once the cake is ready, use a knife to carefully remove it from the cake tin.
If the cake is too brown on top.	Position the cake lower in the oven, reduce the oven temperature and bake it for longer.
The cake is too dry.	Use a skewer to make small holes in the finished cake. Pour a few drops of fruit juice or alcoholic drink over the cake. Next time, increase the oven temperature by 10 degrees and reduce the cooking time.
The bread or cake (fruit cake, for example) looks fine on the outside but still has soft (soggy) areas inside.	Next time, use less liquid and leave the product for a little longer in the oven, at a lower temperature. The bases of cakes with juicy toppings should be baked first on their own. Then sprinkle chopped almonds or breadcrumbs on the base before adding the topping. Follow the recipe and the cooking times.
Pastries are not evenly browned.	Select a lower temperature; the pastries will be browned more uniformly. Bake more delicate pastries with top and bottom heating  on one level. Overhanging greaseproof paper may also affect air circulation. Always trim it to fit the baking tray.
The fruit pie is not brown enough at the bottom.	Next time put the pie in at a lower level.
The fruit juices are spilling out.	Next time use the universal tray if available.
Small pastries made with yeast may stick together during baking.	Leave a space of about 2 cm between them. Then they will have enough space to rise and brown on all sides.
Products have been baked on different levels. Pastries on the upper tray are darker than those on the lower tray.	Always use the 3D  Hot air function when baking products on different levels. Although several baking trays may be placed in the oven at the same time, this does not mean that they will necessarily all be ready at the same time.
Baking moist cakes produces condensation.	Condensation may form when baking. Some of this moisture may evaporate via the door handle, and drops of condensation may form on the control panel or on the front of nearby kitchen units. The oven is physically designed with this in mind.



Meat, poultry, fish

Cookware

Any heatproof cookware can be used. For large roasts, the enamel tray can also be used.

It is best to use glass containers. Check that the lid of the cookware will fit and close properly.

If using enamel containers, add more liquid.

When using stainless steel pans, the meat does not brown well and may even be left rare. If so, lengthen the cooking time.

Data shown in tables:  
Uncovered cookware = open  
Covered cookware = closed

Always place cookware in the centre of the wire shelf.

Hot glass cookware should be placed on a dry dishcloth. The glass could shatter if rested on a wet or cold surface.

Roasting

Add in a little liquid if the meat is lean. Cover the base of the ovenware with approx. ½ cm of liquid.

Add liquid generously for pot roasts. Cover the base of the ovenware with approx. 1 - 2 cm of liquid.

The amount of liquid depends on the type of meat and the material the ovenware is made of. If preparing meat in an enamelled roasting dish, it will need a little more liquid than if cooked in glass ovenware.

Roasting dishes made from stainless steel are not ideal. The meat cooks more slowly and browns less fully. Use a higher temperature and/or a longer cooking time.

Grilling

Always use the grill with the oven closed.

For grilling, preheat the oven for about 3 minutes before the food is placed inside the oven.

Place the pieces directly on the wire shelf. If only one piece is prepared, it is best if placed in the centre of the wire shelf.

Place the enamel tray at level 1. The tray will help keep the oven clean by catching any meat juices.

Do not place the baking tray or universal tray at level 4 or 5. Due to the extreme heat, it could be deformed and cause damage to the oven interior when it is removed.

In so far as it is possible, use pieces of the same thickness. This will help them brown evenly and remain juicy. Salt the fillets after grilling.

Turn the pieces after ⅔ the time has elapsed.

The grill resistance switches on and off automatically. This is normal. The frequency depends on the chosen power level.






















Meat













Turn pieces of meat halfway through the cooking time.

When the roast is ready, turn off the oven and allow it to rest for an additional 10 minutes. This allows better distribution of the meat juices.

After cooking, wrap sirloin in aluminium foil and leave it to rest for 10 minutes in the oven.

For roast pork with a rind, score the rind in a crossways pattern, then lay the roast in the dish with the rind at the bottom.

Meat	Weight	Accessories and cook-ware	Level	Heating	Temperature at °C, grill power	Time in minutes
Ox meat						
Braised beef	1.0 kg	covered	2		200-220	100
	1.5 kg		2		190-210	120
	2.0 kg		2		180-200	140
Ox steak, medium rare	1.0 kg	uncovered	2		210-230	60
	1.5 kg		2		200-220	80
Roast beef, medium rare	1.0 kg	uncovered	1		220-240	60
Beefsteak, 3 cm thick, medium rare		Wire shelf + universal tray	5+1		3	15
Veal						
Roast veal	1.0 kg	uncovered	2		190-210	110
	1.5 kg		2		180-200	130
	2.0 kg		2		170-190	150
Leg of veal	1.5 kg	uncovered	2		210-230	140
Pork						
Roast without bacon (for example nape)	1.0 kg	uncovered	1		190-210	120
	1.5 kg		1		180-200	150
	2.0 kg		1		170-190	170
Roast with bacon (for example shoulder)	1.0 kg	uncovered	1		190-210	130
	1.5 kg		1		180-200	160
	2.0 kg		1		170-190	190
Pork loin	500 g	Wire shelf + universal tray	3+1		230-240	30
Roast pork, lean	1.0 kg	uncovered	2		190-210	120
	1.5 kg		2		180-200	140
	2.0 kg		2		170-190	160

Meat	Weight	Accessories and cook-ware	Level	Heating	Temperature at °C, grill power	Time in minutes
Shoulder of pork with bone	1.0 kg	covered	2		210-230	70
Beefsteak, 2 cm thick		Wire shelf + universal tray	5+1		3	15
Pork medallions, 3 cm thick		Wire shelf + universal tray	5+1		3	10
<b>Lamb</b>						
Shoulder of lamb with bone	1.5 kg	uncovered	2		190-210	60
Leg of lamb, no bone, medium rare	1.5 kg	uncovered	1		160-180	120
<b>Game</b>						
Sirloin steak with bone	1.5 kg	uncovered	2		200-220	50
Leg of deer without bone	1.5 kg	covered	2		210-230	100
Roast boar	1.5 kg	covered	2		180-200	140
Roast deer	1.5 kg	covered	2		180-200	130
Rabbit	2.0 kg	covered	2		220-240	60
<b>Mince meat</b>						
Mince meat casserole	500 g of meat	uncovered	1		180-200	80
<b>Sausages</b>						
Sausages		Wire shelf + universal tray	4+1		3	15

## Poultry

The weights of the table are for unstuffed birds ready to roast.















Place whole birds on the wire shelf initially with the breast side down. Turn once after  $\frac{2}{3}$  the estimated time.

Turn pieces of meat such as turkey pieces or turkey breasts over after half the cooking time has elapsed. Turn the pieces of poultry after  $\frac{2}{3}$  the time has elapsed.

If cooking duck or goose, prick the skin below the wings to release the fat.

The birds can be made brown and crunchy if they are smeared with butter, brine or orange juice more or less at the end of cooking time.

If grilling directly on the shelf, place the enamel tray on level 1.

Poultry	Weight	Accessories and cookware	Level	Heating	Temperature at °C, grill power	Time in minutes
Chicken, whole	1.2 kg	Wire shelf	2		220-240	60-70
Poularde, whole	1.6 kg	Wire shelf	2		210-230	80-90
Chicken, halves	500 g each	Wire shelf	2		220-240	40-50
Chicken pieces	150 g each	Wire shelf	3		210-230	30-40
Chicken pieces	300 g each	Wire shelf	3		210-230	35-45
Chicken breasts	200 g each	Wire shelf	3		3	30-40
Duck, whole	2.0 kg	Wire shelf	2		190-210	100-110
Duck breasts	300 g each	Wire shelf	3		240-260	30-40
Goose, whole	3.5-4.0 kg	Wire shelf	2		170-190	120-140
Goose legs	400 g each	Wire shelf	3		220-240	40-50
Small turkey, whole	3.0 kg	Wire shelf	2		180-200	80-100
Turkey roll	1.5 kg	uncovered	1		200-220	110-130
Turkey breast	1.0 kg	covered	2		180-200	90
Turkey thigh	1.0 kg	Wire shelf	2		180-200	90-100







## Fish

Turn the fish pieces after  $\frac{2}{3}$  the time has elapsed.

Whole fish do not need to be turned over. Bake whole fish in swimming position with the dorsal fin up. So that the fish remains stable, place a cut potato or a small container suitable for baking into the abdomen of the fish.

To cook fish fillets, add a few tablespoons of liquid when cooking.

If grilling directly on the shelf, place the enamel tray on level 1.

Fish	Weight	Accessories and cookware	Level	Heating	Temperature at °C, grill power	Time in minutes
Fish, whole	approx. 300 g	Wire shelf	2		2	20-25
	1.0 kg	Wire shelf	2		200-220	45-55
	1.5 kg	Wire shelf	2		190-210	60-70
	2.0 kg	covered	2		190-210	70-80
Fish ventresca, 3 cm thick		Wire shelf	3		2	20-25
Fish fillet		covered	2		210-230	25-30

## Tips for roasting and grilling

The table does not contain information for the weight of the joint.	Select the next lowest weight from the instructions and extend the time.
How to tell when the roast is ready.	Use a meat thermometer (available from specialist shops) or carry out a "spoon test". Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer.
The roast is too dark and the crackling is partly burnt.	Check the shelf height and temperature.
The roast looks good but the juices are burnt.	Next time, use a smaller roasting dish or add more liquid.
The roast looks good but the juices are too clear and watery.	Next time, use a larger roasting dish and use less liquid.
Steam rises from the roast when basted.	This is normal and due to the laws of physics. The majority of the steam escapes through the steam outlet. It may settle and form condensation on the cooler switch panel or on the fronts of adjacent units.

## Slow cooking

Slow cooking, also known as low-temperature cooking, is the ideal cooking method for tender pieces of meat that are to be cooked medium rare or à point. Meat remains very succulent and tender.

The benefit of this cooking method is that it allows lots of scope for menu planning because slow-cooked meat is easy to keep warm.

### Notes

- Only use fresh, good-quality meat. Carefully remove sinews and fat from around the edge. Fat develops a strong, distinct taste during slow cooking.
- Larger pieces of meat do not need to be turned.
- Meat can be carved immediately following slow cooking. No standing time is required.
- Due to the special cooking method, the meat looks pink, i.e. medium rare. This does not mean, however, that it is raw or not well done enough.
- If you want to make gravy, cook the meat in ovenware with a lid. Please note that the cooking times will be reduced.


- In order to check whether the meat is cooked, use a meat thermometer. A core temperature of 60 °C should be maintained for at least 30 minutes.

### Suitable ovenware

Use shallow ovenware, e.g. a porcelain serving plate or an glass roasting dish without the lid.












Always place the uncovered ovenware on the wire rack at level 2.

### Making settings

1. Select  Top/bottom heating and set a temperature between 70 and 90 °C.  
Preheat the oven, placing the ovenware inside it to warm.
2. Rapidly heat a little fat in a pan. Sear the meat on all sides, even on the ends, and place immediately on the preheated ovenware.
3. Put the ovenware containing the meat back in the oven and slow cook. A slow-cook temperature of 80 °C is ideal for most pieces of meat.

## Table

All tender joints of poultry, beef, veal, pork and lamb are suitable for slow cooking. The slow cooking times depend on the thickness and the core temperature of the meat.

Dish	Weight	Level	Type of heating	Temperature in °C	Searing time in minutes	Slow cooking time in hours
<b>Poultry</b>						
Turkey breast	1000 g	2		80	6-7	4-5
Duck breast*	300-400 g	2		80	3-5	2-2½
<b>Beef</b>						
Joint of beef (e.g. rump) 6-7 cm thick	approx. 1.5 kg	2		80	6-7	4½-5½
Tenderloin, whole	approx. 1.5 kg	2		80	6-7	5-6
Sirloin, 5-6 cm thick	approx. 1.5 kg	2		80	6-7	4-5
Steak-cut rump, 3 cm thick		2		80	5-7	80-110 Min.
<b>Veal</b>						
Joint of veal (e.g. topside), 6-7 cm thick	approx. 1.5 kg	2		80	6-7	5-6
Fillet of veal	approx. 800 g	2		80	6-7	3-3½
<b>Pork</b>						
Pork joint, lean (e.g. loin), 5-6 cm thick	approx. 1.5 kg	2		80	6-7	5-6
Fillet of pork, whole	approx. 500 g	2		80	6-7	2½-3
<b>Lamb</b>						
Lamb saddle fillet, whole	approx. 200 g	2		80	5-6	1½-2

\* For crispy skin, briefly fry the duck breast in a frying pan after slow cooking.

## Tips for slow cooking










Slow-cooked meat is not as hot as conventionally roasted meat.	So that the roasted meat does not cool so quickly, warm the plates and serve the gravy very hot.
If you wish to keep slow-cooked meat warm.	After slow cooking, turn the temperature down to 70 °C. Small pieces of meat can be kept warm for up to 45 minutes, larger pieces for up to 2 hours.

## Au gratin, soufflés, toast

Place the cookware on the wire shelf.

To roast directly on the wire shelf without containers, insert the enamelled tray at level 1. This will keep the oven cleaner.

The result of a gratin depends on the size of the dish and gratin height. The data shown in the table are only given as a guide.



















Food	Accessories and cookware	Level	Heating	Temperature at °C, grill power	Time in minutes
<b>Gratins</b>					
Gratins, dessert	Tin for au gratin cooking	2		180-200	50-60
Soufflé	Tin for au gratin cooking	2		180-200	35-45
	Ramekins	2		200-220	25-30
Pasta au gratin	Tin for au gratin cooking	2		200-220	40-50
Lasagne	Tin for au gratin cooking	2		180-200	40-50
<b>Au gratin dishes.</b>					
Potatoes gratin with raw ingredients, max. 4 cm in height	1 baking pan for au gratin cooking	2		160-180	60-80
	2 two baking pans for au gratin cooking	3+1		150-170	60-80
<b>Toast</b>					
(4 units) au gratin	Wire shelf + universal tray	3+1		160-170	10-15
(12 units) au gratin	Wire shelf + universal tray	3+1		160-170	15-20

Ready-made products

Read the manufacturer's instructions on the packaging.

When covering accessories with baking paper, ensure that the paper is suitable for high temperatures. Cut the paper to the size of the dish to be prepared.

The result depends directly on the type of food. There may be irregularities and colour differences in raw products.

Food	Accessories	Level	Heating type	Temperature in °C	Time in minutes
Pizza, deep frozen					
Thin base pizza	Universal tray	2		200-220	15-25
	Universal tray + wire shelf	3+1		180-200	25-35
Thick base pizza	Universal tray	2		170-190	30-40
	Universal tray + wire shelf	3+1		170-190	25-35
Pizza-baguette	Universal tray	3		170-190	20-30
Mini pizza	Universal tray	3		190-210	10-20
Pizza, frozen					
Pizza (preheating)	Universal tray	1		180-200	10-15
Potato-based products, deep frozen					
Chips	Universal tray	3		190-210	20-30
	Universal tray + oven tray	3+1		190-200	35-45
Croquettes	Universal tray	3		190-210	20-25
Potato cakes, stuffed potatoes	Universal tray	3		200-220	15-25
Bakery products, deep frozen					
Bread rolls and baguettes	Universal tray	3		180-200	10-20
Pretzels (bread dough)	Universal tray	3		200-220	10-20
Bakery products, pre-baked					
Bread rolls and baguettes	Universal tray	2		190-210	10-20
	Universal tray + wire shelf	3+1		160-180	20-25
Fried foods, deep frozen					
Fish fingers	Universal tray	2		220-240	10-20
Chicken fingers, nuggets	Universal tray	3		200-220	15-25
Puff pastry, deep frozen					
Puff pastry	Universal tray	3		190-210	30-35

Special dishes

At low temperatures, a good creamy yoghurt and a spongy yeast dough can be obtained.

First remove accessories and wire shelves or left and right-hand side rails from inside the oven.

Making yoghurt

1. Boil 1 litre of milk (3.5 % fat) and allow it to cool to about 40 °C.

2. Mix 150 g of yoghurt (at fridge temperature).

3. Pour the mixture into jars or bowls and cover them with transparent film.

4. Preheat the oven as instructed.



5. Now, place the bowls or jars on the bottom of the oven and prepare as follows.

Leaving yeast dough to rise

1. Prepare the yeast dough as usual. Pour the dough into a heat-resistant ceramic baking dish and cover it.

2. Preheat the oven as instructed.

3. Turn off the appliance and allow the dough to rise inside the oven.

Food	Cookware	Level	Type of heating	Temperature	Time
Yoghurt	Place the bowls or jars	at the bottom of the oven		Preheat to 50 °C 50 °C	5 min. 8 h
Allow the dough with yeast to rise	Place a heat resistant cookware	at the bottom of the oven		Preheat to 50 °C turn off the appliance and place the dough inside the oven.	5-10 min. 20-30 min.

## Defrosting



Defrosting time depends on the type and quantity of food.

Read the manufacturer's instructions on the packaging.

Remove frozen food from the container and place in appropriate cookware on the wire shelf.

Place the bird on a dish with the breast facing down.

**Note:** The oven light does not come on until reaching a temperature of 60 °C. This helps achieve precise optimal control.

Frozen products	Accessories	Level	Type of heating	Temperature
<b>Delicate frozen products</b> E.g. cream cakes, buttercream tarts, chocolate or sugar-coated cakes, fruit pies, etc.	Wire shelf	1		30 °C
<b>Other frozen products</b> Chicken, sausages and meat, bread, rolls, pies and other pastries	Wire shelf	1		50 °C





## Drying

Use only fruit and vegetables that are in perfect condition and wash them thoroughly first.

Drain well and dry thoroughly.

Place the universal tray on level 3 and the shelf on level 1.

Cover the universal tray and shelf with special baking parchment or greaseproof paper.

Food	Level	Type of heating	Temperature in °C	Cooking time, hours
600 g of sliced apples	1+3		80	approximately 5 h
800 g of pears cut into chunks	1+3		80	approximately 8 h
1.5 kg of cherries	1+3		80	approximately 8-10 h
200 g of cleaned, fresh herbs	1+3		80	approximately 1½ h

**Note:** If the fruit or vegetables contain a lot of juice or water, they will have to be turned over several times. Once dried, remove them from the paper immediately.

## Jam making

For cooking, the jars and the elastic bands must be clean and in perfect condition. Whenever possible, use jars of equal sizes. The values in the tables are given for round 1-Litre jars.

### Caution!

Do not use larger or taller jars. Their lids could explode.

Only use fruit and vegetables that are in good condition. Clean them well.

The times given in tables are only given as an indication. These can vary according to the outside temperature, number of jars, quantity and temperature of the jar content. Before turning off the appliance, ensure the jars have begun to bubble.


### Preparation

1. Tip the fruit or vegetable into the jars but do not fill them to the brim.
2. Clean the edges of the jars; these must be clean.
3. Place a cover and wet elastic band on each jar.

4. Close the jars with clamps.

Do not place more than six jars in the oven at the same time.

### Making settings

1. Insert the universal pan at level 2. Arrange the jars on it so that they do not touch each other.
2. Pour ½ litre of hot water (approx. 80 °C) into the universal pan.
3. Close the oven door.
4. Set  Bottom heating.
5. Set the temperature to between 170 and 180 °C.
6. Start operation.

### Jam making

After approximately 40 - 50 minutes, bubbles begin to form rapidly. Switch the oven off

Take the jars out of the oven after approximately 25 - 35 minutes (the residual heat is used in this time). If these are allowed to cool in the oven for more time, this could promote the formation of germs making the jam acidic.

Fruit in 1 L jars	from when bubbles start to appear	Residual heat
Apples, gooseberries, strawberries	To switch off	approx. 25 minutes
Cherries, apricots, peaches, gooseberries	To switch off	approx. 30 minutes
Apple, pear or cherry puree	To switch off	approx. 35 minutes

Cooking vegetables

When small bubbles begin to form in the jars, adjust the temperature to approximately 120 - 140 °C. About 35 - 70 minutes, depending on the type of vegetables. After this time, turn off the oven to use the residual heat.

Cold cooking vegetables in 1 L jars	When bubbles start to appear 120-140 °C	Residual heat
Peppers	-	approx. 35 minutes
Beetroot	approx. 35 minutes	approx. 30 minutes
Brussels sprouts	approx. 45 minutes	approx. 30 minutes
Beans, kohlrabi, red cabbage	approx. 60 minutes	approx. 30 minutes
Peas	approx. 70 minutes	approx. 30 minutes

Remove the jars from the oven

Remove the jars from inside the oven when cooking is finished.

Caution!

Do not place hot jars on a cold or wet surface. They could explode.

Acrylamide in food

Acrylamide is produced particularly in cereal and potato products prepared at high temperatures, e. g., chips, toast, rolls, bread and pastries (biscuits, spiced biscuits, Christmas biscuits).

Tips for preparing food with a low acrylamide content	
General	<ul style="list-style-type: none"><li>■ Keep the cooking time to a minimum.</li><li>■ Brown the food, making sure it is not overtoasted.</li><li>■ Large, thick pieces of food contain a low acrylamide content.</li></ul>
Baking	With top and bottom heat max. 200 °C With 3D Hot air max. 180 °C.
Pastries and biscuits	With top and bottom heat max. 190 °C. With 3D Hot air max. 170 °C. Eggs or egg yolks reduce the formation of acrylamide.
Oven potato chips	Spread them evenly on a single layer in the baking tray. Bake at least 400 g on each baking tray so that the chips do not dry out


Test dishes


These tables have been produced for test institutes to facilitate the inspection and testing of the various appliances.  
In accordance with EN 50304/EN 60350 (2009) and IEC 60350.

Baking



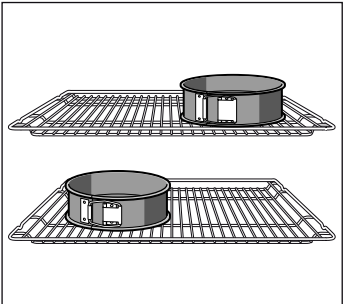












Baking on 2 levels:  
Always place the universal deep tray on the upper level and the flat oven tray on the lower level.  
Baking on 3 levels:  
Always place the universal deep tray on the upper level.  
Butter cookies:  
Trays put in the oven at the same time are not necessarily ready at the same time.

Covered apple pie on level 1:  
Place dark springform tins with some space between them.  
Covered apple pie on 2 levels:  
Place dark springform tins on top of one another.



Cakes in springform tins:  
Bake using top and bottom heating  on level 1. Use the universal tray instead of the wire shelf and place the springform tins on it.





Food	Accessories and tins	Level	Type of heating	Temperature in °C	Time in minutes
Butter cookies (preheating*)	Universal tray	3		150-160	20-30
	Universal tray	3		140-150	20-30
	Universal tray + oven tray	3+1		140-150	25-35
	2 oven trays + universal tray	5+3+1		140-150	25-35
Small cakes (pre-heating*)	Universal tray	3		150-170	20-30
	Universal tray + oven tray	3+1		140-160	25-35
	Universal tray	3		150-160	25-30
	2 oven trays + universal tray	5+3+1		140-150	25-30
Sponge cake (preheating*)	Springform tin on the wire shelf	2		170-180	30-40
Sponge cake	Springform tin on the wire shelf	2		165-175	35-45
Flat yeast cake	Universal tray	3		160-180	30-40
	Universal tray	3		150-170	30-45
	Universal tray + oven tray	3+1		160-170	30-40
Covered apple pie	Wire shelf + 2 springform tins Ø 20 cm.	1		190-210	70-90
	2 wire shelves + 2 springform tins Ø 20 cm.	3+1		170-190	60-80

\* Do not use rapid heating to preheat the oven

Wire shelves and baking trays may be obtained as optional accessories from specialist retail outlets.

## Grilling

If food is placed directly on the wire shelf, place the enamel tray at level 1. The tray will help keep the oven clean by catching any meat juices.

Food	Accessories	Level	Type of heating	Grill power	Time in minutes
Brown toast (preheat for 10 min.)	Shelf	5		3	1½-2
12 beefburgers* (no pre-heating)	Grill + enamel tray	4+1		3	25-30

\* Turn once after time 2/3.







BSH Hausgeräte GmbH  
Carl-Wery-Straße 34  
81739 München  
GERMANY



9000753099 05 950308