

*Use and care*  
**GUIDE**

---

Dishwasher

DWHD661EPR



You can find additional information and explanations online.  
Scan the QR code on the title page.



## Table of contents

|                                                           |           |                                                                    |           |
|-----------------------------------------------------------|-----------|--------------------------------------------------------------------|-----------|
| <b>1 IMPORTANT SAFETY INSTRUCTIONS .....</b>              | <b>4</b>  | 8.1 Initial use .....                                              | 22        |
| 1.1 Safety definitions .....                              | 4         | <b>9 Water softening system .....</b>                              | <b>22</b> |
| 1.2 General information .....                             | 4         | 9.1 Overview of water hardness settings .....                      | 22        |
| 1.3 Intended use .....                                    | 4         | 9.2 Setting the water softening system .....                       | 23        |
| 1.4 Restrictive use .....                                 | 5         | 9.3 Special Dishwasher Salt .....                                  | 23        |
| 1.5 Grounding instructions .....                          | 5         | <b>10 Rinse aid system .....</b>                                   | <b>24</b> |
| 1.6 Safe use .....                                        | 5         | 10.1 Rinse aid .....                                               | 24        |
| 1.7 Risk to children .....                                | 7         | 10.2 Setting the amount of rinse aid .....                         | 24        |
| 1.8 State of California Proposition 65 Warnings .....     | 8         | 10.3 Switching the rinse aid system off .....                      | 25        |
| <b>2 Preventing material damage .....</b>                 | <b>9</b>  | <b>11 Dishware .....</b>                                           | <b>25</b> |
| <b>3 Environmental protection and energy-saving .....</b> | <b>9</b>  | 11.1 Damage to glass and dishware .....                            | 25        |
| 3.1 Saving energy .....                                   | 9         | 11.2 Loading dishware .....                                        | 26        |
| 3.2 Zeolite drying ② .....                                | 9         | 11.3 Removing dishware .....                                       | 27        |
| 3.3 Sensors .....                                         | 10        | 11.4 Loading patterns .....                                        | 27        |
| <b>4 Familiarizing yourself with your appliance .....</b> | <b>11</b> | <b>12 Basic Operation .....</b>                                    | <b>29</b> |
| 4.1 Appliance .....                                       | 11        | 12.1 Protection against unintentional operation <sup>1</sup> ..... | 29        |
| 4.2 Controls .....                                        | 13        | 12.2 Opening the appliance door .....                              | 29        |
| <b>5 Dishwasher Cycles .....</b>                          | <b>14</b> | 12.3 Switching on the appliance ..                                 | 29        |
| 5.1 Energy Guide .....                                    | 16        | 12.4 Setting the time delay .....                                  | 29        |
| 5.2 Favorite FAVORITE <sup>2</sup> .....                  | 16        | 12.5 Starting the wash cycle .....                                 | 30        |
| <b>6 Options .....</b>                                    | <b>17</b> | 12.6 Interrupting the wash cycle ...                               | 30        |
| <b>7 Features .....</b>                                   | <b>18</b> | 12.7 Terminating the wash cycle ..                                 | 30        |
| 7.1 Upper rack .....                                      | 18        | 12.8 Switching off the appliance ...                               | 30        |
| 7.2 Cup shelf .....                                       | 19        | <b>13 Basic settings .....</b>                                     | <b>30</b> |
| 7.3 Lower rack .....                                      | 19        | 13.1 Changing the basic settings .....                             | 30        |
| 7.4 Flip tines .....                                      | 20        | 13.2 Overview of the basic settings .....                          | 31        |
| 7.5 Silverware Basket .....                               | 20        |                                                                    |           |
| 7.6 Silverware drawer .....                               | 20        |                                                                    |           |
| 7.7 Rack heights .....                                    | 21        |                                                                    |           |
| <b>8 Before using for the first time ..</b>               | <b>22</b> |                                                                    |           |

<sup>1</sup> Depending on the appliance specifications

|                                                                                                           |           |
|-----------------------------------------------------------------------------------------------------------|-----------|
| <b>14 Home Connect® .....</b>                                                                             | <b>35</b> |
| 14.1 Setting up the Home Connect® app .....                                                               | 35        |
| 14.2 Setting up Home Connect® .....                                                                       | 35        |
| 14.3 Remote Start  ..... | 35        |
| 14.4 Smart Start <sup>1</sup> .....                                                                       | 35        |
| <b>15 Cleaning and maintenance .....</b>                                                                  | <b>36</b> |
| 15.1 Filter system .....                                                                                  | 36        |
| 15.2 Cleaning spray arms .....                                                                            | 36        |
| <b>16 Troubleshooting .....</b>                                                                           | <b>36</b> |
| 16.1 Clean drain pump .....                                                                               | 41        |
| <b>17 Transportation, storage and disposal .....</b>                                                      | <b>42</b> |
| 17.1 Transporting the appliance ...                                                                       | 42        |
| 17.2 Vacation and Storage .....                                                                           | 42        |
| 17.3 Disposal of your old appliance .....                                                                 | 42        |
| <b>18 Customer Service .....</b>                                                                          | <b>43</b> |
| 18.1 Model number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.) .....                 | 43        |
| <b>19 Technical specifications .....</b>                                                                  | <b>43</b> |
| 19.1 Information regarding Free and Open Source Software ..                                               | 44        |
| <b>Recursos y ayuda en línea en español .....</b>                                                         | <b>45</b> |

---

<sup>1</sup> Depending on the appliance specifications



# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

---

Read all of the instructions carefully before using the appliance. In order to reduce the risk of fire, electric shocks and personal injuries when using the appliance, follow the basic safety precautions, including the following safety instructions.

### 1.1 Safety definitions

Here you can find explanations of the safety signal words used in this manual.



#### **WARNING**

This indicates that death or serious injuries may occur as a result of non-observance of this warning.



#### **CAUTION**

This indicates that minor or moderate injuries may occur as a result of non-observance of this warning.

#### **NOTICE**

This indicates that damage to the appliance or property may occur as a result of non-compliance with this advisory.

**Note:** This alerts you to important information.

### 1.2 General information

To reduce the risk of fire, electrical shock, or serious injury, observe the following.

- Read and understand all instructions before using the appliance.
- Keep the provided documents in a safe place for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.
- Product damage and/or injury could result from the use of unqualified service technicians or non-original parts. All repairs should be performed by an authorized service provider using only original equipment factory replacement parts.
- NSF/ANSI 184 Certified residential dishwashers are not intended for licensed food establishments.

### 1.3 Intended use

Only use this appliance:

- for cleaning household dishware.
- in closed rooms in the home and with similar applications, e.g.: in canteens in stores, offices and other work environments; in agricultural businesses;



# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

---

use by customers in hotels, motels and other typical home environments; in bed and breakfasts.

- Up to an altitude of 8200 ft (2500 m) above sea level.

### 1.4 Restrictive use

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### 1.5 Grounding instructions

This appliance must be grounded to a metal, permanent wiring system or an equipment grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the dishwasher. See the Installation Instructions included with this dishwasher for more information on electrical requirements.

#### **WARNING**

Improper connection of the equipment grounding conductor can result in risk of electric shock.

- ▶ This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor. Check with a qualified electrician or authorized service representative if you are in doubt whether the appliance is properly grounded.

### 1.6 Safe use

Follow these safety instructions when using the appliance.

#### **WARNING**

To reduce the risk of serious injury, observe the following.

- ▶ Read all instructions before using this dishwasher.
- ▶ Use this dishwasher only for its intended function, which is the washing of household dishware and kitchenware rated as dishwasher safe.
- ▶ Only use detergents or rinsing agents recommended for use in a dishwasher, and keep them out of the reach of children.
- ▶ Do not abuse, sit or stand on the door or dish racks of the dishwasher.



# IMPORTANT SAFETY INSTRUCTIONS

## READ AND SAVE THESE INSTRUCTIONS

---

### WARNING

Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. Hydrogen gas is explosive.

- ▶ Before using a dishwasher that is connected to a hot water system that has been unused for two weeks or longer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is explosive, do not smoke or use an open flame during this time.

### WARNING

To avoid risk of electric shock, observe the following.

- ▶ Only use the appliance in enclosed residential space according to the installation manual.
- ▶ Never expose the appliance to intense heat or humidity.
- ▶ Do not use any steam cleaners or high-pressure cleaners to clean this appliance. If not followed, excess moisture can accumulate.

### WARNING

The outlet opening of the Zeolite container becomes hot and can cause burns.

- ▶ Never touch the outlet opening of the Zeolite container.

### WARNING

To avoid risk of injury, when loading items to be washed, observe the following.

- ▶ Locate sharp items so they are not likely to damage the door seal.
- ▶ Load knives and other sharp utensils with their handles up to reduce the risk of cut-type injuries.
- ▶ Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.
- ▶ Do not operate your dishwasher unless all enclosure panels are in place.
- ▶ Do not tamper with or override controls and interlocks.

### WARNING

Highly caustic alkaline or highly acidic cleaning agents in conjunction with aluminum parts in the interior of the appliance may cause explosions.

- ▶ Never use highly caustic alkaline or highly acidic cleaning agents, in particular commercial or industrial products, in conjunction with aluminum items (e.g. grease filters of vent hoods or aluminum pans).

### WARNING

For safe care and operation of your appliance, observe the following.

- ▶ Follow the safety instructions and directions for use on the detergent and rinse aid product labels.



# IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

---

- ▶ Do not use harsh chemicals such as bleach-based products to clean your dishwasher. Some bleach-based products can damage your dishwasher and may present health hazards!
- ▶ Always use caution when opening the door during or following a wash cycle as hot water or steam may escape. Do not fully open the door until water noises have stopped and steam has subsided.
- ▶ To avoid floor damage and possible mold growth, do not allow wet areas to remain around or under the dishwasher.

## **NOTICE**

Water and power shut off

- ▶ It is highly recommended for the end user to become familiar with the procedure to shut off the incoming water supply and the procedure to shut off the incoming power supply. See the installation instructions or contact your installer for more information.

## **1.7 Risk to children**

Follow these safety instructions if there are children in your home.

### **WARNING**

To reduce risk of injury to children, observe the following.

- ▶ Do not allow children to play in or on the dishwasher.
- ▶ When children become old enough to operate the appliance, it is the responsibility of the parents/legal guardians to ensure the children are instructed in safe practices by qualified persons.
- ▶ Remove the dishwasher door to the washing compartment when removing an old dishwasher for service or discarding.



## IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

---

### 1.8 State of California Proposition 65 Warnings

This product may contain a chemical known to the State of California, which can cause cancer or reproductive harm. Therefore, the packaging of your product may bear the following label as required by California:

#### STATE OF CALIFORNIA PROPOSITION 65 WARNING:



#### WARNING

Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



## 2 Preventing material damage

### NOTICE

Harsh chemicals such as chlorine or bleach-based cleaning agents can damage your dishwasher.

- ▶ Do not use harsh chemicals such as chlorine or bleach-based cleaning agents to clean your dishwasher.

Certain cleaning products may damage the appliance.

- ▶ Do not use a steam cleaner.
- ▶ So as not to scratch the finish on the appliance, do not use sponges with a rough surface or abrasive cleaning agents.

Avoid stainless steel polish

- ▶ Do not use stainless steel polish on an anti-fingerprint finish or a black stainless finish.

Escaping water vapor can damage cabinetry.

- ▶ When the program ends, let the appliance cool down a bit before opening the door.

Protect your appliance from the elements.

- ▶ Protect against freezing to avoid possible damage to the fill valve. Damage caused by freezing is not covered by the warranty.

Special salt for dishwashers can damage the tub due to corrosion.

- ▶ To make sure that any special salt that escapes is washed out of the tub, add the special salt to the dispenser for special salt immediately before the program starts.

Detergent may damage the water softening system.

- ▶ Only fill the dispenser of the water softening system with special dishwasher salt (i.e. special salt).  
→ *"Special Dishwasher Salt", Page 23*

Avoid dishwasher damage

- ▶ Do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware.

## 3 Environmental protection and energy-saving

### 3.1 Saving energy

If you follow these instructions, your appliance will use less power and water.

Use the Normal program.

- ✓ The Normal program uses less energy and is easier on the environment.  
→ *"Dishwasher Cycles", Page 14*

Change the sensor setting to the default.

- ✓ Consumption is reduced.  
→ *"Sensors", Page 10*

Zeolite drying automatically helps to save energy.

→ *"Zeolite drying @", Page 9*

### 3.2 Zeolite drying @

The appliance features a Zeolite container. Zeolite drying lets you save energy.

Zeolite is a mineral that can store moisture and energy and then release them again.

During dishwashing energy is used to heat up the washing water and dry the mineral.  
During the drying phase, moisture from the interior of the dishwasher is stored in the mineral and heat is released. The heat is blown out into the interior of the dishwasher with dry air. This speeds up and improves drying. Therefore, Zeolite drying is very efficient.

**Notes**

- To avoid impairing Zeolite drying performance, do not position dish-ware parts directly in front of the intake opening or the outlet opening of the Zeolite container.  
Do not position heat-sensitive dish-ware parts directly in front of the outlet opening of the Zeolite container.  
→ *"Appliance", Page 11*
- To avoid thermal damage to the appliance, remove any parts that are not permanently installed from the interior of the appliance.

**3.3 Sensors**


The sensors adjust the cycle sequence and strength in the Auto cycles depending on the level and type of soiling.

The sensor has different sensitivity levels that can be changed in the basic settings.  
→ *"Changing the basic settings", Page 30*

| Sensor setting | Description                                                                                                                                                                                                                                                      |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SE:00          | Optimal setting for mixed loads and heavily soiled dish-ware. Saves both energy and water.                                                                                                                                                                       |
| SE:01          | Adjusts the cycle strength for effective removal of food remnants even with low soiling levels. Energy and water consumption are adjusted accordingly.                                                                                                           |
| SE:02          | Adjusts the cycle strength for difficult conditions of use, e.g. stubborn dried-on food remnants. Recommended setting when using organic or ecological detergents containing low levels of active agents. Energy and water consumption are adjusted accordingly. |

## 4 Familiarizing yourself with your appliance

### 4.1 Appliance

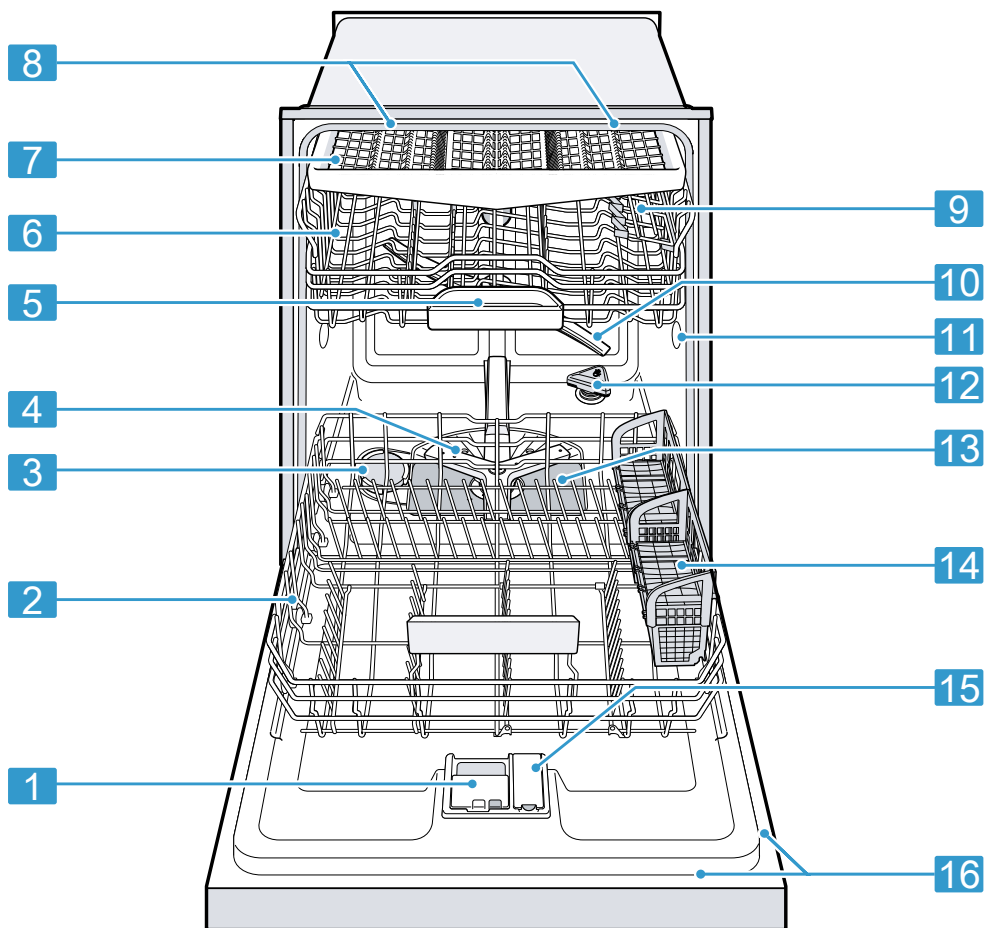

|   |                            |                                                                                               |
|---|----------------------------|-----------------------------------------------------------------------------------------------|
| 1 | Detergent dispenser        | Add detergent to the detergent dispenser.                                                     |
| 2 | Lower rack                 | Lower rack → <i>Page 19</i>                                                                   |
| 3 | Dispenser for special salt | Add special salt to the special salt dispenser.<br>→ <i>"Water softening system", Page 22</i> |


|    |                                         |                                                                                                                                                                              |
|----|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4  | Lower spray arm                         | The lower spray arm washes the dishware in the lower rack.<br>If the dishware has not been washed properly, clean the spray arms.<br>→ <i>"Cleaning spray arms", Page 36</i> |
| 5  | Detergent tab collecting tray           | During the wash cycle, detergent tabs automatically drop out of the detergent dispenser into the tab collecting tray, where they can dissolve fully.                         |
| 6  | Upper rack                              | Upper rack → <i>Page 18</i>                                                                                                                                                  |
| 7  | Silverware drawer                       | Silverware drawer → <i>Page 20</i>                                                                                                                                           |
| 8  | emotionLight                            | Interior lighting of the appliance.<br>→ <i>"Overview of the basic settings", Page 31</i>                                                                                    |
| 9  | Cup shelf <sup>1</sup>                  | Cup shelf → <i>Page 19</i>                                                                                                                                                   |
| 10 | Upper spray arm                         | The upper spray arm washes the dishware in the upper rack.<br>If the dishware has not been washed properly, clean the spray arms.<br>→ <i>"Cleaning spray arms", Page 36</i> |
| 11 | Intake opening of the Zeolite container | The intake opening is required for Zeolite drying.<br>→ <i>"Zeolite drying @", Page 9</i>                                                                                    |
| 12 | Outlet opening of the Zeolite container | The outlet opening is required for Zeolite drying.<br>→ <i>"Zeolite drying @", Page 9</i>                                                                                    |
| 13 | Filter system                           | Filter system<br>→ <i>"Filter system", Page 36</i>                                                                                                                           |
| 14 | Silverware basket                       | Silverware basket<br>→ <i>"Silverware Basket", Page 20</i>                                                                                                                   |
| 15 | Dispenser for rinse aid                 | Rinse aid is added to the dispenser for rinse aid.<br>→ <i>"Rinse aid system", Page 24</i>                                                                                   |
| 16 | Rating plate                            | Rating plate with E number and FD number<br>→ <i>Page 43</i> .<br>You will need this data to contact Customer service → <i>Page 43</i> .                                     |

<sup>1</sup> Depending on the appliance specifications

## 4.2 Controls

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

With some buttons you can perform different functions.

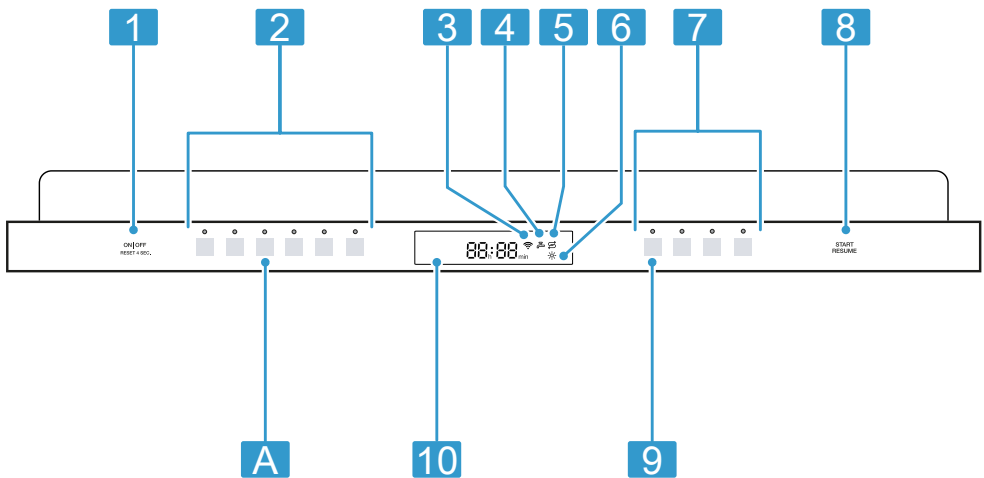

|          |                                            |                                                                                                                                                                                                          |
|----------|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> | Button A                                   | If you press <b>A</b> for approx. 3 seconds, you can open the basic settings.<br>→ <i>"Changing the basic settings", Page 30</i>                                                                         |
| <b>1</b> | ON/OFF button and reset button Reset 4sec. | Switching on the appliance<br>→ <i>"Switching on the appliance", Page 29</i><br>Switching off the appliance<br>→ <i>"Switching off the appliance", Page 30</i><br>Terminating the cycle → <i>Page 30</i> |
| <b>2</b> | Cycle buttons                              | Cycles<br>→ <i>"Dishwasher Cycles", Page 14</i>                                                                                                                                                          |
| <b>3</b> | Display wireless network                   | Home Connect → <i>Page 35</i>                                                                                                                                                                            |
| <b>4</b> | Water supply display                       | Display for water supply                                                                                                                                                                                 |
| <b>5</b> | Special salt refill indicator              | Water softening system<br>→ <i>"Adding dishwasher salt", Page 23</i>                                                                                                                                     |
| <b>6</b> | Rinse aid refill indicator                 | Rinse aid system<br>→ <i>"Adding rinse aid", Page 24</i>                                                                                                                                                 |

|    |                                                                                                |                                                                                                                                                                                                             |
|----|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7  | Options and cycle buttons <sup>1</sup>                                                         | Options → <i>Page 17</i><br>Cycles → <i>Page 14</i>                                                                                                                                                         |
| 8  | Start button <small>START<br/>RESUME</small>                                                   | Starting the wash cycle<br>→ <i>"Starting the wash cycle", Page 30</i>                                                                                                                                      |
| 9  | Remote Start  | → <i>"Remote Start ", Page 35</i>                                                                                          |
| 10 | Display                                                                                        | The display shows information about the remaining run time or basic settings. You can change the basic settings via the display and the setting buttons.<br>→ <i>"Changing the basic settings", Page 30</i> |

## 5 Dishwasher Cycles

Below is an overview of the different cycles available on your dishwasher. The running time may vary depending on the cycle selected. The running time depends on the water temperature, the quantity of dishware, the level of dirt and the option selected. The running time will change if the rinse aid system is switched off or rinse aid needs to be added. The consumption values relate to normal conditions and a water hardness of 16 - 20 °E. Different influencing factors such as water temperature or pipe pressure may result in deviations.

| Cycle       | Purpose                                                                                                                                                                                                                                                                      | Cycle sequence                                                                                                                                                                      | Usage<br>1) Hour/min.<br>2) Electrical/kWH<br>3) Water/gal                                                         |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Pots & Pans | Dishware: <ul style="list-style-type: none"><li>▪ Washing pots and pans, non-fragile dishware and silverware</li></ul> Level of soiling: <ul style="list-style-type: none"><li>▪ Removing stubborn burned or dried on food remnants containing starch and protein.</li></ul> | Intensive <ul style="list-style-type: none"><li>▪ Pre-Rinse</li><li>▪ Cleaning 151 °F – 160 °F</li><li>▪ Intermediate rinse</li><li>▪ Final rinse 151 °F</li><li>▪ Drying</li></ul> | <ul style="list-style-type: none"><li>▪ 1) 2:05 - 2:20</li><li>▪ 2) 1.110 - 1.140</li><li>▪ 3) 4.9 - 6.4</li></ul> |




<sup>1</sup> Depending on the appliance specifications

| <b>Cycle</b> | <b>Purpose</b>                                                                                                                                                                                                                                                                                                     | <b>Cycle sequence</b>                                                                                                                                                                                          | <b>Usage</b><br><b>1) Hour/min.</b><br><b>2) Electrical/kWH</b><br><b>3) Water/gal</b>                                                                                                   |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto         | Dishware: <ul style="list-style-type: none"> <li>■ Cleaning mixed dishware and silverware.</li> </ul> Level of soiling: <ul style="list-style-type: none"> <li>■ Removing common household food remnants lightly dried-on.</li> </ul>                                                                              | Sensor controlled: <ul style="list-style-type: none"> <li>■ Optimized by sensors depending on the soiling of the rinse water.</li> <li>■ More intensive washing in the back half of the lower rack.</li> </ul> | <ul style="list-style-type: none"> <li>■ 1) 1:45 - 2:05</li> <li>■ 2) 0.820 - 0.860</li> <li>■ 3) 3.4 - 5.4</li> </ul> <b>Note:</b> The displayed cycle time indicates an average value. |
| Normal       | Dishware: <ul style="list-style-type: none"> <li>■ Cleaning mixed dishware and silverware.</li> </ul> Level of soiling: <ul style="list-style-type: none"> <li>■ Removing common household food remnants lightly dried-on.</li> </ul>                                                                              | Most economical cycle: <ul style="list-style-type: none"> <li>■ Pre-Rinse</li> <li>■ Cleaning 127 °F – 136 °F</li> <li>■ Intermediate rinse</li> <li>■ Final rinse 113 °F</li> <li>■ Drying</li> </ul>         | <ul style="list-style-type: none"> <li>■ 1) 2:10 - 2:15</li> <li>■ 2) 0.780 - 0.850</li> <li>■ 3) 2.3 - 5.5</li> </ul>                                                                   |
| Hand Wash    | Dishware: <ul style="list-style-type: none"> <li>■ Cleaning delicate dishware, silverware, temperature-sensitive plastics, glasses and stemware in the stemware holder.</li> </ul> Level of soiling: <ul style="list-style-type: none"> <li>■ Removing common household food remnants lightly dried-on.</li> </ul> | Particularly gentle: <ul style="list-style-type: none"> <li>■ Pre-Rinse</li> <li>■ Cleaning 113 °F - 122 °F</li> <li>■ Intermediate rinse</li> <li>■ Final rinse 122 °F</li> <li>■ Drying</li> </ul>           | <ul style="list-style-type: none"> <li>■ 1) 1:20 - 1:30</li> <li>■ 2) 0.550 - 0.560</li> <li>■ 3) 2.5 - 3.9</li> </ul>                                                                   |
| Quick        | Dishware: <ul style="list-style-type: none"> <li>■ Cleaning delicate dishware, silverware, temperature-sensitive plastics and glasses.</li> </ul>                                                                                                                                                                  | Time-optimized: <ul style="list-style-type: none"> <li>■ Cleaning 113 °F</li> <li>■ Intermediate rinse</li> <li>■ Final rinse 126 °F</li> </ul>                                                                | <ul style="list-style-type: none"> <li>■ 1) 0:35</li> <li>■ 2) 0.560</li> <li>■ 3) 2.8</li> </ul>                                                                                        |

| Cycle                                                                                                              | Purpose | Cycle sequence | Usage<br>1) Hour/min.<br>2) Electrical/kWH<br>3) Water/gal                                                         |
|--------------------------------------------------------------------------------------------------------------------|---------|----------------|--------------------------------------------------------------------------------------------------------------------|
| Level of soiling: <ul style="list-style-type: none"><li>■ Removing lightly adhering fresh food remnants.</li></ul> |         |                |                                                                                                                    |
| Favorite                                                                                                           | -       | -              | <ul style="list-style-type: none"><li>■ 1) 1:45 - 2:05</li><li>■ 2) 0.820 - 0.860</li><li>■ 3) 3.4 - 5.4</li></ul> |

5.1 Energy Guide

The Energy Guide label was based on the Normal soil sensing cycle. The unit was tested without any rinse aid (liquid) in the rinse aid dispenser. A single dose of detergent was inserted into the detergent dispenser, with no detergent being used in the prewash. The unit was not subjected to truncated testing per the definitions in the test procedure. We recommend that dish loads such as the one in the energy certification test have the rack position set in the highest position. Recommended for daily, regular or typical use to completely wash a full load of normally soiled dishes.

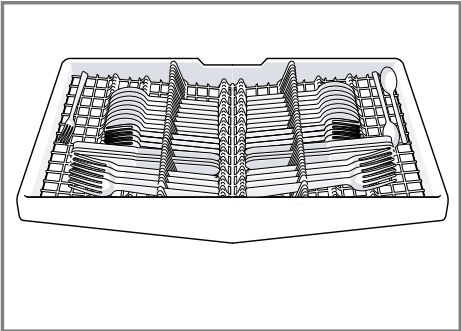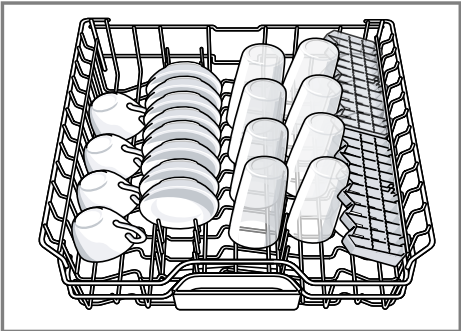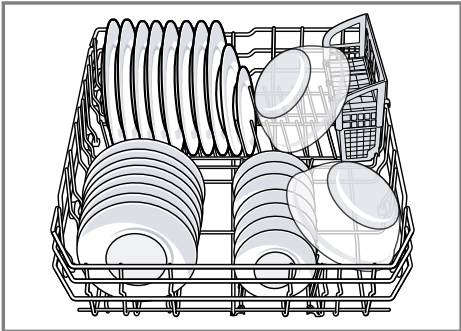

5.2 Favorite FAVORITE<sup>®</sup>

With this function, you can save a combination of a Cycle and an Option. You can save the selected Cycle and Option combination via the Home Connect app or on the appliance. The Auto cycle is pre-programmed to this button and is good for all types

of dishware. This cycle is optimized by sensors which detect the soil level of the water.

**Tip:** You can use the Home Connect app to access additional Cycles and Options and save them.<sup>1</sup>

**Save Favorite FAVORITE<sup>®</sup> on the appliance**

- 1. Open the appliance door.
  - 2. Press ON/OFF.
  - 3. Press a suitable cycle button.
  - 4. Press the button for the relevant options.
- ✓ The program combination is saved.

**Tip:** To reset the cycle, either use the Home Connect app or reset your appliance back to the factory settings.  
→ "Home Connect<sup>®</sup> ", Page 35

**6 Options**

Here is an overview of the different options available on your dishwasher.

| Option               | Use                                                                                                                                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ★<br>DRY<br>Star Dry | Patented Zeolite technology thoroughly dries dishes and dishwasher safe plastics. Natural minerals transform moisture into heat up to 176F/80C to get dishes, even plastics, 60% drier. Extends drying time. |

| Option                              | Use                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>FRONT</b><br>front               | <ul style="list-style-type: none"><li>▪ The lower spray arm provides intensive cleaning for dishware in the front of the lower rack.</li><li>▪ Place dirty, hard to clean dishware in the front of the lower rack, e.g. casserole dishes, pots and pans.</li><li>▪ This intensive cleaning may increase water and energy consumption.</li><li>▪ The run time is extended.</li></ul> |
| <b>BACK</b><br>back                 | <ul style="list-style-type: none"><li>▪ The lower spray arm provides intensive cleaning for dishware in the back of the lower rack.</li><li>▪ Place dirty, hard to clean dishware in the back of the lower rack, e.g. casserole dishes, pots and pans.</li><li>▪ This intensive cleaning may increase water and energy consumption.</li><li>▪ The run time is extended.</li></ul>   |
| <b>CUSTOM<sup>®</sup></b><br>custom | <ul style="list-style-type: none"><li>▪ Using the Home Connect<sup>®</sup> app, customize the 4 zones and the cleaning intensity level.</li><li>▪ Maximum 3 light wash zones recommended.</li></ul>                                                                                                                                                                                 |

<sup>1</sup> Depending on the appliance specifications

| Option | Use                                                                                                                                                                                                                                                                                                         |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        | The settings made for this function remain saved until you redefine the zones in the bottom basket via the Home Connect® app. If you do not specify any zone via the Home Connect® app, all 4 zones in the lower rack will then be activated with the lower spray arm for efficient and intensive cleaning. |

- SANITIZE**  
Sanitize
- Increases the temperature and cycle length to achieve sanitation.
  - This option is ideal for cleaning items such as chopping boards and baby bottles.
  - Using this option may also improve drying. There is a slight increase in energy consumption.
  - When the cycle has ended, the display shows "SanI".

### **WARNING**

Concerning dishware sanitation, be aware of the following.

- Only sanitizing cycles have been designed to meet the requirements for soil removal and sanitation efficacy. There is no intention, either directly or indirectly, to imply that all cycles on a certified machine have passed the sanitization performance test.


## 7 Features

You can find an overview of the possible features of your appliance and how to use them here.

These features depend on your appliance model.

### 7.1 Upper rack

Arrange cups, glasses, and small tableware items in the top rack.

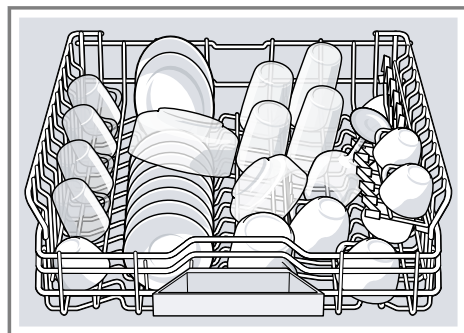


You can adjust the height of the upper rack to make room for larger items.

### Adjusting upper rack with the side levers


To wash large items in the racks, adjust the shelf height of the upper rack.

1. Pull out the upper rack.
2. To prevent the rack from suddenly dropping down, hold the side of the rack by the top edge.

3. Press in the right and left hand levers on the outside of the rack.

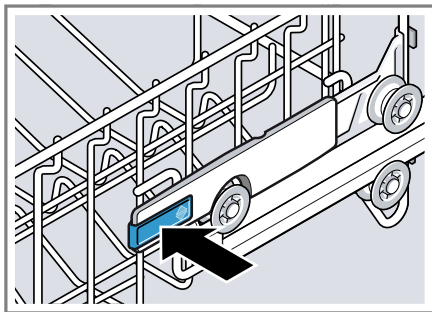

4. Raise or lower the rack evenly to the right level.

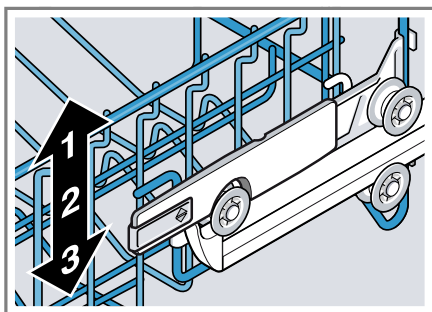


Check that the rack is level on both sides.

5. Release the levers.
- ✓ The rack clicks into position.
6. Slide the rack in.

## 7.2 Cup shelf

Use the cup shelf and the space underneath for small cups and glasses


or for large items of silverware, e.g. cooking spoons or serving cutlery.

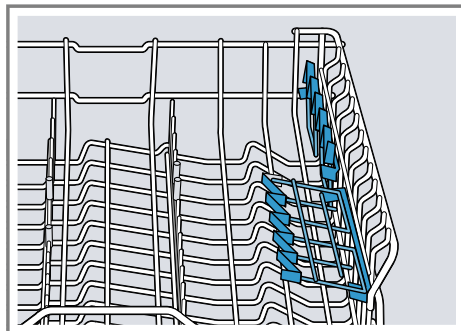

If you do not need the cup shelf, you can fold it up.

## 7.3 Lower rack

Arrange pans and plates in the lower rack.

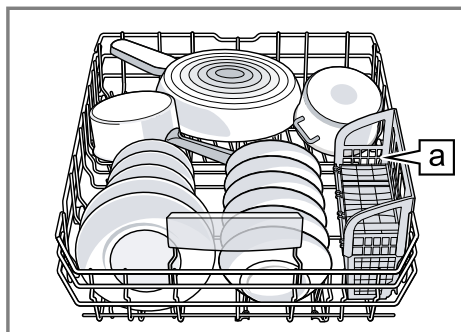


Silverware basket **a**<sup>1</sup>

<sup>1</sup> Depending on the appliance specifications

## 7.4 Flip tines

Use the flip tines to position dishware securely, e.g. plates.

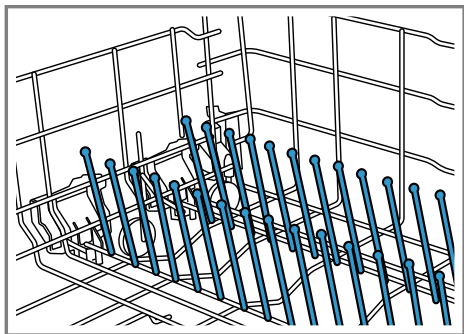


You can fold the tines down to arrange pans, bowls and glasses better.<sup>1</sup>

### Folding down the tines<sup>1</sup>

If you do not need the tines, fold them down.

1. Push the lever forward ① and fold down the tines ②.

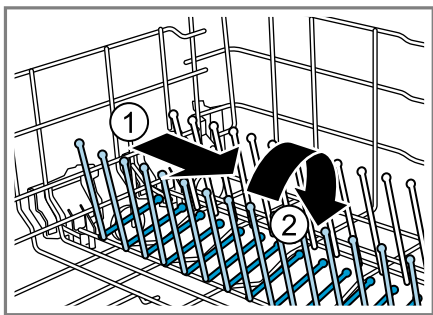

2. To use the tines again, fold them back up.
- ✓ The tines click into position.

## 7.5 Silverware Basket


Arrange the silverware in the silverware basket, ensuring that the items

are not nestled together and with the sharp points down.

### ⚠ WARNING


The sharp points and edges of knives and other sharp utensils can cause serious injury.

- Load knives and other sharp utensils with edges down. Do not allow children to handle or play near knives and sharp utensils

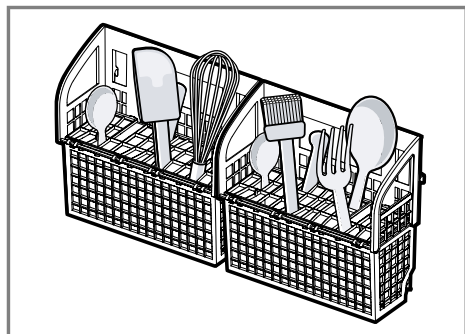

## 7.6 Silverware drawer

Arrange silverware in the silverware drawer.

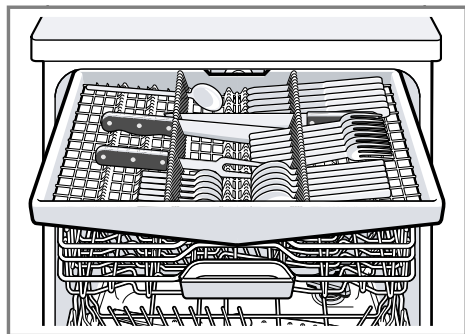

Arrange silverware with the points and sharp edges down.


You can reorganize the silverware drawer to make more space for longer or wider utensils.

<sup>1</sup> Depending on the appliance specifications


## Reorganizing the silverware drawer

Fold down the side shelves and tines to make more space for longer or wider silverware items.


1. To fold down a side shelf, push the lever forward ① and fold down the side shelf ②.

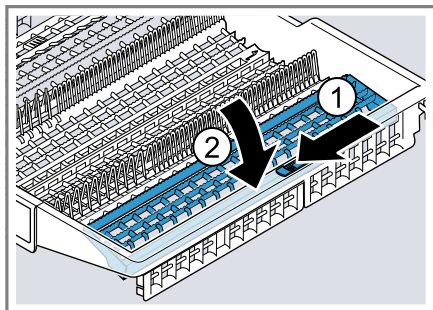

2. To fold down the tines, push the lever forward and fold down the tines ①.

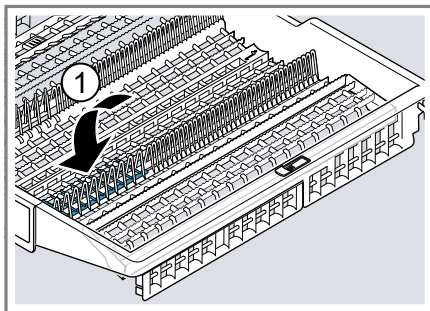

**Tip:** If you want to return the cutlery tray to its original position, fold the side shelf upward until it clicks into position.

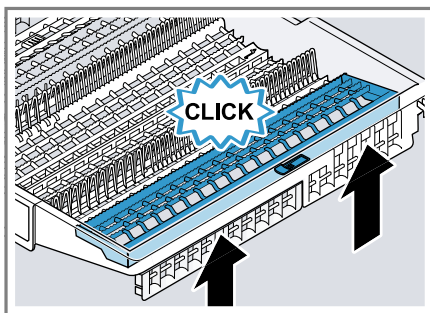

## 7.7 Rack heights

Set the racks at the right height.

### Appliance height 34" with silverware basket

| Setting  | Upper rack      | Lower rack    |
|----------|-----------------|---------------|
| 1 max. ø | 24 cm / 9.5"    | 33 cm / 13"   |
| 2 max. ø | 26.5 cm / 10.5" | 30.5 cm / 12" |
| 3 max. ø | 29 cm / 11.5"   | 28 cm / 11"   |

### Appliance height 34" with silverware drawer

| Setting  | Upper rack   | Lower rack    |
|----------|--------------|---------------|
| 1 max. ø | 18 cm / 7"   | 33 cm / 13"   |
| 2 max. ø | 20.5 cm / 8" | 30.5 cm / 12" |
| 3 max. ø | 23 cm / 9"   | 28 cm / 11"   |

**en-us** Before using for the first time

**Tip:** If you remove the 3rd rack, you can place large items of dishware in the lower rack.

---


## 8 Before using for the first time

### 8.1 Initial use

**Note:** Connect your appliance to the Home Connect® app. You can conveniently adjust the settings and download additional cycles and options with the app.

→ "Home Connect® ", Page 35

1. Add special dishwasher salt to the water softening system.  
→ "Special Dishwasher Salt", Page 23
2. Add rinse aid. → Page 24  
For optimum drying results, always use rinse aid.
- 3.

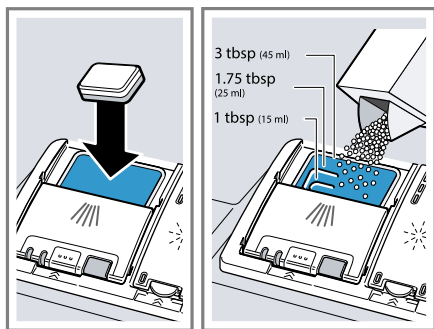

Only use detergents intended for dishwashers.

### 9.1 Overview of water hardness settings

You can find an overview of the water hardness values that can be selected here.

You can find out how hard your water is from your local water company or by using a water hardness tester.

4. Turn on the appliance. → Page 29
5. Set the water softening system.  
→ Page 23
6. Set the amount of rinse aid.  
→ Page 24
7. Start the Cycle with the highest cleaning temperature → Page 14 without dishware.  
Operate the appliance without dishware before using it for the first time in order to remove any marks from water or other residues.

**Tip:** You can change the Basic settings → Page 31 at any time.

---

## 9 Water softening system

Hard water leaves limescale on dishware as well as the washing tank, and parts of the appliance may become blocked.

To ensure good dishwashing results, you can treat the water with special salt and the water softening system. To avoid damage to the appliance, water with a hardness above 9 °E must be softened.

| Water hardness<br>°E | Hardness range | mmol/l    | Setting value |
|----------------------|----------------|-----------|---------------|
| 0 - 8                | Soft           | 0 - 1.1   | H:00          |
| 9 - 10               | Soft           | 1.2 - 1.4 | H:01          |
| 11 - 12              | Medium         | 1.5 - 1.8 | H:02          |
| 13 - 15              | Medium         | 1.9 - 2.1 | H:03          |
| 16 - 20              | Medium         | 2.2 - 2.9 | H:04          |
| 21 - 26              | Hard           | 3.0 - 3.7 | H:05          |
| 27 - 38              | Hard           | 3.8 - 5.4 | H:06          |
| 39 - 62              | Hard           | 5.5 - 8.9 | H:07          |

**Note:** Set the water hardness determined on your appliance.

→ *"Setting the water softening system", Page 23*

With a water hardness of 0 - 8 °E you do not need special salt for dishwashers and can switch off the water softening system.

## 9.2 Setting the water softening system

Set the water hardness on your appliance.

1. Determine the water hardness and the appropriate setting value.  
→ *"Overview of water hardness settings", Page 22*
  2. Press ON/OFF.
  3. To open the basic settings, press A button and hold for 3 seconds.  
→ *"Controls", Page 13*
  4. Press START RESUME repeatedly until the right water hardness has been set.  
The value H:00 is set at the factory.
  5. To store the settings, press A button and hold for 3 seconds.
- ✓ The water softening system is set.

## 9.3 Special Dishwasher Salt

You can use special dishwasher salt to soften the water.

### Adding dishwasher salt

If the salt refill indicator lights up, add special dishwasher salt to the dispenser for salt just before the cycle starts. The amount of special dishwasher salt required depends on the water hardness. The higher the water hardness, the greater the amount of salt required.

### NOTICE

Detergent may damage the water softening system.


- Only fill the dispenser of the water softening system with special dishwasher salt.

Special salt for dishwashers can damage the tub due to corrosion.

- To make sure that any special salt that escapes is washed out of the tub, add the special salt to the dispenser for special salt immediately before the program starts.

1. Unscrew the lid of the salt dispenser and remove.
2. Before the first use: Fill the dispenser full with water.
3. **Note:** Only use special salt specified for dishwashers.  
Do not use salt tablets.  
Do not use table salt.

Add the special dishwasher salt to the dispenser.

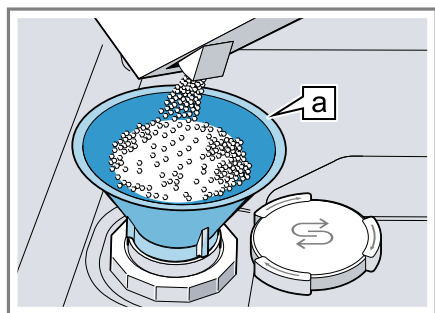

Funnel [a]<sup>1</sup>

Fill the dispenser completely with the salt. The water in the dispenser is displaced and forced out.

4. Place the lid back on the dispenser and turn to close.

## 10 Rinse aid system

### 10.1 Rinse aid


For optimum drying results, use rinse aid.

Only use rinse aid intended for household dishwashers.


#### Adding rinse aid

If the rinse aid refill indicator lights up, fill the dispenser with rinse aid. Only use rinse aid intended for household dishwashers.

1. Press the catch on the lid of the dispenser for rinse aid ① and lift ②.

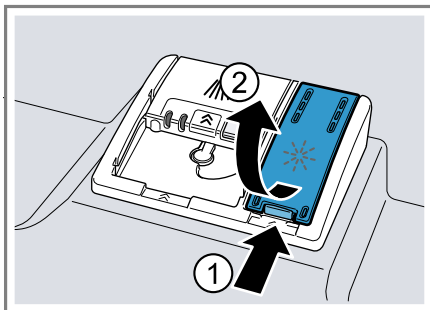

2. Add rinse aid up to the max mark.

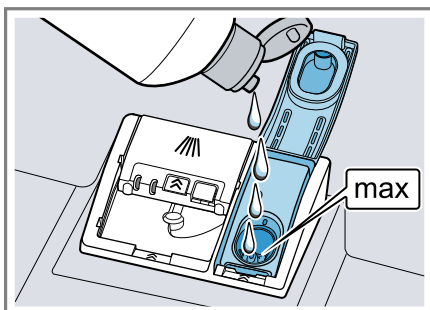

3. If rinse aid spills out, remove it from the tub.  
Spilled rinse aid can cause excessive frothing during the wash cycle.
4. Close the lid of the dispenser for rinse aid.  
✓ The lid clicks into position.

### 10.2 Setting the amount of rinse aid

If there are streaks or water spots on dishware, change the amount of rinse aid.

1. Press ON/OFF.
2. To open the basic settings, press A button and hold for 3 seconds.  
→ "Controls", Page 13

<sup>1</sup> Depending on the appliance specifications

3. Press **A** repeatedly until the display shows the value r:05 set at the factory.
  4. Press **START RESUME** repeatedly until the right amount of rinse aid has been set.
    - A low setting adds less rinse aid during the wash cycle and reduces streaking on dishware.
    - A higher setting adds more rinse aid during the wash cycle, reduces water spots and improves the drying result.
  5. To store the settings, press **A** button and hold for 3 seconds.
- ✓ The amount of rinse aid to be dispensed is set.

### 10.3 Switching the rinse aid system off

If you choose not to use rinse aid, you can turn the rinse aid system off.

**Tip:** Rinse aid within a combination detergent has limited effectiveness. You will generally get better results using a separate rinse aid.

1. Press ON/OFF.
  2. To open the basic settings, press **A** button and hold for 3 seconds.  
→ *"Controls", Page 13*
  3. Press **A** repeatedly until the display shows the value r:05 set at the factory.
  4. Press **START RESUME** repeatedly until the display shows r:00.
  5. To store the settings, press **A** button and hold for 3 seconds.
- ✓ The rinse aid system is switched off and the rinse aid refill indicator is deactivated.

**Note:** When switching from combined detergents with a rinse aid component to separate detergents, please make sure to set the rinse aid

system to the right amount of rinse aid again.

→ *"Setting the amount of rinse aid", Page 24*

---

## 11 Dishware

Only wash dishware that is suitable for dishwashers.

**Note:** Decorated glassware and parts made of aluminum or silver may fade or discolor with dishwashing. Delicate types of glass may turn cloudy after a few wash cycles.

### 11.1 Damage to glass and dishware

Only put glasses and china in the dishwasher if they are labeled dishwasher-safe. Avoid damage to glass and dishware.

| Cause                                                                                                                                                                                                                                                                                                                                                                                                        | Recommendation                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| The following types of dishes are not dishwasher-safe: <ul style="list-style-type: none"><li>▪ Wooden utensils and dishes</li><li>▪ Decorative glassware, antique dishes and artistic hand-made pottery</li><li>▪ Plastic parts that are not heat-resistant</li><li>▪ Dishes made from copper or tin</li><li>▪ Dishes soiled with ash, wax, grease or paint</li><li>▪ Very small items of dishware</li></ul> | Only put dishes in the dishwasher if they are labeled dishwasher-safe.                                                               |
| The chemical composition of the detergent causes damage.                                                                                                                                                                                                                                                                                                                                                     | Use a detergent labeled as gentle to dishes.                                                                                         |
| The water temperature of the cycle is too high.                                                                                                                                                                                                                                                                                                                                                              | Select a cycle with lower temperatures. After the cycle has ended, take glassware and silverware out of the appliance without delay. |
| The water temperature of the cycle is too high and the water is too soft.                                                                                                                                                                                                                                                                                                                                    | Select a cycle with lower temperatures. Use detergent with glass protection.                                                         |

| Cause | Recommendation                                        |
|-------|-------------------------------------------------------|
|       | Adjust the water hardness setting on your dishwasher. |

## 11.2 Loading dishware

Arrange dishware correctly to optimize the dishwashing result and prevent damage to both dishware and the appliance. The noise level may also vary depending on the items placed in your dishwasher.

### WARNING

The sharp points and edges of knives and other sharp utensils can cause serious injury.

- ▶ Load knives and other sharp utensils with edges down. Do not allow children to handle or play near knives and sharp utensils

### WARNING

Highly caustic alkaline or highly acidic cleaning agents in conjunction with aluminum parts in the interior of the appliance may cause explosions.

- ▶ Never use highly caustic alkaline or highly acidic cleaning agents, in particular commercial or industrial products, in conjunction with aluminum items (e.g. grease filters of vent hoods or aluminum pans).

### NOTICE


Avoid dishwasher damage

- ▶ Do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware.

### Tips


- Using the appliance allows you to save energy and water compared to doing dishes by hand.

- See our website for examples of how to load your appliance efficiently.
- To save energy and water, load the machine with the number of place settings specified (standard load with dishes and silverware).
- For better washing and drying results, position items with curves or recesses at an angle so water can run off.

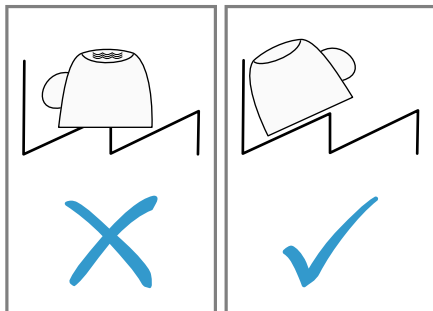

1. Remove large remnants of food from dishware.  
To save resources, do not pre-rinse dishware under running water.
2. Observe the following when arranging dishware:
  - Put heavily soiled dishware in the lower rack, e.g. pans. The more powerful spray jet ensures that the dishwashing result will be better.
  - To avoid damage to dishware, arrange it so it is stable and cannot tip over.
  - To avoid injury, arrange silverware with the points and sharp edges facing down.
  - Position containers with the openings facing down so no water can collect in them.
  - Do not block the spray arms - make sure that they can turn freely.

- Do not place small parts in the collecting tray and do not block it with dishware so as not to obstruct the lid of the detergent dispenser.

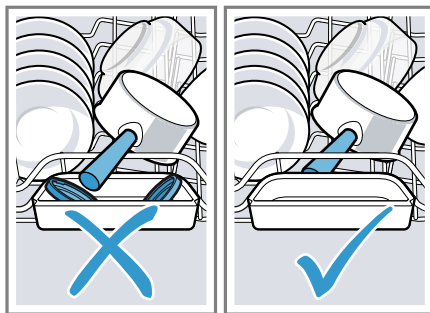

### 11.3 Removing dishware

#### ⚠ CAUTION

Dishes can be very hot immediately after the cycle ends.


- Open the door slightly and allow dishes to cool for a few minutes before unloading.
1. To prevent water dripping onto dishware, unload it starting at the bottom and working up.
  2. Check the washing tank and accessories for soiling and clean if necessary.  
→ "Cleaning and maintenance", Page 36

### 11.4 Loading patterns


Recommended loading patterns.

12 place settings:


Lower rack

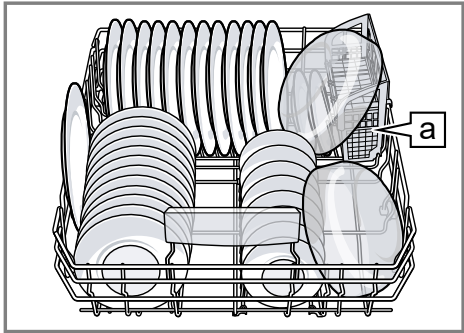


Silverware basket [a]<sup>1</sup>  
Upper rack

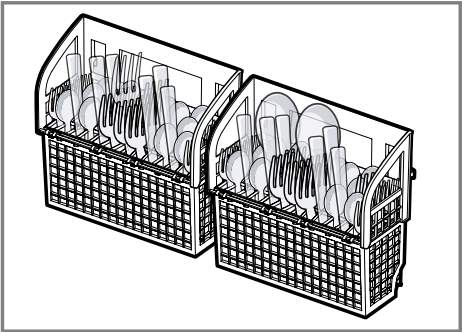



Additional loading patterns for 10  
place settings:  
Lower rack

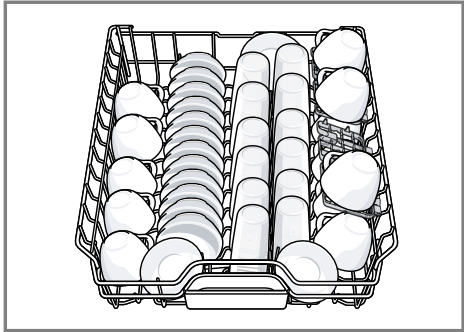

Third rack

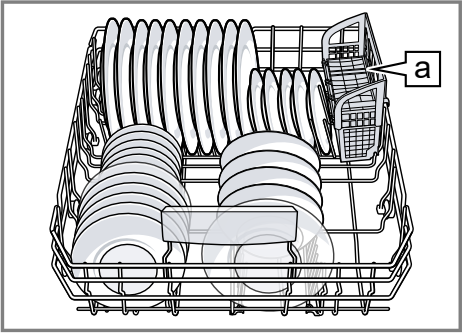


Silverware basket [a]<sup>1</sup>  
Upper rack

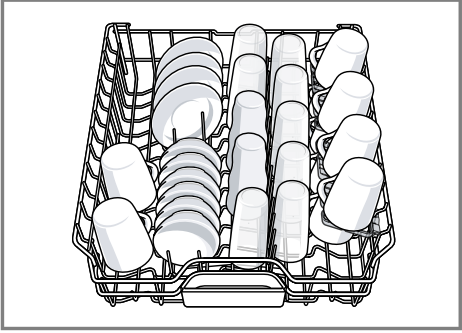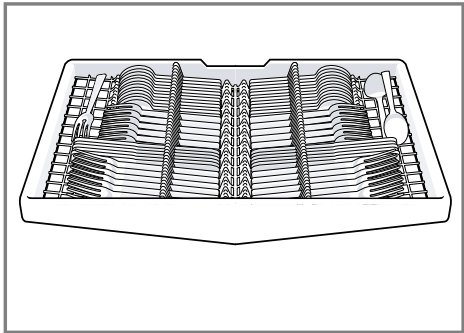

Third rack

<sup>1</sup> Depending on the appliance specifications

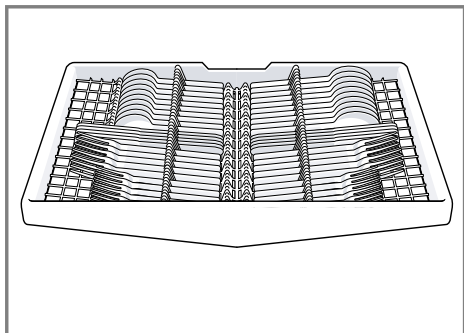

## 12 Basic Operation

### 12.1 Protection against unintentional operation<sup>1</sup>

Your dishwasher has a built in feature to help prevent unintentional operation, e.g. by children. After starting the appliance, the door has to be closed within 4 seconds, otherwise the operation will be paused. If this occurs, follow the steps below to restart your dishwasher.

- ▶ Press START RESUME and close the door.
- ✓ The wash cycle will resume.

#### Note

Unintentional operation is activated when:

- Pressing Start to begin a wash cycle
- Setting Delay time and pressing Start
- Opening the door while Delay time is active
- Opening the door during a wash cycle.
- This feature cannot be deactivated.

### 12.2 Opening the appliance door

1. If door opening "c:00" is selected in the basic setting, press on the upper middle section of the appliance door.
  2. If the setting "c:01" is activated, press on the upper middle section of the appliance door twice with a short interval in between.
- ✓ The appliance door will open automatically.

**Note:** You can change the setting for door opening in the basic settings.  
→ "Basic settings", Page 30

### 12.3 Switching on the appliance

- ▶ Touch ON/OFF with a short 1 second touch.  
The cycle last selected and the option last selected will be set by default.  
The buttons on the appliance are touch sensitive and only require a quick, gentle touch.

**Note:** If you do not perform any actions on the appliance for 10 minutes, it will automatically switch off. This feature cannot be deactivated.

### 12.4 Setting the time delay

You can delay the start of the wash cycle via the Home Connect® app.

- ▶ Open the Home Connect® app and select the appliance.  
In the settings, you can use the time delay function to delay the start of the wash cycle.  
→ "Home Connect® ", Page 35

<sup>1</sup> Depending on the appliance specifications

## 12.5 Starting the wash cycle

- ▶ Press START  
RESUME.
- ✓ The wash cycle has ended when the display shows "00h:00m".

### Notes

- If you want to add more dishware while the appliance is running, do not use the collecting tray as a handle for the upper rack. You might touch the partially dissolved tablet.
- You can only change a cycle in progress if you can cancel it first.  
→ *"Terminating the wash cycle", Page 30*
- To save energy, the appliance switches off automatically 10 minutes after the end of the wash cycle. If you open the appliance door immediately after the wash cycle has ended, the appliance will switch off after 4 seconds.

## 12.6 Interrupting the wash cycle

1. Press On/Off.  
The program is saved and the appliance switches off.
2. Press On/Off.
3. Press START  
RESUME to resume the wash cycle.<sup>1</sup>

## 12.7 Terminating the wash cycle

To end a cycle early or to switch from one that has already started, you will need to cancel it first.

1. Open the appliance door.
2. Press Reset 4 sec. for approx. 4 seconds.

3. Close the appliance door.
- ✓ The cycle is cancelled and ends after approx. 1 minute.

## 12.8 Switching off the appliance

### CAUTION

To avoid risk of injury, always use caution when opening the door during or following a wash cycle as hot water or steam may escape.

- ▶ Do not fully open the door until water noises have stopped and steam has subsided.
1. Please note the information on Preventing Material Damage  
→ *Page 9.*
  2. Press On/Off.

---

## 13 Basic settings

You can configure the basic settings for your appliance to meet your needs.

### 13.1 Changing the basic settings

**Tip:** Connect your appliance to a mobile device. You can conveniently change all settings using the Home Connect® app.

→ *"Home Connect® ", Page 35*

1. Open the appliance door.
2. Press ON/OFF.
3. To open the basic settings, press A button and hold for 3 seconds.  
→ *"Controls", Page 13*
4. Press the A button repeatedly until the display shows the required setting.

---

<sup>1</sup> Depending on the appliance specifications

5. Press START  
RESUME repeatedly until the display shows the right value.  
You can change one or more settings.
6. To store the settings, press **A** button and hold for 3 seconds.

7. Close the appliance door.
- Tip:** You can reset the changed settings back to the factory settings at any time.  
→ *"Overview of the basic settings", Page 31*

13.2 Overview of the basic settings

The basic settings depend on the features of your appliance.

| Basic setting    | Display text       | Selection     | Description                                                                                                                                                                                                                                      |
|------------------|--------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Water hardness   | H:00 <sup>1</sup>  | H:00 - H:07   | Set the water softening system to your water hardness.<br>→ <i>"Setting the water softening system", Page 23</i><br>Level H:00 switches the water softening system off.                                                                          |
| Rinse aid disp.  | r:05 <sup>1</sup>  | r:00 - r:06   | Set the amount of rinse aid.<br>→ <i>"Setting the amount of rinse aid", Page 24</i><br>Switch the rinse aid system off with level r:00.                                                                                                          |
| Sensor setting   | SE:00 <sup>1</sup> | SE:00 - SE:02 | Set the water sensor for identifying soiling.<br>→ <i>"Sensors", Page 10</i>                                                                                                                                                                     |
| Intensive drying | d:00 <sup>1</sup>  | d:00 - d:01   | The temperature is increased during the final rinse, which improves the drying result. This may increase the run time slightly.<br><b>Note:</b> Not suitable for delicate items of dishware.<br>Switch Intensive drying on "d:01" or off "d:00". |
| EmotionLight     | EL:01 <sup>1</sup> | EL:00 - EL:02 | Interior lighting.                                                                                                                                                                                                                               |

<sup>1</sup> Factory setting (may vary according to model)

| Basic setting  | Display text       | Selection     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------|--------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                |                    |               | <ul style="list-style-type: none"><li>With the setting "EL:00", the interior lighting is switched off.</li><li>With the setting "EL:01", the interior lighting can be activated via the ON/OFF ON/OFF button.</li><li>With the setting "EL:02", the interior lighting goes on when you open the appliance door.</li></ul> <p>When the appliance door is opened, the interior lighting switches off automatically after 10 minutes.</p> <p>With the setting "EL:02", the power consumption of standby mode increases above the specified value.</p> |
| EmotionLight 1 | E1:05 <sup>1</sup> | E1:00 - E1:05 | <p>Set the brightness of the interior lighting.</p> <p>Only available if EmotionLight is switched on.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"><li>You can also set the brightness of the interior lighting via the Home Connect app.</li><li>If you have used the Home Connect app to create your own color, you cannot select EmotionLight 1 .</li></ul>                                                                                                                                                                        |
| EmotionLight 2 | E2:HC <sup>1</sup> | E2:HC - E2:06 | <p>Set the color of the interior lighting.</p> <p>Only available if EmotionLight is switched on.</p> <p><b>Note:</b> You can also set the color of the interior lighting via the Home Connect app.</p>                                                                                                                                                                                                                                                                                                                                             |
| EmotionLight 3 | E3:01 <sup>1</sup> | E3:00 - E3:01 | <p>Switch the visual error signals on ("E3:01") or off ("E3:00").</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

<sup>1</sup> Factory setting (may vary according to model)

| Basic setting | Display text       | Selection     | Description                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------|--------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               |                    |               | <p>If an error occurs on your appliance, the interior lighting will flash.</p> <p>Only available if EmotionLight is switched on.</p>                                                                                                                                                                                                                                                        |
| TimeLight®    | S:01 <sup>1</sup>  | S:00 - S:01   | <p>Switch TimeLight on or off. While the wash cycle is running, status information (delay time, cycle indicator or time remaining) is projected onto the floor below the appliance door. If the base panel is pulled forward or if the appliance is installed at eye level with the cabinet front fitted flush, the display is not visible.</p> <p>Level "S:00" switches TimeLight off.</p> |
| Start cycle   | SP:00 <sup>1</sup> | SP:00 - SP:01 | <p>Set a default cycle for when the appliance is switched on.</p> <ul style="list-style-type: none"> <li>■ With the setting "SP:00", the last cycle selected and the last additional function selected are set by default when the appliance is switched on.</li> <li>■ With the setting "SP:01", the standard cycle is set by default when the appliance is switched on.</li> </ul>        |
| Signal volume | SL:02 <sup>1</sup> | SL:00 -SL:03  | <p>Adjusting the signal volume. Level "SL:00" switches the signal tone off.</p>                                                                                                                                                                                                                                                                                                             |
| Button volume | bL:02 <sup>1</sup> | bL:00 - bL:03 | <p>Set the button volume during operation. Level "bL:00" switches the button tones off.</p>                                                                                                                                                                                                                                                                                                 |

<sup>1</sup> Factory setting (may vary according to model)

| Basic setting | Display text      | Selection     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------|-------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Push to open  | c:00 <sup>1</sup> | c:00 - c:02   | <ul style="list-style-type: none"><li>■ Electric door opening is activated with the setting "c:00". You open the appliance door by pressing on the upper middle section of the appliance door once.</li><li>■ With the setting "c:01" you open the appliance door by pressing on the upper middle section of the appliance door twice.</li><li>■ Electric door opening is deactivated with the setting "c:02". You open the appliance door using a handle mounted on the door.</li></ul>                                   |
| Wi-Fi         | Cn:00             | Cn:00 - Cn:01 | <p>Switch the wireless network connection on or off.</p> <p>Level "Cn:00" switches the wireless network connection off.</p> <p>The basic setting is not available until you have connected the appliance with the Home Connect® app.</p> <p>→ <i>"Home Connect®", Page 35</i></p>                                                                                                                                                                                                                                          |
| Remote Start  | rc:01             | rc:00 - rc:02 | <p>Activate or deactivate remote start.</p> <p>→ <i>"Remote Start "</i>, Page 35</p> <p>The following settings are possible:</p> <ul style="list-style-type: none"><li>■ With the setting "rc:00", the option is permanently deactivated.</li><li>■ With the setting "rc:01", the option can be selected via the <small>REMOTE START</small> button.</li><li>■ With the setting "rc:02", the option is permanently activated.</li></ul> |

<sup>1</sup> Factory setting (may vary according to model)

| Basic setting   | Display text | Selection                                                                                                      | Description                                                                                                                          |
|-----------------|--------------|----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
|                 |              |                                                                                                                | The basic setting is not available until you have connected the appliance with the Home Connect® app.<br>→ "Home Connect® ", Page 35 |
| Factory setting | rE:          | Starting with<br><small>START<br/>RESUME</small><br>Y:ES<br>Confirming with<br><small>START<br/>RESUME</small> | Restore changed settings to the factory settings.<br>The settings for initial use must be configured.<br>→ "Initial use", Page 22    |

## 14 Home Connect®

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect® app.

**Note:** Also note the safety information in this instruction manual and ensure that it is also observed when operating the appliance using the Home Connect® app.

### 14.1 Setting up the Home Connect® app

1. Install the Home Connect® app on your mobile device.
2. Start the Home Connect® app and set up access for Home Connect®.  
The Home Connect® app guides you through the entire registration process.

### 14.2 Setting up Home Connect®

**Requirement:** The appliance receives signals from the WLAN home network (Wi-Fi) at its installation location.

1. Scan the following QR code.



You can install the Home Connect® app and connect your appliance via the QR code.

2. Follow the instructions in the Home Connect® app.

### 14.3 Remote Start

You can use the Home Connect® app to start the appliance with your mobile device.

**Tip:** If you select "rc:02" in the Basic settings → Page 34 of this function, the function is permanently activated, and you can start your appliance with a mobile device at any time.

### 14.4 Smart Start <sup>1</sup>

Smart Start automatically determines the best time for the program to start. You can use the Home Connect® app to activate or deactivate the function.

<sup>1</sup> Depending on the appliance specifications

## Activating Smart Start

### Requirements

- Smart Start is activated via the Home Connect® app.
  - Preferences for time and energy are set in the Home Connect® app.
1. Press ON/OFF.
  - ✓ "E:nG" lights up on the display.
  - ✓ The display shows the optimal start time and the duration of the selected program.
2. Press START  
RESUME.
  - ✓ Smart Start is active.
  - ✓ The program starts as soon as the optimal time is reached.

**Tip:** Deactivate the function a single time by pressing .

---

## 15 Cleaning and maintenance

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

---

## 16 Troubleshooting

You can eliminate minor issues on your appliance yourself. Please read the information on eliminating issues before contacting Customer Service. This may avoid unnecessary repair costs.

**Tip:** You can find further information and explanations on troubleshooting online by scanning the QR code in the table of contents and on our website [www.thermador.com](http://www.thermador.com).

| Fault                          | Cause and troubleshooting                                                                                                                                                                                                                     |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:20-60 lights up alternately. | <p>Appliance has detected that the heating element is calcified.</p> <ol style="list-style-type: none"><li>1. Descale the appliance.</li><li>2. Operate the appliance with the Water softening system → <i>Page 23.</i><sup>1</sup></li></ol> |

**Note:** The Statement of Limited Product Warranty covers defects in materials and workmanship. Cleaning and maintenance is not covered by the warranty and a charge will apply. See the Statement of Limited Product Warranty for more details.

### 15.1 Filter system

1. Check the filters for residues after each dishwashing cycle.
2. To see how to clean the filters, scan the following QR code.



### 15.2 Cleaning spray arms

- ▶ To see how to clean the spray arms, scan the following QR code.



---

<sup>1</sup> Depending on the appliance specifications

| <b>Fault</b>                                                           | <b>Cause and troubleshooting</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:21-30 lights up alternately.                                         | <p>Intake opening of Zeolite container is covered by items of dishware.</p> <ul style="list-style-type: none"> <li>▶ Rearrange the dishware in the appliance so the Intake opening of the Zeolite container → <i>Page 11</i> is no longer obstructed.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| E:30-00 lights up alternately.                                         | <p>Water protection system is activated.</p> <ol style="list-style-type: none"> <li>1. Close the water supply valve.</li> <li>2. Contact customer service → <i>Page 43</i>.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| E:31-00 lights up alternately.                                         | <p>Water protection system is activated.</p> <ol style="list-style-type: none"> <li>1. Close the water supply valve.</li> <li>2. Contact customer service → <i>Page 43</i>.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| E:32-00 lights up alternately or indicator for water supply lights up. | <p>Water supply valve is closed.</p> <ol style="list-style-type: none"> <li>1. Open the water supply valve.</li> <li>2. Terminate the wash cycle.<br/>→ <i>"Terminating the wash cycle", Page 30</i></li> <li>3. Start a wash cycle.<br/>→ <i>"Starting the wash cycle", Page 30</i></li> <li>4. If the problem occurs again: <ul style="list-style-type: none"> <li>▶ Contact the customer service.<br/>→ <i>"Customer Service", Page 43</i></li> </ul> </li> </ol> <p>Inlet hose is kinked or blocked.</p> <ul style="list-style-type: none"> <li>▶ Contact customer service.<br/>→ <i>"Customer Service", Page 43</i></li> </ul> <p>Water supply valve is jammed or clogged up.</p> <ol style="list-style-type: none"> <li>1. Open the water supply valve.<br/>The flow rate must be at least 10 l/min when the water supply is open.</li> <li>2. If the problem occurs again: <ul style="list-style-type: none"> <li>▶ Contact customer service.<br/>→ <i>"Customer Service", Page 43</i></li> </ul> </li> </ol> |
| E:34-00 lights up alternately.                                         | <p>Water is continuously running into the appliance.</p> <ol style="list-style-type: none"> <li>1. Close the water supply valve.</li> <li>2. Contact customer service → <i>Page 43</i>.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| E:61-02 lights up alternately.                                         | <p>Not an appliance error. The drain pump cover is loose or a foreign object is blocking the pump.</p> <ul style="list-style-type: none"> <li>▶ Secure the cover of the drain pump so it clicks into place or clean the drain pump.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

| Fault                                                 | Cause and troubleshooting                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:61-03 lights up alternately. Water is not draining. | Not an appliance error. Garbage disposal is still plugged or the drain hose is kinked. <ul style="list-style-type: none"><li>▶ Check that the garbage disposal plug is removed and that the drain hose is not kinked.</li></ul>        |
|                                                       | Not an appliance error. The drain pump cover is loose or a foreign object is blocking the pump. <ul style="list-style-type: none"><li>▶ Secure the cover of the drain pump so it clicks into place or clean the drain pump.</li></ul>  |
|                                                       | Not an appliance error. High loop is missing and/or debris flushed back into drain hose and blocked it. <ul style="list-style-type: none"><li>▶ Be sure there is a high loop in the drain hose and that no debris has flushed back into the hose.</li></ul>                                                             |
| E:61-60 lights up alternately.                        | There is a technical error. <ul style="list-style-type: none"><li>▶ Contact customer service.</li></ul> → <i>"Customer Service", Page 43</i>                                                                                                                                                                            |
| E:90-01 lights up alternately.                        | Power voltage is too low.<br>There is no problem with the appliance. <ol style="list-style-type: none"><li>1. Call an electrician.</li><li>2. Have the power voltage and electrical installation checked by an electrician.</li></ol>                                                                                   |
| E:92-10 lights up alternately.                        | Spray arm rotation of the lower spray arm is blocked. <ul style="list-style-type: none"><li>▶ Arrange the dishware so that it does not obstruct spray arm rotation of the lower spray arm.</li></ul>                                 |
|                                                       | Lower spray arm is not correctly fitted. <ul style="list-style-type: none"><li>▶ Fit the lower spray arm correctly.</li></ul>                                                                                                        |

| <b>Fault</b>                   | <b>Cause and troubleshooting</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E:92-40 lights up alternately. | <p>Filters are soiled or blocked.</p> <ul style="list-style-type: none"> <li>▶ Clean the filters.</li> </ul> <p>→ <i>"Filter system", Page 36</i></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| All LEDs light up or flash.    | <p>A software update is possibly installing.</p> <ol style="list-style-type: none"> <li>1. Wait until the software update has been installed. This process can take approx. 30 minutes.</li> <li>2. If the appliance is not ready to use after 30 minutes, perform a reset. <ul style="list-style-type: none"> <li>▶ Press the main switch button for approx. 4 seconds.</li> <li>✓ Your appliance is resetting.</li> </ul> </li> </ol> <hr/> <p>Electronics have detected a fault.</p> <ol style="list-style-type: none"> <li>1. Press the main switch button for approx. 4 seconds.<br/>→ <i>"Controls", Page 13</i></li> </ol> <p>The appliance is reset and restarted.</p> <ol style="list-style-type: none"> <li>2. If the problem occurs again: <ul style="list-style-type: none"> <li>▶ Switch off the appliance.</li> <li>▶ Unplug the power plug or switch off the circuit breaker in the fuse box.</li> <li>▶ Wait at least 2 minutes.</li> <li>▶ Switch on the circuit breaker in the fuse box or plug in the power plug.</li> <li>▶ Switch on the appliance.</li> </ul> </li> <li>3. If the problem occurs again: <ul style="list-style-type: none"> <li>▶ Contact customer service.<br/>→ <i>"Customer Service", Page 43</i></li> </ul> </li> </ol> |
| Food remnants on dishware.     | <p>Dishware was placed too close together or rack is overfilled.</p> <ol style="list-style-type: none"> <li>1. Arrange dishware with sufficient space in between. The spray jets must reach the surfaces of the dishware.</li> <li>2. Avoid points of contact.</li> </ol> <hr/> <p>Spray arm rotation is blocked.</p> <ul style="list-style-type: none"> <li>▶ Arrange dishware so it does not obstruct spray arm rotation.</li> </ul> <hr/> <p>Spray arm nozzles are blocked.</p> <ul style="list-style-type: none"> <li>▶ Clean the spray arms.</li> </ul> <p>→ <i>"Cleaning spray arms", Page 36</i></p> <hr/> <p>Filters are dirty.</p> <ul style="list-style-type: none"> <li>▶ Clean the filters.</li> </ul> <p>→ <i>"Filter system", Page 36</i></p> <hr/> <p>Filters are inserted incorrectly and/or not engaged.</p> <ol style="list-style-type: none"> <li>1. Insert the filters properly.<br/>→ <i>"Filter system", Page 36</i></li> <li>2. Twist filters into place.</li> </ol>                                                                                                                                                                                                                                                                      |

| Fault                                                                                        | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Food remnants on dishware.                                                                   | <p>Selected wash cycle is too light.</p> <ul style="list-style-type: none"> <li>▶ Select a more intensive wash program.</li> <li>▶ Adjust the sensitivity of the sensors.</li> </ul> <p>→ <i>"Sensors", Page 10</i></p>                                                                                                                                                  |
|                                                                                              | <p>Dishware has been precleaned too intensively. Then the sensors choose a lighter cycle. Stubborn remnants cannot be entirely removed.</p> <ul style="list-style-type: none"> <li>▶ Only remove large remnants of food and do not pre-rinse dishware.</li> <li>▶ Adjust the sensitivity of the sensors.</li> </ul> <p>→ <i>"Sensors", Page 10</i></p>                   |
|                                                                                              | <p>Tall narrow containers in corner areas are not rinsed out adequately.</p> <ul style="list-style-type: none"> <li>▶ Do not position tall narrow containers at too great an angle or in corner areas.</li> </ul>                                                                                                                                                        |
|                                                                                              | <p>Upper rack on right and left not set to same height.</p> <ul style="list-style-type: none"> <li>▶ Set the upper rack on the left and right to the same height.</li> </ul> <p>→ <i>"Upper rack", Page 18</i></p>                                                                                                                                                       |
| There are removable streaks on glasses, glassware with a metallic appearance and silverware. | <p>Amount of rinse aid to be dispensed is set too high.</p> <ul style="list-style-type: none"> <li>▶ Set the rinse aid system to a lower setting.</li> </ul> <p>→ <i>"Setting the amount of rinse aid", Page 24</i></p>                                                                                                                                                  |
|                                                                                              | <p>No rinse aid has been added.</p> <ul style="list-style-type: none"> <li>▶ Add rinse aid.</li> </ul> <p>→ <i>"Adding rinse aid", Page 24</i></p>                                                                                                                                                                                                                       |
|                                                                                              | <p>There is detergent residue in the final rinse. Lid of detergent dispenser is blocked by dishware and will not open fully.</p> <ol style="list-style-type: none"> <li>1. Arrange dishware in the upper rack so the tab collecting tray is not obstructed by dishware.</li> <li>2. Do not place dishware or fragrance dispensers in the tab collecting tray.</li> </ol> |
|                                                                                              | <p>Dishware has been precleaned too intensively. Then the sensors choose a lighter cycle. Stubborn remnants cannot be entirely removed.</p> <ul style="list-style-type: none"> <li>▶ Only remove large remnants of food and do not pre-rinse dishware.</li> <li>▶ Adjust the sensitivity of the sensors.</li> </ul> <p>→ <i>"Sensors", Page 10</i></p>                   |

| Fault                                                                               | Cause and troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rust spots on silverware.                                                           | <p>Silverware is not sufficiently rust-resistant. Knife blades are often more severely affected.</p> <ul style="list-style-type: none"> <li>► Use rust-resistant dishware.</li> </ul> <hr/> <p>Silverware may also rust if washed together with rusting items.</p> <ul style="list-style-type: none"> <li>► Do not wash rusting items.</li> </ul> <hr/> <p>Salt content in dishwashing water is too high.</p> <ol style="list-style-type: none"> <li>1. Remove any spilled special salt from the tub.</li> <li>2. Screw the cap of the special salt dispenser on tight.</li> </ol> |
| Detergent residue is present in the detergent dispenser or the tab collecting tray. | <p>Spray arms were blocked by dishware so detergent was not rinsed out.</p> <ul style="list-style-type: none"> <li>► Check that the spray arms are not blocked and can rotate freely.</li> </ul> <hr/> <p>Detergent dispenser was damp when detergent was added.</p> <ul style="list-style-type: none"> <li>► Only add detergent to the detergent dispenser when dry.</li> </ul>                                                                                                                                                                                                   |
| Special salt refill indicator lights up.                                            | <p>Insufficient special salt.</p> <ul style="list-style-type: none"> <li>► Add Special salt.</li> </ul> <hr/> <p>Sensor does not detect special salt tablets.</p> <ul style="list-style-type: none"> <li>► Do not use special salt tablets.</li> </ul>                                                                                                                                                                                                                                                                                                                             |
| Display shows SANl.                                                                 | <p>Not an appliance error. Dishware is sanitized.</p> <ul style="list-style-type: none"> <li>► See description for option sanitize.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## 16.1 Clean drain pump

Large food remnants or foreign objects can block the drain pump. As soon as the dishwashing water no longer drains properly, the drain pump must be cleaned.


### CAUTION

There may be some sharp debris, such as glass fragments, blocking the drain pump.

- Use caution when removing parts for cleaning.


1. Disconnect the appliance from the power supply.
2. Remove the upper and lower rack.
3. Remove the filter system.
4. Scoop out any water.  
Use a sponge if necessary.

5. Pry the pump cover off using a spoon and grip it by the cross-piece.

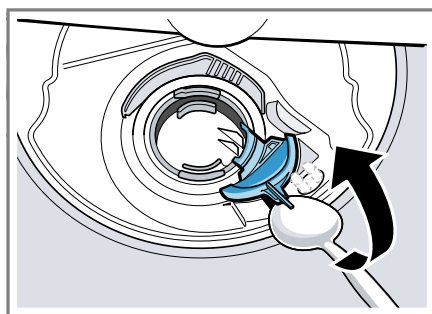

6. Lift the pump cover diagonally inward and take it out.  
✓ Now you can reach the impeller with your hand.

7. Remove any food remnants or foreign objects in the area of the impeller.
8. Insert the pump cover ① and press down ②.

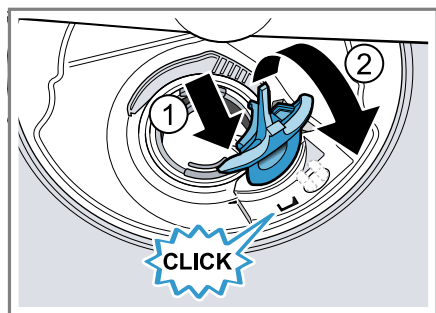

- ✓ The pump cover clicks into position.
9. Install the filter system.
  10. Insert the upper and lower rack.
  11. Connect the appliance to the power supply.

---

## 17 Transportation, storage and disposal

### 17.1 Transporting the appliance

To avoid damage to the appliance, empty it before transporting.

**Note:** Always transport the appliance upright to prevent residual water getting into the machine's controls and damaging the appliance.

1. Remove dishware from the appliance.
2. Secure loose parts.
3. Open the water supply valve.
4. Switch on the appliance.
5. Select the cycle with the highest temperature.
6. Start the cycle.

7. To drain the appliance, terminate the cycle after approx. 4 minutes.  
→ *"Terminating the wash cycle", Page 30*
8. Switch off the appliance.
9. Close the water supply valve.
10. To empty the residual water out of the appliance, detach the supply hose and let the water drain out.

### 17.2 Vacation and Storage

#### **NOTICE**

Preparing your appliance for vacation

- Before leaving for vacation during warmer weather, besides turning off the main valve, also turn off water supply at the nearest point to the dishwasher. During colder weather, please follow the instructions for winterizing your appliance below.

Winterizing your appliance

- If your dishwasher will be unused for an extended period of time in a location that experiences freezing temperatures (vacation home or through a vacation period), have your dishwasher winterized by a professional service.

### 17.3 Disposal of your old appliance

Environmentally sound disposal allows valuable raw materials to be recycled.

#### **⚠ WARNING**

Avoid a risk of entrapment upon disposal.

- Unplug the appliance from the power outlet.
- Cut the power cord and remove the door upon discarding the appliance.
- Check your local area for large appliance recycling programs.

## 18 Customer Service

With any warranty repair, we will make sure your appliance is repaired by an authorized service provider using genuine replacement parts. We use only genuine replacement parts for all repairs.

Detailed information on the warranty period and terms of warranty can be found in the Statement of Limited Product Warranty, from your retailer, or on our website.

USA:

1-800-735-4328

[www.thermador.com/support](http://www.thermador.com/support)

[www.thermador.com/us/accessories](http://www.thermador.com/us/accessories)

CA:

1-800-735-4328

[www.thermador.ca](http://www.thermador.ca)

[www.thermador.ca/en/support/filters-cleaners-accessories](http://www.thermador.ca/en/support/filters-cleaners-accessories)

For assistance with connecting to Home Connect®, you can also view instructions here:

[www.home-connect.com/us/en/help-support/set-up](http://www.home-connect.com/us/en/help-support/set-up)

### 18.1 Model number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

If you contact Customer Service, you will need the product number (E-Nr.), production number (FD), and consecutive numbering (Z-Nr.), which you can find on the appliance's rating label.

The rating plate is located inside the appliance door.

→ *"Familiarizing yourself with your appliance", Page 11*

Making a note of your appliance's details and the Customer Service telephone number will enable you to find them again quickly.

## 19 Technical specifications

|                   |                                                                                                               |
|-------------------|---------------------------------------------------------------------------------------------------------------|
| Weight            | Max.: 60 kg/132 lbs                                                                                           |
| Voltage           | 120 V, 60 Hz                                                                                                  |
| Power rating      | 1440 W                                                                                                        |
| Fuse              | 12 A                                                                                                          |
| Water pressure    | <ul style="list-style-type: none"> <li>■ Min. 7.25 psi (50 kPa)</li> <li>■ Max. 145 psi (1000 kPa)</li> </ul> |
| Inlet rate        | Min. 2.6 gal/min                                                                                              |
| Water temperature | Cold water.<br>Hot water max.: 140 °F/ (60 °C)                                                                |
| Load capacity     | 16 place settings                                                                                             |

## 19.1 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.

The applicable license information is stored on your home appliance. You can also access the applicable license information via your Home Connect® app: "Profile -> Legal information -> License Information".<sup>1</sup> You can also download the license information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternatively, you can request the relevant information from [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.

The relevant source code will be made available to you on request. Please send your request to [ossrequest@bshg.com](mailto:ossrequest@bshg.com) or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.

Subject: „OSSREQUEST“

The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

---

<sup>1</sup> Depending on the appliance specifications

---

## Recursos y ayuda en línea en español

Muchos manuales están disponibles en línea en inglés, francés y español. Para acceder a manuales de modelos específicos y otros documentos en español:

- Visite [www.thermador.com/us/support/owner-manuals](http://www.thermador.com/us/support/owner-manuals) o escanee el código QR.



- Introduzca el número de producto (E-Nr.) que encontrará en la placa de características del aparato.
- Seleccione o descargue el manual o documento que desee.

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, providing a guide for writing. The background is a solid off-white color. There are no margins, text, or other markings present.



# Thermador<sup>®</sup> ★

## Exclusive Insider Information



[Thermador.com/us/support/quicklinks](https://thermador.com/us/support/quicklinks)



### Owner Manuals

Download owner manuals, specifications and CADs.



### How-To Videos

View instructional videos for changing water filters, cleaning, adjusting settings, and beyond.



### FAQs & Cleaning Tips

Browse through cleaning, usage, and troubleshooting tips.



### Home Connect<sup>®</sup> Support

Find the answers to all your Home Connect<sup>®</sup> related questions.



### Thermador Accessories Store

Purchase filters, cleaners, accessories, and parts.




### Warranties

View information on Thermador product warranties.



### Product Registration

Register your products today to easily manage your appliance information.



### Virtual Demo

Schedule a product overview to receive step-by-step guidance on using your appliance.



### Virtual Showroom

Take a Virtual Showroom tour to view and interact with our entire collection of appliances.



### Newsletter

Get the latest information on product news and events.



### Blog

Read about the latest in home design and culinary inspiration.



### Recipes

Need inspiration for your next gathering? Browse our vast collection of recipes.

