BOSCH

Register your new appliance now at MyBosch and enjoy benefits free of charge:
bosch-home.com/welcome

MyBosch

Slow juicer


MESM5... **MESM7...**


[en] Information for Use




https://ium-pim.bsh-digital.com/8001370569

[en] You can find additional information and explanations online. Scan the QR code on the title page.

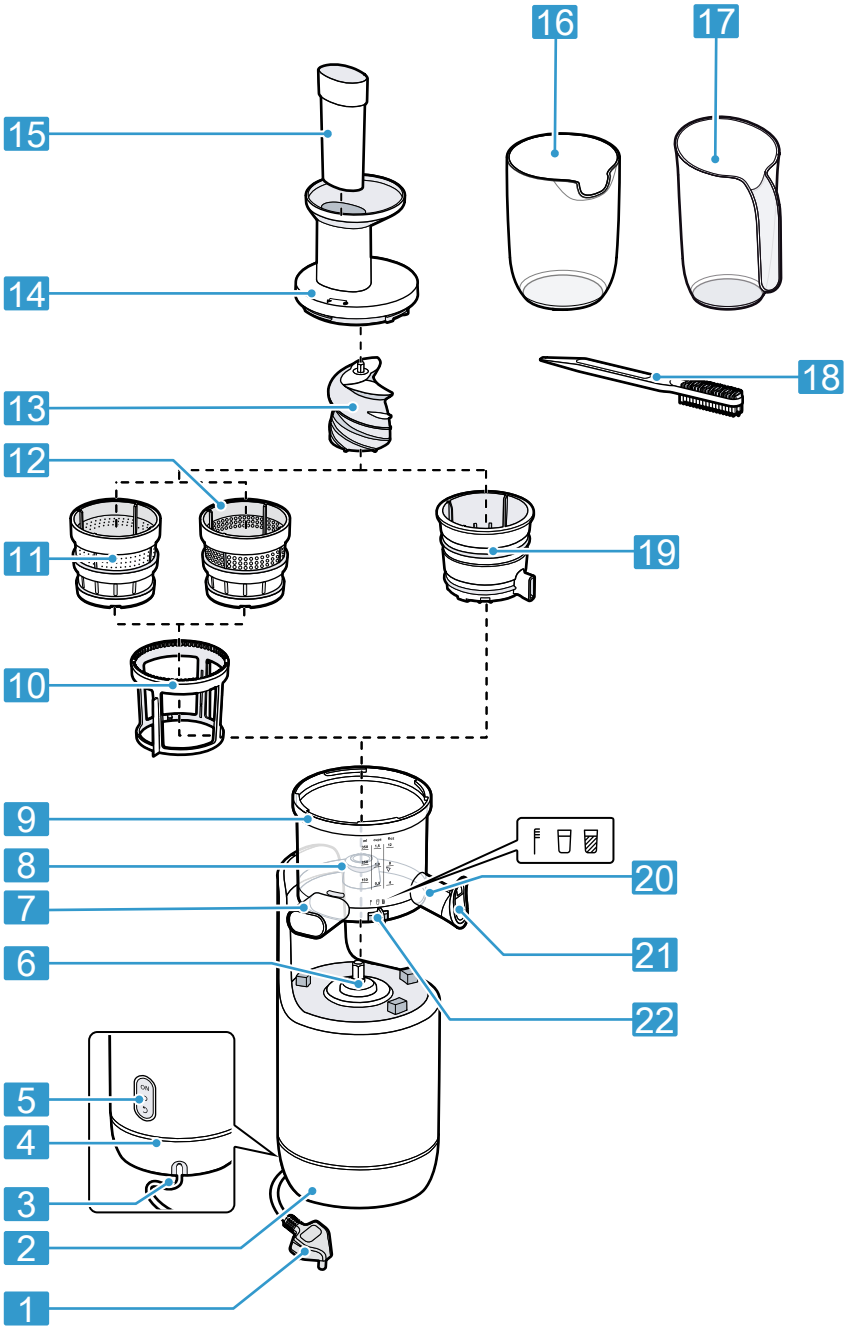

16
17
15
14
18
13
12
11
19
10
9
8
20
7
21
6
22
5
4
3
2
1

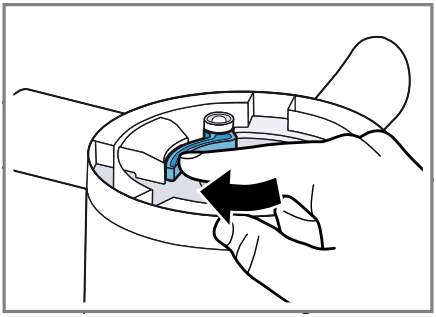


2

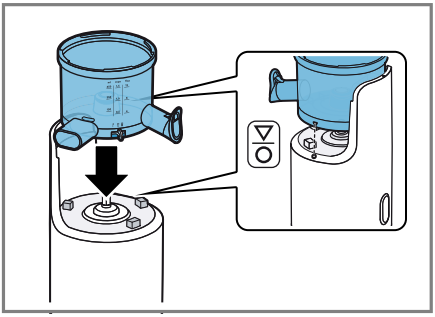


3

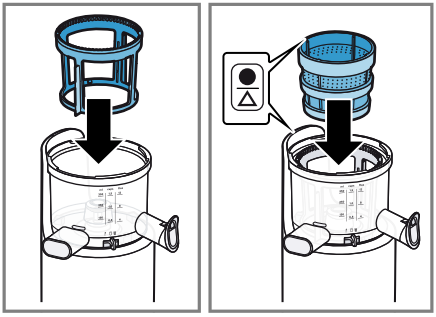


4

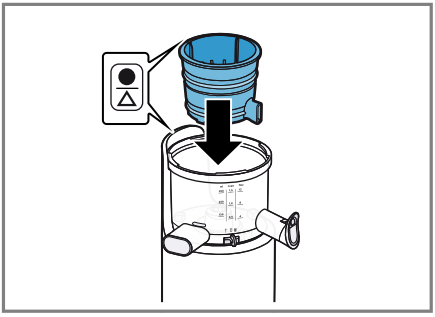


5

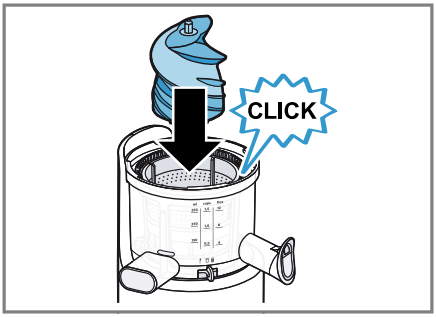


6

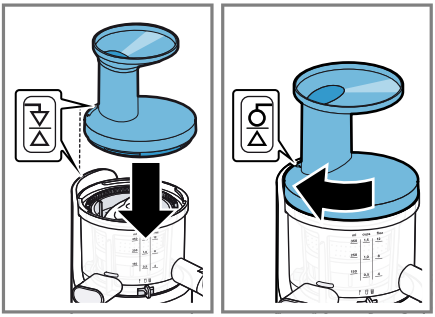


7

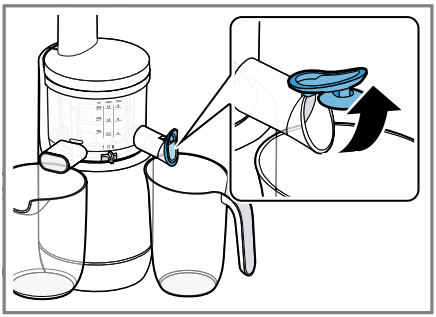


8

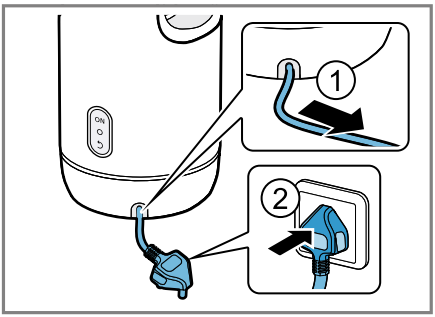


9

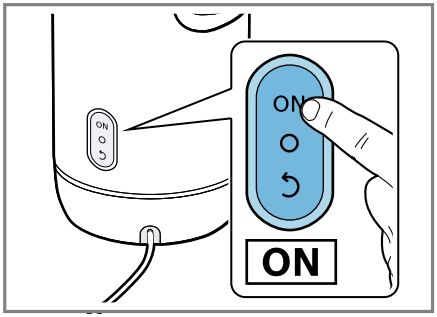


10

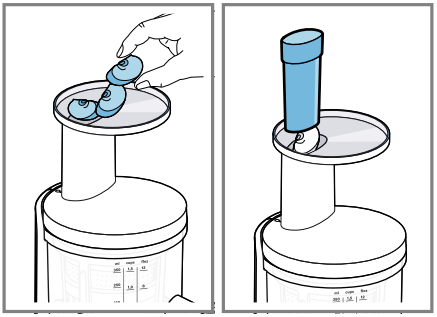


11

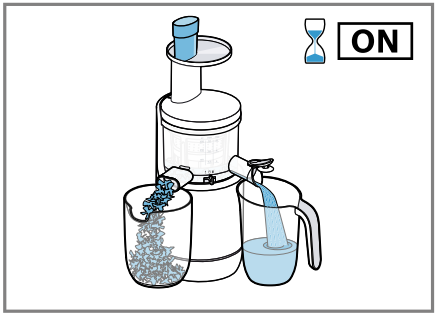


12

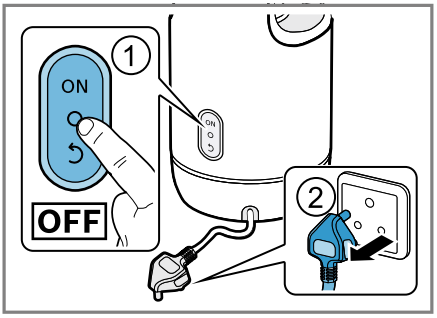


13

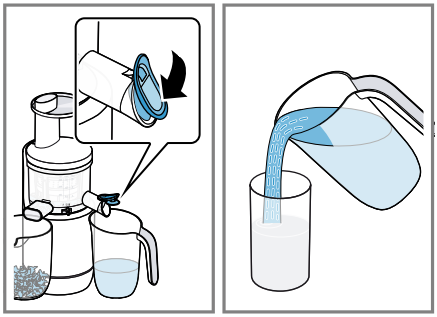


14

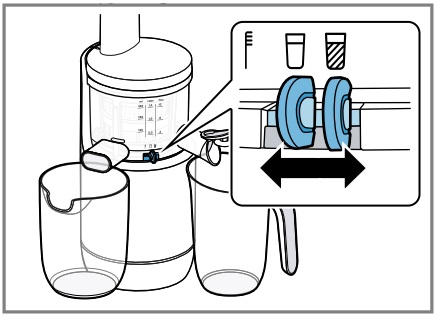


15

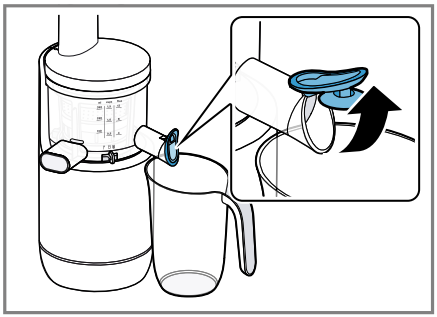


16

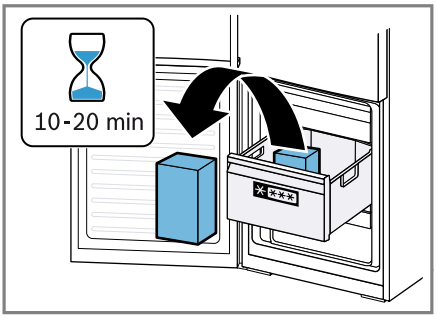


17

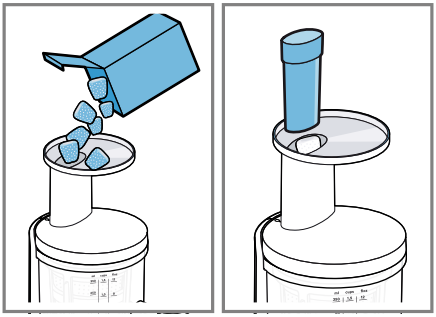



18

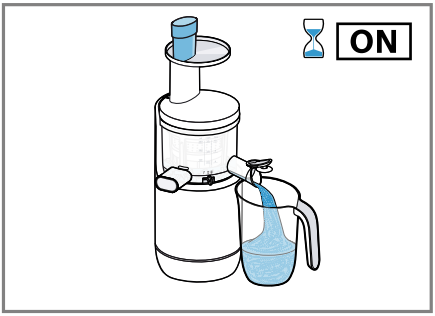

19

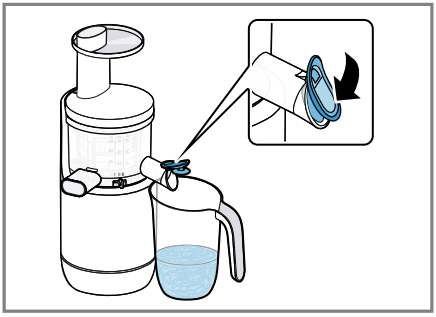

20

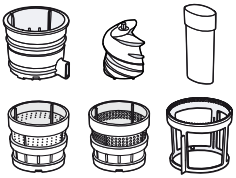	✓	✗	✗	✗	✗
	✓	✓	✓	✓	✗
	✓	✓	✓	✓	✓
	✓	✓	✓	✓	✓

⚠ Safety

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

Only use this appliance:

- with genuine parts and accessories.
- for extracting the juice from fruit and vegetables, e.g. apples, pears, pitted plums and cherries, tomatoes, carrots.
- for making sorbets.
- for applications described in these instructions.
- under supervision.
- for normal processing quantities and for normal processing times for domestic use.
- in private households and in enclosed spaces in a domestic environment at room temperature.
- up to an altitude of max. 2000 m above sea level.

The appliance must always be disconnected from the mains after each use, whenever it is left unattended, prior to assembly, disassembly or cleaning and in the event of an error.

This appliance can be used by persons with reduced physical, sensory or mental capabilities or a lack of experience and/or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children.

The appliance must not be used by children. Keep children away from the appliance and power cord.

- ▸ Never operate a damaged appliance.
- ▸ Never operate an appliance with a cracked or fractured surface.
- ▸ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▸ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▸ Call customer service. →*Page 13*
- ▸ Connect and operate the appliance only in accordance with the specifications on the rating plate.

- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.
- Never immerse the appliance or the power cord in water or clean in the dishwasher.
- Only use the appliance in enclosed spaces.
- Never expose the appliance to intense heat or humidity.
- Do not use steam- or high-pressure cleaners to clean the appliance.
- Never let the power cord come into contact with hot appliance parts or heat sources.
- Never let the power cord come into contact with sharp points or edges.
- Never kink, crush or modify the power cord.
- Never place the appliance on or near hot surfaces.
- Keep hands, hair, clothing and utensils away from rotating parts.
- Do not reach into the filling shaft.
- Only use the pusher to push down food.
- Only use the appliance once it is fully assembled.
- Parts which show cracks or other damage or do not fit correctly must be replaced with genuine spare parts.
- Keep packaging material away from children.
- Do not let children play with packaging material.
- Keep small parts away from children.
- Do not let children play with small parts.
- Follow the cleaning instructions.
- Clean surfaces which come in contact with food before each use.

Avoiding material damage

- Never operate the appliance longer than necessary.
- Do not operate the appliance at no-load.
- Only use the appliance with approved genuine parts.
- Do not insert objects into the filling shaft or juice drum, e.g. wooden spoons.
- Only operate the appliance if the seal has been correctly inserted in the juice drum.
- Only process frozen fruit using the sorbet insert.
- Do not use the sorbet insert to process fruit which freezes very hard, such as strawberries.

Familiarising yourself with your appliance

Appliance

You can find an overview of the parts of your appliance here.
→ *Fig.* **1**

1	Power cord
2	Main unit
3	Cord storage
4	Illuminated ring [1]
5	Switch
6	Drive
7	Aperture for fruit pulp
8	Seal
9	Juice drum
10	Rotating brush with silicone scraper
11	Fine filter insert
12	Coarse filter insert
13	Juicer screw
14	Lid with integrated filling shaft
15	Pusher
16	Pulp container
17	Juice container
18	Cleaning brush
19	Sorbet insert [1]
20	Aperture for juice
21	Sealing cap for juice
22	Adjusting lever for fruit pulp [1]

Control elements

You can find an overview of the controls for your appliance here.



Symbol	Function
ON	Start processing.
○	Stop processing.
↺	Release food that has got stuck using the reversing function.

Symbols

Symbol	Meaning
	Fit the lid and screw on securely.
△	Marking on the main unit. Insert the insert pieces into the juice drum. Attach the cover.
●	Marking on the insert pieces. Insert the insert pieces into the juice drum.
▽	Marking on the juice drum. Place the juice drum on the main unit.
○	Marking on the main unit. Attach the juice drum.
ml 350	Marking on the juice drum. Maximum filling level of the juice drum.
	Marking on the juice drum. Positions of the adjusting lever. Cleaning, little fruit pulp, a lot of fruit pulp.

Overview of insert pieces

You can find an overview of the insert pieces and their intended purpose here.

Designation	Use
Fine filter insert and rotating brush with silicone scraper 	Filtering juice containing little pulp.
Coarse filter insert and rotating brush with silicone scraper 	Filtering juice containing more pulp.
Sorbet insert 	Making sorbet.

[1] Depending on the model

Operation

Preparing the appliance and juice drum

→*Fig.* **2**

Assembling the appliance

→*Fig.* **3** - **7**

Preparing food

Notes

- Only use ripe fruit or vegetables. Fruit or vegetables which are not ripe or too ripe will block the juice screw and the filter very quickly.
- If you want to process frozen fruit or vegetables, use the sorbet insert. Do not process any fruit which becomes very hard when frozen, such as strawberries.
- Wash the food prior to processing.
- Remove larger stones, e.g. from plums, peaches and cherries.
- Remove hard peel/skin, e.g. from melons, pineapples, cucumbers and potatoes.
- Peel citrus fruits and remove the white pith.
- Cut large items of food into pieces so they fit into the filling shaft.

Making juice

Notes

- Once the juice reaches the ml 350 marking in the juice drum, finish processing and empty the juice drum.
  - To increase the amount of juice produced, process food containing lots of juice when you start and finish squeezing the food. (For example, oranges, tomatoes, watermelon, etc.) Process hard or fibrous food in-between.
  - Add the food to the filling shaft in portions.
  - Stuffing it in excessively will cause the juice drum to overflow and will not speed up the squeezing process.

Requirement: The appliance has been assembled. →*Page 11*

→*Fig.* **8** - **14**

Setting the amount of fruit pulp [1]

Note: The adjusting lever for fruit pulp enables you to set the amount of fruit pulp in the juice and control the consistency of the juice.

→*Fig.* **15**

Note: For appliances without an adjusting lever, the seal must have been firmly inserted in the aperture for fruit pulp on the bottom of the juice drum. The juice will then always contain a consistent amount of pulp.

Making sorbet

Requirement: The appliance has been assembled. →*Page 11*

→*Fig.* **16** - **20**

Using the reversing function

Notes

- The reversing function is designed to release food that has got stuck by briefly running the juicer screw in reverse.
- The reversing function must always run for several seconds in order to release the stuck food.

1. Move the switch to O and wait for the drive to come to a stop.
2. Press the reversing function ↺ on the switch for 3-5 seconds.

✔ The juicer screw rotates in reverse.

3. Wait until the drive comes to a standstill.
4. Move the switch to ON and check whether the food is being processed normally again.

Note: If the food cannot be released using the reversing function, the appliance must be cleaned.

Overview of cleaning

Clean all parts immediately after use so that residues do not dry on.

- ▸ Do not use cleaning agents containing alcohol or spirits.
- ▸ Do not use sharp, pointed or metal objects.
- ▸ Do not use abrasive cloths or cleaning agents.

[1] Depending on the model

Tips

- When processing food such as carrots, plastic parts may become discoloured. Remove discolouration with a soft cloth and a few drops of cooking oil.
- Do not wedge plastic parts in the dishwasher as they could become permanently deformed.

Clean the individual parts as indicated in the table.
→ *Fig.* **21**

Note: After cleaning, leave all parts to dry or dry with a soft cloth.

Troubleshooting

The appliance is not working.

Appliance has no power supply.

- ▶ Check whether your appliance is supplied with power.

Appliance does not start processing.

Appliance was stopped during processing.

- ▶ Use the reversing function for several seconds.

Appliance switches off during processing.

Lid is not fitted and closed properly.

- ▶ Fit the lid correctly and rotate as far as possible.

1. Check that the individual parts are seated correctly.
2. If required, dismantle the appliance and reassemble it correctly.

Processing quantity is too high or hard ingredients are blocking the inserts.

- ▶ Use the reversing function for several seconds.

Juice drum cannot be placed on the main unit.

Seal for fruit pulp is not seated correctly / incorrectly set or inserted.

1. Slide the adjusting lever [1] for fruit pulp into the desired position.
2. Insert the seal for fruit pulp correctly into the aperture on the bottom of the juice drum.

Juice is too runny or too viscous.

Seal for fruit pulp is not seated correctly / incorrectly set or inserted.

1. Slide the adjusting lever [1] for fruit pulp into the desired position.
2. Insert the seal for fruit pulp correctly into the aperture on the bottom of the juice drum.

Processing quantity is too high.

- ▶ Reduce the amount of food you are using.

Appliance is too loud during operation.

Appliance has been incorrectly assembled.

1. Check that the individual parts are seated correctly.
2. If required, dismantle the appliance and reassemble it correctly.

Disposing of old appliance

- ▶ Dispose of the appliance in an environmentally friendly manner.
  Information about current disposal methods are available from your specialist dealer or local authority.



Dispose of packaging in an environmentally-responsible manner. This appliance is certified in accordance with the guidelines on E-waste (Management) Rules 2022 which govern waste electrical and electronic equipment.
The guideline provide a framework for the return and recycling of used appliances.
Note: This product doesn't contain any of hazardous substances as specified in the e-waste Management and Handling Rules 2022.
Dos

- Please visit our website *https://www.bosch-home.in/metapages/e-waste-management* to find out more details regarding e-waste disposal.

[1] Depending on the model

- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.
- Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding.
- Consult the retailer about appliance take back schemes.

Don'ts

- The product should not be opened by the user himself/herself, but only by authorized service personnel.
- The product is not meant for re-sale to any unauthorized agencies/scrap dealers/kabariwalah.
- Don't dispose of the discarded Electronic Equipment in household bins or Municipal bins.
- Don't dump the discarded Electronic Equipment in the open or in any land fill site, as this will result in contamination of the soil and the ground water.
- Do not keep any replaced spare part(s) from the product in exposed area.

Customer Service

You can obtain function-relevant and storable genuine spare parts from our Customer Service for up to 10 years from the date on which your appliance was placed on the market.
For more information, please contact our Customer Service team.
Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

Helpline no.: 1800-266-1880 (Monday to Saturday – 8 am to 8 pm)
Email ID: service.in@bosch-home.com
Chat with us (WhatsApp): +91-8451000555

Warranty conditions

Warranty Terms & Conditions:

1. The warranty period for this product will be for 2 years from the date of purchase.
2. The warranty can be availed only by the first purchaser of the appliance and is non-transferable.
3. The warranty covers manufacturing defect in material and workmanship that arises despite normal operation and usage of the appliance as prescribed in the operating manual.
4. ln case of the product being tampered with or attempted to be repaired by unauthorised personnel, then the warranty terms will be void and the company shall have no further obligations under warranty. Further, the customer waives all rights against the company which has arisen due to the breach of the warranty terms by the customer.
5. ln the event that the company decides to provide a replacement/ refund of the product during this warranty period, customers are mandated to carry the product to the specified service centre/ authorised dealer at their own cost.
6. The warranty coverage is not applicable outside India.
7. ln case of replacement, the replaced product will be warranted only for the remaining of the original warranty period
8. The Company shall not have any liability nor deemed to be in default of warranty obligations for any delay or failure in performance of warranty obligations resulting from causes beyond its reasonable control
   (e.g. strikes, floods, earthquakes etc.) including delay in servicing due to non-availability of product.
9. The Company gives no warranties other than those stated above and specifically excludes any implied warranty of fitness for any particular purpose.
10. ln the event of change of address, the new address shall be intimated to the given toll-free number.
11. ln case repair cannot be completed onsite, the company reserves the right to carry the appliance to its Authorized Service Center and return the same after repair.

Warranty is not applicable in any of the following cases:

1. The warranty card is not duly filled and does not bear the stamp, date and signature of an Authorised Dealer.
2. The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the appliance not in accordance with the operating manual.
3. The appliance has been subjected to improper use such as not following DFU/ User Manual provided by the company, misused, not cared for, abnormal use, exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles, faulty electric wiring/ cabling, abnormal voltage/ power supply beyond appliance specifications, damage/ breakage/ non-functioning of appliance due to rodents, rats, cockroaches and ants etc.
4. The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/ or rubber parts, non-operational parts and related accessories.
5. The warranty does not include preventive checks, routine maintenance, cleaning, de-scaling and overhaul.
6. The appliance is used by a commercial establishment or by an individual for commercial purpose.
7. The serial number of the appliance is removed, altered, made illegible/tampered with.
8. Damage to the product or any parts due to transportation or shifting or arising out of improper storage of the appliance at the customer's premises.

Important: Please present this warranty card to our staff at the time of service.

1) Contact the following for availing the support of your Product:
1-800-266-1880(toll free) Monday – Saturday – 8:00 am to 8:00pm
2) Email: service.in@Bosch-Home.com I Website: www.bosch-home.com/in

WARRANTY CARD

BOSCH

Customer's Name

Address

City | Pin | State

Telephone | Mobile

E-mail | Model/E-Nr

Serial No.

Date of Purchase | Date of Expiry

Dealer's Name

Dealer's Signature and Stamp | Customer's Signature

Note: Warranty will start from the date of purchase.

Customer Service

Regardless of the nature of your concern, you can always be sure of personal attention from the Bosch Customer Service: on the internet and on the phone.

India, Bhārat, भारत
BSH Household Appliances Mfg. Pvt. Ltd.
Arena House, Main Bldg, 2nd Floor, PlotNo. 103,
Road No. 12, MIDC, Andheri East
Mumbai 400093
Toll Free 1800 266 1880*
www.bosch-home.com/in
*Mon-Sat 8am to 8pm (exclude public holidays)

E-mail: service.in@bosch-home.com

Many thanks for choosing a Bosch home appliance!

Register your new appliance now on MyBosch and benefit directly from:

- **Expert advice and tips to make the most of your appliance**
- **Options for warranty extension**
- **Discounts on spare parts and accessories**
- **Digital information for use and all appliance data to hand**
- **Easy access to Bosch Home Appliance Service**

Simple to register, free of charge – including on mobile devices:
www.bosch-home.com/welcome

Need some help? You can find it here.

Expert advice on your Bosch home appliances, help with problems or repairs by professionals from Bosch.

Discover all the different ways Bosch can assist you:
www.bosch-home.com/service

The contact details of all countries are listed in the attached service directory.

BSH Household Appliances Manufacturing Pvt. Ltd.
Arena house, 2nd floor, Main building,
Plot no 103, Road no 12, MIDC,
Andheri East, Mumbai - 400 093
www.bosch-home.in

8001365844 (051128)
en