
REFRIGERATOR

מקרר


RVC467... RVC477... RVC497...




GAGGENAU

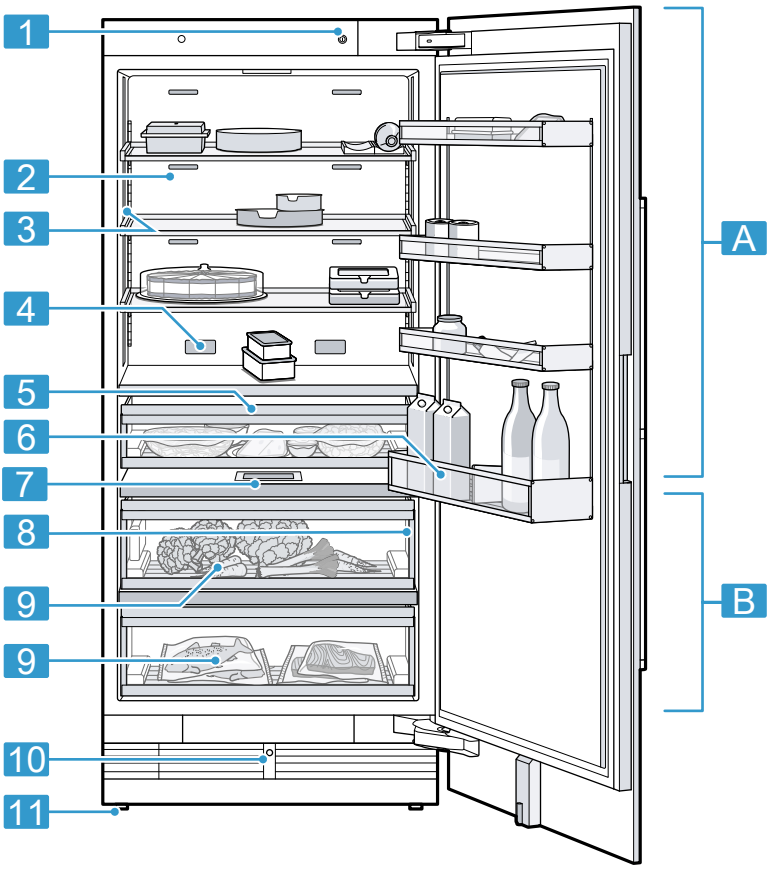


1

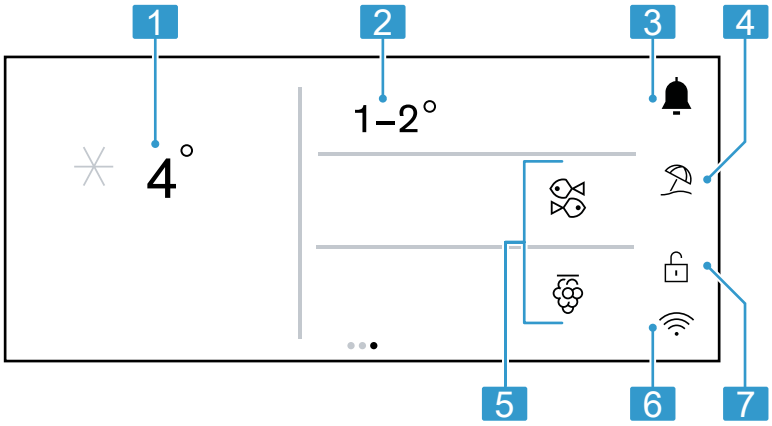


2

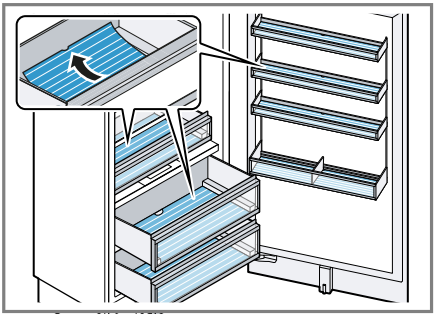


3

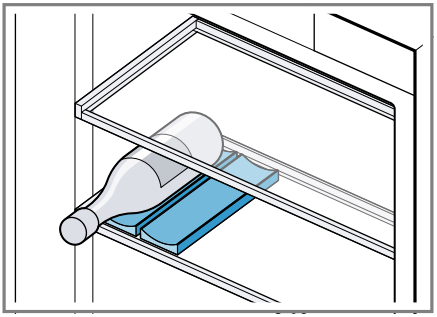


4

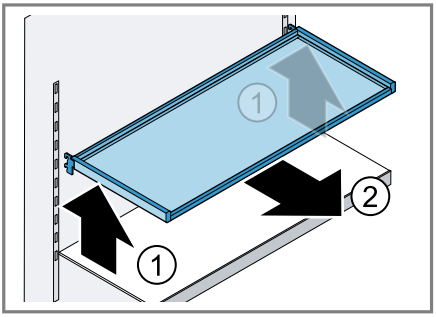


5

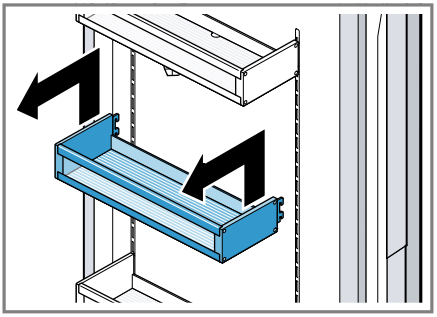


6

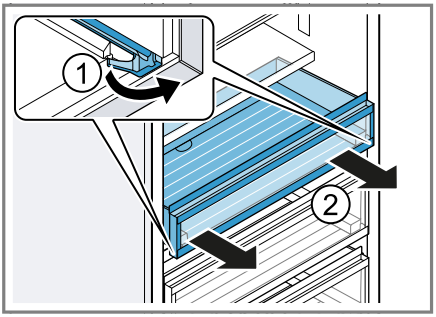

7

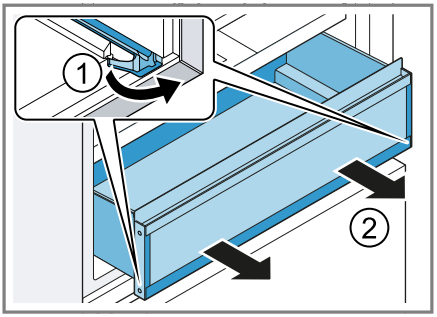

8

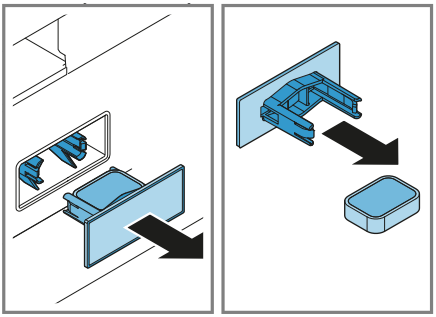

9



תוכלו למצוא מידע והסברים נוספים באינטרנט. סרקו את קוד ה-QR בעמוד השער.

תוכן העניינים

5 .....

1 בטיחות 5
1.1 הנחיות כלליות 5
1.2 שימוש בהתאם לייעוד 5
1.3 הגבלות על קבוצת המשתמשים 5
1.4 הובלה בטוחה 6
1.5 התקנה בטוחה 6
1.6 שימוש בטוח 7
1.7 מכשיר שניזוק 8

2 מניעת נזקי רכוש 9

3 שמירה על הסביבה וחיסכון באנרגיה 9
3.1 השלכת האריזה 9
3.2 חיסכון בחשמל 9

4 התקנה וחיבור 10
4.1 תכולת האריזה 10
4.2 קריטריונים למקום ההצבה 10
4.3 התקנת המכשיר 10
4.4 הכנת המכשיר לשימוש הראשון 10
4.5 חיבור המכשיר לחשמל 10

5 הכרת המכשיר שלכם 11
5.1 המכשיר 11
5.2 לוח הבקרה 11

6 אביזרים פנימיים 11
6.1 מדף 11
6.2 תא אחסון 12
6.3 מיכל אחסון בקירור 12
6.4 מדף דלת 12
6.5 מסנן ריחות 12
6.6 אביזרים 12

7 לפני ההפעלה הראשונה של המכשיר 13
7.1 ביצוע הפעלה ראשונית 13

8 הפעלה בסיסית 13
8.1 הפעלת המכשיר 13
8.2 עצות להפעלה 13
8.3 כיבוי המכשיר 13
8.4 קביעת הטמפרטורה 14
8.5 הגדרת אחסון במיכל האחסון בקירור 14
8.6 נעילת לחצנים 14

9 הגדרות בסיסיות 14
9.1 שינוי ההגדרות הבסיסיות 14
9.2 סקירת ההגדרות הבסיסיות 14

10 פונקציות נוספות 16
10.1 קירור מהיר 16
10.2 מצב חופשה 17
10.3 מנגנון סיוע לפתיחת הדלת 17
10.4 מצב חופשה 17

11 התראה 17
11.1 התראת דלת 17

12 Home Connect 17
12.1 התקנת Home Connect 18
12.2 אבחון מרחוק 18
12.3 אבטחת נתונים 18
12.4 מצב החיבור ל-Home Connect .. 18

13 הגדרות שירות 19
13.1 שינוי הגדרות שירות 19
13.2 סקירה כללית של הגדרות השירות 19

14 תא קירור 20
14.1 עצות לאחסון מוצרי מזון בתא הקירור 20
14.2 אזורי קירור בתא הקירור 20

15 מיכל אחסון בקירור 20
15.1 המלצות אחסון במיכל האחסון בקירור 20
15.2 זמני אחסון במיכל האחסון בקירור ב-0°C (32°F) 21

16 הפשרה 21
16.1 הפשרה בתא הקירור 21

16.2 הפשרה במיכל אחסון בקירור 21
17 ניקוי ותחזוקה 21
17.1 הוראות טיפול למשטחי נירוסטה ... 21
17.2 הכנת המכשיר לניקוי 21
17.3 ניקוי המכשיר 21
17.4 הסרת אבזרים 22
17.5 החלפת מסנן הריחות 22
18 תיקון תקלות 22
19 אחסון והשלכה לאשפה 24
19.1 הוצאת המכשיר משימוש 24
19.2 השלכת מכשיר הישן 24
20 שירות לקוחות 24
20.1 מספר המוצר (E-Nr.), ומספר הייצור (FD) ומספר הסדרה (Z-Nr.) 24
21 מפרטים טכניים 25
21.1 מידע לגבי תכנה פתוחה ותכנת קוד פתוח 25
22 הצהרת תאימות 26

1 בטיחות

שימו לב להוראות הבטיחות להלן.

1.1 הנחיות כלליות

- קראו בקפידה את הוראות ההפעלה.
- שמרו על הוראות ההפעלה וכן על מסמכי המוצר במקום בטוח לעיון עתידי או עבור הבעלים הבאים.
- אל תחברו את המכשיר אם התגלו נזקי הובלה.

1.2 שימוש בהתאם לייעוד

יש להשתמש במכשיר רק:

- לצינון מזון.
- במשק בית פרטי ובחדרים סגורים בסביבה הביתית.
- עד לגובה של 2000 מטר מעל פני הים.

1.3 הגבלות על קבוצת המשתמשים

מכשיר זה יכול להיות מופעל ע"י ילדים מעל מגיל 8 וע"י אנשים בעלי מגבלות פיסיות, חושיות או מנטליות או אנשים חסרי נסיון ו/או ידע, כאשר הם נמצאים תחת פיקוח או אם עברו הדרכה בקשר להפעלה בטוחה של המכשיר והבינו את הסכנות הנובעות ממנה.
אין לאפשר לילדים לשחק במכשיר.
אסור לילדים החל מגיל 3 ומתחת לגיל 8 מותר להכניס ולהוציא מוצרים מן המקרר / המקפיא.

1.4 הובלה בטוחה

⚠ אזהרה – סכנת מעידה!
המכשיר כבד מאוד, מרכז הכובד שלו ממוקם בחלקו העליון והוא עלול להתהפך.
- חובה לשנע את המכשיר על ידי שני אנשים או יותר.
- יש להוריד את המכשיר מהמשטח אך ורק כשהוא מוכן להתקנה.
- יש להשאיר את הדלת סגורה, עד שהמכשיר מאובטח בגומחת ההתקנה.

⚠ אזהרה – סכנת פציעה!
משקלו הגבוה של המכשיר עלול לגרום לפציעות בזמן ההרמה.
- אסור להרים את המכשיר לבד.

1.5 התקנה בטוחה

⚠ אזהרה – סכנת התחשמלות!
התקנה לא מקצועית היא מסוכנת.
- חברו והפעילו את המכשיר רק בהתאם למפרט המצוין בלוחית הדירוג.
- חברו את המכשיר לאספקת חשמל עם זרם חלופי רק דרך שקע המותקן כהלכה עם הארקה.
- יש להתקין כהלכה את מערכת מוליך ההגנה של ההתקנה החשמלית הביתית.
- אין לצייד את המכשיר בהתקן כיבוי חיצוני, לדוגמה, טיימר או שלט רחוק.
- כאשר המכשיר הורכב, על התקע של כבל החשמל להיות נגיש, או אם גישה חופשית בלתי אפשרית, יש לשלב בהתקנה החשמלית הקבועה מפסק בידוד בהתאם לכללי ההתקנה.
- בעת התקנת המכשיר, בדקו שכבל החשמל לא נתפס או לא ניזוק.

בידוד פגום של הכבל החשמלי מהווה סכנה.
- אין להביא את הכבל החשמלי במגע עם מקורות חום.

⚠ אזהרה – סכנת פיצוץ!
כשפתחי האוורור של המכשיר סגורים, עלולה להיווצר תערובת גז-אוויר דליקה אם קיימת דליפה במעגל הקירור.
- אין לסגור את פתחי האוורור בגוף המכשיר או בגומחת ההתקנה.

⚠ אזהרה – סכנת דליקה!
כבל חשמלי מוארך ומתאם לא מורשים מהווים סכנה.
- אין להשתמש בכבל מאריך או במפצל שקעים.
- מותר להשתמש רק במתאם ובכבלי חשמל המורשים ע"י היצרן.
- כאשר כבל החשמל קצר מדי ואין כבל חשמל ארוך יותר, צרו קשר עם חשמלאי כדי להתאים את ההתקנה בבית.

מפצל שקעים או יחידות ניידות לאספקת חשמל עלולים להתחמם ולגרום לדליקה.
- אין למקם מפצל שקעים או יחידות ניידות לאספקת חשמל בגב המכשיר.

⚠ אזהרה – סכנת מעידה!
המכשיר כבד מאוד, מרכז הכובד שלו ממוקם בחלקו העליון והוא עלול להתהפך.
- חובה להתקין את המכשיר על ידי שני אנשים או יותר, מיד לאחר שהנעילה שלו הוסרה והוא הורד מהמשטח.
- אבטחו את המכשיר באמצעות התושבת המצורפת למניעת התהפכות.
- יש להשגיח על המכשיר בעת ההתקנה.

⚠ זהירות – סכנת היחתכות!
בעת מגע, שוליים חדים של המכשיר עלולים לגרום לפציעות חתך.
- לבשו כפפות הגנה.

1.6 שימוש בטוח

⚠ אזהרה – סכנת התחשמלות!
חדירת לחות עלולה לגרום להתחשמלות.
- מותר להשתמש במכשיר רק בחדרים סגורים.
- אין לחשוף את המכשיר לחום וללחות גבוהים.
- אין לנקות את המכשיר במכשיר ניקוי בקיטור או בלחץ גבוה.

⚠ אזהרה – סכנת חנק!
ילדים עלולים לכסות את הראש באריזות ולהילכד ולהיחנק בהן.
- הריחקו את האריזות מהילדים.
- אין להתיר לילדים לשחק בחומרי האריזה.

ילדים עלולים לשאוף או לבלוע חלקים קטנים ולהיחנק.
- יש להרחיק חלקים קטנים מילדים.
- אין להתיר לילדים לשחק בחלקים קטנים.

⚠ אזהרה – סכנת פיצוץ!
נזק למעגל הקירור עלול לגרום לדליפת חומר קירור דליק ולפיצוץ.
- אין להשתמש במכשירים מכניים או באמצעים אחרים מאלה המומלצים בידי היצרן כדי להאיץ את תהליך ההפשרה.
- חילוץ של מזון שקפא ונתקע ייעשה בעזרת מכשיר קהה כמו כף עץ.

מוצרים המכילים חומרים דליקים או נפיצים עלולים להתפוצץ, למשל מיכלי תרסיס.
- אין לאחסן במכשיר מוצרים המכילים גזים דליקים וחומרים נפיצים.

⚠ אזהרה – סכנת דליקה!
מכשירי חשמל בתוך המכשיר עלולים לגרום לדליקה, למשל תנורי חימום או מייצרי קרח חשמליים.
- אין להפעיל מכשירי חשמל בתוך המכשיר.

⚠ אזהרה – סכנת פציעה!
מיכלים שבהם משקאות מוגזים עלולים להתפוצץ.
- אין לאחסן מיכלים עם משקאות מוגזים במיכל האחסון בקירור בטמפרטורה נמוכה מ-1°C (34°F).

סכנת לפציעות עיניים עקב דליפה של חומר קירור דליק וגזים רעילים.
- אין לפגוע בצינורות מעגל הקירור והבידוד.

⚠ זהירות – סכנה לנזק בריאותי!
כדי להימנע מזיהום המזון, פעלו לפי ההוראות שלהלן.
- אם הדלת נשארת פתוחה זמן רב, הטמפרטורה בתאי המכשיר עלולה לעלות משמעותית.
- נקו באופן קבוע את המשטחים ומערכות הניקוז הנגישות העלולים לבוא במגע עם מזון.
- אחסנו במקרר בשר ודגים בכלים מתאימים כך שהם לא יגעו במוצרי מזון אחרים או יטפטפו עליהם.
- אם המקרר/המקפיא עומד ריק במשך זמן רב, כבו את המכשיר, הפשירו אותו, נקו אותו והשאירו את הדלת פתוחה כדי למנוע היווצרות עובש.

חלקים במכשיר העשויים מתכת או בעלי מראה מתכתי עשויים להכיל אלומיניום. כאשר מזונות חומציים באים במגע עם אלומיניום, יוני אלומיניום עלולים לחדור למזון.
- אין לצרוך מזון מזוהם.

1.7 מכשיר שנידזוק

⚠ אזהרה – סכנת התחשמלות!
מכשיר פגום או חיבור חשמלי פגום מהווים סכנה.
- לעולם אין להפעיל מכשיר שנידזוק.
- אין למשוך את הכבל החשמלי, כדי לנתק את המכשיר מהחשמל. שלפו תמיד את התקע של כבל החיבור לחשמל.
- שלפו מיד את התקע של הכבל החשמלי אם המכשיר או הכבל החשמלי נזוקו או נתקו את הנתיך בתיבת הנתיכים.
- פנו לשירות הלקוחות. ←*עמוד 24*

תיקונים לא מקצועיים עלולים להיות מסוכנים.
- רק בעלי מקצוע מיומנים רשאים לבצע תיקונים במכשיר.
- מותר להשתמש רק בחלקי חילוף מקוריים לצורך תיקון המכשיר.
- במקרה של נזק לכבל חיבור החשמל או לכבל החשמל של המכשיר, יש להחליפו בכבל חיבור חשמל או בכבל חיבור חשמל מיוחד, אותו ניתן להשיג אצל היצרן או אצל שירות הלקוחות שלו.

⚠ אזהרה – סכנת דליקה!



במקרה של נזק לצינורות, נוזל קירור דליק וגזים מזיקים עלולים להיפלט ולהתלקח.

- ◂ הרחיקו מקורות אש והצתה מהמכשיר.
- ◂ אווררו את החדר.
- ◂ כבו את המכשיר.
- ◂ נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
- ◂ התקשרו לשירות הלקוחות. ←*עמוד 24*

2 מניעת נזקי רכוש

שימו לב

משקלו הכבד של המכשיר או הטיית גלגלי המכשיר עלולים להזיק לרצפה בעת הזזת המכשיר.

- ◂ יש להוביל את המכשיר באמצעות עגלת יד להובלת מטען.
- ◂ בעת הזזת המכשיר הגנו על הרצפה ואל תובילו אותו בתנועת זיגזג.

שימוש בבסיס, במגירות או בדלתות המכשיר כמשטח ישיבה או טיפוס עלול לגרום נזק למכשיר.

- ◂ אין לדרוך או להישען על הבסיס, המגירות או הדלתות.

לכלוך של שמן או שומן על חלקי פלסטיק ואטמי דלתות עלול לגרום להם להתייבש ולהתפורר.

- ◂ שמרו על חלקי הפלסטיק ואטמי הדלת נקיים משמן ומשומן.

חלקים במכשיר העשויים מתכת או הנראים מתכתיים עשויים להכיל אלומיניום. במגע עם מזונות חומציים, האלומיניום מחליד ומשנה את צבעו.

- ◂ יש לאחסן במכשיר מוצרי מזון ארוזים בלבד.

ניקוי אביזרים וחלקים של המכשיר במדיח הכלים עלול לגרום להם להתעוות או לשנות את צבעם.

- ◂ לעולם אין לנקות חלקים ואביזרים במדיח הכלים.

3 שמירה על הסביבה וחיסכון באנרגיה

3.1 השלכת האריזה

כל חומרי האריזה ידידותיים לסביבה וניתנים למחזור.

- ◂ מיינו את הרכיבים השונים בנפרד לפי סוג.

3.2 חיסכון בחשמל

אם תקפידו על הנחיות אלה, המכשיר יצרוך פחות חשמל.

בחירת מקום ההצבה

- ▪ הגנו על המכשיר מפני קרינת שמש ישירה.
- ▪ הציבו את המכשיר במרחק גדול ככל האפשר מגופי חימום, כיריים ומקורות חום אחרים:
  - – שמרו על מרחק של 30 מ"מ מכיריים חשמליות או מכיריים גז.
  - – שמרו על מרחק של 300 מ"מ מתנורי נפט או פחם.
- ▪ לעולם אין לכסות או לחסום את פתחי האוורור החיצוניים.

שימוש חסכוני באנרגיה

הערה: סידור אביזרי המכשיר אינו משפיע על צריכת האנרגיה שלו.

- ▪ פתחו את המכשיר לזמן קצר בלבד, וסגרו אותו היטב.

- לעולם אין לכסות או לחסום את פתחי האוורור הפנימיים או את פתחי האוורור החיצוניים.
- הובילו את מוצרי המזון שרכשתם בצידנית והכניסו אותם במהירות למכשיר.
- הניחו למוצרי מזון ומשקאות חמים להתקרר לפני שאתם מכניסים אותם למכשיר.
- כדי לנצל את הקור של פריטי מזון קפואים, הפשירו אותם בתא הקירור.
- השאירו תמיד מעט רווח בין מוצרי המזון והדופן האחורית.

לוח הבקרה של מצב חיסכון באנרגיה

כאשר המכשיר אינו בשימוש לוח הבקרה עובר אוטומטית למצב חיסכון באנרגיה.
בלוח הבקרה של מצב חיסכון באנרגיה התצוגה כבויה.
ברגע שאתם בוחרים בלוח הבקרה או פותחים את הדלת, מצב החיסכון באנרגיה מושבת.

4 התקנה וחיבור

4.1 תכולת האריזה

לאחר הוצאת כל החלקים מהאריזה בדקו שלא נגרם נזק כלשהו בעת ההובלה ושכל החלקים נמצאים.
במקרה של תלונות, פנו אל הסוכן או אל שירות הלקוחות ←*עמוד 24*.

המשלוח כולל את החלקים הבאים:

- ציוד ואביזרים [1]
- חומרים להתקנה
- הוראות התקנה
- הוראות הפעלה
- רשימת מוקדי שירות לקוחות
- כתב אחריות [2]
- תווית אנרגיה
- מידע לגבי צריכת החשמל והרעשים
- מידע על Home Connect

4.2 קריטריונים למקום ההצבה

⚠ אזהרה
סכנת פיצוץ!
אם המכשיר עומד בחדר קטן, ייתכן שבמקרה של דליפת חומר קירור תיווצר תערובת גז-אוויר נפיצה.
- הציבו את המכשיר רק בחדר בגודל של לפחות 1 מ"ק לכול 8 גרם חומר קירור. כמות חומר הקירור מצוינת על לוחית הנתונים.
  ←*"המכשיר", איור* 1/8 *עמוד 11*

משקל המכשיר יכול להגיע בהתאם לדגם עד ל-190 ק"ג.
הרצפה שעליה ניצב המכשיר צריכה להיות יציבה מספיק כדי לשאת את משקלו.
מכשיר קירור זה מיועד לשימוש בטמפרטורות סביבה של 10°C עד 43°C.
המכשיר מסוגל לפעול באופן תקין בטווח הטמפרטורות המותרות בחדר.
אם מפעילים המכשיר בחדר שהטמפרטורה בו נמוכה יותר, לא ייגרמו נזקים למכשיר עד לטמפרטורת חדר של 5°C.

4.3 התקנת המכשיר

- התקינו את המכשיר על פי הוראות ההתקנה המצורפות.

4.4 הכנת המכשיר לשימוש הראשון

1. הוציאו את דפי המידע.
2. הסירו את יריעות ההגנה ומגני ההובלה, לדוגמה פסי הדבקה וקרטונים.
3. נקו את המכשיר בפעם הראשונה. ←*עמוד 21*

4.5 חיבור המכשיר לחשמל

1. יש להכניס את התקע של כבל החשמל למכשיר.

[1] בהתאם לאבזור המכשיר
[2] לא בכל המדינות

2. יש להכניס את תקע של כבל חשמל של המכשיר לשקע בקרבת המכשיר.
נתוני החיבור של המכשיר מצוינים בלוחית הדגם.
←"המכשיר", איור 1 / 8 עמוד 11
3. בדקו שהתקע הוכנס במלואו.
✔ המכשיר מוכן כעת לפעולה.

5 הכרת המכשיר שלכם

5.1 המכשיר

כאן תוכלו למצוא סקירה של רכיבי המכשיר.
←איור 1

A	תא קירור ←עמוד 20
B	מיכל אחסון בקירור ←עמוד 20
1	מתג ראשי
2	פתחי אוורור פנימיים (תא הקירור)
3	תאורה
4	מסנן ריחות ←עמוד 12
5	תא אחסון ←עמוד 12
6	מתלה דלת לבקבוקים גדולים ←עמוד 12
7	לוח בקרה ←עמוד 11
8	תווית נתונים ←עמוד 25 [1]
9	מיכל אחסון בקירור ←עמוד 12
10	מנגנון סיוע לפתיחת הדלת ←עמוד 17
11	רגלית מתברגת

5.2 לוח הבקרה

השתמשו בלוח הבקרה כדי לקבוע את כל הפונקציות של המכשיר ולקבל מידע על מצב הפעולה שלו.
←איור 2

1	מאפשר הגדרות בתא הקירור.
2	מציג את הטמפרטורה של תא האחסון ב-°C או °F.
3	פותח את מרכז ההתראות.
4	מציג את המצב המוגדר.
5	מאפשר הגדרות במיכל האחסון בקירור.
6	מציג את המצב של Home Connect, לדוגמה אם Home Connect מופעל או כבוי.
7	מפעיל או מכבה את נעילת לוח הלחצנים של הצג.

עיקרון הפעלה

ישנם אזורים אחדים בצג המגיבים למגע. הקישו על לחצנים כדי להפעיל הגדרות. ההגדרות המופעלות מודגשות בצג. ניתן לשנות או לבטל הגדרות פעילות על ידי לחיצות חוזרות על הלחצנים המתאימים בצג.

שימו לב

לחץ מופרז על הצג עלול לגרום לנזק.
- אל תפעיל לחץ חזק על הצג.
- אל תלחץ על הצג עם חפצים חדים או דוקרים.

סמל	תיאור
ⓘ	הצגת מידע נוסף בצג
⊙	הפעלת פונקציה
⊙	כיבוי פונקציה

6 אבזרים פנימיים

האבזור של מכשירכם תלוי בדגם שרכשתם.

6.1 מדף


שימו לב

כאשר המדף תלוי באלכסון הוויים שלו עלולים לשרוט את הדופן האחורית של תא הקירור.
- ודאו שהמדף מונח בצורה אופקית מאוזנת ושהווים מחוברים במלואם.

[1] בהתאם לאבזור המכשיר

כדי לשנות את מיקום המדף לפי הצורך אתם יכולים להוציא את המדף ולהכניס אותו במקום אחר.
←*"הוצאת מדף", עמוד 22*

הערה: כדי שלא להפריע לזרימת האוויר, אין לכסות את פתחי האוורור הפנימיים.

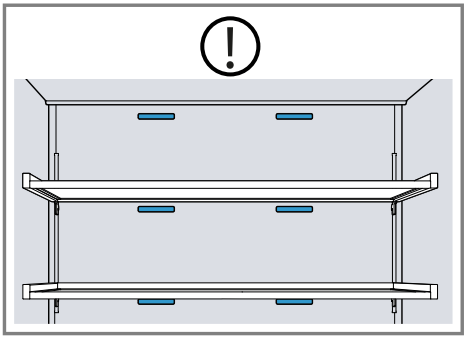

6.2 תא אחסון

הטמפרטורות בתא האחסון נמוכות מאלו שבתא הקירור. מדי פעם יכולות להתפתח טמפרטורות הנמוכות מ-0°C.
כדי להגיע לטמפרטורות קרובות ל-0 °C בתא האחסון, כוונו טמפרטורה של 2 °C, במכל האחסון.
השתמש בטמפרטורות הנמוכות יותר בתא האחסון לצורך שמירה של מזון מתכלה כגון דגים, בשר ונקניק.

6.3 מיכל אחסון בקירור

כדי להגדיר במיכל האחסון בקירור באופן אוטומטי את לחות האוויר והטמפרטורה הנכונות למוצרי המזון שלכם, השתמשו בהגדרות האחסון השונות של מיכל האחסון בקירור.
אחסנו פירות וירקות טריים ללא אריזות במיכל האחסון בקירור.
פירות וירקות חתוכים יש לאחסן כשהם מכוסים או ארוזים באריזה אטומה.
מטעמי היגיינה אין לאחסן פירות וירקות ביחד עם בשר ודגים במיכל האחסון בקירור.
ייתכן שיצטברו מי עיבוי במיכל האחסון בקירור, בהתאם לכמות המזון וסוגו.
נגבו את מי העיבוי באמצעות מטלית יבשה.
כדי לשמר את האיכות והארומה, יש לאחסן פירות וירקות שרגישים לקור, תפוחי אדמה ובצל בתא הקירור הנמוך ביותר, תוך שימוש בהגדרת אחסון מתאימה.

6.4 מדף דלת

כדי לכוון את מדף הדלת לפי הצורך, ניתן להסיר אותו ולהתקין במקום אחר.
←*"הסרת מדף הדלת", עמוד 22*

6.5 מסנן ריחות

מסנן הריחות מסנן ריחות וניתן להחליפו בעת הצורך.
←*"החלפת מסנן הריחות", עמוד 22*
החליפו את מסנן הריחות כל שנה. זאת, כדי לשמור על איכות גבוהה של המסנן באופן קבוע.

6.6 אבזרים

השתמשו באבזרים מקוריים. הם מותאמים למכשיר שלכם.
אבזרי המכשיר משתנים בהתאם לדגם.

מצע נגד החלקה

המצע נגד החלקה מונע החלקת בקבוקים ומוצרי מזון.
ייתכן שיצטברו מי עיבוי על המצע נגד החלקה, בהתאם לכמות ולסוג המזון המאוחסן. במידת הצורך, הוציאו את המצע נגד החלקה ונגבו את מי העיבוי באמצעות מטלית יבשה.
←*איור* **3**

מדף בקבוקים מתכוונן

אחסנו בקבוקים בבטחה על מדף הבקבוקים המתכוונן.
←*איור* **4**

סופג אתילן

הוראות בטיחות חשובות ומידע על ההתקנה והשימוש ניתן למצוא בהוראות ההתקנה המצורפות לסופג האתילן.
סופג האתילן מאט את ההבשלה של פירות וירקות הרגישים לאתילן כדי שיישארו טריים לפרק זמן ארוך יותר.

התקנת סופג אתילן

- התקינו את סופג האתילן בהתאם להוראות ההתקנה של סופג האתילן.

שימוש בערכת מילוי

1. התקינו את הרכיבים של ערכת המילוי בהתאם להוראות ההתקנה של סופג האתילן.
2. החליפו את השקיות לפחות אחת ל-6 חודשים לאחר האיפוס.

הערה: ערכת מילוי תוכלו להשיג בשירות הלקוחות שלנו או באתר האינטרנט שלנו.

7 לפני ההפעלה הראשונה של המכשיר

7.1 ביצוע הפעלה ראשונית

דרישות

- המכשיר מותקן בהתאם להוראות ההתקנה המצורפות.
- המכשיר מחובר לחשמל. ←*עמוד 10*

1. הדליקו את המכשיר באמצעות המתג הראשי.
←*"המכשיר", איור* 1 / 1 *עמוד 11*
2. סגרו את דלת המכשיר, המתינו 3 דקות ופתחו אותה שוב.
3. בחרו שפה והקישו על ✓.
4. כדי לאשר את המידע המופיע בתצוגה, הקישו על ✓.
5. כדי להפעיל את מנגנון העזר לפתיחת הדלת, הקישו על ❯ ופעלו בהתאם להוראות בתצוגה.
6. כדי לאשר את הסיכום, הקישו על ✓.
7. כדי להשלים את השימוש הראשון, הקישו על ✓.

✔ המכשיר מופעל מחדש, ובתצוגה מופיעה אנימציה.

8. לחלופין הקישו על ⚙, בחרו בשפה הרצויה ואשרו בלחיצה על ✓.
9. הקישו על ✓.
10. להתקנה של Home Connect, הפעילו את "Home Connect assistant" בלחיצה על ❯ ופעלו לפי ההוראות בתצוגה.
11. **הערה:** אם תדלגו על "Home Connect assistant", יופיעו בתצוגה הגדרות ידניות נוספות.
   - בחרו את יחידת הטמפרטורה "°C" או "°F".
   - בחרו את תבנית השעה "12" או "24".
   - הגדירו את השעה ולחצו על ✓.
   - התחילו את ההתקנה של סופג האתילן בלחיצה על ❯ ופעלו לפי ההוראות בתצוגה.
12. כדי לאשר את המידע המופיע בתצוגה, הקישו על ✓.
13. סיימו את ההפעלה הראשונית בלחיצה על ✓.

8 הפעלה בסיסית

8.1 הפעלת המכשיר

1. הדליקו את המכשיר באמצעות המתג הראשי.
←*"המכשיר", איור* 1 / 1 *עמוד 11*

✔ המכשיר יתחיל לקרר.

2. קבעו את הטמפרטורה המבוקשת.
←*עמוד 14*

8.2 עצות להפעלה

- לאחר הפעלת המכשיר, יחלפו מספר שעות עד שהוא יגיע לטמפרטורה שנקבעה מראש.
  אין להכניס מוצרי מזון לפני הגעה לטמפרטורה שכוונה מראש.
- שימו לב שבזמן סגירת הדלת, אין מוצרים שחוסמים את הדלת.
- לאחר סגירת הדלת עשוי להיווצר ואקום. במקרה כזה, ייתכן קושי בפתיחת הדלת לאחר מכן. המתינו רגע עד שהוואקום יתפוגג.
- הטמפרטורה במכשיר משתנה כתלות בתנאים הבאים:
  – תדירות פתיחת המכשיר
  – קיבולת
  – טמפרטורת המזון הטרי המאוחסן
  – טמפרטורת הסביבה
  – חשיפה לקרינת שמש ישירה

8.3 כיבוי המכשיר

- כבו את המכשיר באמצעות המתג הראשי.
←*"המכשיר", איור* 1 / 1 *עמוד 11*

8.4 קביעת הטמפרטורה

הגדרת הטמפרטורה בתא הקירור

1. הקישו על צג הטמפרטורה (תא קירור).
2. החליקו על הגדרת הטמפרטורה הרצויה. הטמפרטורה המומלצת לתא הקירור היא 4°C (39°F).

8.5 הגדרת אחסון במיכל האחסון בקירור

אפשר לקבוע את הטמפרטורה ולחות האוויר במיכל האחסון בקירור באמצעות הגדרות אחסון שנקבעו מראש.

עצה: כוונונים נוספים אפשריים באמצעות אפליקציית Home Connect.

הגדרת אחסון במיכל האחסון בקירור

1. הקישו על הגדרת אחסון במיכל האחסון בקירור.
2. החליקו אל הגדרת האחסון המבוקשת ואשרו בלחיצה על ☾.

8.6 נעילת לחצנים

נעילת הלחצנים מונעת הפעלה לא רצויה או שגויה של המכשיר.

הערה: ניתן להפעיל או לבטל לצמיתות את נעילת הלחצנים האוטומטית.

הפעלת נעילת הלחצנים

- ◂ לחצו על 🔒 למשך 2 שניות.
- ✔ 🔒 מאיר.

ביטול נעילת הלחצנים

- ◂ לחצו על 🔒 למשך 2 שניות.

9 הגדרות בסיסיות

9.1 שינוי ההגדרות הבסיסיות

1. החליקו לכיוון "Settings".
2. החליקו והקישו על ההגדרה הבסיסית הרצויה.
3. שנו את ההגדרה הבסיסית.

9.2 סקירת ההגדרות הבסיסיות

כאן תוכלו למצוא סקירה של ההגדרות הבסיסיות ושל הגדרות היצרן. ההגדרות הבסיסיות תלויות במאפייני המכשיר.

♫ Sounds

הגדרה	בחירה	תיאור
Interaction sounds	"Quiet"/"Loud"/"Standard"/"Off""	הפעלה, הגדרה או כיבוי של צלילי פעולות.
Notification sounds	"Quiet"/"Loud"/"Standard"/"Off""	הפעלה, הגדרה או כיבוי של צליל ההודעות.

☼ Interior lighting

הגדרה	בחירה	תיאור
Brightness	1 - 6 ⊙/◉	הגדרת התאורה הפנימית מ-1 עד 6. הפעלה או כיבוי של התאורה הפנימית האוטומטית.
Light interaction	⊙/◉	הפעלה או כיבוי של תאורה מותאמת אישית בעת הפעלת המכשיר.

Notifications

הגדרה	בחירה	תיאור
Info layer	⊙/◉	הפעלה או כיבוי של המידע בתצוגה.
Pop-up hints	⊙/◉	הפעלה או כיבוי של המידע הנוסף בתצוגה.
Hidden notifications	Reset	תצוגה חוזרת של הודעות שהוסתרו.

Language

הגדרה	בחירה	תיאור
Language	ראו מידע בתצוגה.	הגדרת שפת התפריט.

Time & Units

הגדרה	בחירה	תיאור
Time	ראו מידע בתצוגה. ⊙/◉	עקבו אחר ההנחיות המופיעות בתצוגה והגדירו את השעה. הפעלה או כיבוי של השעה האוטומטית.
Time format	"12"/"24"	הגדרת תבנית השעה.
Temperature unit	"°C"/"°F"	הגדרת יחידת הטמפרטורה.

Advanced

הגדרה	בחירה	תיאור
Demo mode	⊙/◉	הפעלה או כיבוי מצב הדגמה. במצב הדגמה המכשיר אינו מקרר. **הערה:** מצב הדגמה זמין לזמן מוגבל לאחר הפעלת המכשיר.
Display rest mode	⊙/◉	הפעלה או כיבוי של הטיימר לטווח ארוך.
Factory settings	Restore	איפוס המכשיר להגדרות היצרן.

Appliance

הגדרה	בחירה	תיאור
Door opening assist	ראו מידע בתצוגה.	הפעלה או ביטול של מנגנון העזר לפתיחת הדלת. מנגנון סיוע לפתיחת הדלת ←עמוד 17

הגדרה	בחירה	תיאור
Introduction to the appliance	Start	היכרות עם המכשיר וביצוע התאמות אישיות.

Home network

הגדרה	בחירה	תיאור
WiFi	⊙/●	הפעלה או כיבוי של ה-"WiFi".
Home Connect assistant	ראו מידע בתצוגה.	התקנת Home Connect. ←עמוד 18
Network information	ראו מידע בתצוגה.	מציג מידע על רשת Home Connect.
Network credential reset	Confirm	איפוס הגדרות Home Connect.

Display

הגדרה	בחירה	תיאור
Brightness	1 - 6 ⊙/●	הגדרה של תאורת התצוגה מ-1 עד 6. הפעלה או כיבוי של תאורת הצג האוטומטית.
Simplified home screen	⊙/●	הפעלה או כיבוי של מצב חיסכון באנרגיה. במצב חיסכון באנרגיה מופיע בתצוגה תוכן מצומצם, בדגש על מגירות פתוחות.
Child lock	ראו מידע בתצוגה.	הפעלה או כיבוי של "Child lock".

10 פונקציות נוספות

גלו מהן הפונקציות הנוספות שאתם יכולים להשתמש בהן במכשיר שלכם. ניתן להגדיר פונקציות נוספות באמצעות אפליקציית Home Connect.

10.1 קירור מהיר

האפשרות קירור מהיר מביאה את תא הקירור לרמת הקור הכי גבוהה שאפשר.
הפעילו את קירור מהיר לפני הכנסת כמות גדולה של מוצרי מזון לתא הקירור.

הערה: כאשר האפשרות קירור מהיר מופעלת ייתכנו רעשים רבים מהרגיל.

הפעלת קירור מהיר

1. הקישו על צג הטמפרטורה (תא קירור).
2. הקישו על ✳.

✔ ✳ מהבהב בצג הטמפרטורה (תא הקירור).

הערה: לאחר כ-6 שעות המכשיר יעבור לפעולה רגילה.

כיבוי קירור מהיר

1. הקישו על צג הטמפרטורה (תא קירור).
2. הקישו על ✳.

✔ ✳ יכבה בתצוגת הטמפרטורה (תא קירור).
✔ הטמפרטורה שנקבעה קודם לכן תוצג.

10.2 מצב חופשה

לפני היעדרות ממושכת, ניתן להפעיל במכשיר מצב חופשה, החסכוני בחשמל.

⚠ זהירות
סכנה לנזק בריאותי!
כאשר מצב החופשה מופעל, תא הקירור מתחמם. טמפרטורה גבוהה עלולה להוביל להתרבות חיידקים וכך לקלקול מזון.
- כאשר מצב החופשה מופעל, אין לאחסן מוצרי מזון בתא הקירור.

המכשיר משנה את הטמפרטורה באופן אוטומטי.

תא קירור	14 °C (58 °F)
מיכל אחסון בקירור	טמפרטורה ללא שינוי

הערה: 'מידע על האופן שבו מפעילים את מצב החופשה, ניתן למצוא בהגדרות השירות. ←*עמוד 19*

10.3 מנגנון סיוע לפתיחת הדלת

מנגנון העזר לפתיחת הדלת מסייע בפתיחת הדלת.

הערה: בהגדרות הבסיסיות תוכלו למצוא כיצד להפעיל, להגדיר או לכבות את מנגנון העזר לפתיחת הדלת. ←*עמוד 15*

פתיחת הדלת באמצעות מנגנון העזר לפתיחת הדלת

שימו לב
סגירה מוקדמת חוזרת ונשנית של הדלת עלולה להוביל לבלאי או לכשל של מנגנון העזר לפתיחת הדלת.
לעולם אין לסגור את הדלת כל עוד מנגנון העזר בתהליך פתיחה.
- אם בכל זאת סגרתם את הדלת, השאירו אותה סגורה למשך 5 דקות. מנגנון העזר לפתיחת הדלת מאתחל את עצמו.

1. לחצו על הדלת במרכזה.
✔ מנגנון העזר לפתיחת הדלת נשלף ופותח מרווח קטן בדלת.
2. פתחו את הדלת ידנית.
אם לא תפתחו את הדלת לרווחה תוך 3 שניות, מנגנון העזר לפתיחת הדלת יחזור למקומו והדלת תיסגר.

10.4 מצב חופשה

טיימר לטווח ארוך משבית את כל הפונקציות שאינן הכרחיות.

הפונקציות הבאות כבויות במצב חופשה:
- קירור מהיר
- התראה
- תאורה פנימית
- אותות קוליים
- הודעות בלוח הבקרה

הערות
- במצב חופשה תאורת לוח הבקרה מופחתת.
- בהגדרות הבסיסיות תוכלו למצוא כיצד להפעיל את מצב החופשה. ←*עמוד 15*

11 התראה

11.1 התראת דלת

אם דלת המכשיר נותרת פתוחה למשך זמן מה, תופעל התראת דלת.
נשמע צליל אזהרה ו-🔔 "Door alarm cooling compartment" מופיע בתצוגה.

כיבוי התראת הדלת
- סגרו את דלת המכשיר או הקישו על 🔔.
✔ צליל האזהרה כבוי.

12 Home Connect

מכשיר זה ניתן לשימוש ברשת אלחוטית. חברו את המכשיר למכשיר נייד על מנת לשלוט בפעולות שלו באמצעות אפליקציית Home Connect.
שירותי Home Connect אינם זמינים בכל מדינה. זמינותה של פעולת Home Connectתלויה בזמינות שירותי Home Connect בארצכם. מידע בנוגע לכך ניתן למצוא ב: *www.home-connect.com*.

על מנת להשתמש ב-Home Connect, התקינו תחילה חיבור לרשת הביתית WLAN (Wi-Fi[1]) ולאפליקציית Home Connect. לאחר הפעלת המכשיר, המתינו לפחות 2 דקות עד לסיום האתחול הפנימי של המכשיר. רק לאחר מכן הגדירו את Home Connect.
האפליקציה Home Connect תנחה אתכם לאורך כל תהליך החיבור. פעלו לפי ההוראות ושימו לב למידע באפליקציה Home Connect.

הערות

- הקפידו על הוראות הבטיחות המופיעות בהוראות ההפעלה האלה גם כאשר הפעלת המכשיר מתבצעת באמצעות אפליקציית Home Connect.
  ←*"בטיחות", עמוד 5*
- יש תמיד עדיפות להפעלה במכשיר עצמו. בזמן זה, ההפעלה באמצעות אפליקציית Home Connect לא אפשרית.

12.1 התקנת Home Connect

דרישה: למכשיר יש במקום ההצבה קליטת רשת ביתית אלחוטית (Wi-Fi).

1. סרקו את קוד ה-QR הבא.



תוכלו להשתמש בקוד ה-QR כדי להתקין את האפליקציה Home Connect ולחבר את המכשיר שלכם.

2. עקבו אחר ההנחיות המופיעות באפליקציה Home Connect.

12.2 אבחון מרחוק

שירות הלקוחות יכול להיכנס למכשיר שלכם באמצעות השליטה מרחוק, אם תפנו בשאלה המתאימה לשירות הלקוחות, המכשיר Home Connect מחובר לשרת והשליטה מרחוק זמינה במדינה בה מופעל המכשיר.

עצה: מידע נוסף וכן הוראות לזמינות השליטה מרחוק במדינה שלכם ניתן למצוא באיזור השירות/תמיכה של אתר האינטרנט המקומי: *www.home-connect.com*.

12.3 אבטחת נתונים

שימו לב להנחיות המתייחסות לאבטחת הנתונים.

כשמחברים את המכשיר בפעם הראשונה לרשת ביתית המחוברת לאינטרנט, המכשיר מעביר את סוגי הנתונים הבאים לשרת Home Connect (הרשמה ראשונית):

- מזהה מכשיר ייחודי (המורכב מקודי המכשיר ומכתובת ה-MAC של מודול תקשורת ה-Wi-Fi המובנה).
- אישור האבטחה של מודול תקשורת ה-Wi-Fi (המיועד לאבטחה טכנית של המידע בחיבור).
- גרסאות התוכנה והחומרה הנוכחיות של המכשיר.
- הסטטוס של כל איפוס קודם להגדרות היצרן.

הרשמה ראשונית זו מכינה את השימוש בפונקציות Home Connect והיא נדרשת רק כאשר ברצונכם להשתמש בפונקציות Home Connect בפעם הראשונה.

הערה: שימו לב, שפונקציות Home Connect יהיו שימושיות רק באמצעות אפליקציית Home Connect. מידע על הגנת הנתונים ניתן למצוא באפליקציית Home Connect.

12.4 מצב החיבור ל-Home Connect

כאן תמצאו סקירה לגבי מצב החיבור ל-Home Connect.

[1] Wi-Fi הוא סמל מסחרי רשום של Wi-Fi Alliance.

13 הגדרות שירות

ניתן לבצע הגדרות שירות שונות.

13.1 שינוי הגדרות שירות

1. החליקו לכיוון "Modes & Service".
2. החליקו והקישו על הגדרת השירות הרצויה.
3. שנו את הגדרת השירות.

סמל	תיאור
	המכשיר מחובר לאפליקציית Home C onnect.
	המכשיר אינו מחובר לאפליקציית Home C onnect.
	למכשיר אין חיבור לרשת הביתית.
	האבחון מרחוק מופעל.

13.2 סקירה כללית של הגדרות השירות

כאן תמצאו סקירה כללית של הגדרות השירות.

Quick guide

הגדרה	בחירה	תיאור
Cooling drawer removal Air filter replacement Ethylene absorber replacement	ראו מידע בתצוגה.	מציג את ההוראות צעד אחר צעד בתצוגה. לחצו על המדריך הרצוי ופעלו בהתאם להוראות שבתצוגה.

Holiday mode

הגדרה	בחירה	תיאור
Holiday mode	⊙/◉	הפעלה או כיבוי של מצב חופשה. ← *"מצב חופשה", עמוד 17*

Filter management

הגדרה	בחירה	תיאור
Air filter saturation Ethylene absorber saturation	ראו מידע בתצוגה.	מציג את המצב של מסנן הריחות. מציג את המצב של סופג האתילן.

Appliance information

הגדרה	בחירה	תיאור
E-Number: Serial number: FD (production date): Z-Number: MAC-Address:	ראו מידע בתצוגה.	מציג מידע על המכשיר.

הגדרה	בחירה	תיאור
WiFi SSID:		
IPv4-Address:		
IPv6-Address:		

14 תא קירור

בתא הקירור אפשר לאחסן מוצרי חלב, ביצים, אוכל מבושל, מאפים, קופסאות שימורים פתוחות וגבינה צהובה.
אפשר לכוון טמפרטורה בין 2°C (46°F) ל-8°C (36°F).
בתא הקירור ניתן לאחסן לזמן קצר עד בינוני גם מוצרי מזון המתקלקלים בקלות. ככל שתבחרו טמפרטורה נמוכה יותר, כך יישמרו מוצרי המזון טריים לזמן ארוך יותר.

14.1 עצות לאחסון מוצרי מזון בתא הקירור

- הכניסו רק מוצרי מזון טריים ולא פגומים.
- אחסנו את מוצרי המזון כשהם ארוזים או מכוסים בצורה אטומה.
- כדי שלא להפריע לזרימת האוויר וכדי למנוע קפיאת מזון, אין להניח את המזון לפני פתחי האוורור הפנימיים או בצמוד לדופן האחורית הפנימית.
- הניחו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר.
- שימו לב לתאריך התפוגה שציין היצרן.

14.2 אזורי קירור בתא הקירור

מערכת הקירור בסחרור אוויר מפזרת את האוויר באופן אחיד בתא הקירור ומבטיחה טמפרטורה קבועה בכל המדפים.

האזור הקר ביותר

האזור הקר ביותר הוא על לוח המחיצה ובמדף הדלת לבקבוקים גדולים.

עצה: אחסנו מוצרי מזון המתקלקלים בקלות במיכל האחסון בקירור, לדוגמה דגים, נקניק ובשר.
←*"מיכל אחסון בקירור", עמוד 20*

15 מיכל אחסון בקירור

במיכל האחסון בקירור ניתן לשמור על טריות מוצרי מזון לזמן ארוך פי שלוש בהשוואה לתא הקירור.
אפשר לקבוע טמפרטורה באמצעות כוונוני האחסון שנקבעו מראש, 0°C (32°F) עד 3°C (37°F).
האחסון בתא הצינון מאפשר שמירה טובה יותר על איכות המזון המאוחסן. הטמפרטורה הנמוכה ולחות האוויר המיטבית מבטיחות תנאי אחסון אידאליים למוצרי מזון טריים.

15.1 המלצות אחסון במיכל האחסון בקירור

הגדרת אחסון	מוצרי מזון
Fruit & Vegetables	עירוב של פירות וירקות
Fruit	פירות
Vegetables	ירקות
Meat	בשר
Fish	דגים
Beverages	משקאות
Cold cuts/ Sausages	בשר פרוס ונקניקים
Cheese	גבינות ומוצרי חלב
Mixed load	מגוון מוצרים
תפוחי אדמה	תפוחי אדמה
בצל	בצל ושום
פירות וירקות רגישים לקור	פירות הדר, מלפפונים, פלפלים ועגבניות

עצה: פירות, ירקות, משקאות וחטיפים עלולים לקפוא בטמפרטורה הנמוכה מ-0°C (32°F).
השתמשו בהגדרות האחסון Meat ו-Fish עבור "Meat" ו-"Fish" בלבד.

15.2 זמני אחסון במיכל האחסון בקירור ב-C°0 (F°32)

זמני האחסון תלויים באיכות המקורית של מוצרי המזון.

מוצרי מזון	זמן אחסון
דגים טריים, פירות ים	עד 3 ימים
עוף, בשר (מבושל/מטוגן)	עד 5 ימים
בקר, בשר לבן, כבש, נקניקיות (בשר קר)	עד 7 ימים
דג מעושן, ברוקולי	עד 14 ימים
חסה, שומר, משמשים, שזיפים	עד 21 ימים
גבינת ברי, יוגורט, גבינה לבנה, ריוויון, כרובית	עד 30 ימים

16 הפשרה

16.1 הפשרה בתא הקירור

תא הקירור של מכשירכם מפשיר אוטומטית.

16.2 הפשרה במיכל אחסון בקירור

מיכל האחסון בקירור של מכשירכם מפשיר אוטומטית.

17 ניקוי ותחזוקה

ניקוי המקומות הלא נגישים חייב להתבצע ע"י שירות הלקוחות. הניקוי ע"י שירות הלקוחות עלול לעלות כסף.

17.1 הוראות טיפול למשטחי נירוסטה

השתמש לצורך הטיפול והניקוי של משטחי נירוסטה רק בחומרי ניקוי ומטליות ניקוי שמתאימים לנירוסטה.

עצות

- כדי למנוע שריטות גלויות, נגב את משטח הנירוסטה בכיוון המרקם של פני השטח.
- ניתן לקנות את חומרי הניקוי ומטליות הניקוי המתאימים דרך שירות הלקוחות שלנו, המשווק או אתר האינטרנט שלנו.

17.2 הכנת המכשיר לניקוי

1. כבו את המכשיר.
2. נתקו את המכשיר מהחשמל.
   נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
3. הוציאו את כל מוצרי המזון ואחסנו אותם במקום קר.
   הניחו אוגרי קור על מוצרי המזון, אם יש ברשותכם.
4. הוציאו את כל האביזרים מהמכשיר.
   ←*עמוד 22*

17.3 ניקוי המכשיר

⚠ אזהרה
סכנת התחשמלות!
חדירת לחות עלולה לגרום להתחשמלות.
- אין לנקות את המכשיר במכשיר ניקוי בקיטור או בלחץ גבוה.

נוזלים בתאורה או בבקרים עלולים להיות מסוכנים.

שימו לב
חומרי ניקוי לא מתאימים עלולים לפגוע במשטחי המכשיר.
- אין להשתמש בכריות קרצוף קשות או בספוגי ניקוי שוחקים.
- אין להשתמש בתכשירי ניקוי חריפים או שורטים.
- אין להשתמש בתכשירי ניקוי שמכילים אחוז גבוה של אלכוהול.

ניקוי אביזרים וחלקים של המכשיר במדיח הכלים עלול לגרום להם להתעוות או לשנות את צבעם.
- לעולם אין לנקות חלקים ואביזרים במדיח הכלים.

1. הכינו את המכשיר לניקוי. ←*עמוד 21*
2. נקו את המכשיר, האביזרים וחלקי המכשיר כמו גם את אטמי הדלתות בספוג כלים עדין, מים פושרים ונוזל ניקוי כלים בערך חומציות ניטרלי.
3. נגבו וייבשו ביסודיות במטלית רכה ויבשה.
4. הכניסו את האביזרים.
5. חברו את המכשיר לחשמל. ←*עמוד 10*
6. הדליקו את המכשיר.
7. הכניסו את מוצרי המזון.

17.4 הסרת אביזרים

אם אתם רוצים לנקות את האביזרים ביסודיות, הוציאו אותם מהמכשיר.

הוצאת מדף

- הרימו מעט את המדף ① והסירו אותו ②.
←*איור* **5**

הסרת מדף הדלת

- הרימו והוציאו את מדף הדלת.
←*איור* **6**

הוצאת מיכל האחסון

1. שלפו את מיכל האחסון עד למעצור.
2. לחצו על שני הצדדים של נעילת המסילות הנשלפות שמתחת לתא האחסון מבפנים החוצה ① והוציאו את תא האחסון ②.
←*איור* **7**

הסרת מיכל האחסון בקירור

1. שלפו החוצה את מיכל האחסון הקר עד כמה שניתן.
2. לחצו על שני הצדדים של נעילת המסילות הנשלפות שמתחת למיכל האחסון בקירור מבפנים החוצה ① והוציאו את מיכל האחסון בקירור ②.
←*איור* **8**

17.5 החלפת מסנן הריחות

1. פתחו את התפס של מסנן הריחות.
2. הוציאו את מסנן הריחות המשומש מתוך תפס מסנן הריחות והכניסו במקומו מסנן ריחות חדש.
←*איור* **9**

הערה: ניתן להשיג מסנן ריחות חדש בשירות הלקוחות או באתר האינטרנט שלנו.

18 תיקון תקלות

תקלות קלות במכשיר תוכלו לתקן בעצמכם. קראו את ההנחיות לתיקון תקלות לפני שאתם יוצרים קשר עם שירות הלקוחות. כך תימנעו מעלויות מיותרות.

⚠ אזהרה
סכנת התחשמלות!
תיקונים לא מקצועיים עלולים להיות מסוכנים.
- רק בעלי מקצוע מיומנים רשאים לבצע תיקונים במכשיר.
- מותר להשתמש רק בחלקי חילוף מקוריים לצורך תיקון המכשיר.
- במקרה של נזק לכבל חיבור החשמל או לכבל החשמל של המכשיר, יש להחליפו בכבל חיבור חשמל או בכבל חיבור חשמל מיוחד, אותו ניתן להשיג אצל היצרן או אצל שירות הלקוחות שלו.

תקלה	גורם ופתרון תקלות
המכשיר אינו מקרר, התצוגות והתאורה דולקים.	מופעל מצב הדגמה. **1.** החליקו לכיוון "Settings". **2.** החליקו לכיוון ⋯ "Advanced". **3.** הקישו על "Demo mode" ⊙.
תאורת ה-LED אינה פועלת.	סיבות שונות אפשריות. - התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.
יחידת הקירור נדלקת לעיתים קרובות יותר ולמשך זמן רב יותר.	המכשיר נפתח לעתים קרובות. - אל תפתחו את דלת המכשיר ללא צורך.
	פתחי האוורור החיצוניים מכוסים. - הרחיקו חסמים מול פתחי האוורור החיצוניים.

תקלה	גורם ופתרון תקלות
יחידת הקירור נדלקת לעיתים קרובות יותר ולמשך זמן רב יותר.	זו אינה תקלה. מכשירי קירור מודרניים מופעלים בתדירות גבוהה יותר והם בעלי רמות הספק שונות כדי לקרר בצורה יעילה יותר.  ▸ הרחיקו חסמים מול פתחי האוורור החיצוניים. ▸ מקמו את המכשיר במרחק גדול ככל האפשר מגופי חימום, כיריים ומקורות חום אחרים. מנעו חשיפה של המכשיר לקרינת שמש ישירה. ▸ פתחו את המכשיר לזמן קצר ככל האפשר. ▸ אפשרו למזונות ולמשקאות חמים להתקרר, לפני הכנסתם למכשיר.
שכבת כפור נוצרת על הקיר האחורי הפנימי של תא הקירור.	
Home Connect לא פועל באופן תקין.	סיבות שונות אפשריות. ▸ עבור אל *www.home-connect.com*.
הודעה המכילה "D" או "E" מופיעה בתצוגה.	הרכיבים האלקטרוניים זיהו תקלה. **1.** כבו את המכשיר. **2.** נתקו את המכשיר מהחשמל. נתקו את תקע החשמל מהשקע או כבו את המפסק בתיבת הנתיכים. **3.** חברו את המכשיר בחזרה לאחר 5 דקות. **4.** אם ההודעה עדיין מופיעה, התקשרו לשירות הלקוחות. מספר הטלפון של שירות הלקוחות מופיע ברשימה המצורפת של מרכזי שירות הלקוחות.
נשמע צליל אזהרה ו-"Door alarm cooling compartment" מופיע. התראת הדלת מופעלת.	דלת המכשיר פתוחה. ▸ סגרו את דלת המכשיר.
הטמפרטורה שונה מאוד מהערך שהוגדר.	סיבות שונות אפשריות. **1.** כבו את המכשיר. **2.** הדליקו את המכשיר בחזרה לאחר 5 דקות. ▸ אם הטמפרטורה גבוהה מדי, בדקו את הטמפרטורה שוב לאחר כמה שעות. ▸ אם הטמפרטורה נמוכה מדי, בדקו את הטמפרטורה שוב ביום הבא.
המכשיר מפיק רעשי טרטור, זמזום, גרגור, נקישות או פקפוק.	לא תקלה. המנוע פועל, לדוגמה יחידת הקירור, המאוורר. גז קירור זורם בצנרת. המנוע, המפסק או השסתומים המגנטיים נדלקים או כבים. ההפשרה האוטומטית מופעלת. אין צורך בנקיטת פעולה כלשהי.

תקלה	גורם ופתרון תקלות
המכשיר עושה רעשים.	המכשיר לא מאוזן. ▸ ישרו את המכשיר בעזרת פלס והרגליים המתברגות.
	אביזרים רועדים או נתקעים. ▸ בדקו את האביזרים המתפרקים, ובמקרה הצורך חברו אותם מחדש.
	בקבוקים או כלים נוגעים אלה באלה. ▸ הרחיקו את הבקבוקים או הכלים מעט אלה מאלה.

19 אחסון והשלכה לאשפה

19.1 הוצאת המכשיר משימוש

1. כבו את המכשיר.
2. נתקו את המכשיר מהחשמל.
   נתקו את המכשיר מרשת החשמל או כבו את הנתיך בתיבת הנתיכים.
3. הוציאו את כל מוצרי המזון.
4. נקו את המכשיר. ←*עמוד 21*
5. השאירו את דלת המכשיר פתוחה כדי שחלל הפנים יתאוורר.

19.2 השלכת מכשיר הישן

השלכה ידידותית לסביבה יכולה לסייע למחזר חומרי גלם יקרי ערך.

⚠ אזהרה
סכנה לנדק בריאותי!
ילדים עלולים להילכד במכשיר ולהיקלע לסכנת חיים.
- ▸ אל תוציאו את המגירות ואת תאי האחסון מהמכשיר על מנת להקשות על הילדים את הטיפוס לתוכו.
- ▸ הרחיקו את הילדים מהמכשיר שיצא משימוש.

⚠ אזהרה
סכנת דליקה!
במקרה של נזק לצינורות חומר קירור וגזים רעילים עלולים להיפלט ולהידלק.
- ▸ אין לפגוע בצינורות מעגל הקירור והבידוד.

1. נתקו את המכשיר מהחשמל.
2. חתכו את כבל החשמל.
3. השליכו את המכשיר לאשפה באופן ידידותי לסביבה.
   מידע לגבי אופני פינוי האשפה העדכניים ניתן לקבל אצל הסוחר, במועצה המקומית או בעירייה.

20 שירות לקוחות

חלקי חילוף מקוריים רלוונטיים לפעולה ניתן לקבל בהתאם לתקנת הדגם האקולוגי אצל שירות הלקוחות למשך לפחות 10 שנים החל בהכנסת המכשיר לפעולה בתוך האזור הכלכלי האירופי.
מידע מפורט על תקופת האחריות ותנאי האחריות בארצכם ניתן לקבל באמצעות קוד ה-QR שמופיע במסמך המצורף של פרטי ההתקשרות עם שירות הלקוחות ותנאי האחריות, דרך שירות הלקוחות שלנו, אצל הסוכן שלכם או באתר האינטרנט שלנו.
בפניה לשירות הלקוחות, יהיה צורך במספר המוצר (E-Nr.), במספר הייצור (FD) ובמספר המונה (Z-Nr.) של המכשיר.
ניתן למצוא את פרטי ההתקשרות של שירות הלקוחות באמצעות קוד ה-QR שמופיע במסמך המצורף של פרטי ההתקשרות ותנאי השירות או באתר האינטרנט שלנו.

20.1 מספר המוצר (E-Nr.), ומספר הייצור (FD) ומספר הסדרה (Z-Nr.)

מספר המוצר (E-Nr.), מספר הייצור (FD) ומספר המונה (Z-Nr.) מופיעים על לוחית הדירוג שעל המכשיר.
←*"המכשיר", איור* 1 / 8 *עמוד 11*

רשמו מספרים אלה כדי שתוכלו למצוא במהירות את נתוני המכשיר ואת מספר הטלפון של שירות הלקוחות.

21 מפרטים טכניים

מידע על חומר הקירור, נפח הקיבולת ונתונים טכניים נוספים תמצאו בלוחית הדירוג.
←"*המכשיר", איור* **1**/8 *עמוד 11*
מוצר זה כולל מקור אור של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו.
מוצר זה כולל מקור אור שני של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו.
מוצר זה כולל מקור אור שלישי של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו.
מוצר זה כולל מקור אור רביעי של דרגת יעילות אנרגיה E. מקור האור זמין כחלק חילוף ורק אנשי מקצוע מיומנים רשאים להחליף אותו.
מידע נוסף על הדגם שלכם תוכלו למצוא באתר האינטרנט *https://eprel.ec.europa.eu/*[1]. אתר אינטרנט זה מחובר למאגר נתוני המוצרים הרשמי של האיחוד האירופי EPREL. אנא מלאו אחר ההנחיות לחיפוש הדגם. סימון הדגם מתקבל מהתווים שלפני הלוכסן של מספר המוצר (E-Nr.) שעל לוחית הדגם. לחלופין תוכלו למצוא את סימון הדגם גם בשורה הראשונה של תווית האנרגיה.

21.1 מידע לגבי תכנה פתוחה ותכנת קוד פתוח

מוצר זה כולל רכיבי תכנה, שהוגדרו ברישיון ע"י בעלי זכויות היוצרים כבעלי קוד חופשי או פתוח.
מידע הרישיון המתאים מצוי על מכשיר החשמל הביתי. ניתן לגשת למידע הרישיון המתאים גם באמצעות אפליקציית Home Connect : „פרופיל -> מידע משפטי-> מידע רישיון“.[2] תוכלו להוריד את מידע הרישיון באתר האינטרנט של מוצר המותג. (חפשו בבקשה באתר האינטרנט של המוצר את דגם המכשיר שלכם ותיעוד נוסף.)
לחלופין תוכלו לקבל את המידע אצל ossrequest@bshg.com או אצל BSH Hausgeräte GmbH, Carl-Wery-Str. 34, D-81739 München.
קוד המקור יהיה זמין עבורכם לבקשתכם. שלחו בקשה אל ossrequest@bshg.com או אל BSH Hausgeräte GmbH, Carl-Wery-Str. 34, D-81739 München. הנושא: „OSSREQUEST“
חשבון יישלח אליכם עבור עלות הבקשה. הצעה זו תקפה למשך שלוש שנים החל בתאריך הרכישה או לפחות לתקופה בה אנחנו מציעים תמיכה וחלקי חילוף עבור המכשיר המתאים.

[1] תקף עבור האיזור הכלכלי האירופי בלבד
[2] בהתאם לאבזור המכשיר

22 הצהרת תאימות

BSH Hausgeräte GmbH מצהירה בזאת שהמכשיר שכולל פעולות Home Connect תואם לדרישות הבסיסיות ולכל ההוראות הרלוונטיות של הנחיה EU/2014/53.
ניתן למצוא באינטרנט את הצהרת התאימות המפורטת RED באתר *www.gaggenau.com* בעמוד המוצר של המכשיר שלכם תחת מסמכים נוספים.

CE

ערוץ 2.4GHz: (2400–2483.5 MHz) מקס' 100mW
ערוץ 5GHz (5150–5350 MHz + 5470–5725 MHz): מקס'. 150 mW

BE	BG	CZ	DK	DE	EE	IE	EL	ES	
FR	HR	IT	CY	LI	LV	LT	LU	HU	
MT	NL	AT	PL	PT	RO	SI	SK	FI	
SE	NO	CH	TR	IS	UK (NI)				

WLAN 5GHz (Wi-Fi): לשימוש בחללים סגורים בלבד.

AL	BA	MD	ME	MK	RS	UK	UA

WLAN 5GHz (Wi-Fi): לשימוש בחללים סגורים בלבד.

You can find additional information and explanations online. Scan the QR code on the title page.



Table of contents

..... 28

1 Safety 28
1.1 General information 28
1.2 Intended use 28
1.3 Restriction on user group 29
1.4 Safe transport 29
1.5 Safe installation 29
1.6 Safe use 31
1.7 Damaged appliance 32

2 Preventing material damage 33

3 Environmental protection and saving energy 33
3.1 Disposing of packaging 33
3.2 Saving energy 33

4 Installation and connection 34
4.1 Scope of delivery 34
4.2 Criteria for the installation location 34
4.3 Installing the appliance 35
4.4 Preparing the appliance for the first time 35
4.5 Connecting the appliance to the electricity supply 35

5 Familiarising yourself with your appliance 35
5.1 Appliance 35
5.2 Control panel 36

6 Features 36
6.1 Shelf 36
6.2 Storage container 36
6.3 Cold storage container 37
6.4 Door tray 37
6.5 Odour filter 37
6.6 Accessories 37

7 Before using for the first time .. 38
7.1 Performing initial start-up 38

8 Basic operation 38
8.1 Switching on the appliance 38
8.2 Operating tips 38
8.3 Switching off the appliance 39
8.4 Setting the temperature 39
8.5 Cold storage compartment storage setting 39
8.6 Keylock 39

9 Basic settings 39
9.1 Changing the basic settings ... 39
9.2 Overview of the basic settings 39

10 Additional functions 42
10.1 Fast cooling 42
10.2 Holiday mode 42
10.3 Door opening aid 42
10.4 Rest mode 43

11 Alarm 43
11.1 Door alarm 43

12 Home Connect 43
12.1 Setting up Home Connect 43
12.2 Remote diagnostics 44
12.3 Data protection 44
12.4 Status of the Home Connect connection 44

13 Service settings 45
13.1 Changing service settings 45
13.2 Overview of the service settings 45

14 Refrigerator compartment 46
14.1 Tips for storing food in the refrigerator compartment 46
14.2 Chill zones in the refrigerator compartment 46

15 Cold storage compartment 46

15.1 Storage recommendations for the cold storage compartment 46
15.2 Storage times in the cold storage compartment at 0 °C (32 °F) 47
16 Defrosting 47
16.1 Defrosting in the refrigerator compartment 47
16.2 Defrosting in the cold storage compartment 47
17 Cleaning and servicing 47
17.1 Care instructions for stainless steel surfaces 47
17.2 Preparing the appliance for cleaning 47
17.3 Cleaning the appliance 48
17.4 Removing the fittings 48
17.5 Replacing the odour filter 48
18 Troubleshooting 49
19 Storage and disposal 51
19.1 Taking the appliance out of operation 51
19.2 Disposing of old appliance ... 51
20 Customer Service 51
20.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.) 52
21 Technical data 52
21.1 Information regarding Free and Open Source Software .. 52
22 Declaration of Conformity 53

1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:
- For chilling food.
- in private households and in enclosed spaces in a domestic environment.
- Up to an altitude of 2000 m above sea level.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.
Do not let children play with the appliance.
Cleaning and user maintenance must not be performed by children unless they are being supervised.
Children above the age of three years old and younger than eight years old may load and unload the the fridge-freezer.

1.4 Safe transport

⚠ WARNING – Risk of tipping!
The appliance is very top-heavy and may tip over.
- ▸ The appliance must be transported by two or more people.
- ▸ Do not remove the appliance from the pallet until it is ready for installation.
- ▸ Keep the door closed until the appliance is secured in the built-in niche.

⚠ WARNING – Risk of injury!
The heavy weight of the appliance may result in injury when lifted.
- ▸ Do not lift the appliance on your own.

1.5 Safe installation

⚠ WARNING – Risk of electric shock!
Incorrect installation is dangerous.
- ▸ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▸ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▸ The protective conductor system of the domestic electrical installation must be properly installed.
- ▸ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▸ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an

isolating switch must be integrated into the permanent electrical installation according to the installation regulations.
- ▸ When installing the appliance, check that the power cable is not trapped or damaged.

If the insulation of the power cord is damaged, this is dangerous.
- ▸ Never let the power cord come into contact with heat sources.

⚠ WARNING – Risk of explosion!

If the appliance's ventilation openings are closed off, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.
- ▸ Keep ventilation openings in the appliance casing or in the integrated casing clear of obstruction.

⚠ WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.
- ▸ Do not use extension cables or multiple socket strips.
- ▸ Only use adapters and power cords approved by the manufacturer.
- ▸ If the power cord is too short and a longer one is not available, please contact an electrician to have the domestic installation adapted.

Portable multiple socket strips or portable power supply units may overheat and cause a fire.
- ▸ Do not place portable multiple socket strips or power supply units on the back of the appliance.

⚠ WARNING – Risk of tipping!

The appliance is very top-heavy and may tip over.
- ▸ The appliance must be installed by two or more people as soon as it is no longer secured and is removed from the pallet.
- ▸ Secure the unit using the supplied anti-tip bracket.
- ▸ Do not leave the appliance unattended during installation.

⚠ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.
- ▸ Wear protective gloves.

1.6 Safe use

⚠ WARNING – Risk of electric shock!
An ingress of moisture can cause an electric shock.
- ▸ Only use the appliance in enclosed spaces.
- ▸ Never expose the appliance to intense heat or humidity.
- ▸ Do not use steam- or high-pressure cleaners to clean the appliance.

⚠ WARNING – Risk of suffocation!
Children may put packaging material over their heads or wrap themselves up in it and suffocate.
- ▸ Keep packaging material away from children.
- ▸ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.
- ▸ Keep small parts away from children.
- ▸ Do not let children play with small parts.

⚠ WARNING – Risk of explosion!
If the cooling circuit is damaged, flammable refrigerant may escape and explode.
- ▸ To accelerate the defrosting process, do not use any other mechanical devices or means other than those recommended by the manufacturer.
- ▸ If food is stuck to the freezer compartment, loosen it with a blunt object such as the handle of a wooden spoon.

Products which contain flammable propellants and explosive substances may explode, e.g. spray cans.
- ▸ Do not store products which contain flammable propellants (e.g. spray cans) or explosive substances in the appliance.

⚠ WARNING – Risk of fire!
Electrical devices within the appliance may cause a fire, e.g. heaters or electric ice makers.
- ▸ Do not operate electrical devices within the appliance.

⚠ WARNING – Risk of injury!
Containers that contain carbonated drinks may burst.
- ▸ Do not store containers that contain carbonated drinks in the cold storage compartment below 1 °C (34 °F).

Injury to the eyes caused by escaping flammable refrigerant and hazardous gases.

- ▸ Do not damage the tubes of the refrigerant circuit or the insulation.

⚠ CAUTION – Risk of harm to health!

To prevent food from being contaminated, you must observe the following instructions.

- ▸ If the door is open for an extended period of time, this may lead to a considerable temperature increase in the compartments of the appliance.
- ▸ Regularly clean the surfaces that may come into contact with food and accessible drain systems.
- ▸ Store raw meat and fish in suitable containers in the refrigerator so that they do not touch or drip on other food.
- ▸ If the fridge/freezer is empty for an extended period of time, switch off the appliance, defrost it, clean it and leave the door open to prevent the formation of mould.

Metal or metal-style parts in the appliance may contain aluminium. If acidic food comes into contact with aluminium in the appliance, aluminium foil ions may pass into the food.

- ▸ Do not consume soiled food.

1.7 Damaged appliance

⚠ WARNING – Risk of electric shock!

If the appliance or the power cord is damaged, this is dangerous.

- ▸ Never operate a damaged appliance.
- ▸ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▸ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▸ Call customer service. →*Page 51*

Improper repairs are dangerous.

- ▸ Repairs to the appliance should only be carried out by trained specialist staff.
- ▸ Only use genuine spare parts when repairing the appliance.
- ▸ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or

special appliance power cable, which is available from the manufacturer or its Customer Service.

⚠ **WARNING – Risk of fire!**



If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.

- ▸ Keep naked flames and ignition sources away from the appliance.
- ▸ Ventilate the room.
- ▸ Switch off the appliance.
- ▸ Unplug the mains plug from the mains or switch off the circuit breaker in the fuse box.
- ▸ Call customer service. →*Page 51*

2 Preventing material damage

ATTENTION

The high weight of the appliance or, if not rolling freely, the appliance's castors may damage the floor when the appliance is moved.

- ▸ Transport the appliance using a sack truck.
- ▸ Use floor protection when moving the appliance, and do not move it in a zigzag fashion.

Using the base, runners or appliance doors as a seat surface or climbing surface may damage the appliance.

- ▸ Do not stand or support yourself on the base, runners or doors.

Contamination with oil or fat may cause plastic parts and door seals to become porous.

- ▸ Keep plastic parts and door seals free of oil and grease.

Metal or metal-style parts in the appliance may contain aluminium. When aluminium comes into contact with acidic foods, it corrodes and discolours.

- ▸ Only store packaged food in the appliance.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discolour.

- ▸ Never clean fittings and accessory in the dishwasher.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▸ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Selecting the installation location

- Keep the appliance out of direct sunlight.
- Install the appliance as far away as possible from heating elements, cookers and other heat sources:
  - Maintain a 30 mm clearance to electric or gas cookers.
  - Maintain a 300 mm clearance to oil or solid-fuel cookers.
- Never cover or block the external ventilation openings.

Saving energy during use

Note: The arrangement of the fittings does not affect the energy consumption of the appliance.

- Open the appliance only briefly and then close it carefully.
- Never cover or block the interior ventilation openings or the exterior ventilation openings.
- Transport purchased food in a cool bag and place in the appliance quickly.
- Allow warm food and drinks to cool down before storing them.
- Thaw frozen food in the refrigerator compartment to utilise the low temperature of the food.
- Always leave some space between the food and to the back panel.

Control panel energy-saving mode

If the appliance is not being used, the control panel automatically switches to control panel energy-saving mode.
In control panel energy-saving mode, the display is switched off.

Control panel energy-saving mode is deactivated as soon as you operate the control panel or open the door.

4 Installation and connection

4.1 Scope of delivery

After unpacking all parts, check for any transport damage and for completeness of delivery.
If you have any complaints, contact your dealer or our after-sales service →*Page 51*.

The delivery consists of the following:

- Equipment and accessories [1]
- Installation material
- Installation instructions
- User manual
- Customer service directory
- Warranty enclosure [2]
- Energy label
- Information on energy consumption and noises
- Information about Home Connect

4.2 Criteria for the installation location

⚠ **WARNING**
Risk of explosion!
If the appliance is in a space that is too small, a leak in the refrigeration circuit may result in a flammable mixture of gas and air.

- ▸ Only install the appliance in a space with a volume of at least 1 m^3 per 8 g refrigerant. The

[1] Depending on the appliance specifications
[2] Not in all countries

volume of refrigerant is indicated on the rating plate.
→ *"Appliance", Fig.* **1**/8 *Page 35*

The weight of the appliance ex works may be up to 190 kg depending on the model.
The subfloor must be sufficiently stable to bear the weight of the appliance.
This refrigerator is intended for use at ambient temperatures of 10 °C to 43 °C.
The appliance is fully functional within the permitted room temperature.
If the appliance is operated at colder room temperatures, the appliance will not be damaged up to a room temperature of 5 °C.

4.3 Installing the appliance

- Install the appliance in accordance with the enclosed installation instructions.

4.4 Preparing the appliance for the first time

1. Remove the informative material.
2. Remove the protective foil and transit bolts, e.g. remove the adhesive strips and carton.
3. Clean the appliance for the first time. →*Page 48*

4.5 Connecting the appliance to the electricity supply

1. Insert the appliance plug of the power cord into the appliance.
2. Insert the mains plug of the appliance's power cable in a socket nearby.
   The connection data of the appliance can be found on the rating plate.
   → *"Appliance", Fig.* **1**/8 *Page 35*
3. Check the mains plug is inserted properly.

✔ The appliance is now ready for use.

5 Familiarising yourself with your appliance

5.1 Appliance

You can find an overview of the parts of your appliance here.
→ *Fig.* **1**

A	Refrigerator compartment →*Page 46*
B	Cold storage compartment →*Page 46*
1	Main switch
2	Inner ventilation openings (refrigerator compartment)
3	Lighting
4	Odour filter →*Page 37*
5	Storage container →*Page 36*
6	Door tray for large bottles →*Page 37*
7	Control panel →*Page 36*
8	Rating plate →*Page 52*[1]
9	Cold storage container →*Page 37*

[1] Depending on the appliance specifications

10	Door opening aid →*Page 42*
11	Screw foot

5.2 Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.
→*Fig.* **2**

1	Allows the refrigerator compartment to be set.
2	Displays the temperature of the storage container in °C or °F.
3	opens the notification centre.
4	Displays the set mode.
5	Allows the cold storage compartment to be set.
6	Shows the status of Home Connect, for example whether Home Connect is switched on or off.
7	Switches the display's button lock on or off.

Operating logic

Some areas of the display respond to touch. You can activate settings by touching the buttons. The activated settings are highlighted on the display. You can change or deactivate the activated settings by repeatedly pressing on the relevant buttons on the display.

ATTENTION
Pressing on the display with force may cause damage.
- Do not apply heavy pressure on the display.
- Do not press on the display using pointed or sharp objects.

Symbol	Description
ⓘ	Display additional information
⊙	Switch on the function
⊙	Switch off the function

6 Features


The features of your appliance depend on the model.

6.1 Shelf

ATTENTION
If fitted at an angle, the hooks on the shelf can scratch the rear panel of the refrigerator compartment.
- Ensure that the shelf is horizontal and that the hooks are properly fitted in place.

To vary the shelf as required, you can remove the shelf and re-insert it elsewhere.
→ *"Removing the shelf", Page 48*

Note: To avoid impeding the circulation of air, do not cover the inner ventilation openings.

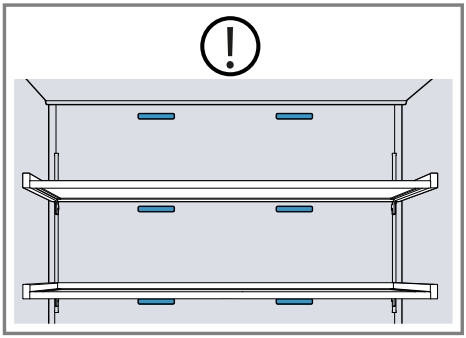

6.2 Storage container

The temperatures in the storage container are lower than in the refriger-

ator compartment. Temperatures below 0 °C may occur occasionally.
In order to reach temperatures close to 0 °C in the storage container, set the refrigerator compartment temperature to 2 °C.
Use the lower temperatures in the storage container to store highly perishable food, e.g. fish, meat and sausages.

6.3 Cold storage container

To automatically set the cold storage container to the right humidity and temperature for your food, use the different cold storage container storage settings.
Store fresh fruit and vegetables loose in the cold storage container.
Cover any chopped fruit and vegetables, or store in air-tight packaging.
For hygiene reasons, do not store fruit and vegetables in a cold storage container with meat and fish.
Condensation may form in the cold storage container depending on the type and quantity of products stored. Remove the condensation with a dry cloth.
To preserve the quality and aroma, store fruit and vegetables that are sensitive to cold, potatoes and onions in the lowest cold storage container with the appropriately selected storage setting.

6.4 Door tray

To adjust the door tray as required, you can remove the door tray and reinsert elsewhere.
→ *"Removing door tray", Page 48*

6.5 Odour filter

The odour filter filters odours in the refrigerator compartment and can be replaced if required.
→ *"Replacing the odour filter", Page 48*
Change the odour filter every year. This keeps the filter quality permanently high.

6.6 Accessories

Use original accessories. These have been made especially for your appliance.
The accessories for your appliance depend on the model.

Anti-slip mat

The anti-slip mat prevents bottles and food from slipping.
Condensation may form on the anti-slip mat depending on the type and quantity of food stored. Where necessary, remove the anti-slip mat and wipe away the condensation with a dry cloth.
→ *Fig.* **3**

Variable bottle shelf

Store bottles securely on the variable bottle shelf.
→ *Fig.* **4**

Ethylene absorber

For important safety instructions and information about installation and use, see the enclosed installation instructions for the ethylene absorber.
The ethylene absorber slows down the ripening of ethylene-sensitive fruit and vegetables to keep them fresher for longer.

Installing the ethylene absorber

- Install the ethylene absorber in accordance with the installation in-

structions for the ethylene absorber.

Using the refill set

1. Install the components of the refill set in accordance with the installation instructions for the ethylene absorber.
2. Replace the bags at least every 6 months after resetting.

Note: Refill sets can be purchased from customer service or our website.

7 Before using for the first time

7.1 Performing initial start-up

Requirements

- The appliance is installed in accordance with the enclosed installation instructions.
- The appliance is connected to the electricity supply. →*Page 35*

1. Switch on the appliance at the main switch.
   → *"Appliance", Fig.* **1**/1 *Page 35*
2. Close the appliance door, wait 3 minutes and reopen it.
3. Select a language and touch ›.
4. Touch › to confirm the information on the display.
5. To activate the door-opening aid, touch › and follow the instructions on the display.
6. To confirm the summary, touch ›.
7. To complete the initialisation process, touch ✓.

✔ The appliance restarts and the display shows an animation.

8. As an option, touch to select the required language, then touch ✓.
9. Touch ›.
10. To set up Home Connect, press › to start "Home Connect assistant" and follow the instructions on the display.
11. **Note:** If you skip "Home Connect assistant", further manual settings appear on the display.
    - ▸ Select the temperature unit "°C" or "°F".
    - ▸ Select the time format "12" or "24".
    - ▸ Set the time and touch ›.
    - ▸ Press › to start the ethylene absorber installation and follow the instructions on the display.
12. Touch › to confirm the information on the display.
13. Press ✓ to finalise the initial start-up.

8 Basic operation

8.1 Switching on the appliance

1. Switch on the appliance at the main switch.
   → *"Appliance", Fig.* **1**/1 *Page 35*

✔ The appliance begins to cool.

2. Set the required temperature.
   →*Page 39*

8.2 Operating tips

- Once you have switched on the appliance, the set temperature is only reached after several hours. Do not put any food in the appliance until the set temperature has been reached.
- When closing the door, make sure that the door is not blocked by stored items.
- When you close the door, a vacuum may be created. The door is then difficult to open again. Wait a moment until the vacuum is offset.
- The temperature in the appliance varies due to the following conditions:

- How often the appliance is opened
- Load capacity
- Temperature of newly stored food
- Ambient temperature
- Direct sunlight

8.3 Switching off the appliance

▸ Switch off the appliance at the main switch.
→ *"Appliance", Fig. 1 / 1 Page 35*

8.4 Setting the temperature

Setting the refrigerator compartment temperature

1. Touch the temperature display (refrigerator compartment).
2. Swipe to the required temperature setting.
The recommended temperature in the refrigerator compartment is 4 °C (39 °F).

8.5 Cold storage compartment storage setting

You can set the temperature and humidity of the cold storage container using predefined storage settings.

Tip: Further settings are available in the Home Connect app.

Setting the cold storage compartment storage setting

1. Touch the cold storage compartment storage setting.
2. Swipe to the required storage setting and confirm using ☾.

8.6 Keylock

The keylock prevents the appliance from being operated accidentally or incorrectly while running.

Note: You can permanently activate or deactivate the automatic button lock.

Switching on the keylock

▸ Press and hold 🔓 for 2 seconds.
✔ 🔓 lights up.

Switching off the keylock

▸ Press and hold 🔓 for 2 seconds.

9 Basic settings

9.1 Changing the basic settings

1. Swipe to "Settings".
2. Swipe to the required basic setting and touch it.
3. Change the basic setting.

9.2 Overview of the basic settings

Here you can find an overview of the basic settings and factory settings. The basic settings depend on the features of your appliance.

♫ Sounds

Setting	Selection	Description
Interaction sounds	"Standard"/"Loud"/"Quiet"/"Off"	Switch on, set or switch off the volume for the interaction sounds.
Notification sounds	"Standard"/"Loud"/"Quiet"/"Off"	Switch on, set or switch off the volume for the notification sounds.

Interior lighting

Setting	Selection	Description
Brightness	1 - 6 ◉/⊙	Set the interior lighting from 1 to 6. Switch the automatic interior lighting on or off.
Light interaction	◉/⊙	Switch the adjusted lighting on or off when operating the appliance.

Notifications

Setting	Selection	Description
Info layer	◉/⊙	Switch the information on the display on or off.
Pop-up hints	◉/⊙	Switch the further information on the display on or off.
Hidden notifications	Reset	Display hidden notifications again.

Language

Setting	Selection	Description
Language	See the information on the display.	Select the menu language.

Time & Units

Setting	Selection	Description
Time	See the information on the display. ◉/⊙	Follow the instructions on the display and set the time. Switch the automatically set time on or off.
Time format	"12"/"24"	Set the time format.
Temperature unit	"°F"/"°C"	Set the temperature unit.

Advanced

Setting	Selection	Description
Demo mode	◉/⊙	Switch the demo mode on or off. The appliance does not cool in demo mode.

Setting	Selection	Description
		Note: Demo mode is only available for a limited time after the appliance is switched on.
Display rest mode	◉/⊙	Switch rest mode on or off.
Factory settings	Restore	Reset the appliance to the factory settings.

Appliance

Setting	Selection	Description
Door opening assist	See the information on the display.	Switch the door-opening aid on or off. Door opening aid →*Page 42*
Introduction to the appliance	Start	Get to know the appliance and personalise settings.

Home network

Setting	Selection	Description
WiFi	◉/⊙	Switch the "Wi-Fi" on or off.
Home Connect assistant	See the information on the display.	Set up Home Connect. →*Page 43*
Network information	See the information on the display.	Displays the Home Connect network information.
Network credential reset	Confirm	Reset the Home Connect settings.

Display

Setting	Selection	Description
Brightness	1 - 6 ◉/⊙	Set the display lighting from 1 to 6. Switch the automatic display lighting on or off.
Simplified home screen	◉/⊙	Switch standby mode on or off. Standby mode shows reduced content on the display and highlights open drawers.

Setting	Selection	Description
Child lock	See the information on the display.	Switch the "Child lock" on or off.

10 Additional functions

Find out which additional functions can be used for your appliance. Additional functions can be set via the Home Connect app.

10.1 Fast cooling

With Fast cooling, the refrigerator compartment cools as cold as possible.
Switch on Fast cooling before placing large quantities of food in the refrigerator compartment.

Note: When Fast cooling is switched on, increased noise may occur.

Switching on Fast cooling

1. Touch the temperature display (refrigerator compartment).
2. Touch ✳.

✔ ✳ lights up in the temperature display (refrigerator compartment).

Note: After approx. 6 hours, the appliance switches to normal operation.

Switching off Fast cooling

1. Touch the temperature display (refrigerator compartment).
2. Touch ✳.

✔ ✳ goes out on the temperature display (refrigerator compartment).
✔ The previously set temperature is displayed.

10.2 Holiday mode

If you are going to be away for a long time, you can switch on energy-saving holiday mode on the appliance.

⚠ **CAUTION**
Risk of harm to health!
The refrigerator compartment heats up while the holiday mode is switched on. The increased temperature may cause bacteria to increase and spoil the food.

▸ When the holiday mode is switched on, do not store any food in the refrigerator compartment.

The appliance automatically sets the temperature.

Refrigerator compartment	14 °C (58 °F)
Cold storage compartment	Temperature remains unchanged

Note: You can find out how to switch on holiday mode in the service settings. →*Page 45*

10.3 Door opening aid

The door-opening aid supports you in opening the door.

Note: You can find out how to switch the door-opening aid on or off in the basic settings. →*Page 41*

Opening the door using the door-opening aid

ATTENTION
Repeatedly closing the door prematurely may lead to wear or failure of the door-opening aid.
Never close the door while the door-opening aid is extended.

▸ If you have nevertheless closed the door, leave it closed for 5 minutes. The door-opening aid is realigned.

1. Push the door in the middle.
✔ The door-opening aid extends and opens the door slightly.
2. Manually open the door.
If you do not open the door any further within 3 seconds, the door-opening aid retracts and the door closes.

10.4 Rest mode

The rest mode switches off all non-essential functions.

During rest mode, the following functions are switched off:
- Fast cooling
- Alarm
- Interior lighting
- Signal tones
- Messages on the control panel

Notes
- The brightness of the control panel lighting is reduced during the rest mode.
- You can find out how to switch on rest mode in the basic settings. →*Page 41*

11 Alarm

11.1 Door alarm

If the appliance door is open for a while, the door alarm switches on. A signal tone sounds and 🔔 "Door alarm cooling compartment" appears in the display.

Switching off the door alarm

▸ Close the appliance door or touch 🔔.
✔ The warning tone is switched off.

12 Home Connect

This appliance is network-capable. Connect your appliance to a mobile device to control its functions via the Home Connect app.
The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of the Home Connect services in your country. You can find information about this at: *www.home-connect.com*.
To be able to use Home Connect, you must first set up the connection to the WLAN home network (Wi-Fi [1]) and to the Home Connect app.
After switching on the appliance, wait at least 2 minutes until internal device initialisation is complete. Only then should you set up Home Connect.
The Home Connect app guides you through the entire login process. Follow the instructions, noting the information in the Home Connect app.

Notes
- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app. → *"Safety", Page 28*
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.

12.1 Setting up Home Connect

Requirement: The appliance is receiving signals from the WLAN home network (Wi-Fi) at its installation location.

[1] Wi-Fi is a registered trademark of the Wi-Fi Alliance.

1. Scan the following QR code.



   You can install the Home Connect app and connect your appliance via the QR code.
2. Follow the instructions in the Home Connect app.

12.2 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

Tip: For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: *www.home-connect.com*.

12.3 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the installed Wi-Fi communication module).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous resetting to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

12.4 Status of the Home Connect connection

This is where you will find an overview of the status of the Home Connect connection.

Symbol	Description
	The appliance is connected to the Home Connect app.
	The appliance is not connected to the Home Connect app.
	The appliance is not connected to the Wi-Fi home network.
	The remote diagnostics is activated.

13 Service settings

You can implement various service settings.

13.1 Changing service settings

1. Swipe to "Modes & Service".
2. Swipe to and touch the required service setting.
3. Change the service setting.

13.2 Overview of the service settings

This is where you can find an overview of the service settings.

Quick guide

Setting	Selection	Description
Cooling drawer removal Air filter replacement Ethylene absorber replacement	See the information on the display.	Shows the step-by-step instructions on the display. Touch the required instructions and follow the instructions on the display.

Holiday mode

Setting	Selection	Description
Holiday mode	◉/⊙	Switch holiday mode on or off. → *"Holiday mode", Page 42*

Filter management

Setting	Selection	Description
Air filter saturation Ethylene absorber saturation	See the information on the display.	Displays the odour filter status. Displays the ethylene absorber status.

Appliance information

Setting	Selection	Description
E-Number: Serial number: FD (production date): Z-Number: MAC-Address: WiFi SSID: IPv4-Address: IPv6-Address:	See the information on the display.	Displays information about your appliance.

14 Refrigerator compartment

You can keep dairy products, eggs, prepared meals, pastries, open preserves and hard cheese in the refrigerator compartment.
The temperature can be set from 2 °C (46 °F) to 8 °C (36 °F).
The refrigerator compartment can also be used to store highly perishable foods in the short to medium term. The lower the selected temperature, the longer the food remains fresh.

14.1 Tips for storing food in the refrigerator compartment

- Only store food when fresh and undamaged.
- Store food covered or in air-tight packaging.
- To avoid impeding the circulation of air and to prevent food from freezing, do not place food in front of the inner ventilation openings or in direct contact with the back wall.
- Allow hot food and drinks to cool down first before placing in the appliance.
- Observe the best-before date or use-by date specified by the manufacturer.

14.2 Chill zones in the refrigerator compartment

The air recirculation cooling system allows the air to circulate evenly in the refrigerator compartment and ensures a constant temperature at all shelves.

Coldest zone

The coldest zone is on the partition and in the door tray for large bottles.

Tip: Store highly perishable food such as fish, sausages and meat in the cold storage compartment.
→ *"Cold storage compartment", Page 46*

15 Cold storage compartment

In the cold storage compartment, you can keep food fresh for up to three times longer than in the refrigerator compartment.
The temperature can be set from 0°C (32°F) to 3°C (37°F) using predefined storage settings.
Storing food in the fresh compartment retains the quality of the food better. The low temperature and the optimum moisture provide ideal storage conditions for fresh food.

15.1 Storage recommendations for the cold storage compartment

Storage setting	Food
Fruit & Vegetables	Mixed load with fruit and vegetables
Fruit	Fruit
Vegetables	Vegetables
Meat	Meat
Fish	Fish and Seafood
Beverages	Drinks
Cold cuts/ Sausages	Cold cuts and sausage products
Cheese	Cheese and dairy products

Storage setting	Food
Mixed load	Mixed load
Potatoes	Potatoes
onions	Onions and garlic
Fruit and vegetables that are sensitive to cold	Citrus fruit, cucumbers, peppers and tomatoes

Tip: Fruit, vegetables, drinks and snacks may freeze below 0 °C (32 °F).
Use the and storage settings for "Meat" and "Fish" only.

15.2 Storage times in the cold storage compartment at 0 °C (32 °F)

The storage times are dependent on the original quality of your food.

Food	Storage time
Fresh fish, seafood	up to 3 days
Poultry, meat (boiled/fried)	up to 5 days
Beef, pork, lamb, sausage (cold meat)	up to 7 days
Smoked fish, broccoli	up to 14 days
Salad greens, fennel, apricots, plums	up to 21 days
Soft cheese, yoghurt, quark, buttermilk, cauliflower	up to 30 days

16 Defrosting

16.1 Defrosting in the refrigerator compartment

The refrigerator compartment in your appliance defrosts automatically.

16.2 Defrosting in the cold storage compartment

The cold storage compartment in your appliance defrosts automatically.

17 Cleaning and servicing

Customer Service must clean inaccessible points. Cleaning by customer service can give rise to costs.

17.1 Care instructions for stainless steel surfaces

When taking care of and cleaning stainless steel surfaces, use only cleaning cloths and cleaning agents suitable for stainless steel.

Tips

- To prevent visible scratches, wipe the stainless steel surface in the direction of the grain.
- Suitable cleaning agents and cleaning cloths are available from our customer service, your dealer or on our website.

17.2 Preparing the appliance for cleaning

1. Switch off the appliance.
2. Disconnect the appliance from the power supply.
   Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
3. Take out all of the food and store it in a cool place.
   Place ice packs (if available) onto the food.
4. Remove all fittings and accessories from the appliance.
   → *Page 48*

17.3 Cleaning the appliance

⚠ WARNING
Risk of electric shock!
An ingress of moisture can cause an electric shock.
- ▸ Do not use steam- or high-pressure cleaners to clean the appliance.

Liquid in the lighting or in the controls can be dangerous.

ATTENTION
Unsuitable cleaning products may damage the surfaces of the appliance.
- ▸ Do not use hard scouring pads or cleaning sponges.
- ▸ Do not use harsh or abrasive detergents.
- ▸ Do not use cleaning products with a high alcohol content.

If you clean fittings and accessories in the dishwasher, this may cause them to become deformed or discolour.
- ▸ Never clean fittings and accessory in the dishwasher.

1. Prepare the appliance for cleaning. → *Page 47*
2. Clean the appliance, the fittings, the accessories and the door seals with a dish cloth, lukewarm water and a little pH-neutral washing-up liquid.
3. Dry thoroughly with a soft, dry cloth.
4. Insert the fittings.
5. Electrically connect the appliance. → *Page 10*
6. Switch on the appliance.
7. Putting the food into the appliance.

17.4 Removing the fittings

If you want to clean the fittings thoroughly, remove these from your appliance.

Removing the shelf

- ▸ Lift the shelf ① and remove it ②. → *Fig.* **5**

Removing door tray

- ▸ Lift the door tray and remove it. → *Fig.* **6**

Removing the storage container

1. Pull out the storage container as far as it will go.
2. Underneath the storage container on both sides, press the pull-out rail lock outwards ① and remove the storage container ②. → *Fig.* **7**

Removing the cold storage container

1. Pull out the cold storage container as far as it will go.
2. Underneath the cold storage container on both sides, press the pull-out rail lock outwards ① and remove the cold storage container ②. → *Fig.* **8**

17.5 Replacing the odour filter

1. Open the odour filter holder.
2. Take the used odour filter out of the odour filter holder and replace it with the new odour filter. → *Fig.* **9**

Note: A new odour filter can be purchased from our customer service or our website.

18 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

⚠ WARNING
Risk of electric shock!
Improper repairs are dangerous.
- ▸ Repairs to the appliance should only be carried out by trained specialist staff.
- ▸ Only use genuine spare parts when repairing the appliance.
- ▸ If the power cord or the appliance power cable of this appliance is damaged, it must be replaced with a special power cord or special appliance power cable, which is available from the manufacturer or its Customer Service.

Fault	Cause and troubleshooting
The appliance is not cooling, the displays and lighting are lit.	Showroom mode is switched on. **1.** Swipe to "Settings". **2.** Swipe to ⋯ "Advanced". **3.** Touch "Demo mode" ⊙.
The LED lighting does not work.	Different causes are possible. ▸ Call customer service. The customer service number can be found in the enclosed customer service directory.
The refrigeration unit is switching on more frequently and for longer.	The appliance has been opened frequently. ▸ Do not open appliance door unnecessarily.
	External ventilation openings are covered up. ▸ Remove any obstructions from in front of the external ventilation openings.
	Not a fault. Modern refrigeration machines switch on more frequently and have different power levels to cool more efficiently.  ▸ Remove any obstructions from in front of the external ventilation openings. ▸ Install the appliance as far away as possible from heating elements, cookers and other heat sources. Avoid prolonged exposure of the appliance to direct sunlight. ▸ Only open the appliance door as briefly as necessary.

Fault	Cause and troubleshooting
The refrigeration unit is switching on more frequently and for longer.	▸ Allow hot food and drinks to cool down first before storing in the appliance.
A layer of frost forms on the back wall of the refrigerator compartment.	
Home Connect is not working properly.	Different causes are possible. ▸ Go to *www.home-connect.com*.
Message showing "D" or "E" appears in the display.	The electronics have detected a fault. **1.** Switch off the appliance. **2.** Disconnect the appliance from the mains. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. **3.** Reconnect the appliance after five minutes. **4.** If the message still appears on the display, call Customer Service. The customer service number can be found in the enclosed customer service directory.
A warning tone sounds and "Door alarm cooling compartment" appears. The door alarm is switched on.	The appliance door is open. ▸ Close the appliance door.
The temperature differs greatly from the setting.	Different causes are possible. **1.** Switch off the appliance. **2.** Switch the appliance back on after five minutes. ▸ If the temperature is too warm, check the temperature again after a couple of hours. ▸ If the temperature is too cold, check the temperature again on the following day.
The appliance hums, bubbles, buzzes, gargles, clicks or crackles.	Not a fault. A motor is running, e.g. refrigerating unit, fan. Refrigerant flows through the pipes. The motor, switches or solenoid valves are switching on or off. Automatic defrosting is running. No action required.

Fault	Cause and troubleshooting
The appliance makes noises.	The appliance is not level. ▸ Align the appliance using a spirit level and the screw feet.
	Fittings wobble or stick. ▸ Check the removable fittings and, if required, replace these.
	Bottles or containers are touching. ▸ Move the bottles or containers away from each other.

19 Storage and disposal

19.1 Taking the appliance out of operation

1. Switch off the appliance.
2. Disconnect the appliance from the power supply.
   Unplug the appliance from the mains or switch off the circuit breaker in the fuse box.
3. Remove all of the food.
4. Clean the appliance. →*Page 48*
5. To guarantee the ventilation inside the appliance, leave the appliance open.

19.2 Disposing of old appliance

Valuable raw materials can be reused by recycling.

⚠ **WARNING**
Risk of harm to health!
Children can lock themselves in the appliance, thereby putting their lives at risk.
- ▸ Leave shelves and containers inside the appliance to prevent children from climbing in.
- ▸ Keep children away from the redundant appliance.

⚠ **WARNING**
Risk of fire!
If the tubes are damaged, flammable refrigerant and harmful gases may escape and ignite.
- ▸ Do not damage the tubes of the refrigerant circuit or the insulation.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.
   Information about current disposal methods are available from your specialist dealer or local authority.

20 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.
Detailed information about the warranty period and the warranty conditions in your country is available via the QR code on the enclosed document on service contacts and warranty conditions, from our customer service or on our website.

If you contact Customer Service, you will require the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) of your appliance.
You can find the contact details for our customer service via the QR code on the enclosed document on service contacts and warranty conditions or on our website.

20.1 Product number (E-Nr.), production number (FD) and consecutive numbering (Z-Nr.)

You can find the product number (E-Nr.), the production number (FD) and the consecutive numbering (Z-Nr.) on the appliance's rating plate.
→ *"Appliance", Fig.* **1** / **8** *Page 35*
Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

21 Technical data

Refrigerant, cubic capacity and further technical specifications can be found on the rating plate.
→ *"Appliance", Fig.* **1** / **8** *Page 35*
This product contains a light source from energy efficiency class E. The light source is available as a spare part and should only be replaced by trained specialist staff.
This product contains a second light source from energy efficiency class E. The light source is available as a spare part and should only be replaced by trained specialist staff.
This product contains a third light source from energy efficiency class E. The light source is available as a spare part and should only be replaced by trained specialist staff.
This product contains a fourth light source from energy efficiency class E. The light source is available as a spare part and must only be replaced by trained specialist staff.
You can find more information about your model online at *https://eprel.ec.europa.eu/*[1]. This web address is linked to the official EU EPREL product database. Please then follow the instructions on searching for the model. The model identifier is made up of the characters before the slash in the product number (E-Nr.) on the rating plate. Alternatively, you can also find the model identifier in the first line of the EU energy label.

21.1 Information regarding Free and Open Source Software

This product includes software components that are licensed by the copyright holders as free or open source software.
The applicable licence information is stored on your home appliance. You can also access the applicable licence information via your Home Connect app: "Profile -> Legal information -> Licence Information".[2]
You can download the licence information on the brand product website. (Please search on the product website for your appliance model and additional documents). Alternat-

[1] Only applies to countries in the European Economic Area
[2] Depending on the appliance specifications

ively, you can request the relevant information from oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany.
The source code will be made available to you on request.
Please send your request to oss-request@bshg.com or BSH Hausgeräte GmbH, Carl-Wery-Str.34, 81739 Munich, Germany.
Subject: „OSSREQUEST“
The cost of performing your request will be charged to you. This offer is valid for three years from the date of purchase or at least as long as we offer support and spare parts for the relevant appliance.

22 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the essential requirements and other relevant provisions of Directive 2014/53/EU.
A detailed RED Declaration of Conformity can be found online at *www.gaggenau.com* among the additional documents on the product page for your appliance.

CE

2.4 GHz band (2400–2483.5 MHz): Max. 100 mW
5-GHz band (5150–5350 MHz + 5470–5725 MHz): max. 150 mW

	BE	BG	CZ	DK	DE	EE	IE	EL	ES
	FR	HR	IT	CY	LI	LV	LT	LU	HU
	MT	NL	AT	PL	PT	RO	SI	SK	FI
	SE	NO	CH	TR	IS	UK (NI)			

5 GHz WLAN (Wi-Fi): For indoor use only.

AL	BA	MD	ME	MK	RS	UK	UA

5 GHz WLAN (Wi-Fi): For indoor use only.

The difference is Gaggenau

gaggenau.com

BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY
www.gaggenau.com

9001995213 (050806)
he, en