24" Recessed Handle Dishwasher

100 Series – Stainless Steel SHE41D75UC



SHE41D75UC
Stainless Steel

With Bosch PrecisionWash®, just scrape and load. No pre-rinsing required for a beautiful clean.

Features & Benefits

- 48 dBA: dishwasher runs quietly so your kitchen conversations aren't interrupted.
- With PrecisionWash®, intelligent sensors and precision spray arms target every item of every load, so dishes come out sparkling clean every time.
- Enhance your cleaning experience with Wi-Fi enabled Home Connect®. Access additional wash cycles and options or choose the right one for your needs using Smart Cycle.
- The Favorite button allows you to easily access your preferred cycle/option combination with 1 touch.

General Properties	
Wash cycles (control panel)	5 (Heavy, Auto, Normal, Speed60® (1hr Wash), Favorite)
Additional wash cycles (in Home Connect®)	2 (Delicate, Rinse)
Options (control panel)	6 (Remote start, Delay Start, Extra Dry, Half Load, Sanitize, MachineCare)
Additional options (in Home Connect®)	1 (Eco)
dBA	48
Wash system	PrecisionWash®
Drying system	PureDry®
Third rack	No
Rack adjustability	3 Step Rackmatic
Tub material	Stainless Steel
Concealed water heating element	Yes
Leak protection system	24/7 AquaStop® Plus
Home Connect® (Wi-Fi enabled)	Yes
NSF®-certified* sanitize option	No
Water softener	Yes
Five-level wash	Yes
Child Lock button suspension	Yes
Anti-Fingerprint Finish	No
Special features	ExtraDry Option
Efficiency	
Water usage per cycle	2.6 gal
ENERGY STAR® Certified	No
Total annual energy consumption	269 kWh

Capacity	
Number of place settings	13
Technical Details	
Watts	1440 W
Current	12 Amps
Volts	120 V
Frequency	60 Hz
Power cord full length	67"
Power cord install length from edge of unit when facing the door	Left – 45" Right – 56"
Minimum water pressure	14 lb/sin
Length outlet hose	74 3/4"
Dimensions & Weight	
Overall appliance dimensions (HxWxD)	34 1/16" x 23 9/16" x 22 9/16"
Required cutout size (HxWxD)	34 1/8" x 24" x 24"
Adjustable feet	Yes
Net weight	85 lbs
Accessories—Optional	
Junction Box	SMZPCJB1UC
Drain Hose Extension Kit	SGZ1010UC
Edge Protector + Power Cord Clip Install Kit	SMZEPCC1UC

Home Connect

Accessories: To purchase Bosch accessories, cleaners & parts please call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


For more information on our entire line of products, go to www.bosch-home.ca or call 1-800-944-2904

© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.

24" Recessed Handle Dishwasher


100 Series – Stainless Steel SHE41D75UC

Installation Details

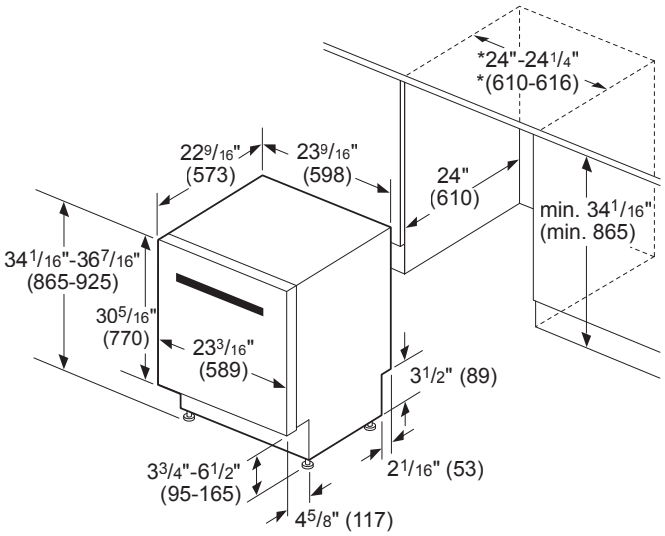

*23 5/8" (600) without decor strips

measurements in inches (mm)

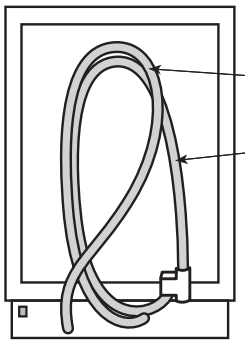


Included:

Pre-connected drain hose

Pre-connected AquaStop® Plus inlet hose


Power cord (3-prong plug) (placed in the upper rack)

Measurements in inches (mm)

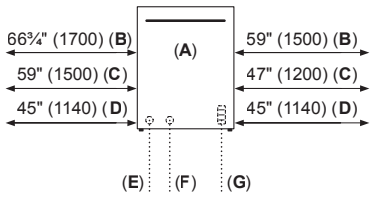

All connections are located on the rear of the appliance.
Extension for drain hose available as accessory.
Junction Box for hard wired connection available as accessory.


A: Front view
B: Drain hose
C: Water inlet hose
D: Electrical Power Cord: length shown according to Installation Instructions
E: Inlet
F: Drain
G: Power

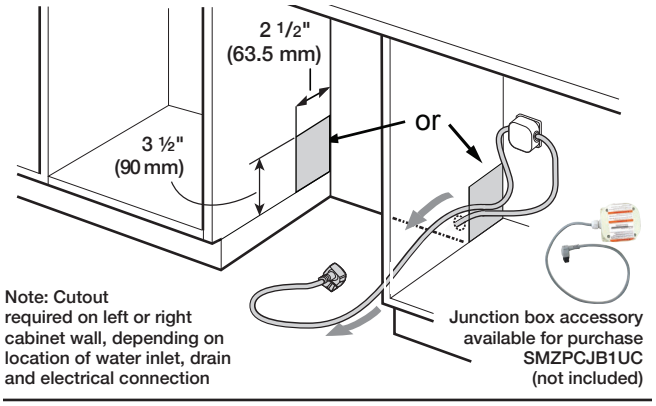

Note: Cutout required on left or right cabinet wall, depending on location of water inlet, drain and electrical connection

Junction box accessory available for purchase SMZPCJB1UC (not included)

Example of Hardwire Installation

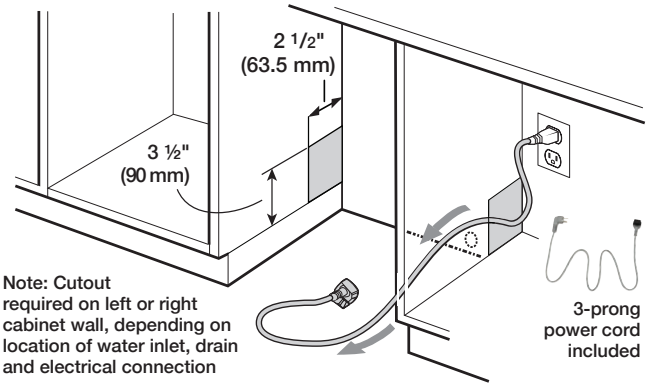

Note: Cutout required on left or right cabinet wall, depending on location of water inlet, drain and electrical connection

3-prong power cord included

Example of an Electrical Receptacle Installation

Accessories: To purchase Bosch accessories, cleaners & parts please call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.


For more information on our entire line of products, go to www.bosch-home.ca or call 1-800-944-2904


© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.

24" Recessed Handle Dishwasher

100 Series – Stainless Steel SHE41D75UC

Installation Details

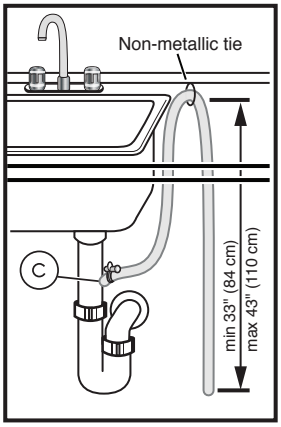

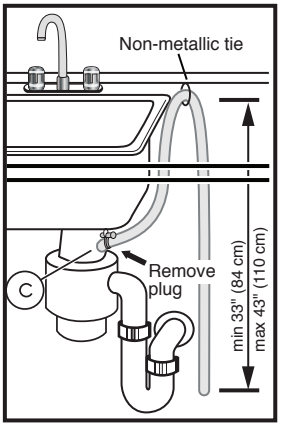

Note: Plumbing installations will vary - refer to local codes. Drain hose included is 79" (201 cm) and can be extended to a maximum of 155 3/4" (396 cm).

Always use the approved drain hose extension kit (SGZ1010UC).

Ensure a portion of the drain hose is raised between min. 33" (84 cm) and max. 43" (110 cm) above the cabinet floor.

Accessories: To purchase Bosch accessories, cleaners & parts please call 1-800-944-2904 (Mon to Fri 5 am to 6 pm PST, Sat 6 am to 3 pm PST).

Notes: All height, width and depth dimensions are shown in inches. BSH reserves the absolute and unrestricted right to change product materials and specifications, at any time, without notice. Consult the product's installation instructions for final dimensional data and other details prior to making cutout.

Warranties: Please see Use & Care manual or Bosch website for statement of limited warranty.

For more information on our entire line of products, go to www.bosch-home.ca or call 1-800-944-2904

© BSH Home Appliances Corporation. All rights reserved. Bosch is a registered trademark of Robert Bosch GmbH.