


# Changing the condensation drain

**i** Condensation will form in the appliance as it dries the laundry.


You must ensure that the drain hose is connected when you operate the appliance. If there is no drain hose connected to the appliance, the condensation water from the appliance will run into the condensation container. In this case, you will need to empty the condensation container each time the dryer finishes drying the laundry, and also if it becomes full before drying is complete. Connect the drain hose as follows:

1

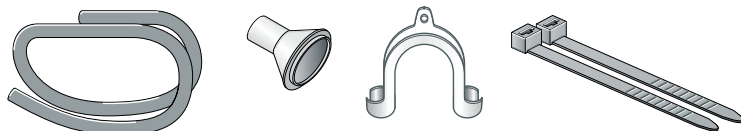

Remove the accessories from the dryer drum.


2

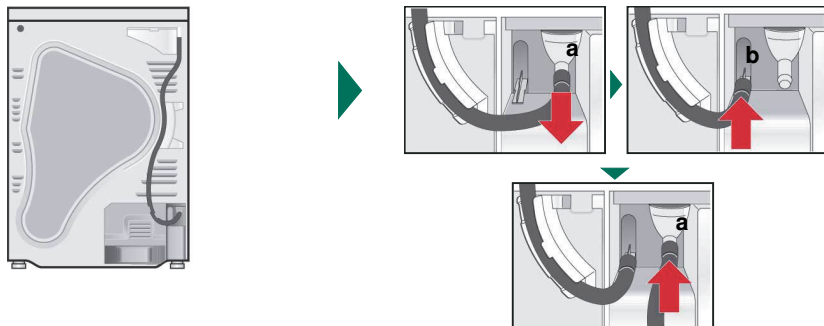

When the dryer is delivered direct from the factory, the hose for discharging the condensation into the condensate container is fastened to the adapter.

Disconnect the hose from the adapter (a) and place it in the 'parked' position on the hose clip (b). Then remove the drain hose from the accessory and fasten it to the empty adapter (a).

3

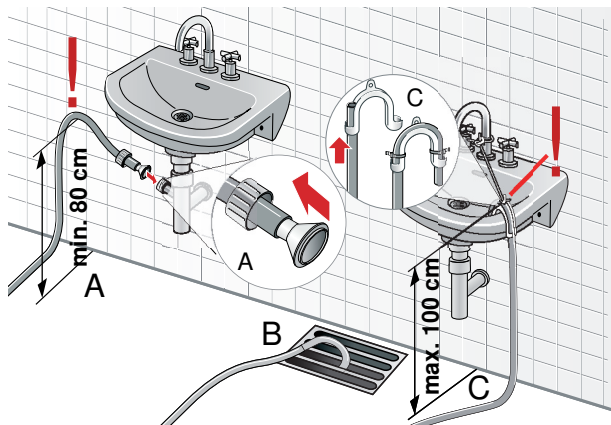


Depending on how you connect the hose (A, B or C), fit the drain hose with the remaining accessories. Check the dimensions.

**i** Do not plug the drain of the wash basin and check that the water can flow away quickly. Blocked water can be drawn back into the dryer and cause damage. To prevent leaks or water damage, secure the drain hose against slipping out of position. Do not kink the drain hose. The difference in height between the installation surface and the drain should not exceed 100 cm. The minimum height for a drain in a siphon is 80 cm.


# Changing the condensation drain

4

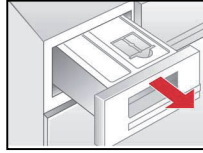


Fully pull out the condensate container.

5

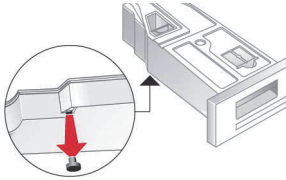


Turn the condensate container by 180° onto its underside and release the stopper which is fitted there.

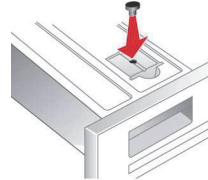

Turn the container back by 180° and press the stopper into the opening on the upper side of the condensate container.

6

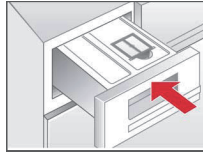

Push the container back in until it locks into place.

**i**

If you want to drain the condensation water back into the condensation container, reverse these steps.

9907/8001166246

