

Long-life recirculation kit, initial
equipment
LZ11ITD11



External recirculation kit with regenerative Long Life filter:
Removes odors reliably over a period of up to 10 years.

- ✓ For recirculation operation
- ✓ Can be combined with slimline hoods and selected canopy hoods.
- ✓ Can be used multiple times, the regenerative active carbon filter is regenerated in the oven with a recommendation of every 4 months. Simply place in the oven for 2 hours at 200°C.
- ✓ For assembly in the upper cabinet

Features

Technical Data

Dimensions of the packed product (HxWxD):365x300x690 mm
Pallet dimensions:200.0 x 80.0 x 120.0
Standard number of units per pallet: 20
Weight: 7.4 kg
Gross weight: 8.9 kg
EAN code:4242003877173







Long-life recirculation kit, initial
equipment
LZ11ITD11

Features	
Optional accessories • For recirculation operation • Can be combined with slimline hoods and selected canopy hoods. • Can be used multiple times, the regenerative active carbon filter is regenerated in the oven with a recommendation of every 4 months. Simply place in the oven for 2 hours at 200°C. • For assembly in the upper cabinet	

Long-life recirculation kit, initial equipment
LZ11ITD11

Dimensioned drawings	
Measurements in mm Installation of canopy hood with circulated air kit A: Flexible hose	Measurements in mm Installation of canopy hood with circulated air kit A: Flexible hose
Measurements in mm Installation of telescopic hood with circulated air kit and lowering frame A: See combination table	Measurements in mm Installation of telescopic hood with circulated air kit and lowering frame A: See combination table

Dimensioned drawings

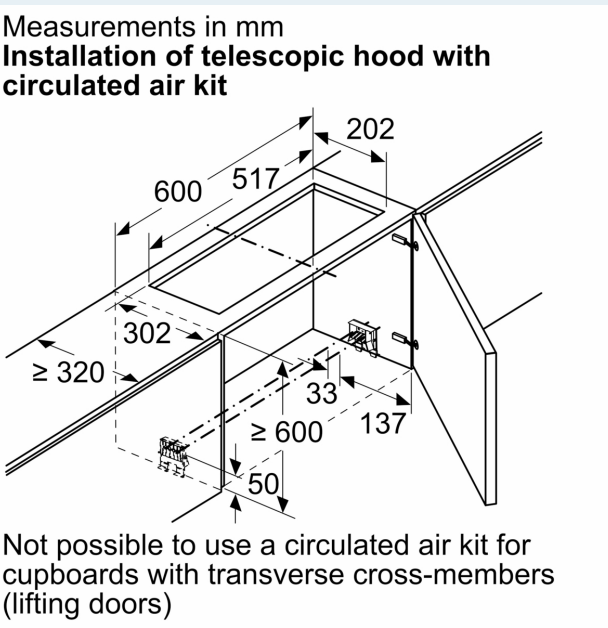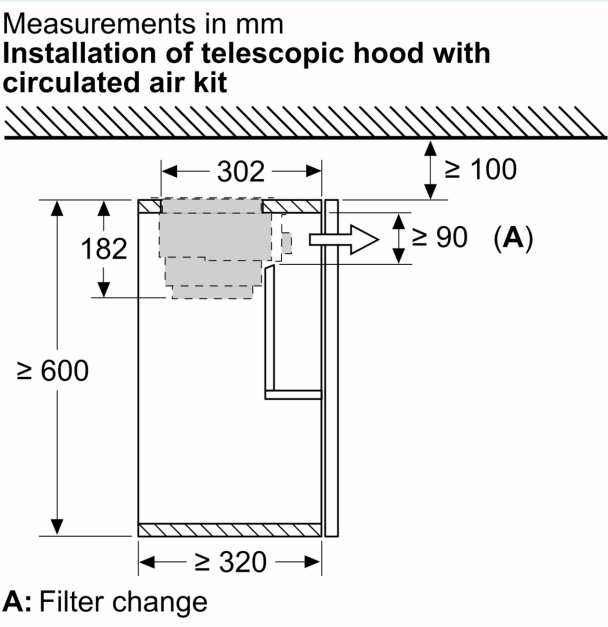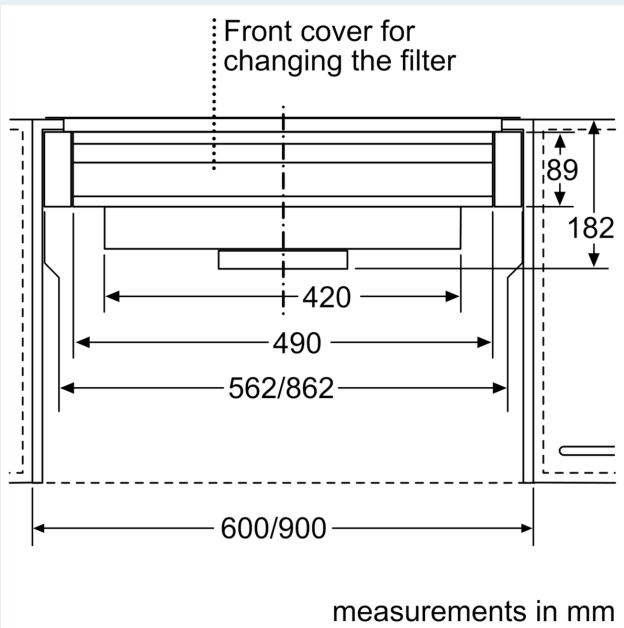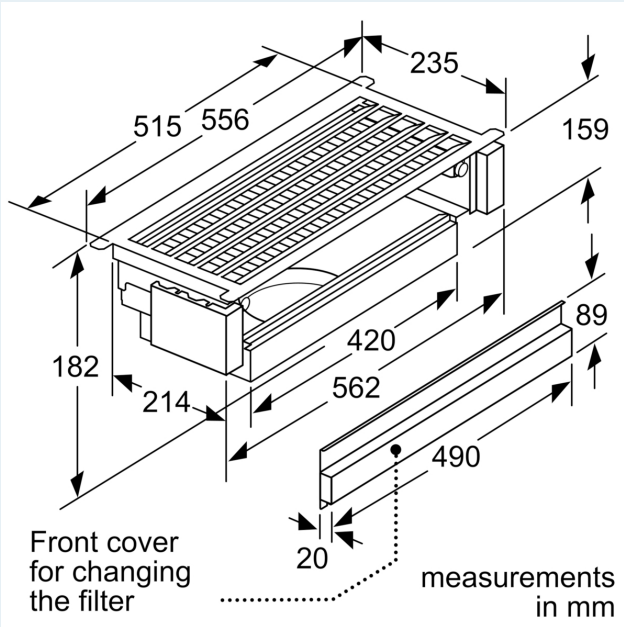

Dimensioned drawings

Measurements in mm
Installation of telescopic hood with circulated air kit

Not possible to use a circulated air kit for cupboards with transverse cross-members (lifting doors)

Measurements in mm
Installation of telescopic hood with circulated air kit and lowering frame

A: Filter change

Measurements in mm
Installation of integrated design hood with circulated air kit

A: Flexible hose
B: Appliance height

Measurements in mm
Installation of integrated design hood with circulated air kit

Not possible to use a circulated air kit for cupboards with transverse cross-members (lifting doors)
A: $\geq$ appliance height + 230 mm